

VIRDI-400FP

User's Guide

 




CONTENTS

 
1. ORGANIZATION	4
2. NAME	5
3. FUNCTION	6
4. ASSEMBLY DIAGRAM	8
5. MENU SETUP FOR HOME USE	10
6. MENU SETUP FOR OFFICE USE	14
7. HOW TO USE (from Inside)	18
8. BATTERY EXCHANGE	19
9. HOW TO USE (from Outside)	20

1. ORGANIZATION

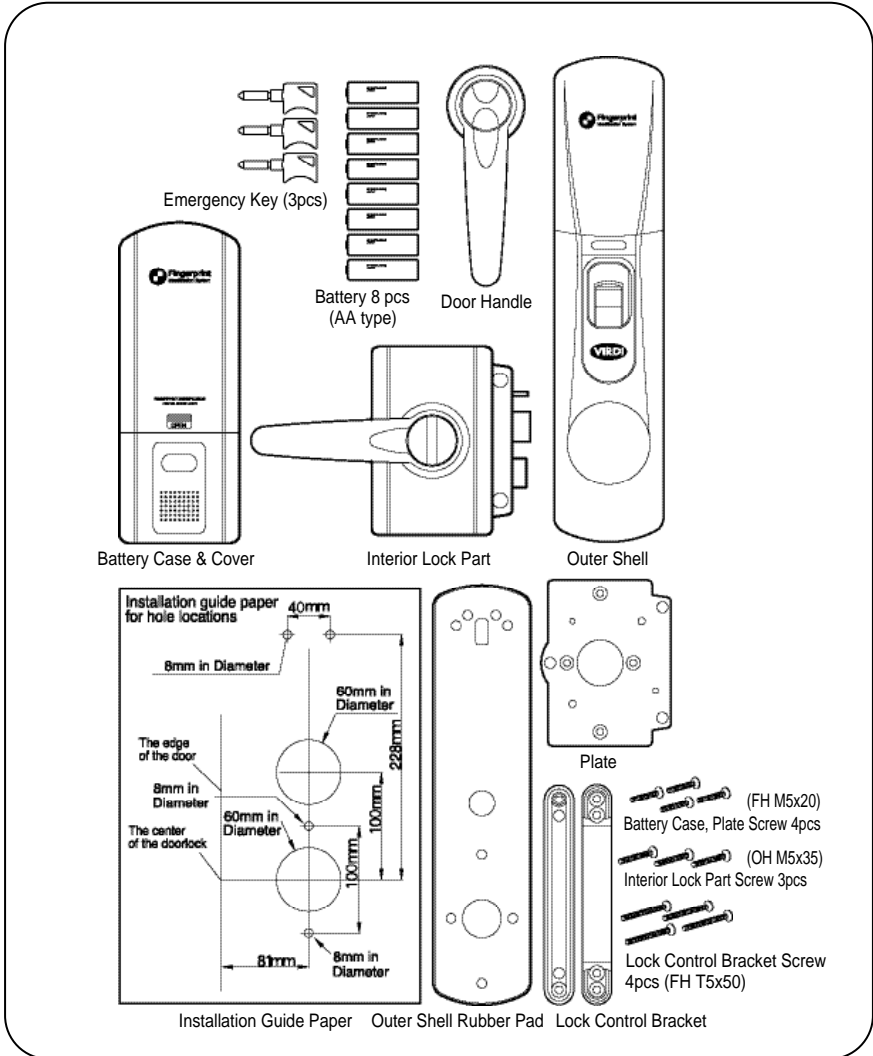


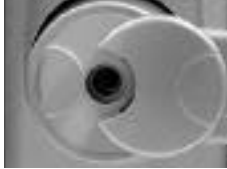


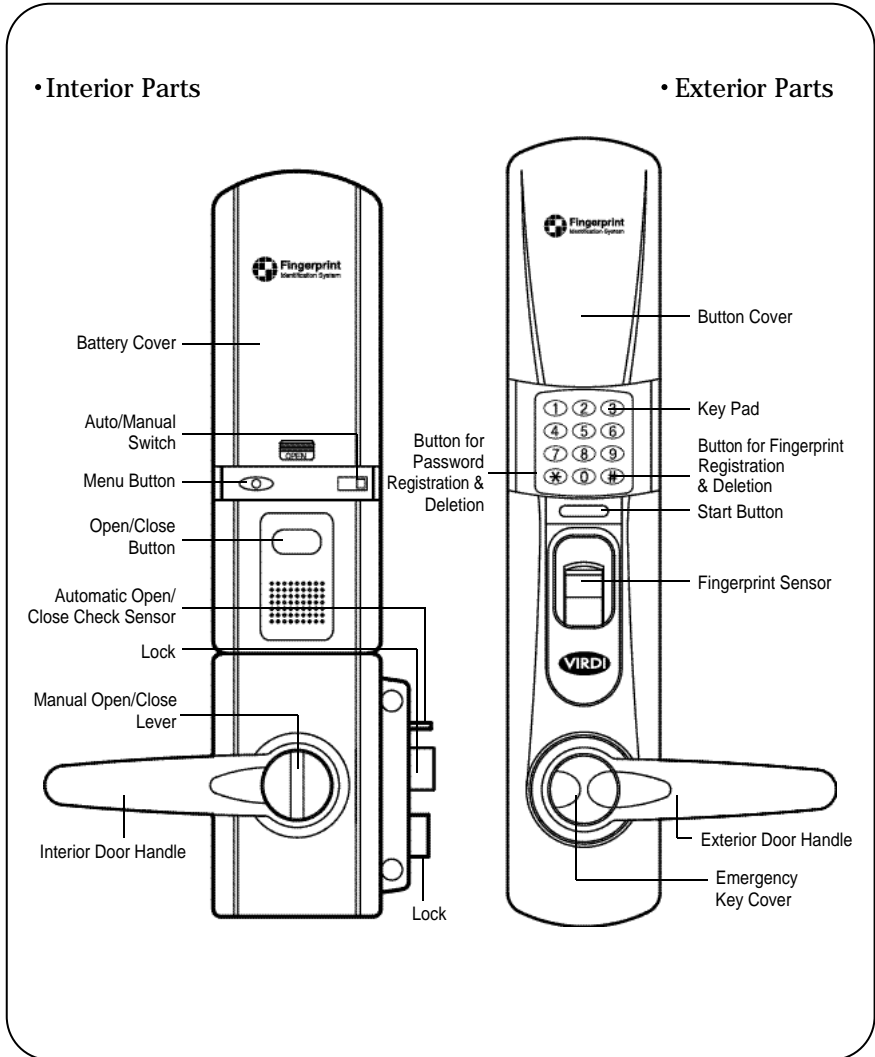

2. NAME







3. FUNCTION

1) Exterior operation parts

Name & Image	Description
 <p data-bbox="221 571 364 598">Start button</p>	<ul data-bbox="434 408 941 584" style="list-style-type: none"> • This button is used for starting fingerprint recognition when the door is closed. • This button is also used for locking the door from the outside when the Auto/Manual button is placed in the Manual position.
 <p data-bbox="185 798 399 825">Emergency cover</p>	<ul data-bbox="434 679 938 767" style="list-style-type: none"> • This cover is used to protect the emergency key hole. It will be disclosed if the cover is pushed toward the direction of the door handle.
 <p data-bbox="197 1023 388 1050">Emergency key</p>	<ul data-bbox="434 906 893 994" style="list-style-type: none"> • This emergency key is used for opening the door in case the VIRDI-400FP is out of batteries or out of order.
 <p data-bbox="241 1251 343 1278">Key pad</p>	<ul data-bbox="434 1102 871 1254" style="list-style-type: none"> • This key pad is used for password registration or deletion. • This key pad is used for opening the door. • Please use it after back light-on.




2) Interior lock parts


Name & Image	Description
 <p data-bbox="213 571 372 600">Menu button</p>	<ul data-bbox="437 469 925 528" style="list-style-type: none"> • The Menu button is used for starting registration or deletion of fingerprint/password.
 <p data-bbox="180 799 406 828">Auto/Manual switch</p>	<ul data-bbox="437 652 947 794" style="list-style-type: none"> • When the Auto/Manual switch is placed in the Auto position, the door is closed automatically. • The door will not be closed automatically when the Auto/Manual switch is placed in the Manual position.
 <p data-bbox="219 1026 367 1054">Open/Close</p>	<ul data-bbox="437 922 938 981" style="list-style-type: none"> • This Open/Close button is used for Open/Close door control inside.
 <p data-bbox="169 1252 415 1281">Manual Open/Close lever</p>	<ul data-bbox="437 1152 958 1211" style="list-style-type: none"> • This lever is a spin wheel which is used to Open/Close door manually.

4. ASSEMBLY DIAGRAM

• Exterior

NO.	Part Name
⑧	Outer shell rubber pad
⑨	Sensor cable
⑩	Key pad cable
⑪	Exterior operation part
⑫	Door handle installation screw

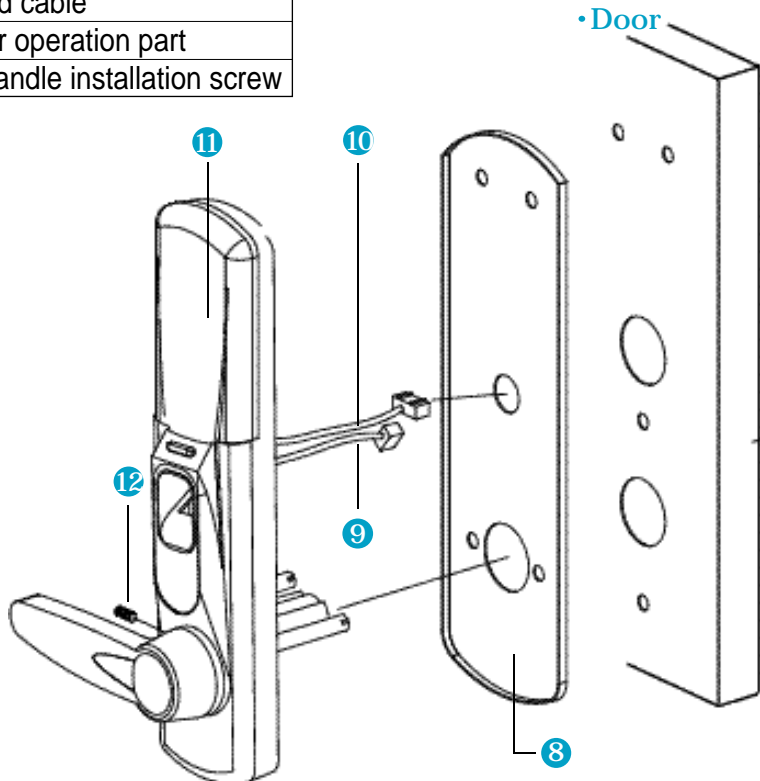 

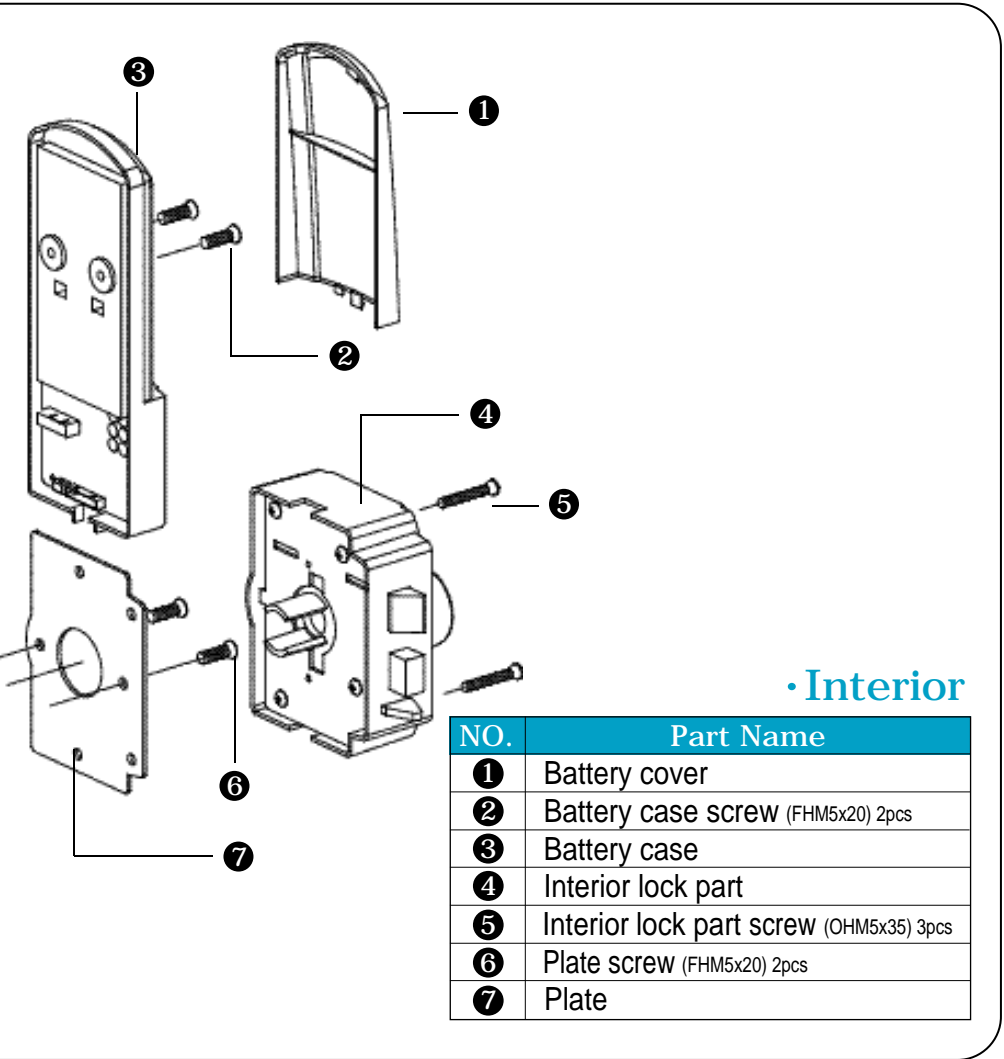 

• Interior

NO.	Part Name
①	Battery cover
②	Battery case screw (FHM5x20) 2pcs
③	Battery case
④	Interior lock part
⑤	Interior lock part screw (OHM5x35) 3pcs
⑥	Plate screw (FHM5x20) 2pcs
⑦	Plate

5. MENU SETUP FOR HOME USE

 
1. Initial fingerprint registration

When a user uses VIRDI-400FP for the first time,




2. Fingerprint registration

After finishing the initial fingerprint registration,

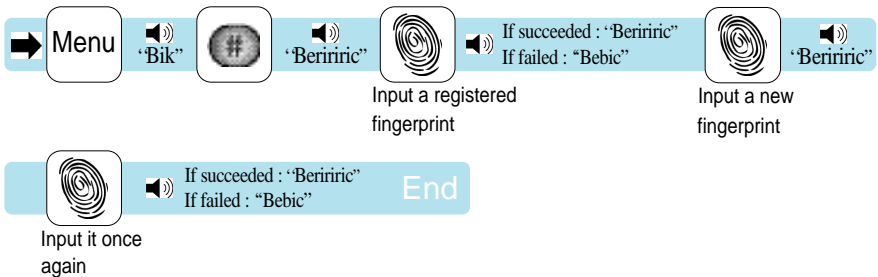

3. Fingerprint deletion


 
When a user deletes fingerprint data in the system,

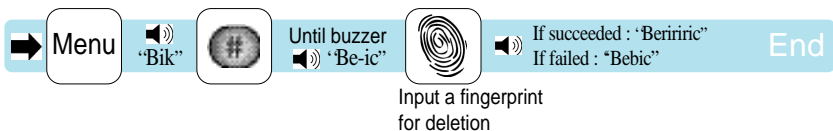




4. Password registration

  If no existing passwords in the system, follow “2” instruction directly.

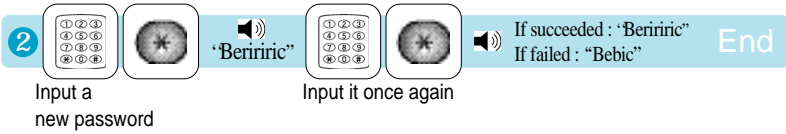


5. Password deletion

 When a user deletes a password,

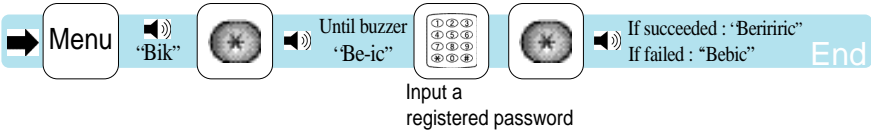


6. Access control setup

 - All users can open the door by only an access control number, after setup.
- A registered fingerprint is required in order to use the Access control function.

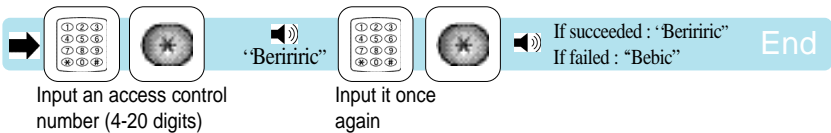

7. Access control discharge

 
To discharge Access control setup function,

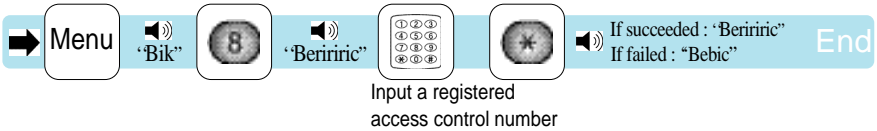

8. Fingerprint Test

To check a user’s fingerprint quality,

 (To start again button, to finish + button)

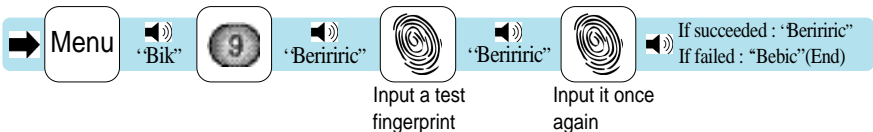



9. Initialization



Speaker icon: If succeeded : "Beriric"
If failed : "Bebic" End

 
10. Logging out from the menu mode processing



6. MENU SETUP FOR OFFICE USE


1. Initial user registration

When a user uses VIRDI-400FP for the first time, or the system is converted from Home use to Office use,

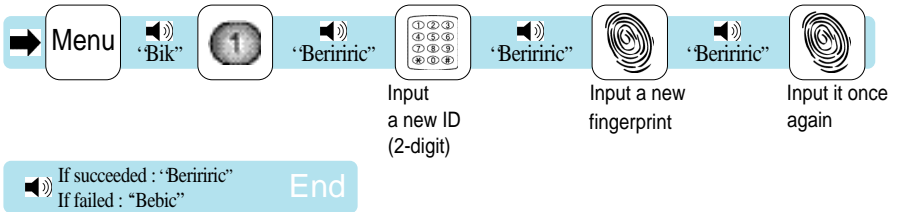


2. User registration

 After finishing the initial fingerprint registration,

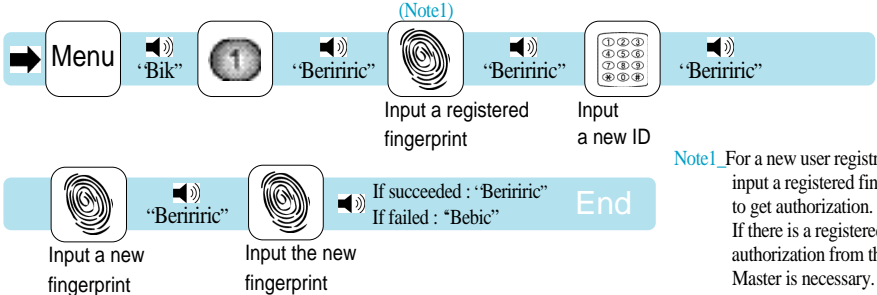


 3. User deletion(as using a user’s fingerprint)


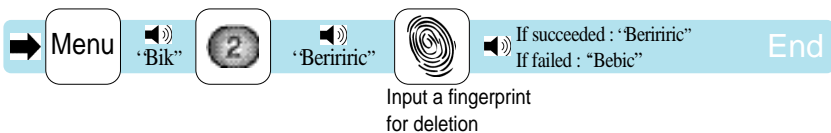




 4. User deletion(as using a user's ID)



  5. Password registration & changing

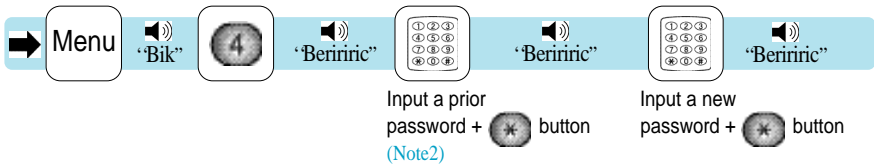


Input the password once again + * button

Note2_ In the first time of password registration, please pass this step.


⚠ Caution

- This VIRDI-400FP is for home and office and the initial mode is for Home use. When the mode conversion is necessary, please follow the process below.
- The initialization of system is the same as Home use, when the initialization is necessary. Please follow the process below.
- When the system mode is converted, All registered data are deleted. A 2-digit user ID is used only in office application.
- After the system mode conversion from Home use to Office use, when a user press the menu button, the buzzer will ring("Bik") with the back light-on in the key pad.
- To finish menu mode processing, press the * , # button together.

 6. Password deletion

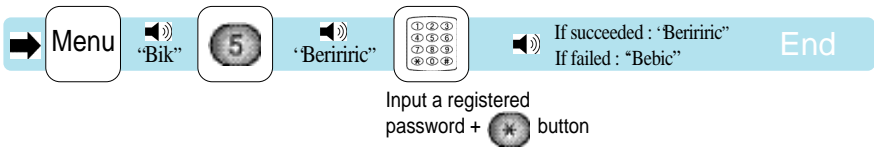


 7. Master registration

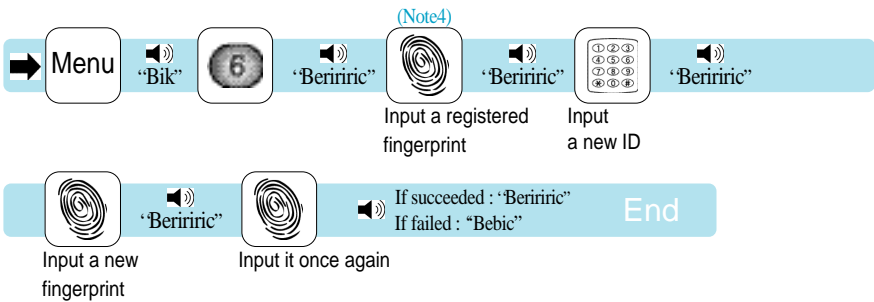

8. Access control setup

 
- A Master fingerprint is required in order to use the Access control function.
(A Master is an administrator.)

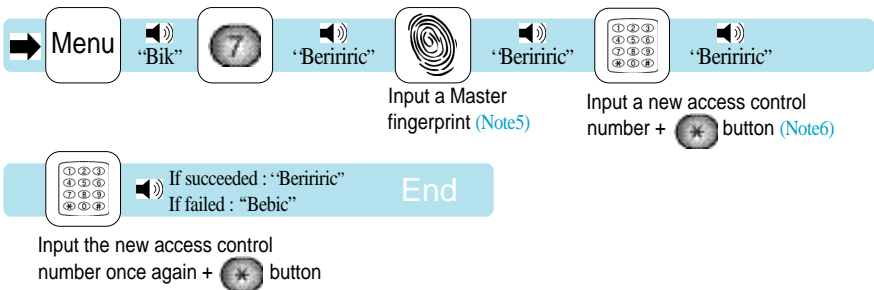



9. Access control discharge

 
To discharge Access control setup function,

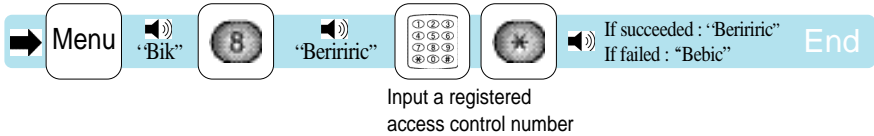

10. Fingerprint Test

To check a user's fingerprint quality,

 (To start again 9 button, to finish * + # button)

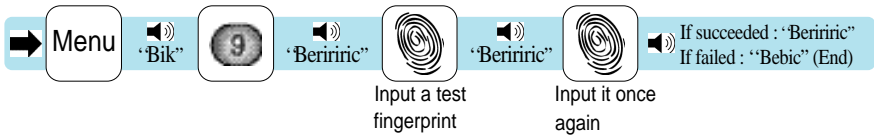

Note4 For a new Master registration, input a registered Master fingerprint to get authorization.
If there is a registered Master, the Master authorization is necessary to register new Master.
If succeeded : Beriric, If failed : Bebic

 
 
Note5 First, must register a master to do Access control setup.
After completing Access control setup, every key pad number is locked except '8' for setup discharge.

Note6 Only the new access control number can open the door after completing Access control setup function.

7. HOW TO USE (from Inside)

1) When going outside


To go outside, push the Open/Close button or turn the handle to downwards after turning the Manual Open/Close lever to the right direction.

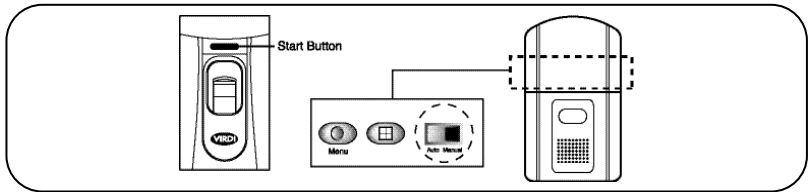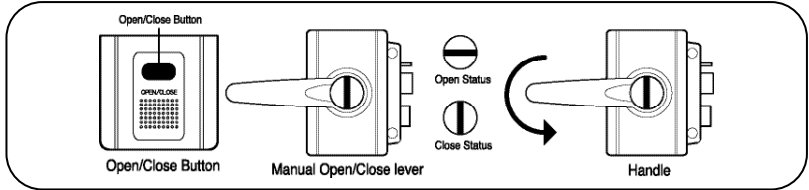

- Please make sure of closing door when pushing the start button if the Auto/Manual switch is located in the Manual position.


2) To close door

 (1)When the Open/Close switch is located in the Auto position, the door is automatically locked after closing the door. However, please check the Manual Open/Close lever's location from the Open Status to the Close Status.

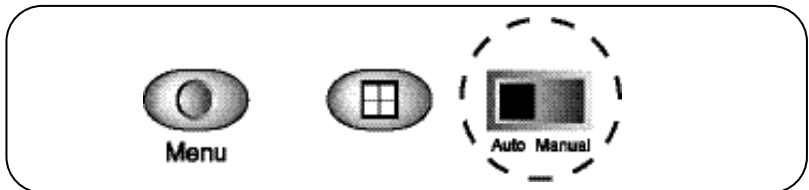




 (2)When the Open/Close switch is located at the Manual position, To lock the door, push the Open/Close button or turn the Manual Open/Close lever to the Close Status position.

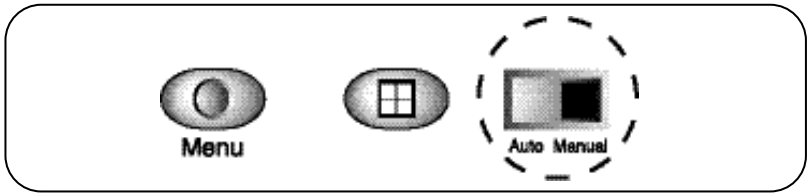

■ Notice

 Please check the door's Open/Close Status all the time.

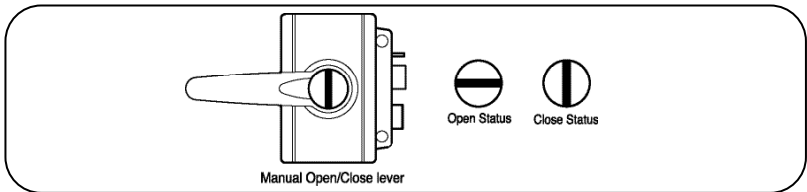

8. BATTERY EXCHANGE

 
VIRDI-400FP only uses AA type batteries (8 pcs).

- 1)If a battery change signal is ringing with the twinkling red light on the start button, please exchange the batteries on the right position(+,-).
- 2)Please use an emergency key until the batteries are replaced when the batteries are exhausted.

9. HOW TO USE (from Outside)

Please follow the instruction below, then open the door by turning the handle downward after authorization.


1) Access by fingerprint identification

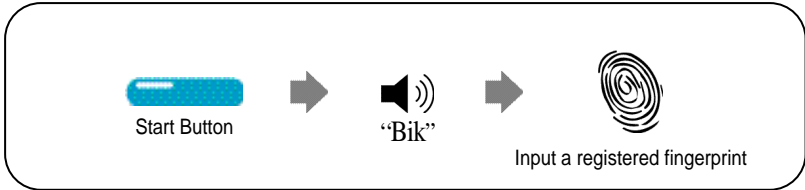

- If succeeded, the door will be unlocked with the buzzer ringing (“Beriric”), and the blue light on the Start button will twinkle.
- If failed three times, the buzzer will ring (“Bebic”), and the red light on the Start button will twinkle.
- If no fingerprints have been registered, the buzzer will ring (“Bebic”) once and the process will end automatically.
- If Access control function is in use, the buzzer will ring (“Bebic”) twice and the process will end automatically.
- If VIRDI-400FP has been initialized, the buzzer will ring (“Bebic”) three times and the process will end automatically.



 2) Access by inputting a password

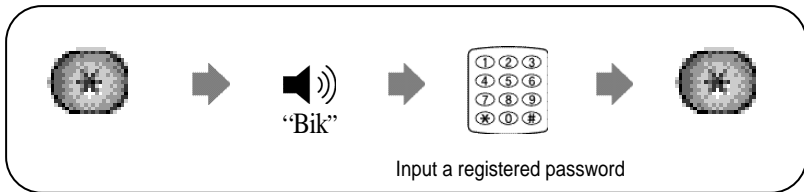


-If succeeded, the door will be unlocked with the buzzer ringing (Beriric), and the blue light on the Start button will twinkle.

-If failed, the buzzer will ring (Bebic), and the red light on the Start button will twinkle.

-If no passwords have been registered, the buzzer will ring (Bebic) once and the process will end automatically.

 3) Access when Access control in use

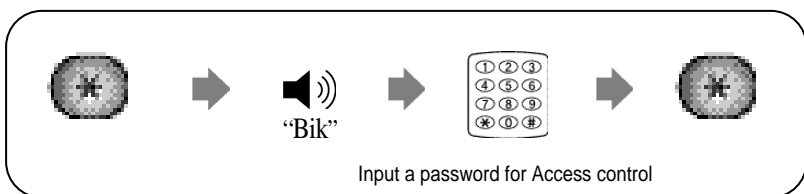

-If succeeded, the door will be unlocked with the buzzer ringing ("Beriric"), and the blue light on the Start button will twinkle.

-If failed, the buzzer will ring ("Bebic"), and the red light on the Start button will twinkle.

-When Access control is in use, Access by a previous password or fingerprint identification is not possible.

Fingerprint Identification Digital

Door Lock

