

PTZ SETUP FOR 9000 SERIES

Find out the following information before setting up PTZ in 9000 Series

- **ID#** (UNIX PTZ use ID1 by default)
- **PROTOCOL or MODEL NAME** (UNIX PTZ use PELCO-D by default)
- **BAUDRATE#** (UNIX PTZ use 2400 by default)

NOTE: If you don't know where to get the information or if you need to change PTZ ID#, check on [\(STEP2\) FIND PTZ PROTOCOL-BAUDRATE-ID.PDF](#) under "Installation Guide/PTZ" in www.eyemaxdvr.com

1. **CONTROL** → **SETUP** or **SETTING**
2. Under **SETUP** or **SETTING MENU** → **DEVICE**
3. Double Click on **CAMERA** or Press + → Select **PTZ CAMERA#** (In this example we have connected on CH3)
4. Check "**USING PTZ(PAN/TILT/ZOOM) DEVICE**"
5. Choose "**MODEL NAME**" (Unix PTZ use PELCOD by default)
6. Choose "**CAMERA ID**" (Unix PTZ use ID1 by default)
7. Click on "**SERIAL PORT**" to select **BAUDRATE**

