

SETTING UP PTZ SWING

In this example we are using PTC-TP-1500 or 3000.

1A) CALL + 95 + ENTER → Opens PTZ MENU

1B) SELECT "DOME CAMERA SETUP" then press NEAR



2A) SELECT "PRESET SETUP" then NEAR



3A) SELECT "PRESET NO." → NEAR → Choose "1" → NEAR

3B) SELECT "EDIT SCENE" → NEAR



4A) Move the PTZ to the first spot then press NEAR to SAVE.



5A) SELECT "PRESET NO." → NEAR → Choose "2" → NEAR

5B) SELECT "EDIT SCENE" → NEAR

5C) Move the PTZ to the second spot then press NEAR to SAVE




6A) Press FAR to go back to "DOME CAMERA SETUP" menu

6B) SELECT "SWING SETUP" → NEAR




7A) SELECT "SWING NO." → NEAR → Choose "1" → NEAR

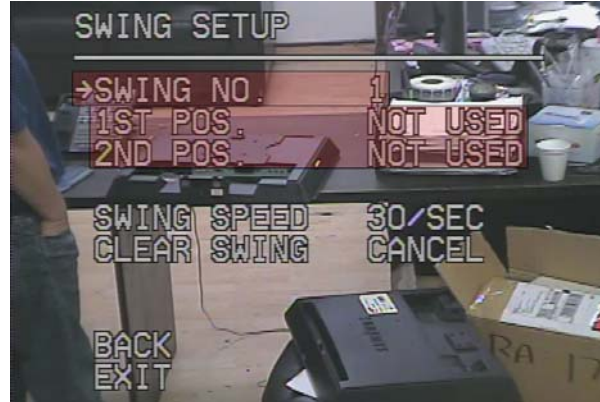

8A) SELECT "1ST POS." → NEAR → Choose "PRESET1" → NEAR

8B) SELECT "2ND POS." → NEAR → Choose "PRESET2" → NEAR

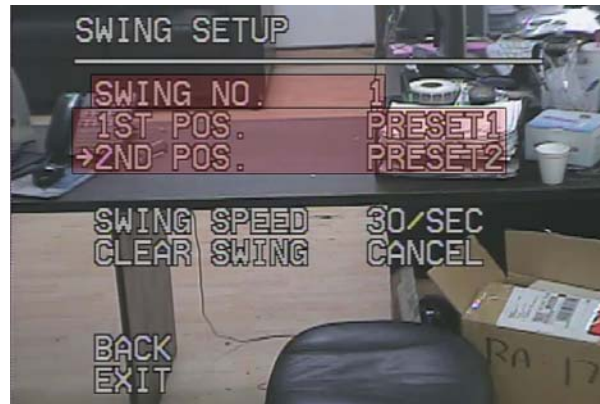

- **EXIT from PTZ MENU**
- **Press CALL + 141 + ENTER to SWING from PRESET1 to PRESET2**