

Network (JPEG2000+H.264)

# Stand Alone DVR



**8Channel Network Stand Alone DVR**  
Audio, USB Backup available

The most stable and reliable real stand-alone Digital Video Multiplex Recorder

## INSTALLATION & SAFEGUARDS

All the safety and operating instructions should be read before the unit is operated.

### Environment Condition for Installation

- To prevent electric shock or other hazard, do not expose units to rain, moisture, or dust.
- This unit should be located in an area with low humidity and a minimum of dust..
- Place this unit in a well-ventilated place and do not place heat-generating objects on this unit.
- This unit should not be located in an area where it is likely to be subjected to mechanical shocks.

### Before You Start

- Ensure the power switch is in the OFF position prior to starting.
- Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
- Installation should be performed by qualified service personnel only.
- This unit should be operated only from the type of power source indicated on the manufacturer's label and with the power supply included with the unit.

### Notice

- Be aware thoroughly about the power connection before installation of the unit.
- Before initial configuration or operation you must first set the TIME/DATE, followed by setting the unit to the FACTORY DEFAULT settings, lastly clearing the HDD. Please follow these steps in order.
- Pull the unit out of record mode prior to cutting power to the unit. Do this by entering the setup menu, followed by switching the unit off. Powering off the unit while writing to the disks can cause critical malfunctions. (ex: Recording Error, Playback Error, System Error)
- When you set the record type, you have to set the Record Configuration and also Schedule Setup. This unit records as per the Record type & Schedule setup.
- The [REC] button on the front panel is for emergency record using highest image quality.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user of this equipment that there are dangerous voltages within the enclosure which may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance(Servicing) instructions in the literature accompanying the appliance.

## Contents

CHAP. 1	Features & Package Contents	4
1-1.	Features	4
1-2.	Package Contents	5
CHAP. 2	Function of Each Button	6
2-1.	Front	6
2-2.	Rear	8
CHAP. 3	Installation	9
3-1.	Installation Configuration	9
3-2.	Detailed Installation	10
1)	Rack Mount	10
2)	HDD(Hard Disk Drive)	10
3)	Camera	11
4)	Monitor	11
5)	Power	11
6)	SPOT, Video Printer	12
7)	Other External Device	12
CHAP. 4	Operation	13
4-1.	System Log-in	13
4-2.	Factory Default	13
4-3.	Display Configuration	14
4-4.	Live View Setup	14
1)	Full / Multiple View	14
2)	Sequencing Cameras	15
3)	PIP View	15
4)	Freeze View	15
5)	Zoom View	15
4-5.	Record	16
4-6.	Playback	16
4-7.	Search	17
4-8.	PTZ Camera Operation	17
4-9.	Data Back-Up	18
4-10.	Audio Operation	19
4-11.	Mouse Operation	19
CHAP. 5	Set Up	22
5-1.	Entering the Menu	22
5-2.	Display Setup	23
1)	Screen Display	23
2)	Monitor Setup	23
5-3.	Configuration	24
1)	HDD Management	24
2)	TIME/DATE Setup	26
3)	Camera Setup	26
4)	Interval Setup	28
5)	Alarm Setup	28

6)	Event Popup Setup	-----	28
7)	Buzzer Setup	-----	29
8)	Password Setup	-----	29
9)	System Information	-----	29
5-4.	Record Setup	-----	30
1)	Record Configuration	-----	30
2)	Schedule Setup	-----	31
3)	Holiday Setup	-----	31
5-5.	Back-Up (CD Recorder, USB)	-----	32
5-6.	External Device	-----	33
1)	TCP/IP Setup	-----	33
2)	RS-232C Setup	-----	36
3)	Pan Tilt Zoom Setup	-----	36
4)	Spot Monitor Setup	-----	36
5)	Audio Setup	-----	37
6)	Audio Volume Setup	-----	37
7)	Remocon Setup	-----	37
5-7.	Factory Default	-----	38
5-8.	Language Setup	-----	38
<b>CHAP. 6</b>	<b>Network Setup</b>	-----	<b>39</b>
6-1.	DVR Network Configuration	-----	39
<b>CHAP. 7</b>	<b>IRS</b>	-----	<b>43</b>
7-1.	IRS SETUP	-----	44
7-2.	DVR SETUP	-----	45
7-3.	VIEWER	-----	46
7-4.	BACKUP	-----	47
7-5.	PLAYER	-----	49
7-6.	TRANSMITTER	-----	52
7-7.	CLIENT	-----	54
7-8.	CMS	-----	57
<b>CHAP. 8</b>	<b>DDNS Web Server</b>	-----	<b>60</b>
8-1.	Register DVR to DDNS Server	-----	60
8-2.	DDNS Setup in DVR	-----	62
8-3.	Web Program	-----	66
<b>CHAP. 9</b>	<b>Programmers Reference</b>	-----	<b>67</b>
1)	Connector Pin Assignment	-----	67
2)	RS232 ASCII-CODE	-----	67
<b>CHAP.10</b>	<b>Specification</b>	-----	<b>69</b>
<b>CHAP.11</b>	<b>Remocon Key Definition</b>	-----	<b>70</b>

## CHAP. 1 Features & Package Contents

### 1-1. Features

#### Live View

Real time display per camera  
Auto Sequence  
PIP (Picture in picture)  
Event Popup  
Digital Zoom  
Display Freeze  
Simple Playback mode  
Simple PTZ camera control

#### Record

Variable Record resolution (For higher picture quality or higher recording speed)  
Efficient Image Quality setup in 5 steps  
Schedule Record / Holiday Record  
Event Record (Alarm / Motion)  
Emergency Record

#### Network

View Live and Playback images across IP network  
Copy images across the network  
Network Video Server

#### Playback

Search & Playback by Date/Time, Event and Camera  
Outstanding picture quality by JPEG 2000 compression algorithm (No mosaic effect)  
Suitable for recording not only images but also text  
Various steps in Forward Playback Speed (X1/16, X1/8, X1/4, X1/2, X2, X4, X16, X32, X64)  
Various steps in Backward Playback Speed (X1/16, X1/8, X1/4, X1/2, X2, X4, X16, X32, X64)  
Easy and convenient search by Jog Shuttle & Remote Controller

#### Data Back-Up


Simple Back-Up using built-in CD Recorder (Back-up CD Player included in the package)  
Network Back-Up using Remote Viewer program(Remote Viewer included in the package)  
Supports bigger capacity of SATA HDD  
USB Device Back-Up available

#### Others


Multi-Language (English, Spanish, German, French, Italy, Japan, China)  
VGA option board supports both TFT LCD monitor and CRT monitor  
Lock the system by Password  
JOG / SHUTTLE  
PAL/NTSC Auto detection  
Control the unit by using Remote Controller [Normal, Single, Universal]  
Audio recording : IN-4ch, OUT-1ch (mono)

## Network Stand Alone DVR


## 1-2. Package Contents

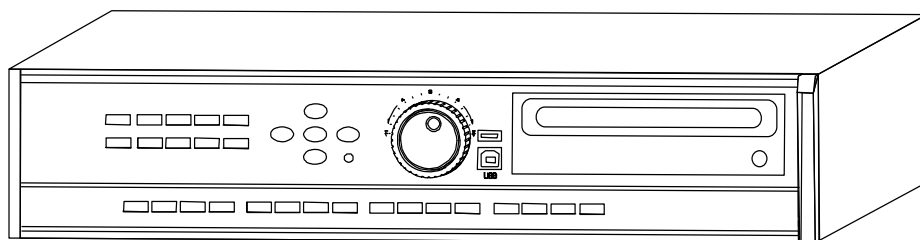


1. DVR Main Unit




2. Remote Controller



3. Power Cable

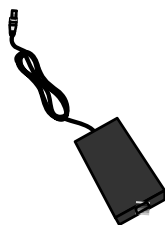


4. Power Adapter

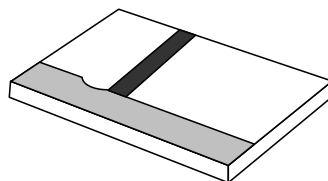


5. User's Manual



6. Software CD




7. Rubber Pad



8. HDD absorber



9. Battery for remote controller

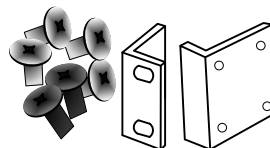

10. Bolts




11. Mouse

Package Contents	Description
1. DVR Main Unit	STAND-ALONE DIGITAL VIDEO RECORDER
2. Remote Controller	DVR control
3. Power Cable	AC power supply to adapters for 12 V DC power
4. Power Adapter	12 V DC power supply
5. User's Manual	User's Manual
6. Software CD	Remote Viewer Software & Back up CD player
7. Rubber Pad	Prevent DVR from slipping. Attach it to the bottom of main unit
8. HDD absorber	Absorbing the mechanical shock of HDD against the case bottom
9. Battery	Battery for remote controller
10. Rack mount bracket / Bolts	Rack mount bracket
	For fixing Rack Mount bracket to DVR (6ea)
	For fixing DVR with Rack Mount bracket to 19" Rack (4ea)
	For fixing Hard Disk Drive into DVR (8ea)
11. Mouse	PS/2 Mouse

## CHAP. 2 Function of Each Button

## 2-1 FRONT

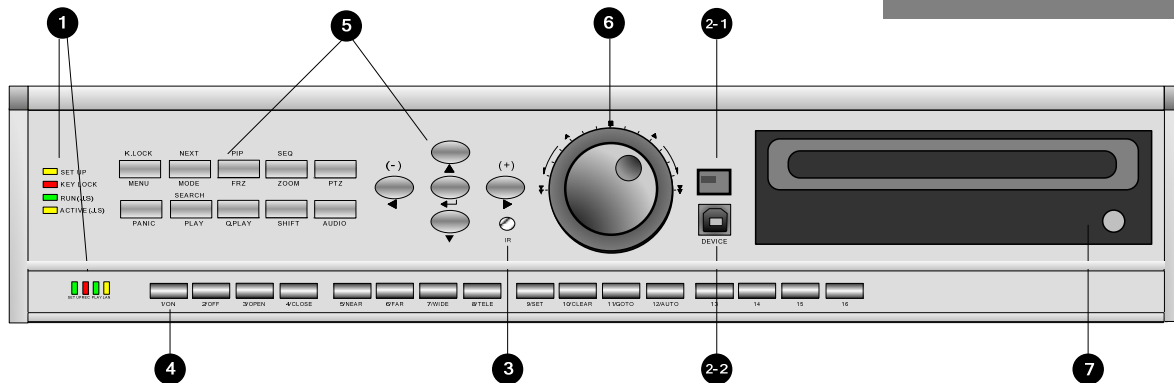

Name	Function	
① LED Lamps	Shows status of operation	
②-1 USB HOST	Back-Up by connecting USB Media to USB HOST	
②-2 USB Device	Firmware upgrade by connecting PC with latest firmware to USB port	
③ IR	IR receiver	
④ Camera selection & PTZ camera control	1. Pressing this button will display a full screen image of that camera	
	2. Control PTZ camera (Each button is assigned for each PTZ command)	
	• ON : LIGHT ON	• WIDE : ZOOM IN
	• OFF : LIGHT OFF	• TELE : ZOOM OUT
	• OPEN : IRIS OPEN	• SET : SET PRESET
	• CLOSE: IRIS CLOSE	• CLEAR : CLEAR PRESET
	• NEAR : FOCUS NEAR	• GOTO : GOTO PRESET
	• FAR : FOCUS FAR	• AUTO : AUTO SCAN
⑤ SHIFT	SHIFT	FOR SELECTION OF UPSIDE FUNCTION ON THE BUTTON
⑤ Record / Playback	PANIC	Emergency Record at continuous, 60ips, SUPER FINE size (Press & Hold this button for seconds to go back to Schedule Record Mode)
	PLAY	Playback of recorded data on HDD
	SEARCH	Search recorded data on HDD
⑤ SETUP	MENU	Set up for SYSTEM MENU or Use to exit the menu Press MENU button before powering off the unit.
	ENTER	Selects each menu option
	NEXT	Move to next step
	▲▼◀▶	Navigate in the menu
	+ -	Reduce or increase the option value in the menu


Name	Function	
⑤ LIVE View Control	PTZ	On/Off for PAN/TILT/ZOOM control mode Press this button first to control PTZ camera connected to DVR unit via RS-485
	ZOOM	Zooming an image
	FRZ	Freezing an image
	MODE	Switch to split display MODE button changes screen-division from (to) full screen to (from) 16-split screen.
	PIP	Display in PIP (Picture in Picture) mode
	SEQ	Auto camera image sequencing in full screen mode
	K.LOCK	Lock the key function. To unlock, press longer time (for several seconds) and then input the password.
	Q. Play (Quick Play)	Play from image recorded 2 minutes ago in forward direction. (in case recorded in continuous mode).
	AUDIO	Select audio channel
⑥ Jog Shuttle	Very easy and convenient search : Jog and Shuttle makes it very easy and convenient to search, forward or backward, fast and slow, as a user wants. Jog/ Shuttle can be activated when 'Active' LED is on.	
⑦ CD-RW	Data Back-up and Firmware Upgrade using built-in CD writer	






## CHAP.3 Installation

### 3-1. Installation Configuration

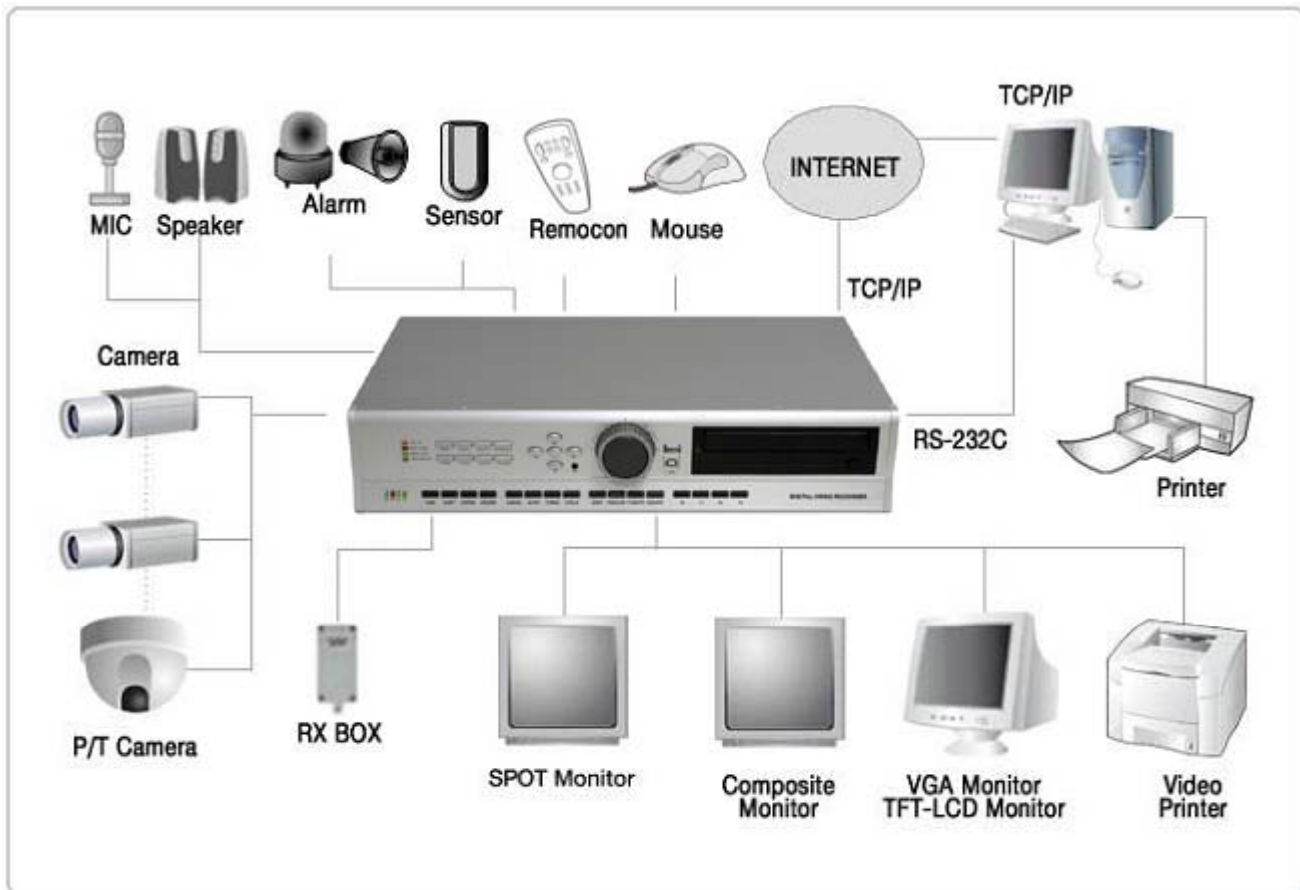

### 3-2. Detailed Installation


#### 1) Rack mount

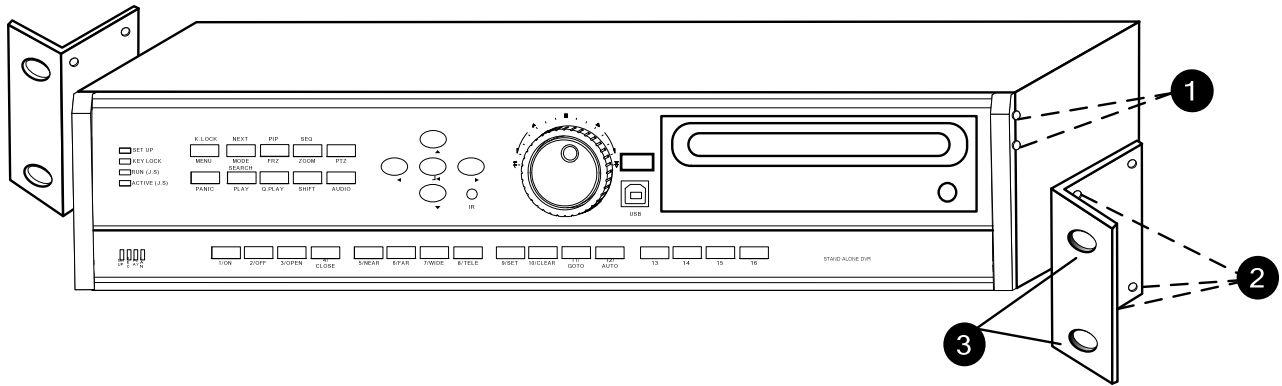


1. Remove 4 bolts on each side cap to install rack mount.
2. Attach rack mount bracket to DVR.
3. Attach DVR with rack mount bracket to 19" rack.

#### 2) HDD

Connection of HDD Cable

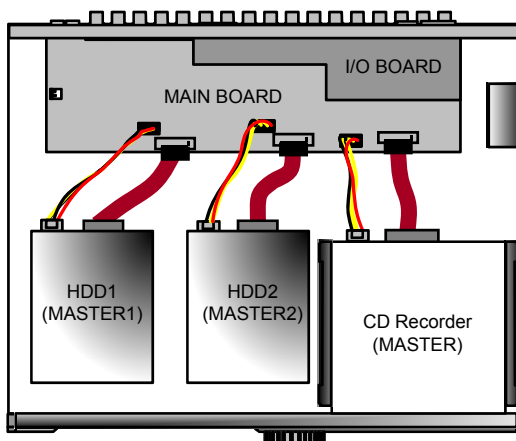


HDD fix

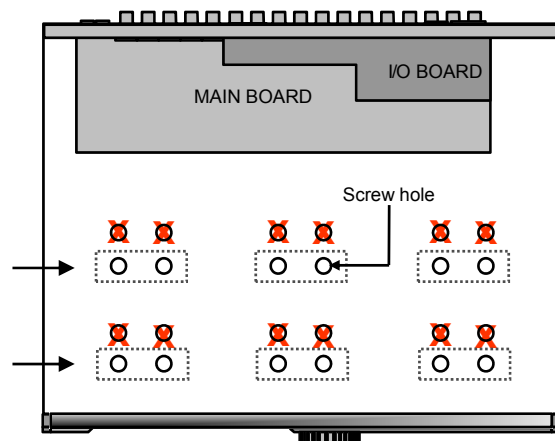

1. Connect Main Board and HDD1 using IDE cable and HDD power cable.
2. When you use just 1 HDD, install the HDD onto HDD1 location.
3. When you use 2 HDDs, install the first HDD onto HDD1 location and then install the second HDD onto HDD2 location in order.
4. Stick the HDD absorber (included in package) on the bottom of case and then install the HDD on top of them by using the bolts (included in package).
5. Screws must be inserted from outside of the case bottom.


## Network Stand Alone DVR

## 3) Camera

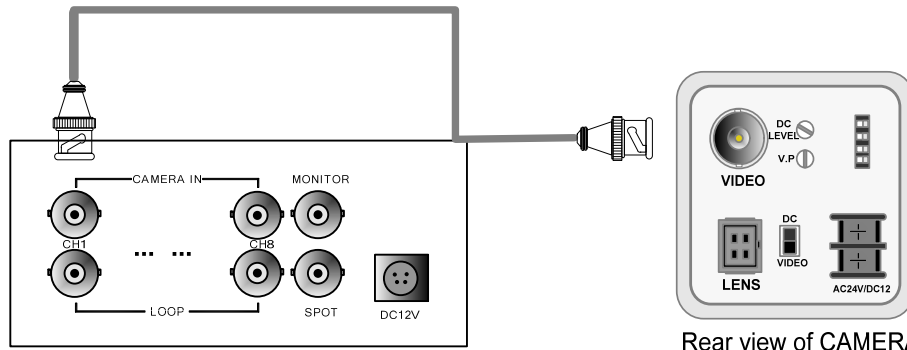


Connect cameras to the camera input on rear panel of DVR marked CAMERA IN.

## 4) Monitor

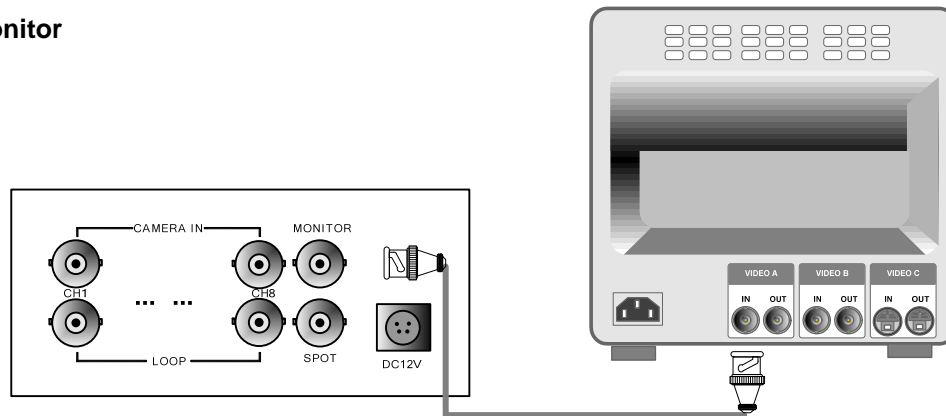

Connect the video output marked MONITOR to Video-In of Main monitor.

## 5) Power

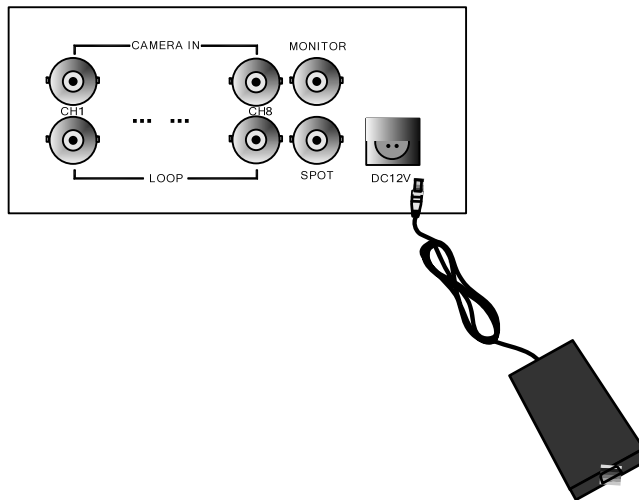

Connect one DC 12V, 6.67 A Adaptor to the back side of Power Jack for right operation of 2HDDs and CDRW.




Before you turn on the Power switch, be sure all necessary devices such as Power adaptor, cameras and Monitor are connected properly to DVR!

**Notice**


To avoid accidental deletion of HDD data, please make sure to press MENU button before powering off the unit. This takes the unit out of record mode for safe shutdown.

## 6) SPOT, VIDEO PRINTER

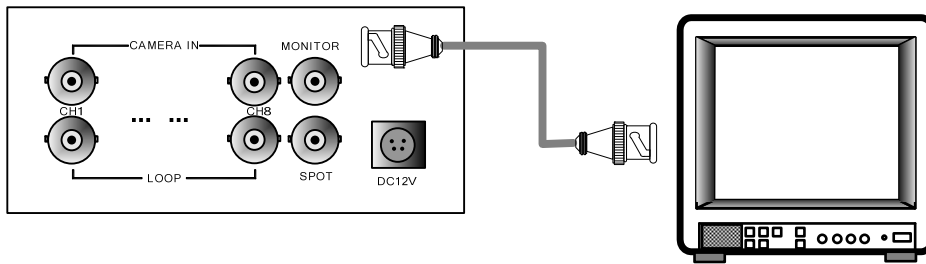

Connection with additional composite monitor

## 7) Other External Device

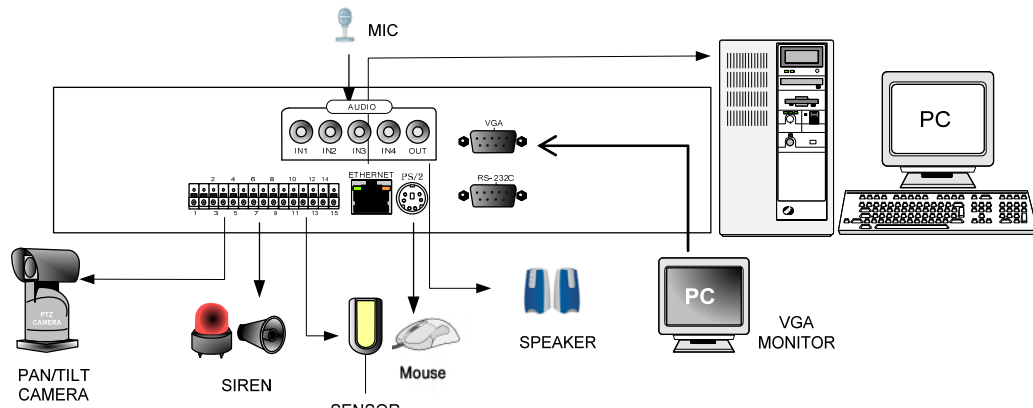

**RS-232C** : Control DVR through RS-232C port by using PC.

**RS-485** : Control external device like PTZ Camera


**RELAY Output** : Relay Output – Pin No.4 ~ No.6 at Terminal Block

**SENSOR Input** : SENSOR Input (Alarm connection) – Pin No.7 ~ No.26 at Terminal Block

**ETHERNET** : Connection to LAN, WAN, Internet.

**VGA** : Connection to a VGA monitor(CRT,TFT LCD) if optional VGA board is fixed on the main board as shown in the following figure.

Resolution set by manufacturer is 800x600 60 Hz, and user can set resolution in MONITOR SETUP / VGA SETUP / VGA RESOLUTION.

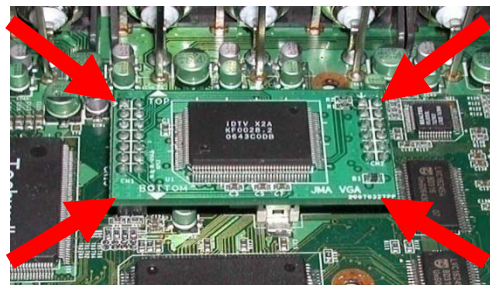

**Audio Input** : Microphone Input (IN1~IN4)

**Audio Output** : Speaker Output (OUT)

## CHAP. 4 Operation

### 4-1. System Log-In

- 1) To enter into the setup menu, press the [MENU] button.
- 2) Enter password with channel number button from No.1 to No.10 on the front of the DVR unit. (Maximum of 8 digits are available)
- 3) After inputting the password, press the [ENTER] button.

DVR LOG-IN					
ENTER PASSWORD : _ _ _ _ _					
INPUT YOUR OWN PASSWORD TO EXIT, PRESS [MENU]					
1	2	3	4	5	←
6	7	8	9	10	⊗

Administrator :

If the password entered matches previously set password, " LOGIN ADMIN" message appears and you can enter into SYSTEM SETUP.

If the password entered does not match previously set password, the DVR unit goes back to live display mode.

Factory default password is blank. For log-in, just press [MENU] button and then [ENTER] button.

-Factory default password

ADMIN : (Blank)

MANAGER : ' 1 '

USER 1~USER8 : ' 2 ' ~ ' 9 '

※ We recommend configuring a unique password as per the procedure in  
SYSTEM MENU - CONFIGURATION - PASSWORD SETUP.

※ For security reasons, be sure to make note of your own password.

### 4-2. Factory Default

Before first operation, you must set Time/Date, set FACTORY DEFAULT, and then clear HDD, even though it is brand new one. It is to make DVMR system and HDD ready for proper operation. Starting recording without FACTORY DEFAULT setting and HDD clear will cause malfunction.

#### 1. HDD CLEAR

<b>DISPLAY SETUP</b> <b>CONFIGURATION</b> <b>REOCD SETUP</b> <b>BACK-UP</b> <b>EXTERNAL DEVICE</b> <b>FACTORY DEFAULT</b> <b>LANGUAGE</b>	<b>HDD MANAGEMENT</b> <b>TIME/DATE SETUP</b> <b>CAMERA SETUP</b> <b>INTERVAL SETUP</b> <b>ALARM SETUP</b> <b>EVENT POPUP SETUP</b> <b>BUZZER SETUP</b> <b>PASSWORD SETUP</b> <b>SYSTEM INFORMATION</b>
---	--


Refer to page 22.

#### 2. FACTORY DEFAULT

<b>DISPLAY SETUP</b> <b>CONFIGURATION</b> <b>REOCD SETUP</b> <b>BACK-UP</b> <b>EXTERNAL DEVICE</b> <b>FACTORY DEFAULT</b> <b>LANGUAGE</b>
---

Refer to page 31.

## 4-3. Display Configuration

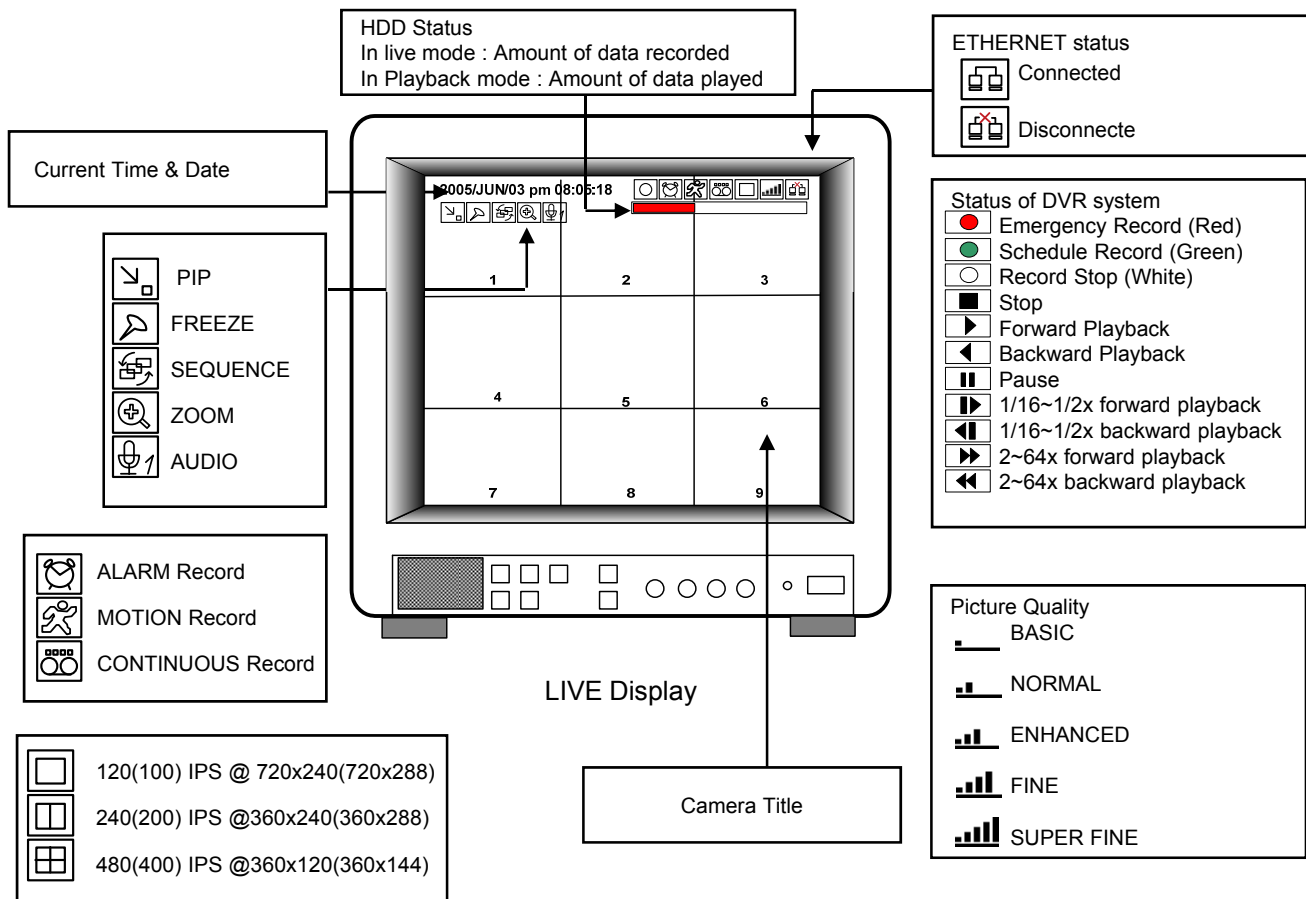


## 4-4. Live View Setup

## 1) Full / Multiple View

Switch to multi-screen display by pressing [MODE]. For full image display, just press the channel button which you want or continue to press [MODE] button until you see full screen.


When you playback images which recorded in 360X240(360X288) resolution, only 1, 4 & 9 split screens are available. When you playback images which recorded in 360X120(360X144) resolution, only 1, 4 & 9 split screens are available.

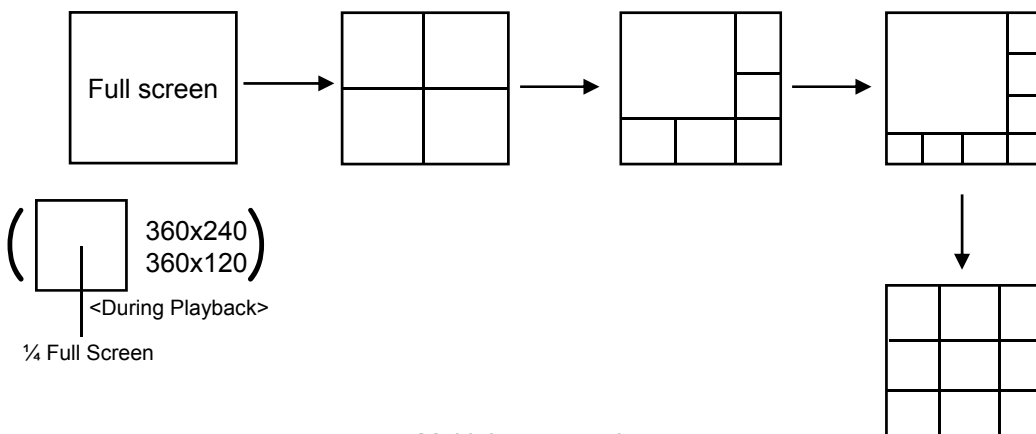

Multiple screen changes


## 2) View in Sequence

Press [SEQ] button. It automatically displays full screen images in sequence.

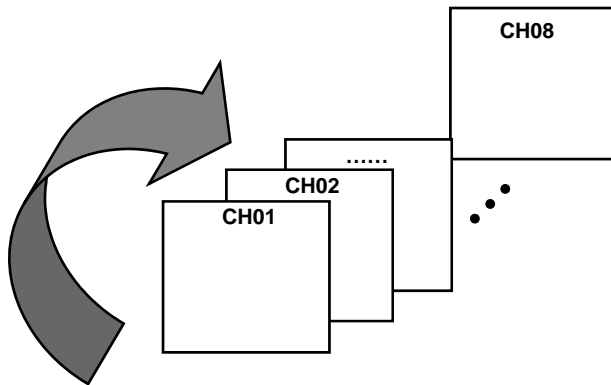

## 3) Picture in Picture(PIP View)

When it is in full screen display mode, you can see other camera in a small window by pressing [PIP]. The other camera in small window is rotating in sequence to next number of camera and you can set the rotating time interval as per the procedure in SYSTEM MENU-CONFIGURATION-INTERVAL SETUP.

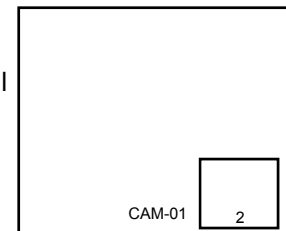

## 4) Freeze View

**Full display mode :** If you press the [FRZ] button, the FRZ icon will be activated on the screen and "F" character will be shown beside camera title, and live image will be frozen.

**Split display mode :** If you press the [FRZ] button, the FRZ icon will be activated on the screen. press the channel button which you want to freeze.  
To release frozen image, press channel number of frozen image again and press [FRZ] button to exit FRZ mode.

## 5) Zoom View

In full screen, press the [ZOOM] button and move the Selection Frame using J.SHUTTLE or Direction keys to the area which you want to enlarge. And then press the [ENTER] button for 2-times enlarged picture. To exit Zoom mode, just press [ZOOM] button again.

Horizontal Movement : J.SHUTTLE

Vertical Movement : Hold [UP or DOWN] button and turn J/SHUTTLE






## Network Stand Alone DVR




## 4-5. Record


Recording mode set before delivery by manufacturer (Default recording mode) is Schedule Recording. In this default recording mode, it records 24 hours/day continuously in weekday and on the weekend. Once you press the [REC] button while you see live view, the record type is changed to Emergency Record mode.

- Emergency Record : at full resolution/in best quality  
Record type : CONTINUOUS, SUPER FINE quality,  
60 (50) ips at 720X240 (720x288)
- Schedule Record  
Record and stop as set (time interval and record type) in RECORD-SCHEDULE SETUP menu.
- Stop Record  
Recording stopped as set in RECORD-SCHEDULE SETUP menu.

## On the screen

- Emergency Record  
: Red Record Icon (  ) and Record LED is lit
- Schedule Record  
: Green Record Icon (  ) and Record LED is lit
- Record Stop  
: White Icon (  ) and Record LED is off
- Motion Record, Alarm Record, Alarm+Motion Record  
: Record standby LED blinks  
: Record LED is lit
- ※ While in Emergency Record mode, press [STOP], [PLAY], [MENU], or [SEARCH] button to exit from Emergency Recording mode and return to Schedule Record mode.
- ※ For details, refer to the SYSTEM MENU – RECORD SETUP (Page 27)

-  Emergency Record [RED]
-  Schedule Record [GREEN]
-  Stop Record [WHITE]

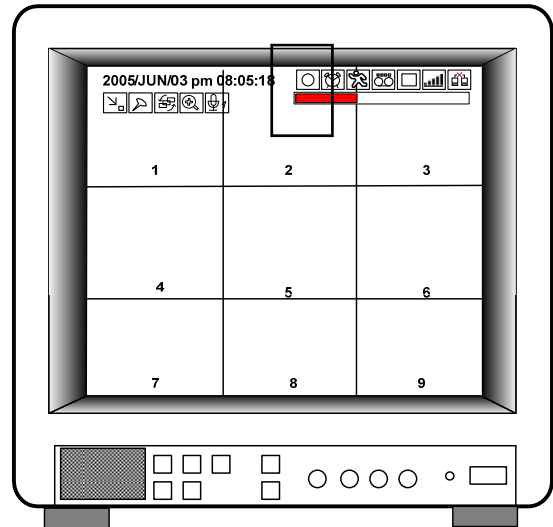

## - This DVR unit does not record in following conditions ;


- ※ While entered in the Menu.
- ※ No camera is connected
- ※ Overwriting is off in the Record Setup menu.

## 4-6. Playback

On record mode or stop mode, press [PLAY] button to play the recorded data in 1x speed. For backward playback, press [PLAY] button again. Use Jog/Shuttle to pause and control playback speed. To stop playback, press the [STOP] button.

## Using Jog/Shuttle

press the [J.SHUTTLE] button in playback mode. The [ACTIVE] LED will be lit, and Jog/Shuttle is ready for use. The [RUN] LED will blink whenever you operate the Jog/Shuttle. For forward playback, turn the Shuttle right and turn Shuttle left for backward playback. Turn Jog using your index figure to see picture by picture in forward or backward direction. Operation of Shuttle is as follows.

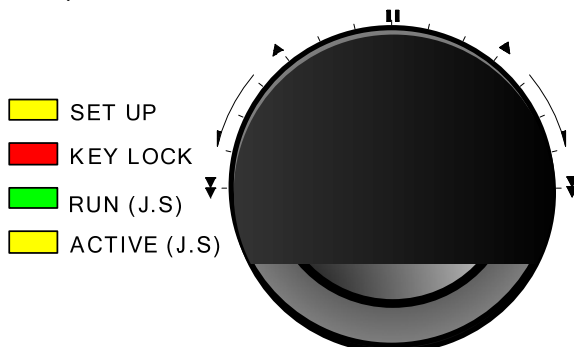

- 1/4 x : 4 times slower than normal playback speed
- 1/2 x : 2 times slower than normal playback speed
- 1 x : Normal playback speed
- 2 x : 2 times faster than normal playback speed
- 4 x : 4 times faster than normal playback speed
- 16 x : 16 times faster than normal playback speed
- 64 x : 64 times faster than normal playback speed

Backward Playback 32x supportable.

If you want to keep the playback speed you selected using Shuttle, just hold the shuttle at that location for a few seconds, and playback in speed you selected continues until you rotate Shuttle again.

#### 4-7. Search

Press [SEARCH] button, and 3 different methods for searching recorded data are available as shown in following SEARCH window. For selecting searching method, use direction key or Jog/Shuttle. After selecting each search method, press [ENTER] button for playback. exit, press [MENU] button.

##### 1) SEARCH BAR

Search by percentage of total recorded data. It starts from image corresponding to set % of data on the search bar.

##### 2) TIME/DATE

Search by time & date. Playback starts from the time & date selected.

##### 3) EVENT LIST

Search by event list (Motion, Alarm, Video Loss).

SEARCH
SEARCH BAR
TIME/DATE
EVENT LIST
SELECT MENU : ▲▼, & [ENTER]

**SEARCH page**

RECORD SEARCH BAR
[START] 2007/JUN/15 AM11:34:34
[ END ] 2007/JUN/15 PM02:50:45
[TARGET DATE/TIME]
020 %
SELECT: JOG, SHUTTLE
SEARCH : [ENTER], EXIT : [MENU]

**SEARCH BAR page**

TIME/DATE
[START] 2007/JUN/20 AM04:04:12
[ END ] 2007/JUN/20 PM08:12:23
INPUT TIME/DATE
2005/JUN/07 AM04:04:12
SEARCH : [ENTER], EXIT : [MENU]

**TIME/DATE page**

EVENT LIST			
CH	EVENT	TIME/DATE	001/001
--	----	--- / - - / --	-- : -- : --
--	----	--- / - - / --	-- : -- : --
--	----	--- / - - / --	-- : -- : --
--	----	--- / - - / --	-- : -- : --
--	----	--- / - - / --	-- : -- : --
--	----	--- / - - / --	-- : -- : --
--	----	--- / - - / --	-- : -- : --
SELECT: ▲▼, PAGE:+-			
SEARCH : [ENTER] , EXIT : [MENU]			

**EVENT LIST page**

#### 4-8. PAN/TILT/ZOOM Camera Operation

Press [PTZ] button first for PTZ control mode. Numeric buttons from 1 to 16 and direction buttons are assigned for each PTZ command, and user can control PTZ camera connected to DVR unit by pressing any one of those 20 buttons, one after the other, as needed, and it is just like control by separate PTZ controller.



## Network Stand Alone DVR

Button	PTZ command	Button	PTZ command
1/ON	LIGHT ON	10/CLEAR	PRESET CLEAR
2/OFF	LIGHT OFF	11/GOTO	PRESET GOTO
3/OPEN	IRIS OPEN	12/AUTO	AUTO SCAN
4/CLOSE	IRIS CLOSE	13/F1 ~ 16/F4	FUNCTION
5/NEAR	FOCUS NEAR	UP BUTTON	TILT UP
6/FAR	FOCUS FAR	DOWN BUTTON	TILT DOWN
7/WIDE	ZOOM IN	LEFT BUTTON	PAN LEFT
8/TELE	ZOOM OUT	RIGHT BUTTON	PAN RIGHT
9/SET	PRESET SET		

## 4-9. Data Back-Up

Enter into SYSTEM MENU-BACKUP-CDR SETUP.

- 1) Insert empty CD-R media into CD writer and select the start time & date from which you want to back up.
  - ※ The START & END time / date in HDD sub-menu only shows start and end of recording.
  - This is not selectable and editable.
  - ※ 700MB on CD-R sub-menu represent size of CD-R media inserted.
- 2) To set start time of back-up and back-up data size, press the [ENTER] button first on [START] or [SIZE] sub-menu and adjust using [+] or [-] button and move using [LEFT] and [RIGHT] button for next change. After setting the time & date and back-up data size, press the [ENTER] button again to exit.
  - ※ End of back-up time will be calculated automatically as per start time & date and the back-up data size you set.
  - ※ User can select the back-up data size (size of back-up data from start of back-up) on [SIZE] item but END of back-up time is automatically determined by DVR system.
- 3) Press [ENTER] button on BURN sub-menu. DVR system starts burning CD.
- 4) When burning is completed, CD-R media will come out automatically. In the next CD back-up, start time of CD-R shall be the end time of previous CD-back-up, and you can back-up from that for continuous data back-up. If you need another backup, repeat the above procedure. To stop backup, press the [MENU] button.
  - ※ During burning CD, it's impossible to cancel burning process.
- 5) User can verify the back-up CD on PC with BACK-UP CD PLAYER (Included in Package).

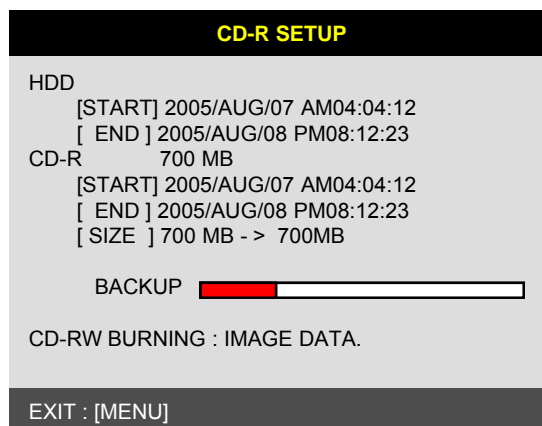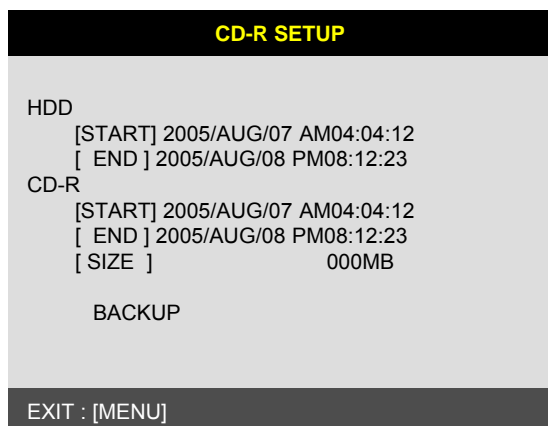

## 4-10. Audio Operation

Press [AUDIO] button to select audio channel..Ch1, Ch2, Ch3, Ch4 or silence in due sequence.

※ Sound of the selected audio channel comes out in Live display.

Recorded sound comes out in Playback.

#### 4-11. Mouse Operation

##### 1) Basic Operation

There are 11 keys that work by Mouse.

LEFT, RIGHT, WHEEL button Click once, double Click, Click longer.

And WHEEL UP/DOWN.

##### 2) Status that MOUSE ICON is not appeared

- LEFT button double click : The assigned channel is sequencing to FULL Screen → Left button double click, it reverts to previous split screen.

If user selects FREEZE, the assigned channel FREEZE.

- RIGHT button double click : The MOUSE ICON will be on.

Depending on the place of Mouse, it shows Width, Length and BOT.

- WHEEL button click longer : Delete MOUSE ICON

- LEFT button click longer : In ZOOM mode, holding this button will change the icon.

If User moves the MOUSE, ZOOM area also moves.

##### 3) Working Status in SETUP MENU

- LEFT button click once : ENTER

- LEFT button double click : NEXT

- LEFT button click longer : MINUS

- WHEEL button click once : MODE (Schedule Recording, MASK SETUP)

- WHEEL button double click : LEFT (For deleting password)

- WHEEL button click longer : None

- WHEEL button upper : PLUS

- WHEEL button lower : MINUS

- RIGHT button click once : MENU

- RIGHT button double click : PLAY

- RIGHT button click longer : PLUS

Basically by Left button to select Menu, and by Right button to exit Menu.

Move mouse up and down, left arrow moving and indicate selected menu items.

WHEEL : to plus/minus Left button : to press enter

And Left key (Wheel button double click) : password deletes one by one (Login).















## 4) Working Status in LIVE MOUSE ICON

To work command in ICON, user click Left button once.

In case ICON is divided, upper part of button : Mouse Left button click once


Lower part of button : Mouse Right button click once



Following is the assigned KEY by each ICON.

ICON	Left Click	Right Click	ICON	Left Click	Right Click
	MENU			NEXT	ENTER
	PLUS	MINUS		MODE	
	REC	STOP		PLAY	QPLAY
	SEARCH			PTZ	
	ZOOM			FRZ	
	PIP			SEQ	
	AUDIO			KLOCK	





## 5) Working Status in PLAY MOUSE ICON

Mouse working is the same as above LIVE ICON.

Place mouse  ICON and by Wheel Up/Down buton, PLAY SPEED can be controlled.


And In Pause condition, place mouse   ICON and by Wheel Up/Down, STEP PLAY can be controlled.

Following is the assigned KEY by each ICON.

ICON	Left Click	Right Click	WEEL	ICON	Left Click	Right Click	WEEL
	STOP BACKWARD		Step play		SLOW BACKWARD		
	FAST BACKWARD				PLAY		PLAYBACK SPEED
	FAST FORWARD				SLOW FORWARD		
	STOP PLAY		Step play		PAUSE		
	REC	STOP			ZOOM		
	MENU				AUDIO		
	MODE						



















## 6) Working Status in PTZ MOUSE ICON

Mouse working is the same as LIVE ICON.

Place Mouse  ICON , and by Wheel Up/Down, User can change value PRESET,TOUR, GOTO and etc.

For other ICONs, user can change channel by Wheel Up/Down.

Following is the assigned KEY by each ICON.

ICON	Left Click	Right Click	WEEL	ICON	Left Click	Right Click	WEEL
	LEFTUP		Change Channel		UP		Change Channel
	RIGHTUP				LEFT		
	ENTER				RIGHT		
	LEFTDOWN				DOWN		
	RIGHTDOWN				ZOOM IN	OUT	ZOOM IN/OUT
	FOCUS NEAR	FAR	FOCUS FAR/NEAR		GOTO PRESET		Change Channel
	SET PRESET		Change Channel		PLUS	MINUS	PRESET NUM +/-
	CLEAR PRESET				AUTO SCAN		Change Channel
	PTZ MENU/EIXT				MENU	NEXT	Change Command

## 7) Working Status in SPLIT MOUSE ICON.

To change assigned screen division, click left button of mouse once.

Please note that specific division can not be supported such as QUAD record/playback.

And,according to DVR channel, screen division can be different.



## 8) Working Status in NUMBER MOUSE ICON.

User can use it for KLOCK or LOGIN and change PASSWORD.




## CHAP. 5 Set Up

## 5-1. Entering into the Menu


Enter into SYSTEM MENU by pressing [MENU] button.

Button	Function
MENU	Enter into SYSTEM MENU, Move to previous menu, ESC
ENTER	Selection key, Move to sub-menu, change status (ON or OFF)
NEXT	Move to next page
UP	Move to upper side
DOWN	Move down side
LEFT	Move to the left
RIGHT	Move to the right
MINUS [-]	Decrease the option value
PLUS [+]	Increase the option value
Jog Shuttle	Jog left turning : Move backward to next image / Decrease value Jog right turning : Move forward to next image / Increase value
	Shuttle left turning : Decrease playback speed / Decrease value Shuttle right turning : Increase playback speed / Increase value

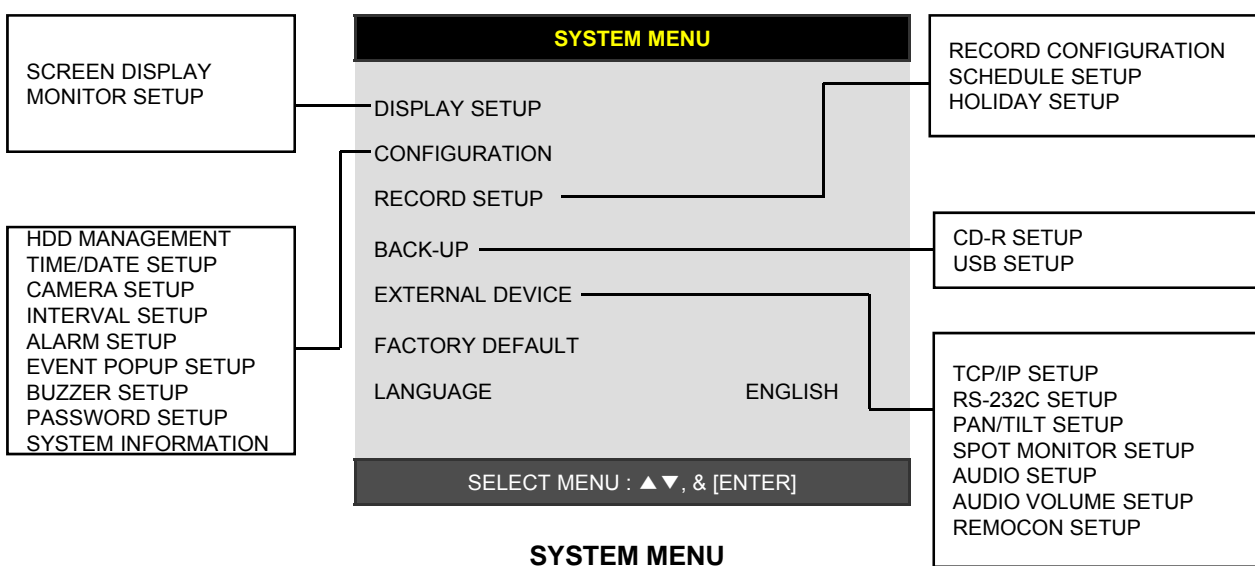


## 5-2. DISPLAY SETUP

Setting up parameters for monitor and display on screen.  
Enter into SYSTEM MENU-DIPLAY SETUP.

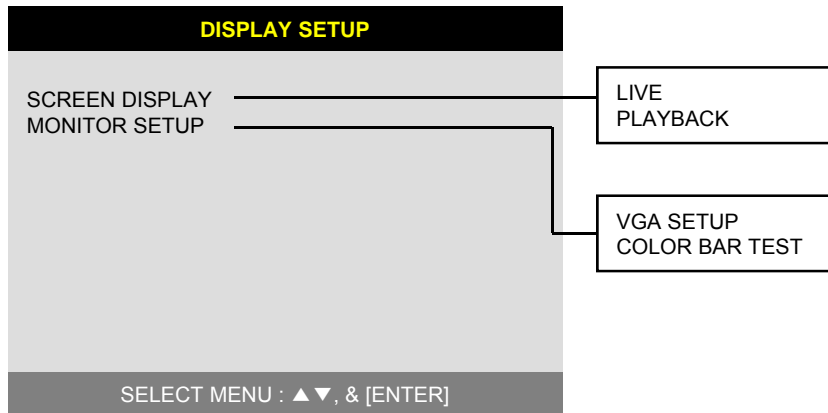

### 1) SCREEN DISPLAY

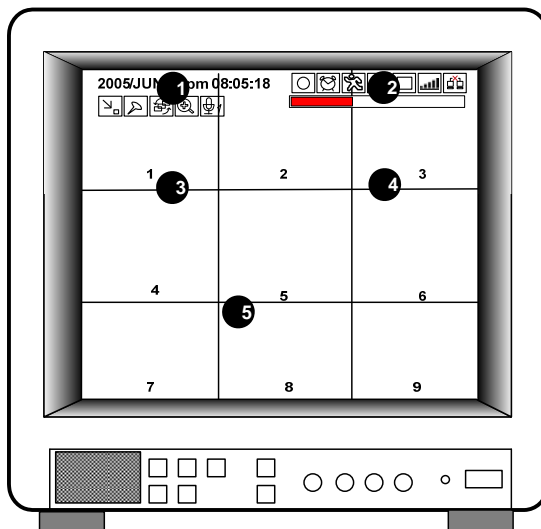

Setting up the screen display in LIVE mode and PLAYBACK mode.

Select the sub-menu which you would like to set using direction buttons and then change ON/OFF with [ENTER] button.

1. TIME/DATE : Display time & date
2. DVR STATUS : Display system setting status
3. ICON DISPLAY : Display function setting status
4. REC/PLAY BAR : Display record / playback status
5. CAMERA TITLE : Display camera title

### 2) MONITOR SETUP

**VGA SETUP :** VGA option card enables to connect TFT LCD monitor or CRT type PC monitor to DVR unit. To connect TFT LCD monitor or CRT type PC monitor to DVR unit, select resolution as follows using [+] or [-] button. After setting the below option, press [ENTER] button then the DVR unit will set VGA resolution automatically.  
VGA option card supports following resolution, and choose best resolution that match TFT LCD monitor or CRT type PC monitor to be connected to DVR unit.

- |                    |                    |
|--------------------|--------------------|
| - 640X480 / 60Hz   | - 640X480 / 75Hz   |
| - 800x600 / 60Hz   | - 800X600 / 75Hz   |
| - 1024X768 / 60Hz  | - 1024X768 / 75Hz  |
| - 1280X1024 / 60Hz | - 1280X1024 / 75Hz |


**※ NOTICE :** In the booting process, DVR unit with VGA option card takes some seconds more to set parameters.

**COLOR BAR TEST :** Adjust color tone of monitor.  
(Color bar test is Not available for monitor through VGA)



### 5-3. CONFIGURATION

Various parameters for system can be set in CONFIGURATION menu.  
Enter into SYSTEM MENU-CONFIGURATION and press the [ENTER] button.

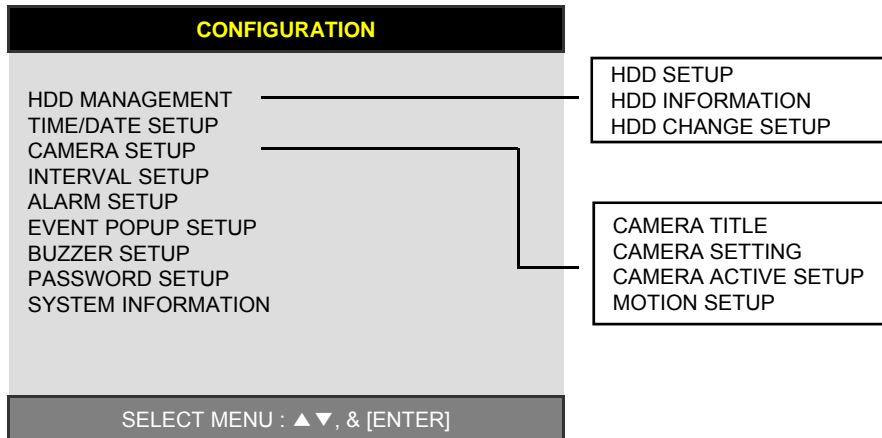

#### 1) HDD MANAGEMENT

Enter into SYSTEM MENU-CONFIGURATION-HDD MANAGEMENT and press the [ENTER] button.

##### (1) HDD SETUP

This page includes information about start and end of recording, location of recorded data, or location of last playback on HDD. In addition, users can delete all the data on HDD.

HDD SETUP		
STATUS	HDD	DATE/TIME
BEGIN	MASTER-1	2005/04/08 12:12:05
RECORD	MASTER-1	2005/04/09 15:09:58
PLAY	MASTER-1	2005/04/08 19:44:31
HDD STATUS		NORMAL
HDD CLEAR		IN USE →
HDD CLEAR [ENTER], EXIT [MENU]		

On the [HDD CLEAR] sub-menu, press the [ENTER] button to delete all image data on HDD.  
The system will ask password for verification.  
After you clear all data on HDD, status of HDD CLEAR changes from IN USE to EMPTY.  
※ When you clear HDD, event list is deleted, too.

ENTER PASSWORD : \_\_\_\_\_  
INPUT YOUR OWN PASSWORD.  
TO EXIT, PRESS [MENU]

OK →

EMPTY

If you selected OVERWRITE in Record Setup, the HDD STATUS presented as OVERWRITE.

##### (2) HDD INFORMATION

This menu will show the physical information of HDD in DVR.

HDD INFORMATION		
[MASTER-1]		
MODEL	:	Maxtor 6Y080L0
SPEED	:	PIO-4
SIZE	:	81,964,302,336 BYTES
START	:	2005/04/08 12:08:56
END	:	2005/04/08 12:08:56
[MASTER-2]		
MODEL	:	AT5520026DT
SPEED	:	240/120nsec
SIZE	:	80GB
START	:	2005/04/08 12:08:56
END	:	2005/04/08 12:08:56
TO EXIT, PRESS [MENU]		

### (3) HDD CHANGE SETUP

Without losing data, user can use HDD from other DVRs, and HDD installed current DVR can be used to other DVRs.



#### 1) SAVE DVR INFO

Once you press ENTER button on "SAVE DVR INFO", the DVR information will be saved on HDD. If the DVR information is saved properly, you can see "NOW CHANGE HDDDISK" message on DVR. Then power off the DVR and change with new HDD.

※ NOTICE : Be sure to write down the DVR information as like NTSC/PAL, MODEL name, Channel, HDD location(PORT 1, PORT2). When you want to retrieve the HDD(old), you must do based on this DVR information.

#### 2) LOAD DVR INFO

"LOAD DVR INFO" : it retrieves recorded HDD from other DVR set.

- HDD retrieval procedure

1. Install HDD with new DVR and power on.
2. Press [STOP] button when the DVR is booting.  
(Then, User can see "HDD CHANGE MODE-ON" message.)
3. It retrieves when user executes "LOAD DVR INFO" in Menu.

Please note that if the HDD conditions are changed between backup and retrieval. There are some possibilities losing DATA. So, please remember the condition during backup.

## 2) TIME/DATE SETUP

Set time and date of DVR system which is very important for search with time and date of the event. Time and date set by manufacturer is different from local time of user, and user must set time and date exactly in the first operation. Set time & date using direction buttons and [-][+] button or Jog shuttle

2.Change the date, time and month format for user's convenient

TIME/DATE SETUP	
YEAR	
MONTH	
DAY	2005 / JUN /11
HOUR	
MINUTE	PM14:06:45
SECOND	
DATE FORMAT	ASIA
TIME FORMAT	12 HOUR
MONTH FORMAT	ENGLISH

SELECT : ▲▼, CHANGE VALUE : - +

## 3) CAMERA SETUP

CAMERA SETUP
CAMERA TITLE
CAMERA SETUP
CAMERA ACTIVE SETUP
MOTION SETUP

SELECT MENU : ▲▼, & [ENTER]

CAMERA TITLE SETUP	
0123456789 .ABCDEFGHIJKLMNO PQRSTUVWXYZ !#[ ]*+ -,./ :<=>?@▶◀	
CAMERA01	CAM -1
CAMERA02	CAM -2
CAMERA03	CAM -3
CAMERA04	CAM -4
CAMERA05	CAM -5
CAMERA06	CAM -6
CAMERA07	CAM -7
CAMERA08	CAM -8

[ENTER] SELECT MODE  
[▲/▼] select CAMERA

(1) TITLE : Input Title of each camera. Move to channel you want to change using [LEFT] or [RIGHT] direction button and then change the title using [-] [+] button. When modification is finished, press the [ENTER] button. To exit to previous menu, press the [MENU] button.

(2) COLOR : Adjust image color  
Move to each element using [UP][DOWN] button and adjust using [-] [+] button or Jog shuttle.

CHANNEL : Select camera  
BRIGHTNESS : Adjust image brightness (-32~ 31)  
CONTRAST : Adjust color contrast ( -32 ~ 31)  
SATURATION : Adjust color saturation ( -32 ~ 31)  
HUE : Adjust color hue ( -32 ~ 31)  
CAMERA POSITION : Adjust camera image  
To the center. If value is lower:Left.value is  
higher:Right (0~80)

CAMERA COLOR SETUP	
CHANNEL	1
BRIGHTNESS	+0
CONTRAST	+0
SATURATION	+0
HUE	+0
CAMERA POSITION	32

SELECT : ▲▼, CHANGE VALUE : + -

## Network Stand Alone DVR

CAMERA ACTIVE SETUP			
CH	STATUS	LIVE	REC
01	ACTIVE	ON	ON
02	ACTIVE	ON	ON
03	LOSS	OFF	OFF
04	ACTIVE	ON	ON
05	ACTIVE	ON	ON
06	ACTIVE	ON	ON
07	LOSS	OFF	OFF
08	ACTIVE	ON	ON
SELECT : ▲ ▼ ◀ ▶, & [ENTER]			

MOTION CONFIGURATION	
CHANNEL	01
SENSITIVITY GRADE	01
MOTION DISPLAY TYPE	OFF
RECORD DURATION	05 SEC
SELECT ▲ ▼, CHANGE VALUE : + -	

(3) CAMERA ACTIVE SETUP : With direction button, move to option to be changed, and press [ENTER] button to select [ON/OFF]. If it is set at LIVE [OFF] and REC [ON], DVR system records, but does not show live image of set channel.

- STATUS : Shows if image from a specific channel is coming for live display and recording. In normal camera condition, it is ACTIVE, but LOSS is displayed when the cable is disconnected or camera is not working.
- LIVE : Decides whether to show LIVE screen image or not.
- REC : Decides whether to record relevant channel or not.


(4) MOTION SETUP: You can set sensitive of motion detection in 4 steps, motion detection area and others in relation to motion recording in this menu.

#### (4)-1. MOTION CONFIGURATION

- SENSITIVITY GRADE : Adjusts motion detection sensitivity. (LOW, MEDIUM, HIGH, VERY HIGH)
- MOTION DISPLAY TYPE : Showing cells with motion detected differently from cells with no motion .
- RECORD DURATION : Whenever motion is detected and it is set at Motion Recording mode, DVR system records for RECORD DURATION from time motion is detected. (1sec. ~ 99 sec.) (Default duration : 5 sec.)

(4)-2. MOTION MASK SETUP: Set motion detection area. Direction button is for moving and [ENTER] button is for selection, and [MODE] button is for changing mode of MASK SETUP.

- CELL : Move to the location which you want to detect and then press the [ENTER] button. Highlighted cell area means motion detection area.
- ALL ON : Set all cells as detection area. Use [ENTER] button to set.
- ALL OFF : Set all cells as no-detection area. Use [ENTER] button to set.
- BLOCK ON : Select detection area by block. Use [MODE] button and press [ENTER] button to set ON.
- BLOCK OFF : Select un-detection area by block. Use [MODE] button and press [ENTER] button to set ON.

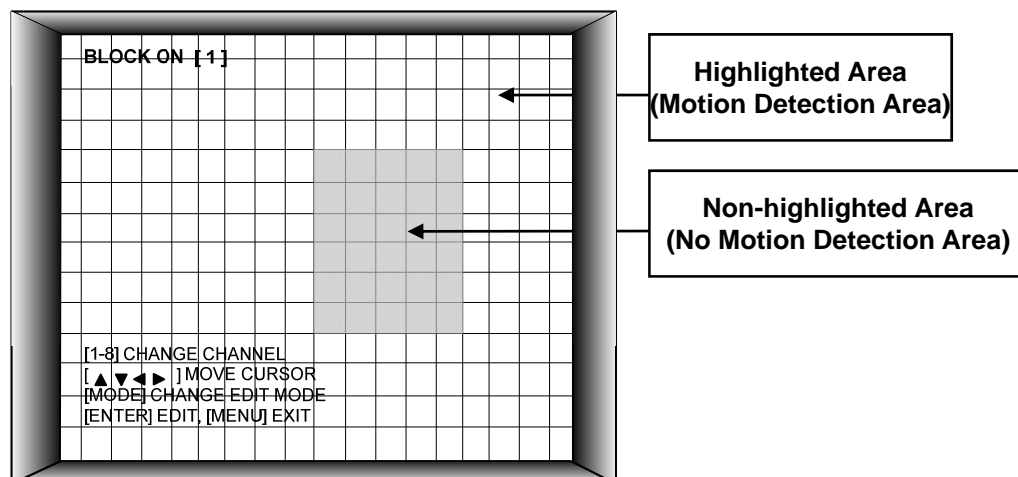

## Network Stand Alone DVR

**4) INTERVAL SETUP**

Set the switching time interval for SEQ or PIP function.(1 sec. ~ 99 sec.)

(1)FULL SCREEN : set the sequencing switch time interval in live full screen.

(2)PIP SCREEN : set the sequencing switch time interval of PIP window.

(3)EVENT UPDATE TIME : Set the minimum time interval of event to be listed in EVENT LIST.  
If EVENT UPDATE TIME is set at 20 sec, only following event happened 20 sec or more than 20 sec later previous event shall be listed in EVENT LIST.

INTERVAL SETUP	
SWICHING INTERVAL	
FULL SCREEN	01 SEC
PIP SCREEN	01 SEC
EVENT RECORD	
EVENT UPDATE TIME	600 SEC
SELECT ▲▼◀▶, CHANGE VALUE : - +	

**5) ALARM SETUP**

Set type of alarm sensors connected to DVR unit.  
N.O represents Normal Open type and N.C Normal Close type.

(1) ALARM INPUT : Select type of alarm sensor connected to DVR unit (N.O or N.C).  
Use direction button and [-] [+] button to set.  
DISABLE represents not to use alarm sensor connected to DVR.

(2) DURATION : Set the duration of alarm when an alarm is activated. (0 sec. ~ 300 sec.)

ALARM SETUP	
CHANNEL	CH1
ALARM INPUT	N.O
DURATION	005
N.O ..... NORMAL OPEN N.C ..... NORMAL CLOSE ____ ..... DISABLE	
SELECT : ▲▼, CHANGE VALUE : - +	

**6) EVENT POPUP SETUP**

When event is activated, the full image will pop up as user set.

(1)CHANNEL : Choose a channel

(2)POPUP ON/OFF : Set a popup function at ON/OFF

(3)EVENT : Set event mode which 'popup' function is applied to.

\*A : ALARM event. M : MOTION event.

(4)DURATION : Set the duration how long the popup Image is shown.(0 sec. ~ 60 sec.)

※If more than 2 channels pop up at the same time, the first channel out of them will be shown.  
(For e.g. Ch1 and CH3 pop up at the same time, CH1 will be shown)

EVENT POPUP SETUP	
CHANNEL	CH01
POPUP ON / OFF	OFF
EVENT	--
DURATION	0 3
SELECT : ▲▼, CHANGE VALUE : - +	

## 7) BUZZER SETUP

Set parameters for buzzer (On or Off).  
Use direction button and [ENTER] button.

KEY BEEP : buzz when button is pressed.  
VIDEO LOSS : buzz when video signal is lost.  
ALARM ACTIVE : buzz when alarm is activated.  
MOTION DETECT : buzz when motion is detected.

User can set all buzzers at On/Off at once  
by set ALL at ON/OFF.

BUZZER SETUP	
ALL	--
KEY BEEP	ON
VIDEO LOSS	ON
ALARM ACTIVE	ON
MOTION DETECT	OFF

SELECT : ▲▼, & [ENTER]

## 8) PASSWORD SETUP

Set user ID and password.

-Use [UP] and [DOWN] button to move to option  
and [LEFT] and [RIGHT] button to set user ID.

The password must be consist of 1 to 8 digit  
number. Just use numbers button from 1 to 10  
on the front panel of DVR unit.

-To change password, user must input current  
password and then input new password.  
And input again new password to confirm.

- Default value  
ADMIN : ' ' (Blank)  
MANAGER : '1'  
USER 1 : '2'  
:  
:  
USER 8 : '9'

PASSWORD SETUP	
USER I D	ADMIN
USER PW	-----
NEW PW	-----
CONFIRM	-----

[K1-K10] INPUT PASSWORD  
[ENTER] CHANGE PASSWORD

TO EXIT, PRESS [MENU]

※ Change the user PASSWORD in the first operation is recommended.

※ In case you forgot PASSWORD, contact dealer of DVR to get instruction to enter into menu to  
set new PASSWORD.

## 9) SYSTEM INFORMATION

DVR system information including firmware  
version, hardware version, product ID, etc....

SYSTEM INFORMATION	
S/W VERSION	VER 1.0
H/W VERSION	REV-B. / ES518
PRODUCT ID	01S-2039-001008-AR-01
MASTER-1	Maxtor 6Y060L0
MASTER-2	WDC WD2000JS-00NCB1
CD-R	SAMSUNG CD-R/RW SW-256B

TO EXIT, PRESS [MENU]

## Network Stand Alone DVR

## 5-4. RECORD SETUP

This is the most important configuration of the DVR.  
Enter into SYSTEM MENU-RECORD SETUP  
and press the [ENTER] button.

## 1) RECORD CONFIGURATION

Use direction button to move and [-] [+] button to set value.

(1) OVERWRITE : Set overwrite or stop recording when the HDD is full.

(2) MULTIPLEX

- DUPLEX : Playback & Ethernet
- TRIPLEX : Playback & Recording & Ethernet

※ Note: DUPLEX MODE is recommended to playback the images at a maximum frame rate.  
But, it makes DVR not to record during search.

(3) QUALITY : Set recording picture quality.

Actually it is fixing maximum data size of image for each picture quality in 5 steps as follows.

- BASIC
- NORMAL
- ENHANCED
- FINE
- SUPER FINE: Default quality set by manufacturer

In Emergency recording mode, recording quality is SUPER FINE.

To send more images via IP network and longer recording time, set QUALITY at NORMAL or ENHANCED and record at 360x240(360x288).

※ Data size of image in PAL system is a little bigger than NTSC system, but the total recording time is same as in NTSC system.

(4) RESOLUTION : Set recording resolution.

- 120 ips at 720x240(NTSC) , 100 ips at 720x288(PAL)
- 240 ips at 360x240(NTSC) , 200 ips at 360x288(PAL)
- 480 ips at 360x120(NTSC) , 400 ips at 360x144(PAL)

※ It is not possible to see those images in full screen mode in playback.

Recording in Dual resolution is recommended for higher recording speed, and also to send more images via IP network.

(5) RECORD IN ALARM : Set record speed (skip rate) in ALARM record mode.

(6) RECORD IN MOTION : Set record speed (skip rate) in MOTION record mode.

(7) CONTINUOUS RECORD : Set record speed (skip rate) in CONTINUOUS record mode.

Set record speed (skip rate)

- 1/1x, 1/2x, ..... 1/999x record speed
- ex: 1/2x ) R->S->R->S...                      - ex: 1/3x ) R->S->S->R->S->S->R...
- ex: 1/4x ) R->S->S->S->R->S->S... ( R : RECORD    S : SKIP )
- ex : If record resolution is set at 360x240, 1/1x = 120 ips, 1/2x = 60 ips, 1/3x = 40 ips, etc.

## RECORD SETUP

RECORD CONFIGURATION  
SCHEDULE SETUP  
HOLIDAY SETUP

SELECT MENU : ▲▼, & [ENTER]

## RECORD CONFIGURATION

OVERWRITE	ON
MULTIPLEX	DUPLEX
QUALITY	SUPER FINE
RESOLUTION	120IPS 720*240
RECORD IN ALARM	1/1X
RECORD IN MOTION	1/1X
CONTINUOUS RECORD	1/1X

SELECT MENU : ▲▼, CHANGE VALUE : + -

## Network Stand Alone DVR

## 2) SCHEDULE SETUP

Unless you selected other recording mode, DVR system records in Schedule Recording mode.

In SCHEDULE REC SETUP, you set type of recording for every time interval of 2 hours in each day of the week. Schedule Recording set by manufacturer is recording continuously at its full recording speed, and it means DVR system record continuously at 60 ips in total at 720x240 resolution.

To set Schedule Recording parameters, enter into SYSTEM MENU-RECORD SETUP-SCHEDULE SETUP and Press the [ENTER] button.

## (1) SCHEDULE SETUP

Set recording type for each recording time interval for a day of the week (2 hours interval).

SCHEDULE REC SETUP							
	SUN	MON	TUE	WED	THU	FRI	SAT
00-02	-M-	AM-	--C-	--C-	--C-	--C-	--C-
02-04	-M-	AM-	--C-	--C-	--C-	--C-	--C-
04-06	-M-	AM-	--C-	--C-	--C-	--C-	--C-
06-08	-M-	AM-	--C-	--C-	--C-	--C-	--C-
08-10	---	AM-	--C-	--C-	--C-	--C-	--C-
10-12	---	AM-	--C-	--C-	--C-	--C-	--C-
MODE: CELL BY CELL							1 / 2
▲▼▶◀ & [NEXT], EDIT: + -&[MODE] A:ALARM M:MOTION C:CONTINUOUS							

Use [MODE] button to select edit type and move to the time interval of a day of the week you want to change. Press [ENTER] button to select and use [+] or [-] button, to change the record type. To go next page, use [NEXT] button.

※ MODE (Edit type)

TIME CELL : Set each time interval of a day of the week

WEEK : Set a day of the week at once

TIME ZONE : Set a time slot at once

ALL : Set page by page at once

CLEAR ALL: Clear page by page

※ Unless user press [REC] button to record at full resolution and in SUPER FINE picture quality, DVR system records in SCHEDULE Record mode.

※ DEFAULT record mode for each time interval of a day of the week set by manufacturer is CONTINUOUS recording.

※ Record type :

After power on ⇒ Schedule record

Exit from menu ⇒ Schedule record

End of search or playback ⇒ Schedule record

After pressing [STOP] button ⇒ Schedule record

After pressing [REC] button ⇒ Emergency record (Continuous recording in full performance)  
[60(50) ips at 720x240(720x288)]

## 3) HOLIDAY SETUP

Users can set national holiday or holidays on calendar to record just as setting for Sunday in SCHEDULE REC SETUP.

Use [MODE] button to select a month and direction button to move to a day, and press [ENTER] button to set a holiday. Then color of date shall be changed to red, as Sunday.

EDIT HOLIDAY : Set as holiday

CLEAR MON DATA : Cancel the holiday set per month

CLEAR ALL DATA : Cancel all holiday set


※ The maximum holidays is 100 days.

HOLIDAY SETUP							
< APR >						000/100	
SUN	MON	TUE	WED	THU	FRI	SAT	
						01	02
03	04	05	06	07	08	09	
10	11	12	13	14	15	16	
17	18	19	20	21	22	23	
24	25	26	27	28	29	30	
MODE : EDIT HOLIDAY SELECT ▲▼▶◀, EDIT [ENTER]&[MODE]							



**5-5. BACK-UP****1) CDR SETUP**

User can back up the recorded data to CD using CD writer installed in DVR.  
Refer to [START] and [END] of data on HDD and set copy from time, [START], and size of data copied, [SIZE], and move to BURN and press [ENTER] button to start copy.

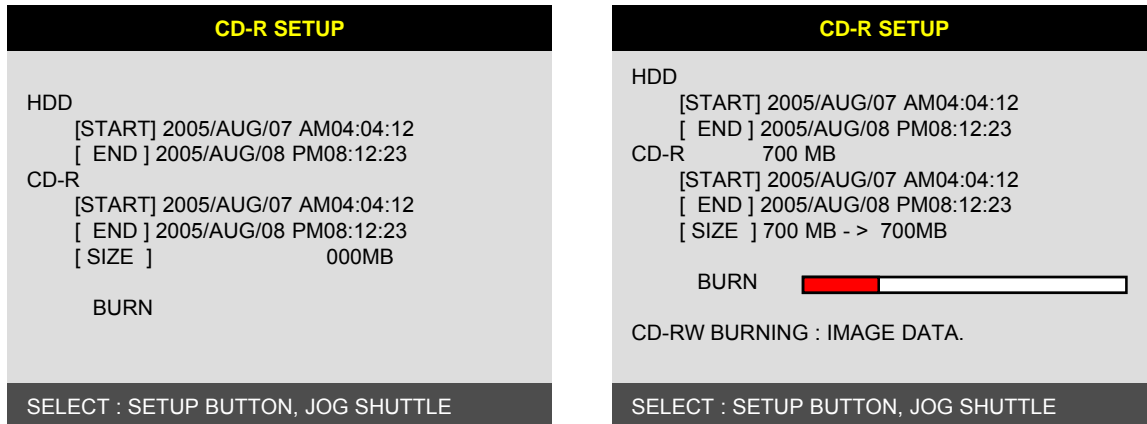**System Status Messages :**

- CD-RW DOOR CLOSE. CHECKING CD-R : Blank CD check
- INPUT BLANK CD : CD writer has no blank CD.
- CD-RW DOOR OPEN : Open CD-RW and insert blank CD –R media into CD drive.
- CD-R MEDIA IS DETECTED : Blank CD-R media has been inserted and detected. DVR system will display size of blank CD-R.

After you set [START] time and [SIZE] in CD-R sub-menu and then select BURN, DVR system starts copying images to CD and shows following message.

CD-RW BURNING START  
CD-RW BURNING : LEAD-IN  
CD-RW BURNING : IMAGE DATA  
CD-RW BURNING : CLOSE TRACK  
CD-RW DOOR OPEN

When burning is completed, CD-R media will be ejected automatically.

To copy more images, repeat above process. In the next back-up process, [START] time in CD-R sub-menu shall be [END] time in previous back-up, and you can copy images in series to many CDs as many as you want.


**※ SIZE Change**

+ , - : Change per 10MB unit

LEFT , RIGHT : Change per 100MB unit

**2) USB SETUP**

User can back up the recorded data to USB Media using USB (HOST) port on front panel of DVR. Refer to [START] and [END] of data on HDD and set start and end time of data to USB Media ( Memory Stick or USB HDD ). Select backup file size, and move to BACKUP and press [ENTER] Button to start copy.

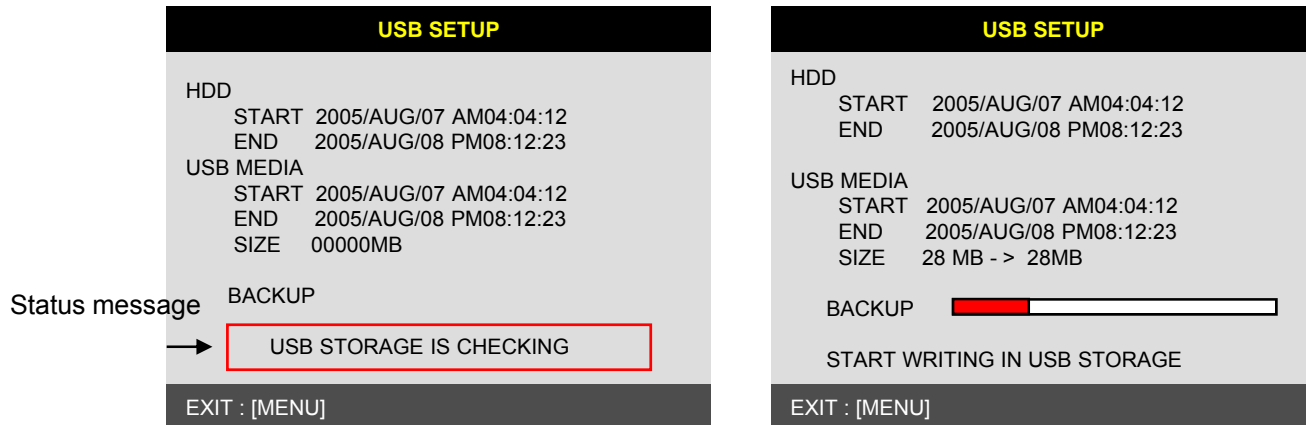

#### System Status Messages

- (1) If MEMORY STICK is not inserted :
  - USB STORAGE IS CHECKING
  - USB STORAGE IS NOT AVAILABLE
  - RE-CONNECT THE USB STORAGE
  - CONECT THE OTHER USB STORAGE
- (2) When MEMORY STICK or USB HDD is recognized
  - USB STORAGE IS CHECKING
  - THERE IS A FREE SPACE ON STORAGE
  - USB STORAGE IS AVAILABLE
- (3) During Back-Up
  - CHANGE WRITE PROTECT MODE (Only WRITE PROTECT is caught, it can be seen)
  - START WRITING IN USB STORAGE
  - FINISH WRITING IN USB STORAGE
- (4) Error Message
  - THERE IS A PROBLEM ON USB PORT (If USB PORT fails to work properly)
  - USB STORAGE IS FULL (When USB is full)
  - FILE SYSTEM IS NOT SUPPORTED (If File System is not supported)
  - SIZE IS LARGER THAN FREE SIZE (If back-up size is larger than free space)

※ Back-Up procedure is the same as CDR Back-Up.

※ If Back-Up size is larger than 2GB, it creates several files. (It saves by 2GB).

### 5-6. EXTERNAL DEVICE

Set parameters of external devices connected to DVR, like Ethernet, PTZ camera, RS-232C, etc.

Use direction button to move to sub-menu and Press [ENTER] button to set.

#### 1) TCP/IP SETUP

TCP/IP function enables user to see live pictures and recorded pictures via the internet.

##### (1) IP CONFIG SETUP :

Show the network information assigned to the DVR unit. If the DHCP setup status is AUTOMATIC, user can set the IP port only and if the DHCP setup status is MANUAL, user must set all parameters. For detail procedure of Remote viewer program installation, refer to CHAP. 6 Software program.(Remote viewer software).

IP CONFIG SETUP	
MAC ADDRESS	00-0A-A2-00-00-00
IP ADDRESS	192.168.001.160
IP PORT	50000
GATEWAY	192.168.001.001
SUBNET MASK	255.255.255.000
DHCP SETUP	AUTOMATIC
SELECT MENU : ▲▼, & [ENTER]	

### (2) DDNS SETUP :

- DDNS ON/OFF : Select if DDNS Function use
- DDNS SERVERS : IP Address of DDNS SERVER.
- INTERVAL : Registered time period to DDNS SERVER.  
Per D(Day) H(Hour) M(Minute)
- REGISTER : Once press [ENTER],  
It automatically registered.
- DDNS STATUS : present current status by  
"REGISTER OK"  
"REGISTER ERROR", "NOT REGISTER"
- IP ADDRESS : IP of last registered DVR
- IP PORT : Port of last registered DVR
- REMAIN TIME : Remain time to next registration
- LAST REG... DATA : Last registered time

DDNS SETUP	
DDNS ON/OFF	OFF
DDNS SERVER	211.062.253.087
INTERVAL	D-00 H-00 M-20
REGISTER	
-----	
DDNS STATUS	
IP ADDRESS	-----
IP PORT	-----
REMAIN TIME	D-00 H-00 M-00
LAST REGISTRATION DATE	>
SELECT MENU : ▲▼, & [ENTER]	

### (3) CONNECTION SETUP :

- TIME OUT :  
Adjust TIMEOUT value properly to  
successfully access to DVMR unit via Internet  
line. If data transmission speed is high enough,  
leave TIMEOUT value as set by manufacturer  
(200 msec), and increase it if data anssmission  
via Internet line is relatively slow. Execute  
tracert (Tracing Route) in your PC for IP  
assigned to DVMR unit, and you can figure  
out how much TIMEOUT value increased.
- RETRY COUNT :  
Set the retry number of times for network  
connection.

CONNECTION SETUP	
TIMEOUT	200 MSEC
RETRY COUNT	08
SELECT MENU : ▲▼, & [ENTER]	

### (4) DHCP SETUP :

- DHCP MODE : If user selects AUTOMATIC,  
IP automatically assigned.
- If user selects MANUAL, in IP CONFIG SETUP  
User selects it manually.
- DETECT IP : It only appears for AUTOMATIC.  
Once press [ENTER], it automatically starts IP  
Assignment.

DHCP SETUP	
DHCP MODE	AUTOMATAIC
DNS SERVER	168.126.063.001
IP ADDRESS	192.168.001.086
SUBNET MASK	255.255.255.000
GATEWAY	192.168.001.001
SELECT : ▲▼, CHANGE VALUE : + -	

## (5) EVENT SERVER SETUP :

IP ADDRESS : IP Address of PC that executes  
EVENT SERVER PROGRAM.

IP PORT : PORT of PC that executes  
EVENT SERVER PROGRAM

EVENT SERVER TYPE :

It is the way to transmit data to SERVER

By "OFF", "EVENT", "MINUTE",

In case Event happens from DVR.

"EVENT": It transmits by the number of EVENT.

"MINUTE": It transmits each scheduled time.

INTERVAL: If EVENT SERVER TYPE is "EVENT"  
User can select from 1~512.

If EVENT SERVER TYPE is "MINUTE", User can select from 1 ~ 60 mins.

EVENT GMT TYPE : User can set currently installed location(DVR) of GMT.

EVENT SERVER SETUP	
IP ADDRESS	192.168.001.072
IP PORT	09988
EVENT SERVER TYPE	OFF
INTERVAL	---
EVENT GMT TYPE	GMT+00:00

SELECT : ▲▼, CHANGE VALUE : + -

## (6) NVS SETUP :

BITRATE :

DATA SIZE from NVS. The bigger it set, the better its  
quality, but sometimes motion is not smooth.

(Set Value : 100K ~ 2500K, can be adjusted by 50K)

GROUP OF PICTURES :

Image (I frame,P frame) from NVS. The bigger it set,  
the better its quality.

NVS SETUP	
BITRATE	0500 Kb
GROUP OF PICTURES	010
FRAMERATE	10
RESOLUTION	640*480

SELECT : ▲▼, CHANGE VALUE : + -

FRAMERATE :

DATA RATE from NVS. The bigger it set, the better its quality, but image quality is not good.

RESOLUTION :

DATA RESOLUTION from NVS. Such as 160\*120, 320\*240, 640\*480.

\* In order to work NVS properly, above value should be adjusted according to Network Condition.

## Network Stand Alone DVR

## 2) RS-232C SETUP

User can control the DVR via RS-232C port.  
Connect DVR to PC via RS-232C port and control DVR using keyboard of PC.  
This function is mainly for programmer who wants to control DVR as part of many devices connected to PC system, as in SI project.

RS-232C SETUP	
SPEED	115200
LENGTH	8
STOP BIT	1
PARITY	NONE
SELECT : ▲▼, CHANGE VALUE : + -	

## 3) PAN/TILT SETUP

It is to set parameters for PTZ camera connected to DVR unit. DVR unit already includes all protocols of well-known PTZ cameras like PELCO D type PTZ camera, and user just select MODEL and set other parameters to control this PTZ cameras, using operation buttons on the front panel of DVR. If PTZ camera whose protocol is not incorporated into this DVR unit, user must input protocol of this PTZ camera by himself. Using USB device port, user can upgrade protocol for PTZ camera.

PAN/TILT SETUP	
COMMAND SETTING	← PTZ camera set
SPEED SETTING	← PTZ speed set
SELECT : ▲▼, & [ENTER]	

COMMAND SETTING	
CHANNEL	01
MODEL	PELCO-D
PTZ ID	000
BAUDRATE	2400 BPS
CMD DELAY	1 MSEC
COMMAND	PAN/TILT STOP
LENGTH	07
CODE	FF 00 00 00 00 00 00 00
SELECT : ▲▼, CHANGE VALUE : + -	

- (1) CHANNEL : Select channel
- (2) MODEL : Select camera model (protocol type) per each channel
- (3) PTZ ID : Select ID
- (4) BAUDRATE : Select data transmission speed
- (5) CMD DELAY : Select command delay time

## 4) SPOT MONITOR SETUP

SPOT MONITOR SETUP	
SWITCH INTERVAL	03 SEC
ALARM POP UP	ON
MOTION POP UP	ON
EVENT POP UP DURATION	01 SEC
SELECT: ▲▼, CHANGE VALUE : + -	

- (1) SWITCHING INTERVAL  
Channel switching time (01 sec. ~ 99 sec.)

- (2) ALARM POP-UP  
When ALARM is detected, the image of channel connected with Alarm sensor pops up.  
Set ALARM detection pop-up (ON/OFF)

- (3) MOTION POP-UP  
Set MOTION detection pop-up (ON/OFF)

※ EVENT POP-UP DURATION  
Set EVENT POP-UP DURATION

## Network Stand Alone DVR

If events (MOTION or ALARM) happen on several channel at the same time, channel No. 1 has the first priority to pop up. For example, if events happen on channel No. 1, channel No. 2, and channel No. 4 at the same time, channel No. 1 pops up. If the motion disappears on channel No. 1, then channel No. 2 pops up for the duration that you set. However, even though motion happens on channel No. 1 again within the duration, channel No. 2 still displays. If motion on channel No.1 keeps on going even after the duration, channel No. 1 pops up again.

## 5) AUDIO SETUP

Use direction button to move to channel and Press [ENTER] button to set (ON/ OFF).

AUDIO SETUP		
CH	REC	PLAY
01	ON	ON
02	ON	ON
03	ON	ON
04	ON	ON
SELECT: ▲▼◀▶, & [ENTER]		

## 1) REC

(1) ON : Record images with AUDIO

(2) OFF : Record images without AUDIO

## 2) PLAY

(1) ON : Recorded sound comes out during playback

(2) OFF : Recorded images only play back

## 6) AUDIO VOLUME SETUP

INPUT VOLUME: Adjust VOLUME of Recorded AUDIO

LIVE VOLUME1~4: Adjust VOLUME of LIVE per channel.

PLAY VOLUME1~4: Adjust VOLUME of PLAY per channel.

AUDIO VOLUME SETUP	
INPUT VOLUME	32
LIVE VOLUME1	32
LIVE VOLUME2	32
LIVE VOLUME3	32
LIVE VOLUME4	32
PLAY VOLUME1	32
PLAY VOLUME2	32
PLAY VOLUME3	32
PLAY VOLUME4	32
SELECT : ▲▼, CHANGE VALUE : + -	

## 7) REMOCON SETUP

REMOCON TYPE: User use it to operate many DVRs installed at the same site and select each different TYPE.

N TYPE, S TYPE, U TYPE 1 ~ U TYPE 6: Total 8 TYPE Selectable.

REMOCON SETUP	
REMOCON TYPE	S TYPE
SELECT : ▲▼, CHANGE VALUE : + -	

### 5-7. FACTORY DEFAULT

Set the all system parameters as manufacturer first set before delivery. It is a kind of system initialization, and manufacturer recommends to do it when you add new HDD or other changes in system to make all system ready for normal operation.

Use direction button to move and Press [ENTER] button to change parameters. After move to RUN, Press [ENTER] button for actual Factory Default setting.

FACTORY DEFAULT	
ALL	OFF
SCREEN DISPLAY	OFF
CAMERA SETTING	OFF
MOTION SETUP	OFF
PANTILT SERUP	OFF
SCHEDULE SETUP	OFF
CONFIGURATION	OFF
RUN	
SELECT MENU : ▲ ▼, & [ENTER]	

### 5-8. LANGUAGE SETUP

The menu can be displayed in a number of languages. Press [ENTER] button to select your language.

SYSTEM MENU	
DISPLAY SETUP	
CONFIGURATION	
RECORD SETUP	
EXTERNAL DEVICE	
FACTORY DEFAULT	
LANGUAGE	ENGLISH
SELECT MENU : ▲ ▼, & [ENTER]	

## CHAP. 6 Network Setup

### 6-1. DVR Network Configuration

Please call your provider to identify what type of service they are providing you.  
You will need to know following ;

Upload speed – For your own knowledge for expected frame rates

Download speed – For your own knowledge for expected frame rates

Addressing – For determining what scenario you should follow

Router On Site or Just a Modem – For determining what scenario you should follow

※NOTE : If your provider is using PPPOE (usually DSL providers), you **MUST** have a IP Share installed on site and follow **3) Dynamic IP of PPPOE (DSL)** for DVR setup and access.

※PLEASE verify Internet access after installing any new equipment (routers, switches, modems, etc.).

### PC's TCP/IP Setting

Before configuring the DVR, please fill out the information below if applicable ;

Choose any PC on your network and determine its TCP/IP settings;

IP Address : \_\_\_\_\_(ex.192.168.1.5)

Subnet Mask : \_\_\_\_\_(ex. 255.255.255.0)

Default Gateway : \_\_\_\_\_(ex.192.168.1.1)


**Next pages are several network scenarios.** Please identify which scenario your current network falls within and follow the instructions for configuring and accessing your DVR via TCP/IP.



### 1) Static IP

**User input IP address in IP CONFIG SETUP which is assigned from ISP company.**

1. Verify if IP address is OK or not with PC before connecting DVR.
2. Connect LAN cable to DVR after confirmation.
3. DVR : MENU → EXTERNAL DEVICE → TCP/IP
4. Set DHCP to MANUAL and go into TCP/IP SETUP.
5. Verify if MAC ADDRESS starts from 00-0A-A2....
6. Input IP address which is assigned from ISP company.
7. Set IP PORT. (50000 recommended)
8. Input GATEWAY which is assigned from ISP company.
9. Input SUBNET MASK which is assigned from ISP company.
10. Go out of MENU SETUP.
11. Turn off and on Modem (Router) which is provided by ISP company.  
→ This is to reset client of MAC from ISP company.  
User have to wait for 30 seconds after turning on.
12. Access DVR with Remote Viewer software.




\* If user fail to access, please verify 1, 6, 7, 8, 9, 11 again.

\* When speed is too slow and connection fails after access : MENU → EXTERNAL DEVICE → TCP/IP SETUP → CONNECTION SETUP  
Increase value of Timeout to find the most suitable speed.

## 2) Dynamic IP

1. Verify if IP address is OK or not with PC before connecting DVR.
2. Connect LAN cable to DVR after confirmation.
3. Turn off and on Modem (Router) which is provided by ISP company.  
→ This is to reset client of MAC from ISP company.  
User have to wait for 30 seconds after turning on.
4. Turn off and on DVR.
5. DVR : MENU → EXTERNAL DEVICE → TCP/IP
6. Verify if MAC ADDRESS starts from 00-0A-A2....
7. Set DHCP to AUTOMATIC and detect IP to get Dynamic IP.
8. Go out of MENU SETUP after getting IP successfully.
9. Access DVR with Remote Viewer software.



\* If user fail to access, please verify 1, 3, 4 again.

\* When speed is too slow and connection fails after access : MENU → EXTERNAL DEVICE → TCP/IP SETUP → CONNECTION SETUP  
Increase value of Timeout to find the most suitable speed.


### 3) Dynamic IP of PPPoE (DSL)

DVR doesn't support DSL (PPPoE), user have to set NETWORK with IP SHARE if user need to access DVR remotely. At this time, User have to port forward on DVR. Please contact IP SHARE Manufacturer if you need to know how to forward port.

Even though user have Static/Dynamic IP, if user want to use another device (PC) through IP SHARE, user can set NETWORK as follows,

1. Verify if IP address is OK or not with PC before connecting DVR.
2. Connect Router (IP SHARE) to DSL modem as shown the following picture.
3. Set the internet connection on Router (IP SHARE). (Refer to the Router Manual.)
4. Verify if sub-group of network in Router is OK or not.
5. Connect DVR to Router.
6. DVR : MENU → EXTERNAL DEVICE → TCP/IP
7. Set DHCP to MANUAL and go into TCP/IP SETUP.
8. Verify if MAC ADDRESS starts from 00-0A-A2....
9. Input internal IP address which user assigned from Router.
10. Set IP PORT. (50000 recommended)
11. Input GATEWAY of Router.
12. Input SUBNET MASK of Router.
13. Go out of MENU SETUP.
14. Forward port from Router. (Refer to the Router Manual.)
15. Access DVR with external IP and Port (Port forwarded).

\* If Router support DDNS, user can access Remote Viewer using Domain Information.




\* If user fail to access, please verify 1, 4, 15 again.

\* When speed is too slow and connection fails after access : MENU → EXTERNAL DEVICE → TCP/IP SETUP → CONNECTION SETUP  
Increase value of Timeout to find the most suitable speed.


## CHAP 7. IRS(Integrated Remote Station)

## MAIN INTERFACE

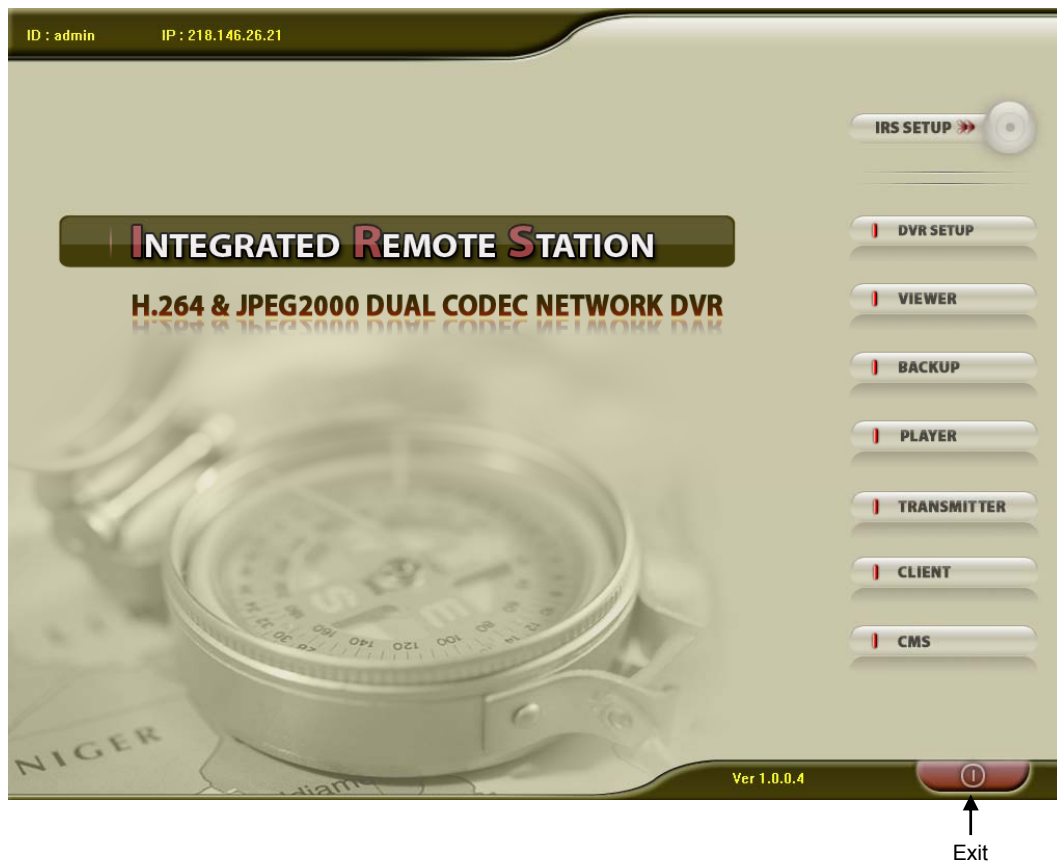

<b>IRS SETUP</b>	Inputs Information for IRS network connection.
<b>DVR SETUP</b>	Changes DVR setting over a network.
<b>VIEWER</b>	Enables to show live image display.
<b>BACKUP</b>	Enables to back up recorded images in DVR to your PC.
<b>PLAYER</b>	Enables to back up recorded images on your PC. (AJP file)
<b>TRANSMITTER</b>	Enables to control DVR using virtual key like controlling actual DVR remotely.
<b>CLIENT</b>	Enables to control LIVE, PTZ control, Playback in DVR remotely.
<b>CMS</b>	Enables to have multi access for showing live images of many DVRs. (Additionally, enables to search and show recorded image display for one DVR.)

## 7-1. IRS SETUP

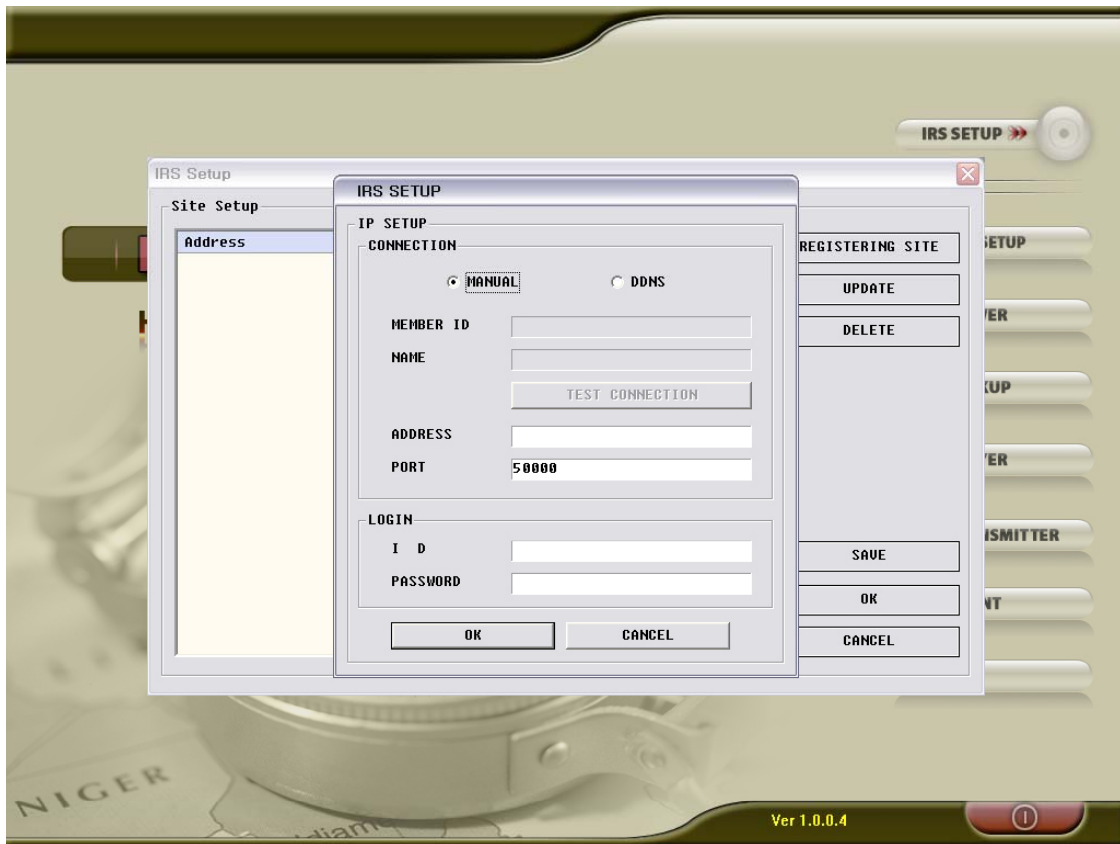

**MANUAL**  
**DDNS**

Select "Manual" to input IP address and port number manually.  
Select "DDNS" to use IP address and port number that you already registered in DDNS Server.

**MEMBER ID**  
**NAME**

Input member ID that you registered in DDNS Server.  
Input DVR name that you registered in DDNS Server.

**ADDRESS**  
**PORT**

Input IP address manually.  
Input Port number manually.

**LOGIN**

**ID**  
**Password**

Input DVR ID which has been set in DVR already. (Input 'admin'.)  
Input password of DVR.

## 7-2. DVR SETUP

Wait To Connection

**MANUAL**

**ADDRESS**

**PORT NUMBER**  
50000

**ID**

**PASSWORD**

**CONNECT** **DISCONNECT**

Ver 1.0.0.1

**CLOSE**

User can change some settings of DVR listed below over a network.  
(Active Camera, Alarm, Buzzer, Interval, Password, Record Configuration, Record Schedule)

**MANUAL** Input IP address and port number of DVR manually.

**ADDRESS** Input IP address of DVR manually.

**PORT NUMBER** Input port number of DVR manually.


**LOGIN**

**ID** Input DVR ID which has been set in DVR already. (Input 'admin'.)

**PASSWORD** Input password of DVR.

**CLOSE** Click "CLOSE" to exit.

## 7-3. VIEWER

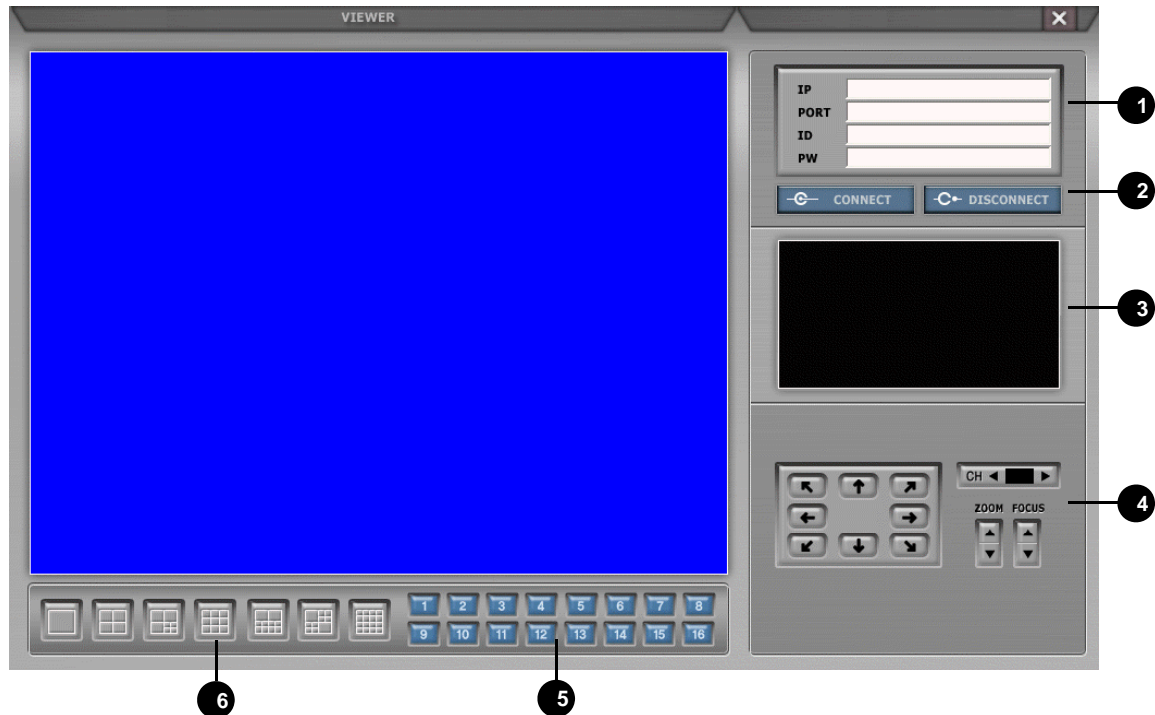

- ❶ **DVR connection setup** : Input network information to connect.  
(IP / PORT / ID / PW)
- ❷ **Network Connection**
  - a) **CONNECT** : Click this button to connect to DVR & see live view over a network.
  - b) **DISCONNECT** : Click this button to disconnect.
- ❸ **System Information** : Displays connection status and operating Information.
- ❹ **PTZ Control** : Command PTZ Camera connected to DVR remotely.  
( To command PTZ remotely,User must complete PTZ setting in DVR)
- ❺ **Channel button** : Selects ch that displays in full screen.
- ❻ **Screen division** : User can select screen division.

## 7-4. BACKUP

- 1) To execute BACKUP, input IP Address & Port and click 'Connect Test' button.

Backup Ver 1.0.0.19

**Backup Information**

- IP Address: 192.168.1.143
- Network Port: 50000
- User ID: admin
- User Password:
- Save File Path: C:\W(3)CD\WX\Network\_X\_Ba
- Start Backup Time: 0000/00/00 00:00:00
- End Backup Time: 0000/00/00 00:00:00

Buttons: Connect Test, Lock, Set Backup Time, Start Backup

**DVR Server Information**

- Recorded Start Time:
- Recorded End Time:

Update

**Backup Status**

- Message:
- Receive Rates:
- Backup Rates:
- Receive bps:
- Save Size:

Close

- 2) After Connect Test is done, you can see 'Success Connect Test!' message. Then, click 'lock' button and click 'Set Backup Time' button.

Backup Ver 1.0.0.19

**Backup Information**

- IP Address: 192.168.1.19
- Network Port: 50000
- User ID: admin
- User Password:
- Save File Path: C:\W(3)CD\WX\Network\_X\_Ba
- Start Backup Time: 0000/00/00 00:00:00
- End Backup Time: 0000/00/00 00:00:00

Buttons: Connect Test, Lock, Set Backup Time, Start Backup

**DVR Server Information**

- Recorded Start Time:
- Recorded End Time:

Update

**Backup Status**

- Message: Success Connect Test !
- Receive Rates:
- Backup Rates:
- Receive bps:
- Save Size:

Close



3) Now you set 'Start Time', 'End Time', 'Save File Path', 'File Size' and click 'Apply'.

The screenshot shows the 'Backup' window with the 'Backup Information' dialog box open. The dialog box contains the following fields and values:

- Recorded Start Time: 2007/05/09 14:10:28
- Recorded End Time: 2007/05/10 19:31:21
- Save File Path: C:\W(3)CD\X\Network\_X\_Backup
- Maximum Save File Size: 10 MB
- Start Backup Time: 2007/05/09 14:10
- End Backup Time: 2007/05/10 19:31

Buttons at the bottom of the dialog include 'Apply' and 'Close'. A 'Find' button is next to the 'Save File Path' field. The background window shows a sidebar with options like 'IP Address', 'Network Port', 'User ID', 'User Password', 'Save File Path', 'Start Backup Time', and 'End Backup Time'.

4) After finishing time setting, click 'Start Backup' to start backup. Then, you can see the backup on the path that you chose.

The screenshot shows the 'Backup' window with two main sections:

### Backup Information

- IP Address: 192.168.1.19
- Network Port: 50000
- User ID: admin
- User Password:
- Save File Path: C:\W(3)CD\X\Network\_X\_Backup
- Start Backup Time: 0000/00/00 00:00:00
- End Backup Time: 0000/00/00 00:00:00

Buttons at the bottom of this section: 'Connect Test', 'Unlock', 'Set Backup Time', and 'Start Backup'.

### DVR Server Information

- Recorded Start Time: 2007/05/09 14:10:28
- Recorded End Time: 2007/05/10 19:31:34


Button: 'Update'

### Backup Status

- Message: Update Record Time !
- Receive Rates:
- Backup Rates:
- Receive bps:
- Save Size:

Button at the bottom right: 'Close'

## 7-5. PLAYER

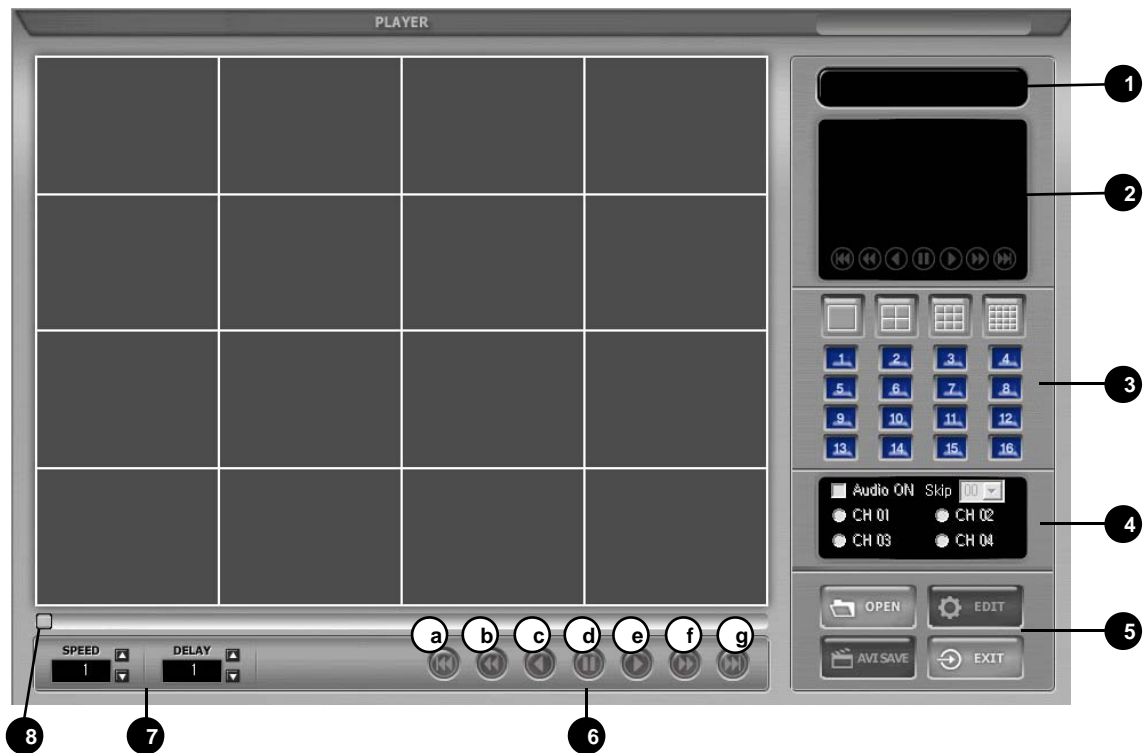

- ❶ **Time Display** : Displays current time.
- ❷ **Recorded data display** : Displays start time & end time of recorded data.  
Also, displays operating status during playback.
- ❸ **Screen display** : Selects full screen mode or split mode and displays full screen for each ch.
- ❹ **Audio** : Set Audio On/Off.
- ❺ **Function buttons**
  - a) OPEN : Selects bakuped file.( AJP File )
  - b) EDIT : Enables to edit backup image,save and print.
  - d) AVI SAVE : Save backup images in AVI file format.
  - c) EXIT : Ends backup player.
- ❻ **Operation buttons** : Search for recorded data.
  - a) Go to the beginning of recorded data and play.
  - b) Fast backward playback.
  - c) Backward playback.
  - d) Pause.
  - e) Forward playback.
  - f) Fast forward playback.
  - g) Go to the end of recorded data and play.
- ❼ **Playback speed setting button** : Able to adjust playback spped by using upper/ lower buttons.
  - a) SPEED : decides playback speed.(1/4X,1/2X,1X,2X,4X,8X,16X)
  - b) DELAY : adjusts playback interval. The higher, the slower.(1, 2, 4, 8, 16, 32)
- ❽ **Play bar** : Enables to search recorded data by using this bar.

## Image EDIT



**1 EDIT TOOL :** User can adjust color tone of copied images using this buttons.

– Contrast



: make bright part of image brighter and dark part of image darker



: To reduce light and shade, lower contrast a little

– Brightness



: make an image brighter



: make an image darker

– Sharpness



: gives sharp-edge effect

– Blur



: make an image soft.

– Operation buttons



: saves data in JPEG file format.

It is saved in the folder where player is installed.



: User can print current image selected.

**2 EDIT :** Return to player mode.

## AVI SAVE



- ❶ **OPTION** : Used to save data in AVI file format.
- CHANNEL : Selects channel.
  - FRAMERATE : Decides frames per second of data to be saved.
  - SIZE : Decides the size of data to be saved automatically.
  - START : Starts saving.
  - STOP : Stops saving. Once stopped, 'C:\WEB\_BACKUP' folder is opened automatically.
- ❷ **AVI SAVE** : Opens 'option' setting to start AVI saving. Closes 'option' setting after finishing AVI saving and go back to player mode.

## 7-6. TRANSMITTER



❶ **DVR Connection Setting** : Inputs information for DVR Network connection .  
Check 'IP / PORT / ID / PW' information.

❷ **Network Connection**

- a) CONNECT : Network connection to DVR. ( User can see live image of DVR. )
- b) DISCONNECT : Network disconnection from DVR.
- c) SETUP : User can change or set 'NVS Setup' of DVR System Menu.


❸ **System Information** : Displays DVR Connection and System Operation Information.

❹ **PTZ Control** : User can control PTZ camera connected to DVR remotely.  
( To control PTZ remotely, user must set PTZ setting in DVR in advance.)

❺ **DVR Virtual Key** : To use Virtual Key that works the same function as DVR to control DVR remotely.

- a) Bitrate: shows received data from network. Please refer to "set up" in Network Connection.
- b) AUDIO: it currently does not support. It will be supported soon.

## SETUP (NVS Setup)

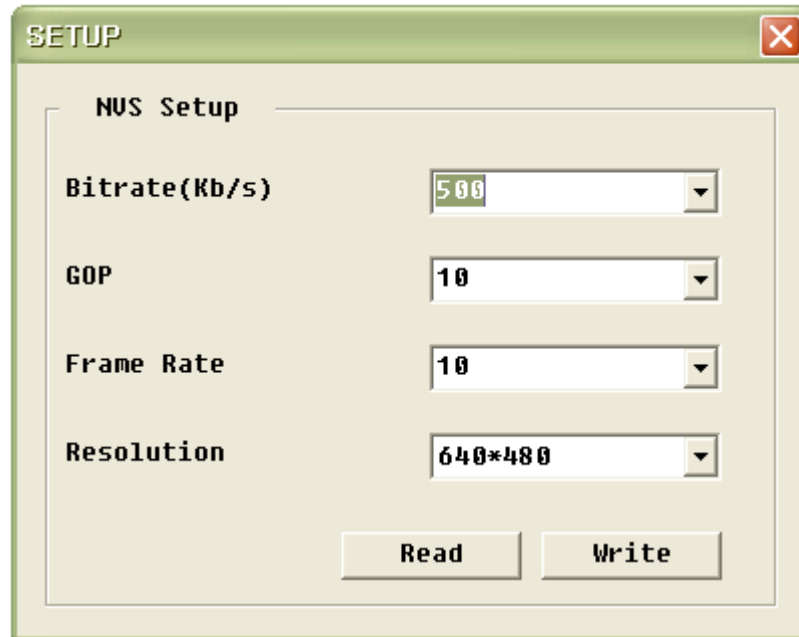**Bitrate(Kb/s)**

DATA SIZE from NVS. The bigger it set, the better its quality. But sometimes image is not smooth.  
(Set Value : 100Kb ~ 2500Kb, can be adjusted by 50K)

**GOP**

Image (I frame, P frame) from NVS. The bigger it set, the better its quality.

**Frame Rate**

DATA RATE from NVS. The bigger it set, the better its movement. But sometimes image is not smooth.

**Resolution**

DATA RESOLUTION from NVS. Such as 160\*120, 320\*240, 640\*480.


\* In order to work NVS properly, above value should be adjusted according to Network Condition.

\* Please refer to 'bitrate' displayed in TRANSMITTER when user set.




## 7-7. CLIENT

## MAIN INTERFACE

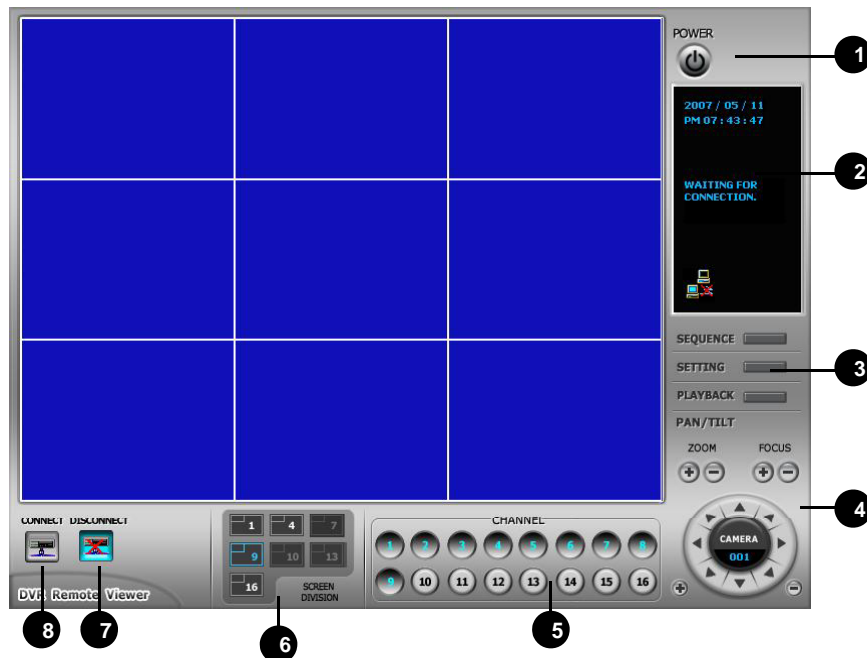

- ❶ **Power button** : Press the Power switch to exit the program. Please disconnect the live feed before powering off the software
- ❷ **Status window** : Display's the current time and date based. The date is in the format : Year/Month/Day. You will also see the status of your connection.
- ❸ **Setting, Playback, and Sequence buttons** :
  - a) Setting : Enables the software configuration screen.
  - b) Playback : Enables the remote playback screen.
  - c) Sequence : When in single channel view, hitting the sequence button will sequence through all active channels at a speed specified in the settings menu.
- ❹ **PTZ control** : You can control a PTZ camera via the software with these controls.
  - a) First, you must input or configure the specific PTZ protocol into the software in order to communicate with the PTZ device.
  - b) When you press any of the controls for the PTZ, please press and hold the button for 1-2 seconds per instance to compensate for the data transmission rate. If you do not and instead simply click the PTZ buttons, you may get undesired results (having the requested operation transmitted repeatedly, regardless of your intention).
  - c) The plus and minus buttons send the PTZ commands to the corresponding PTZ camera ID.
- ❺ **Channel number button** : Select the channel that you want to view based on what Screen Division view is enabled.
- ❻ **Screen Division button** : Select how many channels to view simultaneously(single,4-split,9-split, or 16-split). When you select a view you will see the Channel Numbers highlighted which determine what channels are currently being viewed.
- ❼ **Disconnect button** : Press this button to disconnect from the DVR unit. Then you may power off the software.
- ❽ **Connect button** : Press the Connect button to view the live images from the DVR. These are the same images being displayed on the monitor of the DVR, with a delay depending on your internet connection at both the DVR location and from where you're currently accessing.

## IP/PORT Setting Screen

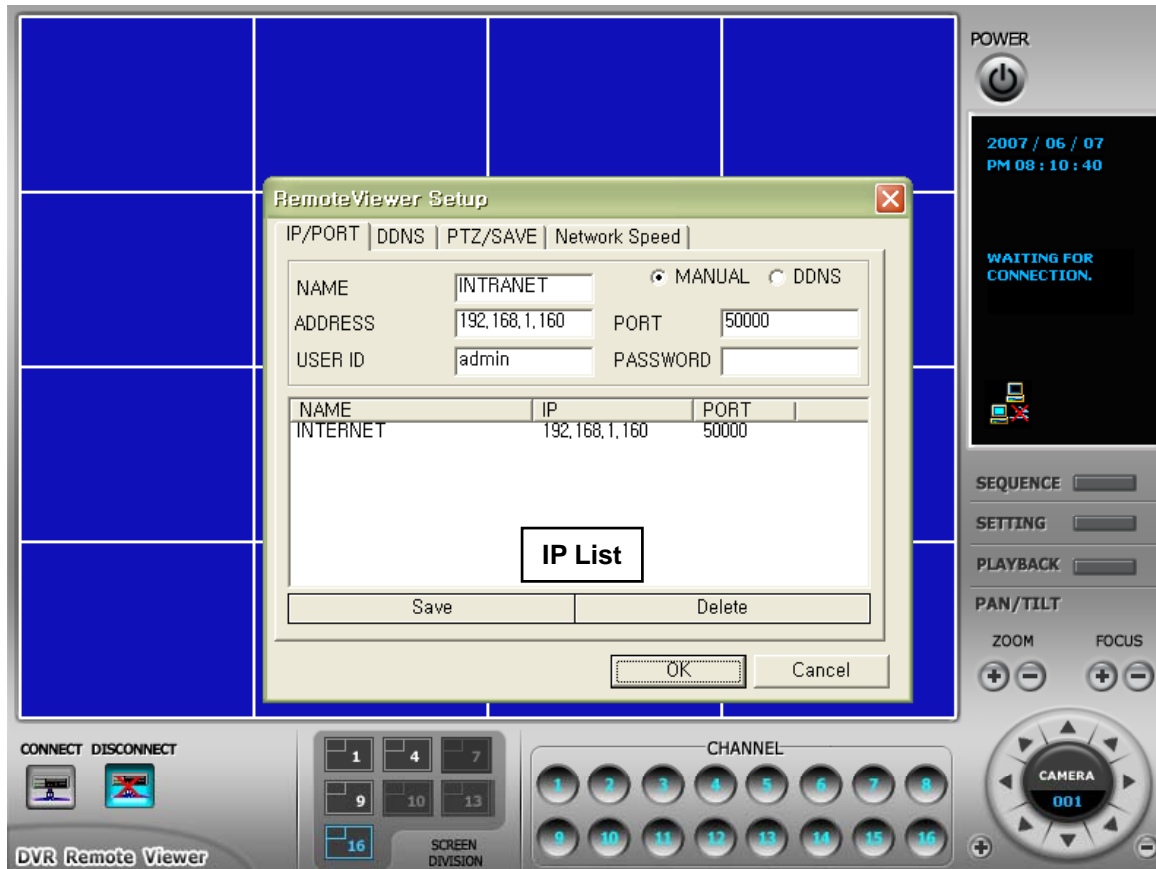**MANUAL**  
**DDNS**

Input IP address and PORT manually  
 Receive IP address and PORT from DDNS Server.  
 For further information of DDNS, please contact your vendor.


**Name** Name of IP address on the list.  
**Address** Input IP address which is set on DVR  
**PORT** Input PORT which is set on DVR  
**ID** Input ID which is set on DVR. (Please input 'admin'.)  
**Password** Input password which is set on DVR

**IP List** It shows IP list which user input manually.

**Select Button** Select IP and PORT on the list.  
**Save Button** Save IP and PORT on the list.  
**Delete Button** Delete IP and PORT on the list.



## PTZ/SAVE Setting Screen

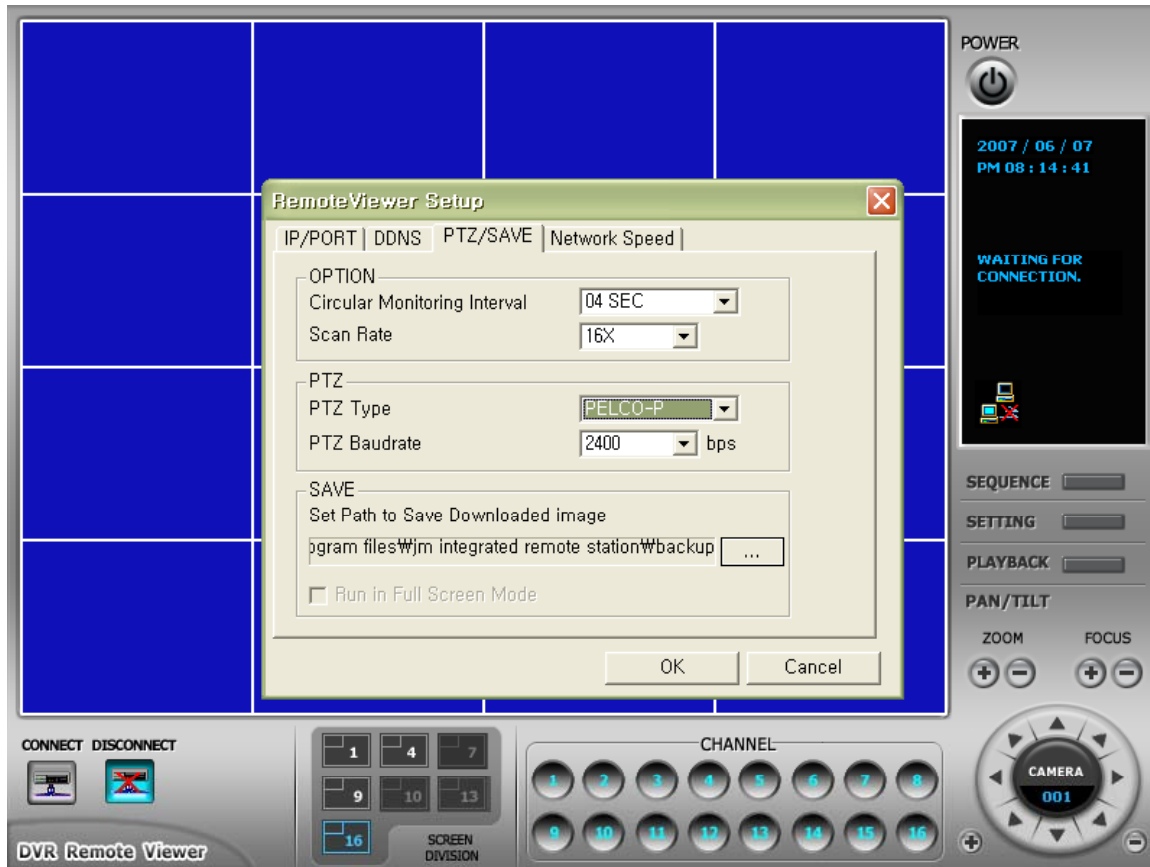

**Circular Monitoring Interval** : This indicates the speed of the channels sequence when the SEQUENCE button is used from the main interface.

**Scan Rate** : Set speed of playback.


**PTZ TYPE** : Select PTZ camera which is connected to DVR.

**PTZ Baud Rate** : Enter the Baud Rate of your PTZ camera.

**Set Path to Save Downloaded image** : Determines the location and folder on your PC where the downloaded video clips are stored.

**Run in full screen mode** : When checked, this will enable the program to re-adjust the interface to completely fill your computer screen.

## 7-7. CMS

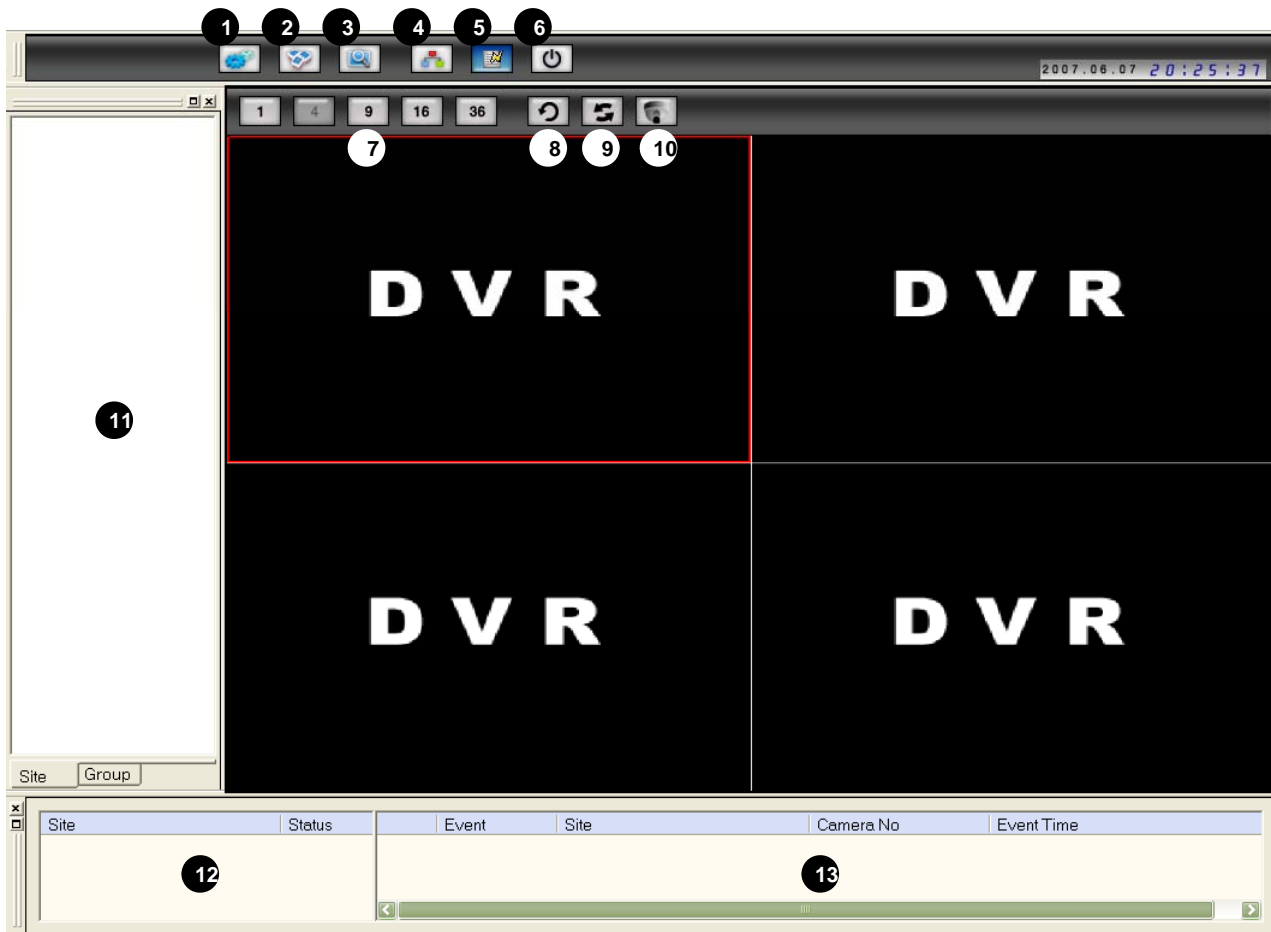


- ❶ CMS Setting : CMS Setting. (User can set DVR Registration here for multi-access.)
- ❷ Group Setup : Among multi-access DVRs, User can make group at specific chs to live monitor.
- ❸ Search : Playback and search recorded image of one DVR.
- ❹ View Tree : If No11 is not displayed, it will be displayed again.
- ❺ View Event : If No 12 & 13 is not displayed, it will be displayed again.
- ❻ Exit : Exit from CMS.
- ❼ Screen Division : Set number of channel displayed in CMS.
- ❽ Rotation : Sequence images.
- ❾ Auto Rotation : Automatic image sequence (In 'CMS Setup', adjust Auto Change Value.)
- ❿ PTZ Control : PTZ control.
- ⓫ DVR Information : Displays multi-access DVR camera at Site or Group.
- ⓬ Network Condition : Displays network information of multi-access DVR.
- ⓭ DVR Event Information : Displays event information of DVR.


## Network Stand Alone DVR

## DVR Registration and Screen Display

- 1) To connect DVR, from main screen to proceed 'CMS Setting > Site setup > 'Registering Site', and then, register necessary information for DVR connection as below, (Registration is the same as 'IRS SETUP'.)

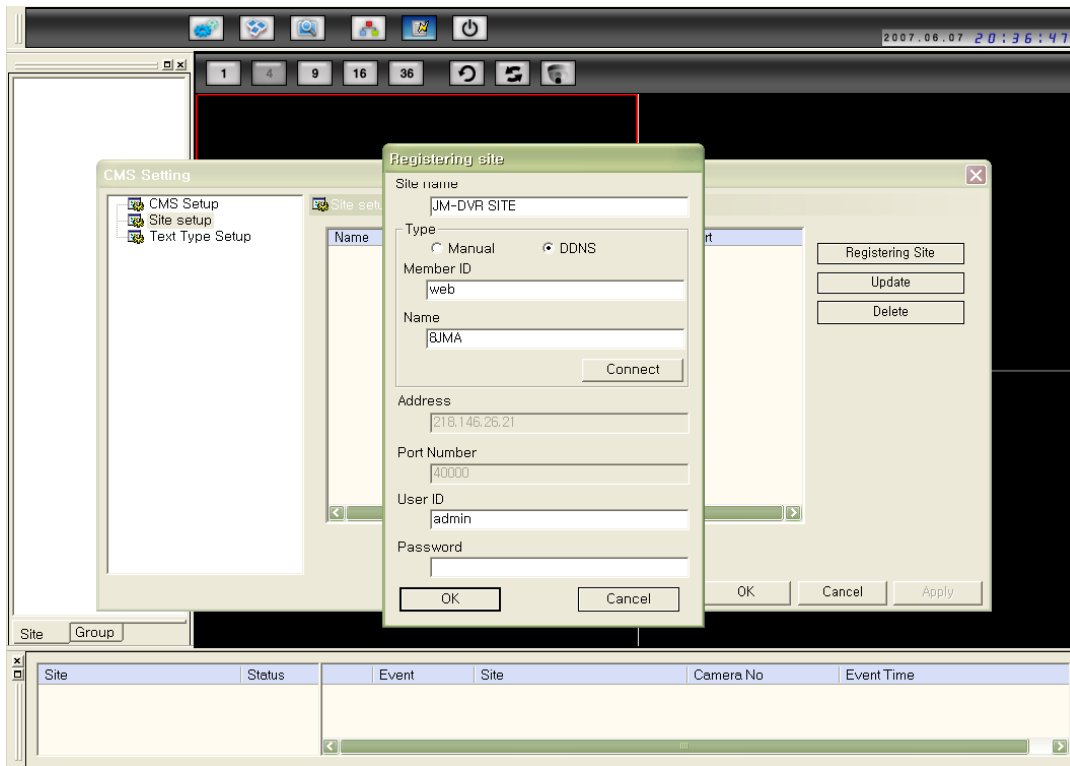


- 2) After registration, user can display specific channel and whole channel by Mouse Drag as shown below,

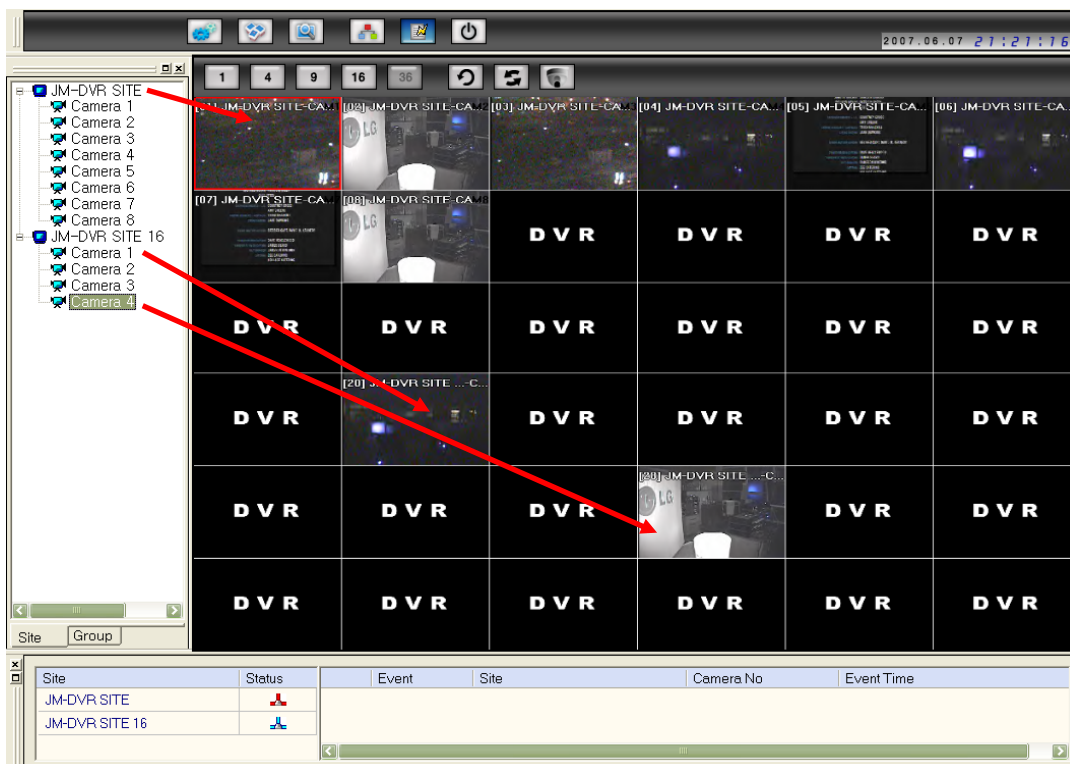


## Network Stand Alone DVR

## DVR Group Setup

- 1) After finishing DVR registration, click 'Group Setup' in Main Screen.



- 2) Click 'Add Group' and input group name. Drag camera ch user wants as shown below, and set ch displays in Group and click 'Save Array' to set up group.

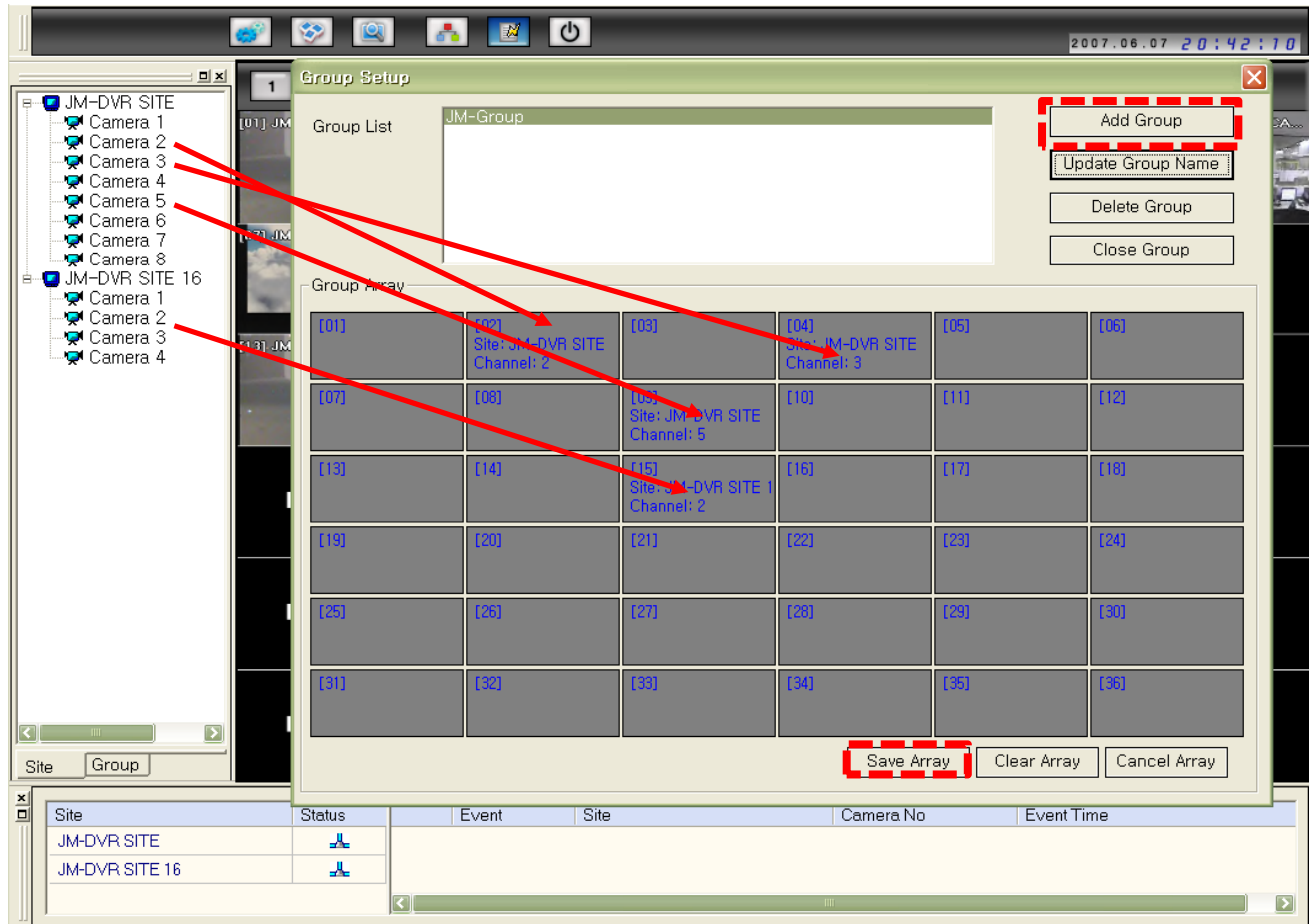

## CHAP. 8 DDNS Web Server

\* Register DVR for DDNS Web-server and set DVR as shown below,

## 8-1. Registering DVR for DDNS (DDNS Web-server)

1) Please access [www.j2kip.com](http://www.j2kip.com) and Register Member ID.

Member Login

This website was created to provide a dynamic domain name system (DDNS) that allows DVR Systems to operate without a static IP from an Internet provider. This has been created exclusively for use with the Argus line of products. Complete the registration process to add your DVR to the system and enjoy the many benefits of DDNS.

Member ID

ok

• Forgot Password  
• Register

Member Register > New user

\* ID and Password must be three characters or more  
\* We use User Email address to send information(User ID and Password) about your account.

Member Id

User Email

User Password

Confirm Password

confirm

2) Please click DVR Add to register DVR.

DDNS service

DYNAMIC DOMAIN NAME SYSTEM

[Home] [Logout] [Member Edit]

Welcome web

DYNAMIC DOMAIN NAME SYSTEM

Member

- Member Register
- My DVR List
- My DVR Register
- DVR Setup
- Viewer
- Backup
- Player
- Transmitter

My DVR List

\* Click Viewer icon on the right to operate Viewer.  
\* You should add [www.j2kip.com](http://www.j2kip.com) on Trusted Sites(Tools -> Internet Options -> Security) at the first Viewer installation.  
\* : DVR Setup : Viewer : Backup : Player : Transmitter : DVR Edit : DVR Delete

DVR Name

Confirm

DVR Add

Name	MAC	IP:Port	Last Modified	Tool	Edit
Wallmart_XAD	00-0A-A2-06-D3-65	210.126.14.153:50000	2007-05-22 11:52:05		

3) Please click confirm after inputting DVR Name & Mac Address.

**My DVR Register**

\* Mac Address should be listed correctly without dash "-".  
\* Mac Address already listed can not be registered again.

DVR Name	<input type="text" value="superman"/>
MAC Address	<input type="text" value="000AA200F00C"/> *without dash "-"
IP Address	<input type="text"/>
IP Port	<input type="text"/>

**Confirm**

4) Now, DVR is listed on DDNS Web Server without IP and Port number.

DDNS service  
DYNAMIC DOMAIN NAME SYSTEM

[Home] [Logout] [Member Edit]

Welcome web

**Member**

- Member Register
- My DVR List
- My DVR Register
- DVR Setup
- Viewer
- Backup
- Player
- Transmitter

**My DVR List**

\* Click Viewer icon on the right to operate Viewer.  
\* You should add www.j2kip.com on Trusted Sites(Tools -> Internet Options -> Security) at the first Viewer installation.  
\* : DVR Setup : Viewer : Backup : Player : Transmitter : DVR Edit : DVR Delete

DVR Name  Confirm DVR Add

Name	MAC	IP:Port	Last Modified	Tool	Edit
Wallmart_XAD	00-0A-A2-06-D3-65	210.126.14.153: 50000	2007-05-22 11:52:05		

## 8-2. DDNS Set Up in DVR

\* The following setting is a sample for a cable modem connected to DVR directly.

- 1) Click Menu and Enter into 'LOGIN -> EXTERNAL DEVICE -> TCP/IP SETUP'
- 2) Go to IP Config Setup, if user set DHCP 'Automatic', it detects IP address automatically.

IP CONFIG SETUP	
MAC ADDRESS	----- 00-0A-A2-00-00-00
IP ADDRESS	----- 192.168.001.160
IP PORT	----- 50000
GATEWAY	----- 192.168.001.001
SUBNET MASK	----- 255.255.255.000
DHCP SETUP	AUTOMATIC
SELECT MENU : ▲▼, & [ENTER]	

- 3) Go to the previous menu and enter into DDNS Setup.

TCP/IP SETUP
IP CONFIG SETUP
DDNS SETUP
CONNECTION SETUP
DHCP SETUP
EVENT SERVER SETUP
NVS SETUP

4) Set DDNS ON/OFF "ON".

IP address which is assigned from DHCP Server is automatically input on DNS Server.

DDNS SETUP	
DDNS ON/OFF	OFF
DDNS SERVER	211.062.253.087
INTERVAL	D-00 H-00 M-20
REGISTER	
-----	
DDNS STATUS	REGISTER OK
IP ADDRESS	192.168.001.160
IP PORT	5000
REMAIN TIME	D-00 H-00 M-20
LAST REGISTRATION DATE	
> WED. 12 JUL 2006 09 : 21 : 36 GMT	
SELECT : ▲▼, CHANGE VALUE : + -	

5) Go down to REGISTER and push ENTER button to renew IP and Port resistered on DDNS Sever([www.j2kip.com](http://www.j2kip.com))


( Interval : connection interval time between DVR and DDNS Server)

D = Day, H = Hour, M = Minute

DDNS SETUP	
DDNS ON/OFF	OFF
DDNS SERVER	211.062.253.087
INTERVAL	D-00 H-00 M-20
REGISTER	
-----	
DDNS STATUS	REGISTER OK
IP ADDRESS	192.168.001.160
IP PORT	5000
REMAIN TIME	D-00 H-00 M-20
LAST REGISTRATION DATE	
> WED. 12 JUL 2006 09 : 21 : 36 GMT	
SUCCESS TO REGISTER DVR INFO	
SELECT : ▲▼, CHANGE VALUE : + -	




6) Go to your PC again after you see “SUCCESS TO REGISTER DVR INFO.” and then Click ‘refresh’ button. Then, DDNS Server automatically catches your DVR’s IP address and Port number.


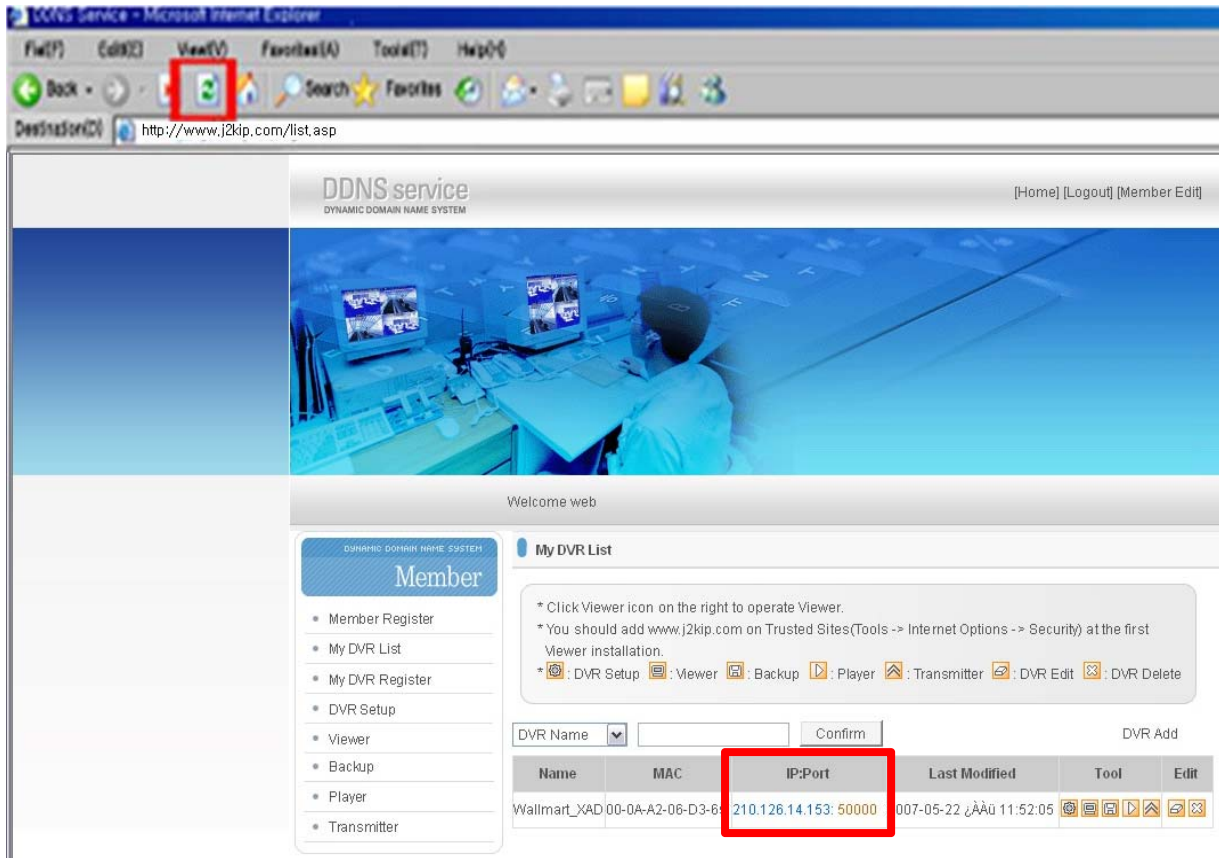


#### Note.

Before using Web-Viewer, please add [www.j2kip.com](http://www.j2kip.com) on Trusted Sites at first installation as follows.

(Tools -> Internet Options -> Security -> Trusted Sites)

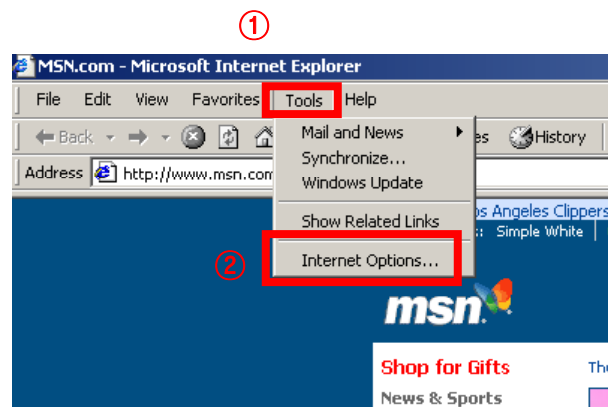

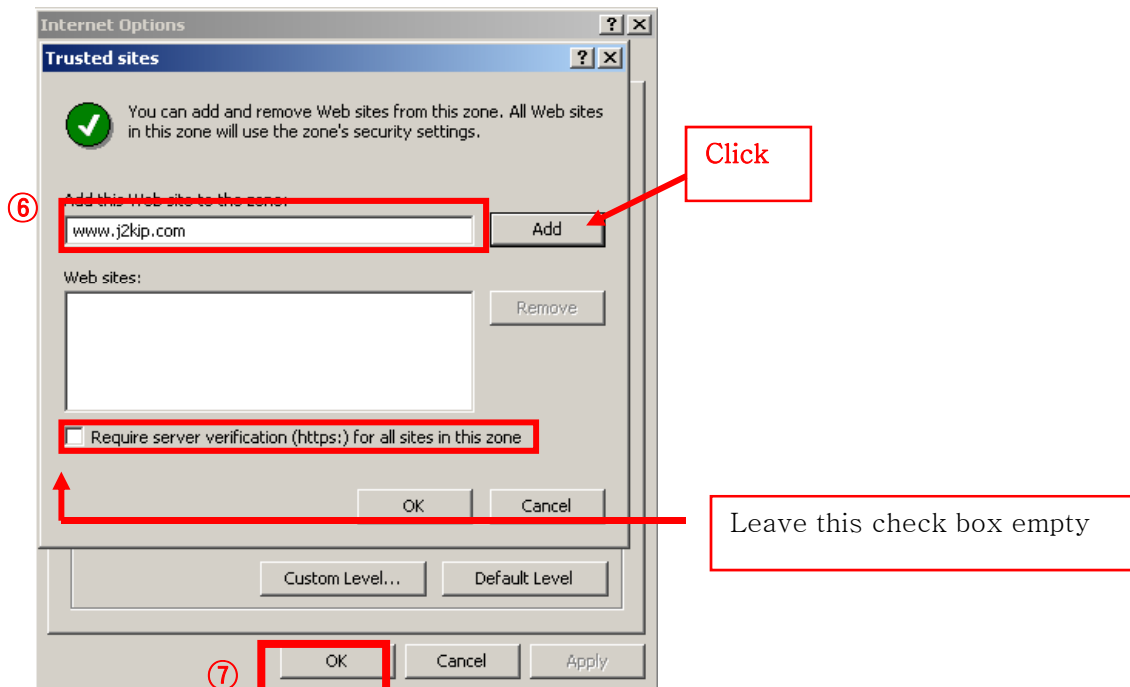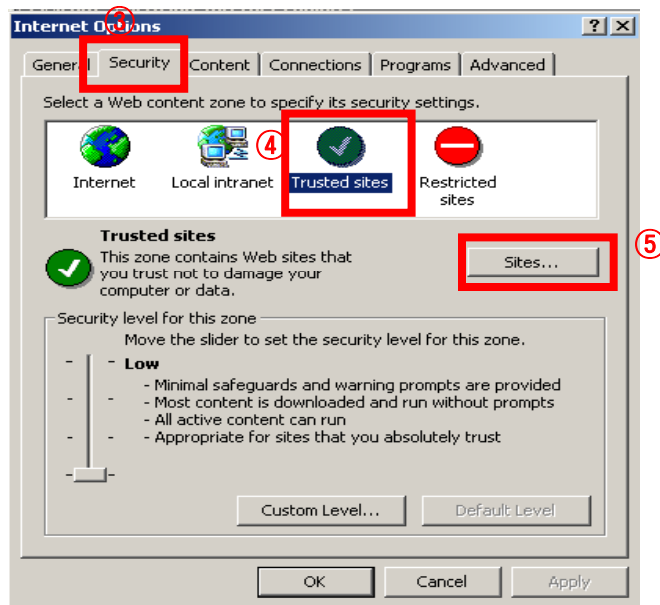

## 8-3. Web Program

Some functions of IRS (Integrated Remote Station) such as Viewer, Backup and Player are also available on the web.

\*If ActiveX control installation is required for the first time access, please click 'Yes'.

Input information needed for network connection to DVR manually.

Click these icons, then it connects to DVR automatically via DDNS Server.

Dynamic Domain Name System

Member

- Member Register
- My DVR List
- My DVR Register
- DVR Setup
- Viewer
- Backup
- Player
- Transmitter

My DVR List

\* Click Viewer icon on the right to operate Viewer.  
 \* You should add www.j2kip.com on Trusted Sites (Tools -> Internet Options -> Security) at the first Viewer installation.  
 \* [DVR Setup] [Viewer] [Backup] [Player] [Transmitter] [DVR Edit] [DVR Delete]

DVR Name: [Dropdown] [Text Box] [Confirm]

Name	MAC	IP:Port	Last Modified	Tool	Edit
Wallmart_XAD	00-0A-A2-06-D3-65	210.126.14.153: 50000	2007-05-22 11:52:05	[DVR Setup] [Viewer] [Backup] [Player] [Transmitter] [DVR Edit] [DVR Delete]	


DVR Add

These functions are the same as the one in IRS But, IRS 'CLIENT' and 'CMS' only be available through IRS.

(Please refer to 'Chap 7. IRS' section from page 43~58.)

- DVR SETUP** Changes DVR setting over a network.
- VIEWER** Enables to show live image display.
- BACKUP** Enables to back up recorded images in DVR to your PC.
- PLAYER** Enables to back up recorded images on your PC. (AJP file)
- TRANSMITTER** Enables to control DVR using virtual key like controlling actual DVR remotely.

## CHAP.9 Programmer reference



RS-232C

## 1) Connector Pin Assignment

No		Description	NO		Description
1	DCD	Data Carrier Detect	6	DSR	Data Set Ready
2	RxD	Receive data	7	RTS	RS232C: Rx/Tx data
3	TxD	Transmit data	8	CTS	RS232C: Rx/Tx data
4	DTR	Data Terminal data	9		
5	GND	Signal Ground			

## 2) RS232 ASCII-CODE

We qualify that the ASCII information is provided only as reference material for programmers to aid them in using these RS-232 ASCII primitive commands for integration into user developed software and applications

(The following table is based on 16ch DVR.)

All ASCII-Code is 1 Byte.

REC	'R'	DOWN	'J'	PTZ	'T'	KLOCK	'C'	CH5	'5'	CH12	'@'
STOP	'S'	LEFT	'H'	ZOOM	'Z'	ULOCK	'O'	CH6	'6'	CH13	'#'
PLAY	'P'	RIGHT	'K'	FRZ	'F'	QPLAY	'Y'	CH7	'7'	CH14	'\$'
Pause	'A'	NEXT	'N'	MODE	'D'	CH1	'1'	CH8	'8'	CH15	'%'
SERCH	'E'	ENTER	0x0d	PIP	'I'	CH2	'2'	CH9	'9'	CH16	'^'
MENU	'M'	-	'<'	SEQ	'Q'	CH3	'3'	CH10	'0'		
UP	'U'	+	'>'	J.SHU	'L'	CH4	'4'	CH11	'!'		

## Jog / Shuttle

Please input 'L' command to activate J/SHUTTLE function using keyboard of PC.

Shuttle 0 degree	"&>0"[enter]	Shuttle Left 10 degree	"&<1"[enter]
Shuttle Right 10 degree	"&>1"[enter]	Shuttle Left 20 degree	"&<2"[enter]
Shuttle Right 20 degree	"&>2"[enter]	Shuttle Left 30 degree	"&<3"[enter]
Shuttle Right 30 degree	"&>3"[enter]	Shuttle Left 40 degree	"&<4"[enter]
Shuttle Right 40 degree	"&>4"[enter]	Shuttle Left 50 degree	"&<5"[enter]
Shuttle Right 50 degree	"&>5"[enter]	Shuttle Left 60 degree	"&<6"[enter]
Shuttle Right 60 degree	"&>6"[enter]	Shuttle Left 70 degree	"&<7"[enter]
Shuttle Right 70 degree	"&>7"[enter]	Shuttle Left 80 degree	"&<8"[enter]
Jog Minus	"&- "[enter]	Jog Plus	"&+ "[enter]

Shuttle : After inputting a command once, it will keep performing the command until next command.

Jog : It makes the stage staying after one time operation by command input like Button operation.

•Key Release for PTZ function

power on , light on	"1 "
power off , light off	"2 "
iris open	"3 "
iris close	"4 "
focus near	"5 "
focus far	"6 "
zoom in	"7 "
zoom out	"8 "
set preset	"9 "
clear preset	"0 "
goto preset	"!"
auto scan	"@ "
tilt up	"u "
tilt down	"j "
pan left	"h "
pan right	"k "



"& Z "  
"Enter"

•To stop transmitting the signal to DVRs via RS232

1) Set preset

"T" → "U", "J", "H", "K" (To move where you want to see) → "9"( set preset ) → "&Z" "Enter"  
→ "&+" "Enter", "&-" "Enter" (To set other preset point)

2) Clear preset

"T" → "0" → "&Z" "Enter" → "&+", "&-" (To choose which you want to delete ) → "Enter"

3) Goto preset

"T" → "!" → "&Z" "Enter" → "&+", "&-" ( To choose where you want to see ) → "Enter"

※ Reference

1.Funtions where the OSD [xx] to the right of the function is not seen pressing "1" or "2" will bring it up.


2.Operations such as 'clear preset' take affect upon pressing the '0' key causing the last preset to be deleted even though that may not be the desired action. Instead use the next key 'N' until 'clear preset' is up then choose the preset to be deleted followed by enter.

3.For units lacking a front panel jog shuttle the '15/F3' and '16/F4' ASCII front panel equivalent can be used.

## Network Stand Alone DVR

## CHAP. 8 Specifications

- The best picture quality in Playback(JPEG-2000)
- Real time live display in all channels
- 4 channel video 240(200)ips recording capability
- Triplex (Playback/Recording/Ethernet)
- Multi-language menu
- Remote monitoring and download through network
- Convenient search function with Jog/shuttle
- VGA option available (Supporting TFT LCD Monitor)
- USB (Device) port for firmware upgrade
- Easy PTZ camera control by pre-assigned buttons
- Password Protection
- Remote Controller
- User-Friendly Environment by MOUSE

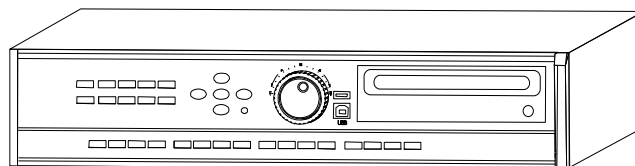


Multiplex function		Triplex (Playback/Recording/Ethernet)	
Storage	Internal	HDD	Up to 2 HDDs with no limitation in capacity
Capacity		CD-RW	For Backup
Video	Inputs	Composite	8Ch
	Outputs	Composite	2Ch (Monitor / SPOT)
		VGA	1Ch (Supporting TFT LCD Monitor/Option)
		Loop out	8Ch
	Compression	JPEG-2000(Record), H.264(Network)	
	Compression Rate (Image size fixed)	Basic	
		Normal	
		Enhanced	
		Fine	
		Super Fine	
		Display Speed	
		Real Time display	
Recording /Search	Recording Mode	Schedule (Time, Motion, Alarm), Emergency	
	Search	Event Search, Date/Time Search, Search Bar (Jog/Shuttle)	
	Recording Speed (NTSC/PAL)	Full (120/100), Dual (240/200), Quad (480/400)	
	Recording Resolution (NTSC/PAL)	Full (720x240/720x288), Dual (360x240/360x288), Quad (360x120/360x144)	
Multi-language		English,Spanish,German,French,Italy,Russian,Dutch,Polish,Portuguese, etc.	
Switching Interval		1~99 sec selectable	
Live Division Screen		1 / 4 / 9 Split	
		Digital Zoom, Freeze, PIP, SEQ, Event Popup	
Alarm	Inputs	4 Alarms (NO/NC selectable in SETUP menu)	
	Outputs	1 (NO/NC)	
	Post Alarm	Duration of alarm output : 1 sec ~ 300 sec selectable	
Motion Detection		Area division : 16 x12 / Detection Division : 32 x 24	
Network		Ethernet (TCP/IP), Remote viewer program included	
Backup		VCR, CD-RW back-up, USB backup, Download via IP Network	
PTZ Control		RS-485, Key Control( Key assigned for each PTZ command)	
Firmware upgrade		USB port for firmware upgrade, CD-R	
Serial I/F		RS-485	For PTZ camera control
		RS-232C	For operation using keyboard of PC
AUDIO	Input	4CH Microphone Input	
	Output	1CH Speaker Output	
Power Requirements		DC 12V 6.67A Adaptor	
Weight		8.5kg	
Dimensions (WXHxD) mm		436 X 396 X 88	
Packing		600 X 520 X 180	

Design and specifications are subjected to changes without notice

## CHAP. 11 Remocon Key Definition

## 1. NORMAL Type

## NORMAL Type Remote Controller Key Definition

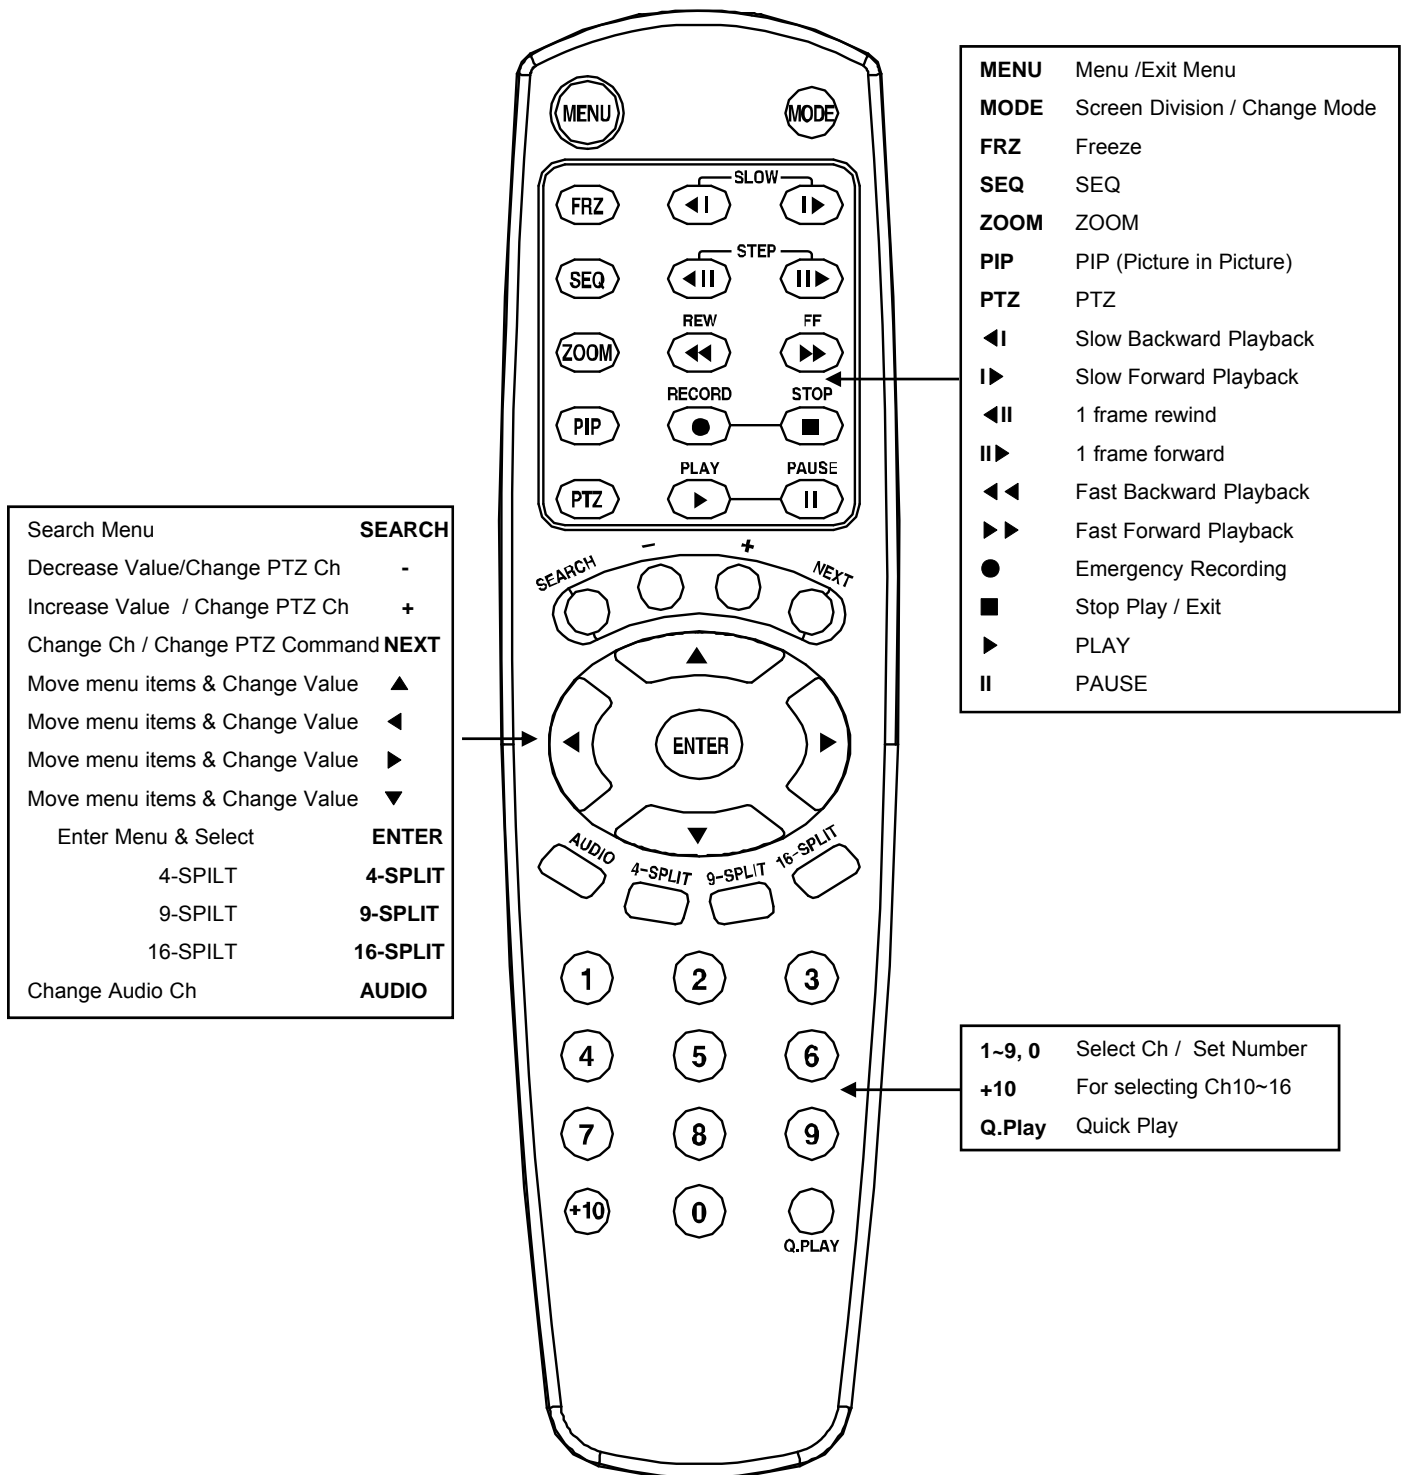


\*There are 3 remote controller types. Normal Type, Single Type, Universal Type. Please refer to related remote controller.

## CHAP. 11 Remocon Key Definition

## 2. Single Type

## Single Type Remote Controller Key Definition

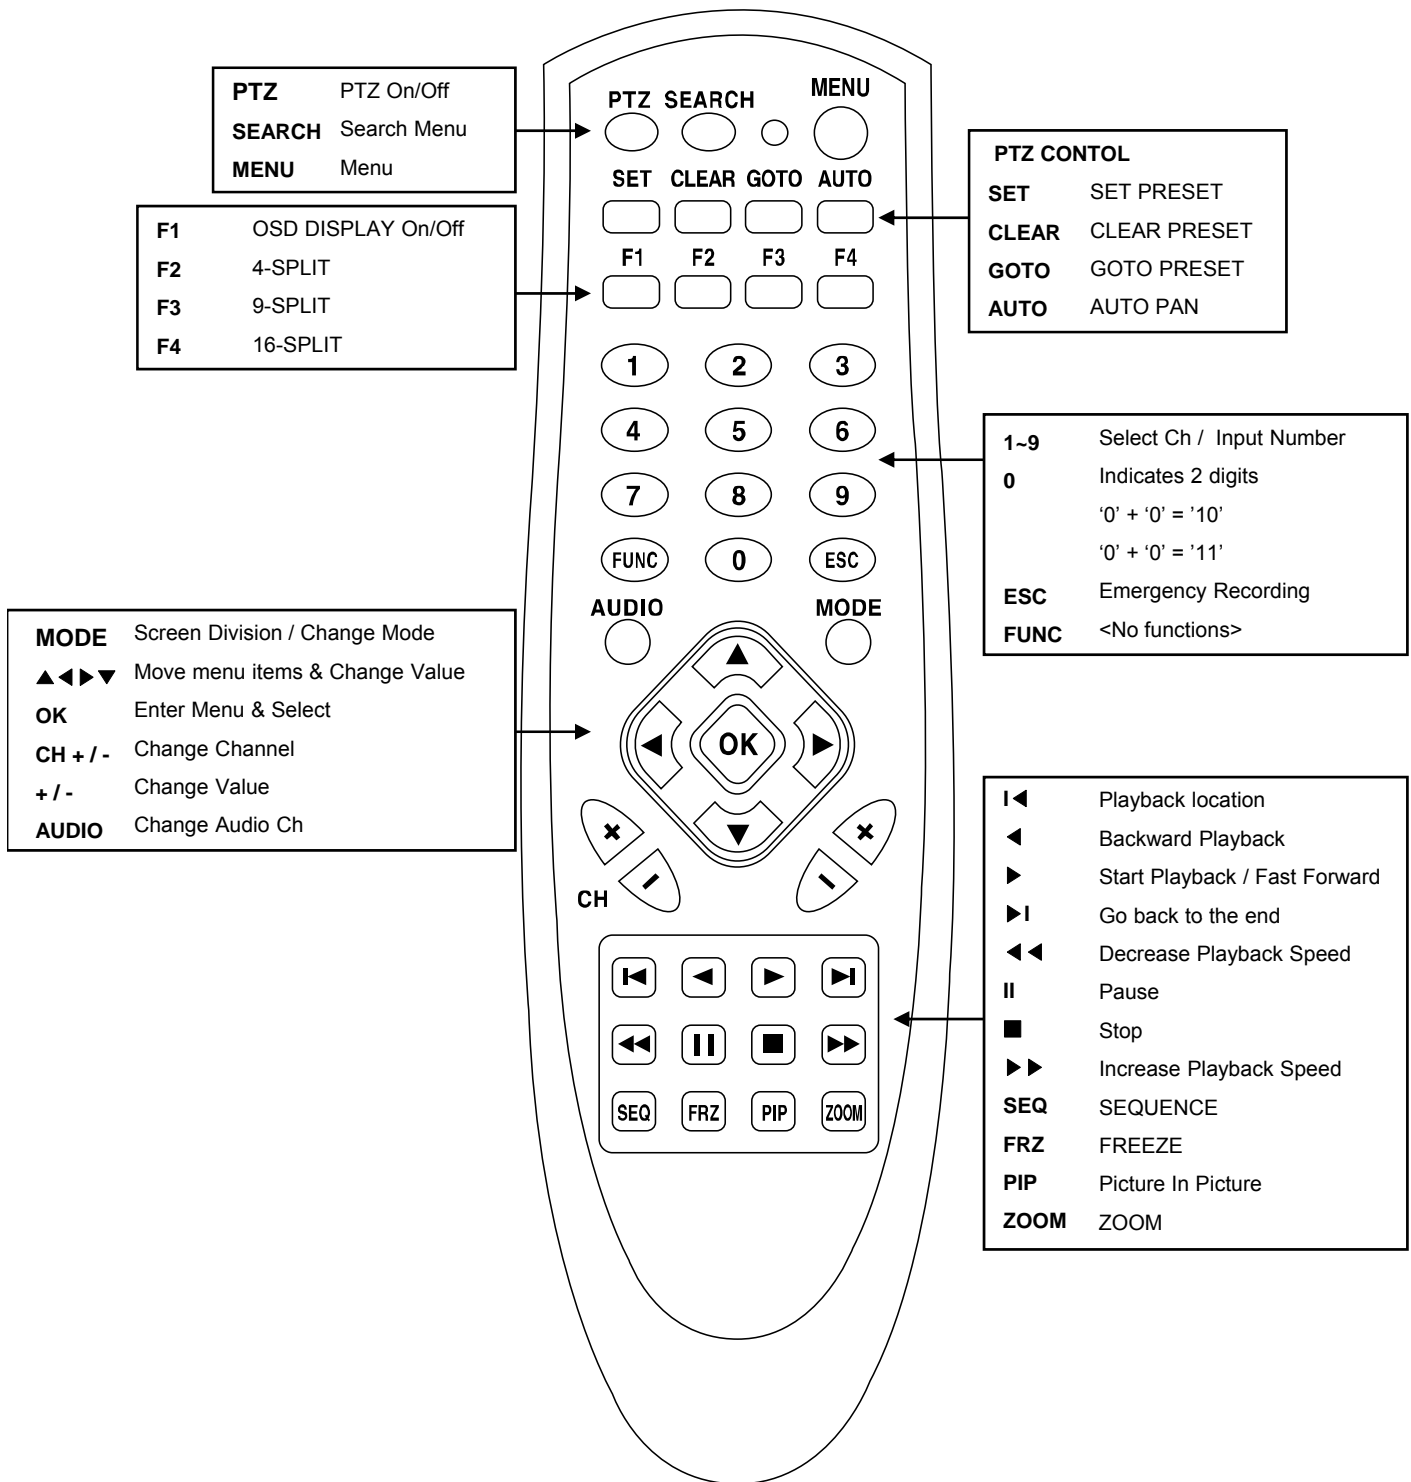


\*There are 3 remote controller types. Normal Type, Single Type, Universal Type. Please refer to related remote controller.



## CHAP. 11 Remocon Key Definition

## 3. Universal Type

## Universal Type Remote Controller Key Definition

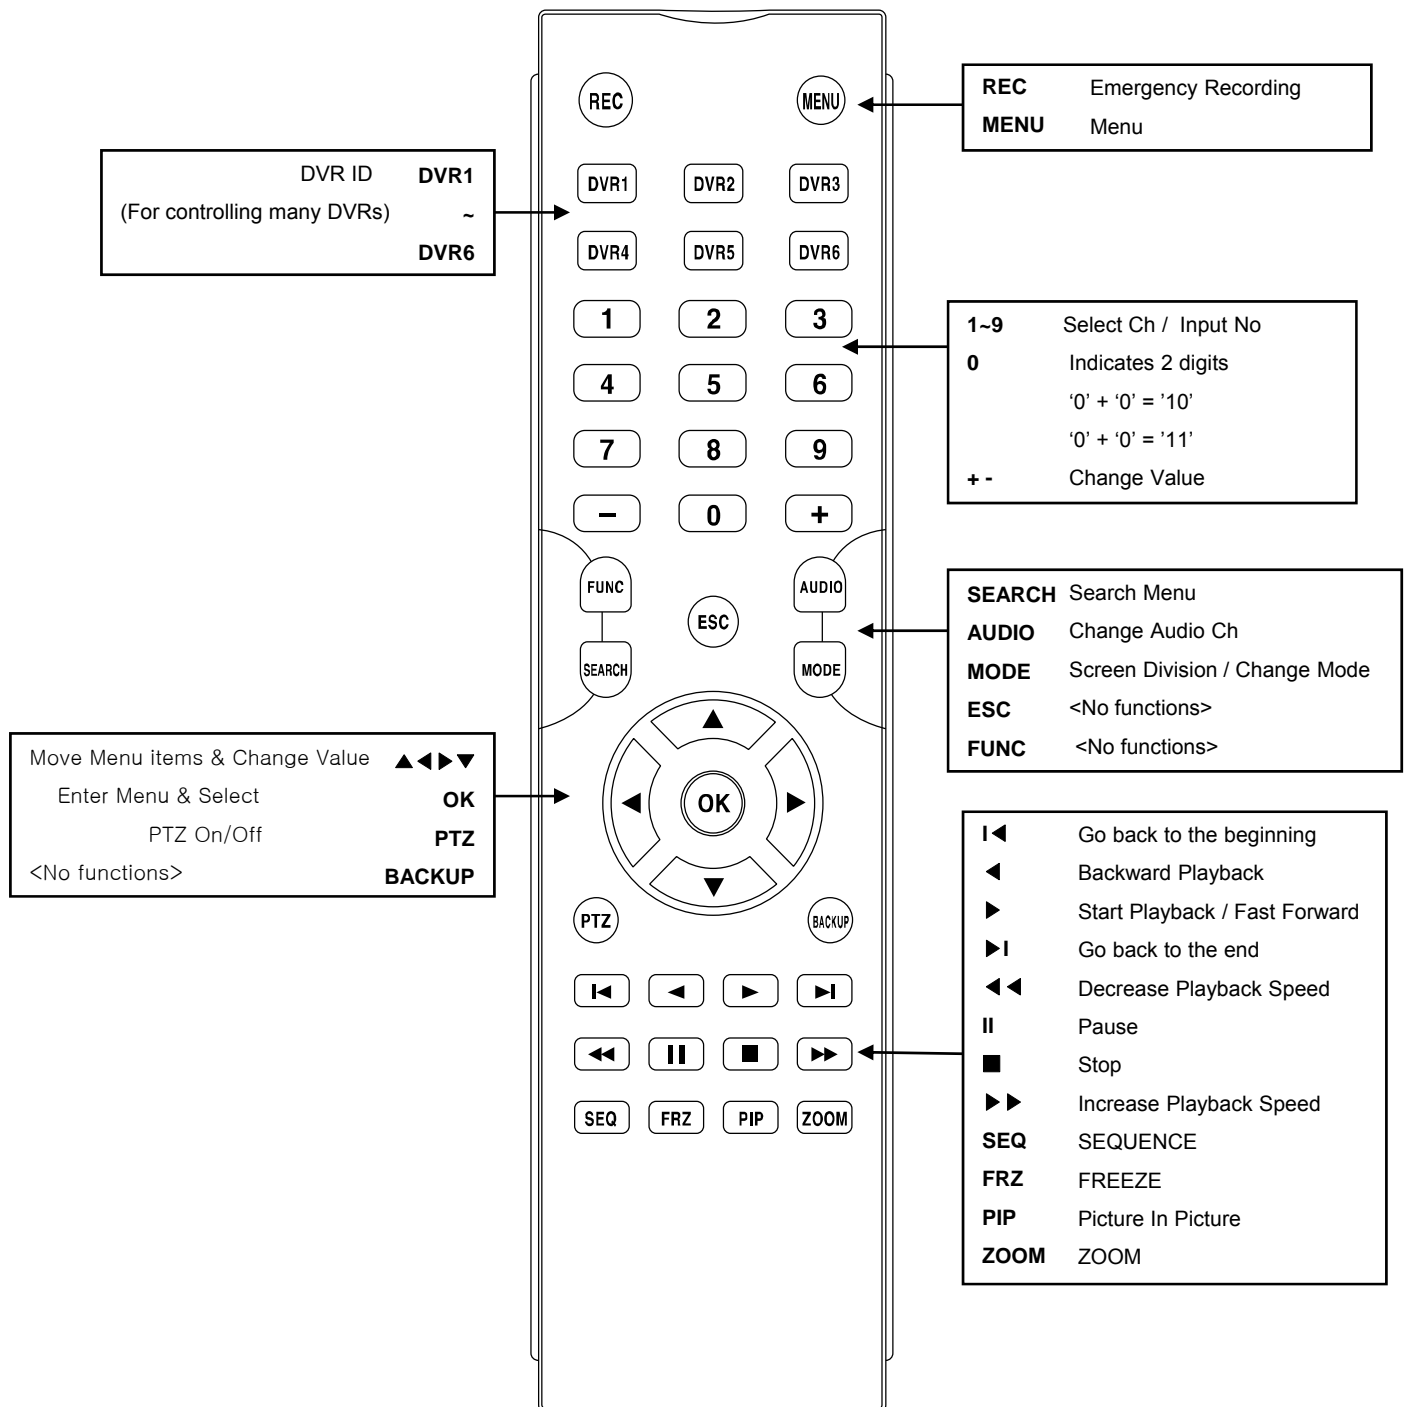

\*There are 3 remote controller types. Normal Type, Single type, Universal Type. Please refer to related remote controller.

Network (JPEG2000+H.264)

Network Stand Alone DVR

MEMO :

Network (JPEG2000+H.264)

Network Stand Alone DVR

MEMO :

Network (JPEG2000+H.264)

Network Stand Alone DVR

MEMO :

Network (JPEG2000+H.264)

Network Stand Alone DVR

MEMO :



8Channel Network Stand Alone DVR  
Audio, USB Backup available

---

**Record & Playback : JPEG2000 / Transmission via IP network : H.264**