

The Intelligent Surveillance Solution

NVS

User Manual (Remote)

Ver. 2.1.5.150213.00

Table of Contents

1.	Installation	8
1.1	Installation Process.....	8
2.	Settings	22
2.1	Camera Setup	22
2.1.1	Add Cameras by Camera Search	22
2.1.2	Add Cameras Manually.....	24
2.1.3	Modify Camera Information	25
2.1.4	Modify Camera Parameters	25
2.1.5	Set up Lens Settings.....	26
2.1.6	View Camera Status Details.....	27
2.2	Recording & Event Setup.....	29
2.2.1	Recording Mode Setup	29
2.2.2	Recording Schedule / Event Setup.....	29
2.2.3	Camera Events and Responding Actions Setup.....	33
2.2.4	I/O Box Input and Responding Action Setup	36
2.2.5	System Events and Responding Actions Setup	37
2.2.6	Push Notification.....	38
2.2.7	SMTP Server Setup.....	41
2.2.8	Add Event Contacts	42
2.2.9	Set up FTP Server.....	42
2.3	RAID & File Settings.....	43
2.3.1	Create a RAID Volume	43
2.3.2	View RAID Volume Status.....	46
2.3.3	View Disk Drive Information	47
2.3.4	Modify RAID Volume	49
2.3.5	Delete a RAID Volume.....	51
2.3.6	Format	52
2.3.7	Modify the FTP Protocol Settings	53
2.4	Auto Backup	54
2.4.1	Set up Backup Schedule.....	54
2.5	Network Setup.....	55
2.5.1	View Network Status.....	55
2.5.2	Network Settings	56
2.5.3	Auto Port-Forwarding.....	59
2.5.4	Network Service Setup.....	61
2.5.5	CMS Service Setup	62

2.5.6	findNVR	62
2.6	Management.....	64
2.6.1	View the List of Users.....	64
2.6.2	Create New Users.....	64
2.6.3	Modify User Information.....	65
2.6.4	Change a User's Password.....	65
2.6.5	Delete Users.....	66
2.6.6	Online License Activation	66
2.6.7	Offline License Activation	67
2.6.8	Online License Transfer.....	69
2.6.9	Offline License Transfer.....	70
2.6.10	View the Event Log	71
2.6.11	Save Unit Configuration	72
2.6.12	Load Unit Configuration / Default Settings	73
2.7	System.....	74
2.7.1	View System Information.....	74
2.7.2	Smart Fan Control.....	75
2.7.3	Buzzer Configuration.....	75
2.7.4	UPS Setup	76
2.7.5	Upgrade the System	76
2.7.6	System Date and Time Setup	77
2.7.7	Restart the Unit.....	78
2.7.8	Shut Down the Unit.....	79
3.	POS	81
3.1	Introduction	81
3.1.1	System Introduction	81
3.1.2	Hardware Installation – SCB-C31A	82
3.1.3	Software Installation – SCB-C31A.....	83
3.1.4	Connection via TCP Client.....	84
3.2	Software Setup.....	85
3.2.1	Activate POS License	85
3.2.2	NVR POS Setting.....	85
3.2.3	Insert POS Setting	86
3.2.4	Delete POS Device	88
3.2.5	Configure POS Setting.....	88
3.3	Tag Filter	88
3.3.1	Add New Tag Filter.....	88
3.3.2	Edit Tag Filter.....	91

3.3.3	Delete Tag Filter.....	91
3.3.4	Import/Export Tag Filter.....	92
3.4	POS Display Font	92
3.4.1	Live View.....	92
3.4.2	Remote Live Viewer.....	93
3.4.3	Playback.....	94
3.4.4	Playback System.....	95
3.5	POS Transaction Data Search.....	96
3.5.1	Search POS Transaction Data through Playback.....	96
3.5.2	Search POS Transaction Data through Playback System	98
3.6	Playback Video with POS Data	98
3.6.1	Select Period by POS Search	98
3.6.2	Select Period by Data & Time through Playback.....	99
3.6.3	Select Period by Data & Time through Playback System	99
3.7	Backup Video with POS Data	99
3.7.1	Backup through Internet Explorer.....	99
3.7.2	Backup through Playback System	100
3.7.3	Backup through Backup System	100
4.	I/O.....	102
4.1	Introduction.....	102
4.1.1	System Introduction	102
4.1.2	HW Installation.....	102
4.1.3	Software Installation – SCB-C31	103
4.1.4	Software Installation – SCB-C24/26/28.....	104
4.2	Software Setup.....	106
4.2.1	Add I/O Box.....	106
4.2.2	Modify I/O Box Information	107
4.2.3	I/O Pin Setting.....	107
4.3	Relative Configuration and Application	108
4.3.1	Record on Input Trigger.....	108
4.3.2	Input and Responding Actions	108
4.3.3	I/O Control Panel in Live View	108
5.	Live view	109
5.1	Internet Explorer	109
5.1.1	Live View Control Panel.....	109
5.1.2	Live View Setting	112

5.1.3	General Setting	112
5.1.4	Stream Profile Setting	113
5.1.5	OSD (On-screen display) Setting.....	114
5.1.6	Monitor Display Setting.....	114
5.1.7	Notification.....	115
5.1.8	Set up Joystick Control	116
5.2	Remote Live Viewer Application	118
5.2.1	Remote Live Viewer Application Control Panel	118
5.2.2	Unit Connection Setting.....	121
5.2.3	General Setting	122
5.2.4	Camera Group Setting.....	124
5.2.5	Delete/ Rename Camera Groups	124
5.2.6	Stream Profile Setting	125
5.2.7	OSD (On-screen display) Setting.....	125
5.2.8	Monitor Display Setting.....	126
5.2.9	Notification.....	127
5.2.10	Set up Joystick Control.....	128
5.2.11	Set up Remote Live Viewer.....	129
6.	E-Map	130
6.1	Internet Explorer	130
6.1.1	E-Map Control Panel.....	130
6.1.2	Add Map	131
6.1.3	Edit Map	132
6.1.4	Delete Map	132
6.1.5	Add/Rotate Device Indicator.....	132
6.1.6	Delete Device Indicator	132
6.1.7	Layout Adjustment	133
6.1.8	Relative Configuration and Application	133
6.2	Remote Live Viewer Application	134
6.2.1	E-Map Control Panel.....	134
7.	Playback	135
7.1	Internet Explorer	135
7.1.1	Playback Control Panel.....	135
7.1.2	Search the Recorded Video	137
7.1.3	Play the Recorded Video.....	139
7.1.4	Intelligent Search.....	139
7.1.5	Recorded Video Enhancement.....	140
7.1.6	Save a Video	141

7.1.7	Save an Image	142
7.1.8	Print an Image.....	143
7.1.9	Backup the Recorded Video	144
7.2	Remote Playback System Application	146
7.2.1	Playback System Application Control Panel	146
7.2.2	Set up Unit Connections	146
7.2.3	Search the Recorded Video	147
7.2.4	Play the Recorded Video.....	148
7.2.5	Intelligent Search.....	148
7.2.6	Recorded Video Enhancement.....	149
7.2.7	Save a Video	150
7.2.8	Save an Image	151
7.2.9	Print an Image.....	151
7.2.10	Backup the Recorded Video.....	152
8.	Backup and Delete Records	153
8.1	The Backup System Application	153
8.2	Backup the Recorded Video through Windows Explorer ...	155
8.3	Backup the Recorded Video through FTP	156
8.4	Playback the Backup Records.....	156
8.4.1	With Playback Application	156
8.4.2	Without Playback Application	156
8.5	Delete the Recorded Video	156
8.5.1	With Backup Application	156
8.5.2	Without Backup Application	159
9.	Verification Tool.....	160
9.1	Execute Verification Tool.....	160
9.2	Verify Image / Video	161
10.	External Storage.....	162
10.1	Create a Volume on DAS	162
10.2	Create an External Storage	162
11.	Log out	164
12.	Remote PC System Requirements.....	165
13.	Troubleshooting.....	166
13.1	Replace a Failed Disk Drive.....	166
13.2	Respond to a Critical RAID Volume	166
13.3	Respond to a File System Error RAID Volume	166
13.4	Restore the Default Administrator's Password	166
13.5	Restore All Default Configuration	167

13.6	Install ActiveX.....	167
13.7	Cannot Log in to the Unit with Internet Explorer	168
Appendix – RAID System.....		169
Introduction to RAID.....		169
RAID 0 – Stripe.....		169
RAID 1 – Mirror.....		170
RAID 5 – Block Striping with Distributed Parity.....		171
RAID 10 – Mirror / Stripe.....		171
Choosing a RAID Level.....		172

GNU General Public License

This product includes copyrighted third-party software licensed under the terms of the GNU General Public License. Please see the GNU General Public License (GPL) for the exact terms and conditions of this license at www.gnu.org.

Subject to GPL, you may re-use, re-distribute and modify the GPL source code.

Note that with respect solely to the GPL Software, no warranty is provided. We do not offer direct support for the distribution.

1. Installation

1.1 Installation Process

Step 1: Unpack the Unit

This package contains the following items:

	1bay Package	2bay Package	8bay Package
The unit	V	V	V
Remote control, 1.5M IR extender cable	V	V	V
Disk screws	V (for 2.5" and 3.5" disk)	V (for 2.5" and 3.5" disk)	V (for 3.5" disk)
Foot pad	V	V	V
Power	12V 4A 48W power adapter, power cord	12V 5A 60W power adapter, power cord	Power cord
Quick Start Guide, CD	V	V	V
Rackmount kit, screws	-	-	V
Key	-	-	V

*CD content: **Install Wizard**, **Remote Live Viewer**, **Playback System**, **Backup System**, **Verification Tool** and **Offline License Tool** application, user manual, and quick start guide



Battery spec is 1.5V, AAA, R03. Two batteries are required for a remote control.



To configure the unit, you must install the software onto a desktop/ laptop running Windows XP-SP3 32bit, Windows 7 32/64bit, Windows 8 32/64bit.

Front View (1 Bay/2 Bay Unit)



Status LED:


No.	Description	Status Notice	Remark
1	Power Status LED	▶ Power-on: blue ▶ Power-off: dark	--
2	System Status LED	▶ Healthy: blue	1) Orange: System is

		<ul style="list-style-type: none"> ► Unhealthy: orange ► Abnormal temperature status: orange with blinking ► Off: dark 	2) abnormal or RAID is abnormal) Orange with blinking: CPU temperature/fan rpm is beyond the normal range 3) Blinking (200 ms On/ 200 ms Off)
3	HDD Status LED	<ul style="list-style-type: none"> ► Healthy: blue ► Failed: orange ► No disk: dark ► Rebuilding: orange with blinking 	1) LED for all disks 2) Blinking (200 ms On/ 200 ms Off)
4	Ethernet Status LED	<ul style="list-style-type: none"> ► Linking: blue ► Accessing: blue with blinking ► No linking: dark 	1) LED for Ethernet port (1*output for detecting connection status of switch) 2) Blinking (200 ms On/ 200 ms Off)
5	Alarm LED	<ul style="list-style-type: none"> ► No event happened: dark ► Event detected: orange with blinking 	Blinking (200 ms On/ 200 ms Off)

External Control and I/O Ports:

No.	Description
1	Power button
6	Remote control IR receiver
7	USB 2.0 connector

Rear View (1 Bay/2 Bay Unit)

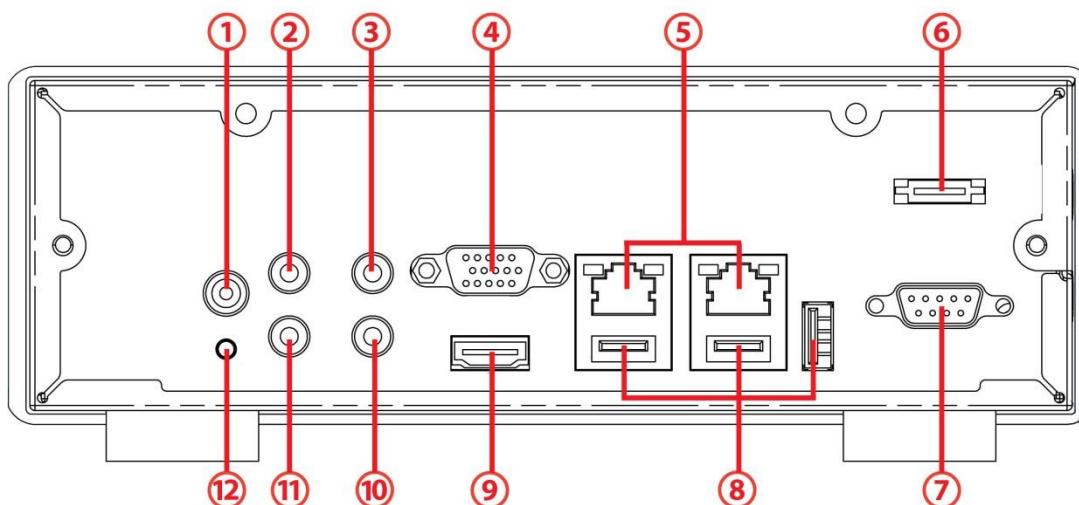


Status LED:

No.	Description	Status Notice	Remark
5	Ethernet Activity LED	<ul style="list-style-type: none"> ▶ Linking: green ▶ Accessing: green with blinking ▶ No linking: dark 	1) LED for Ethernet port 2) Blinking (200 ms On/ 200 ms Off)


External Control and I/O Ports:

No.	Description
1	DC-in power connector
2	3.5 mm mic-in (reserved)
3	3.5 mm audio out (headphone jack)
4	VGA connector
5	RJ-45 LAN ports 1 / 2
6	eSATA connector
7	COM port (RS-232 reserved)
8	USB 2.0 connectors
9	HDMI connector
10	Connection of IR extender
11	3.5 mm line-in (reserved)
12	Reset toggle

Horizontal

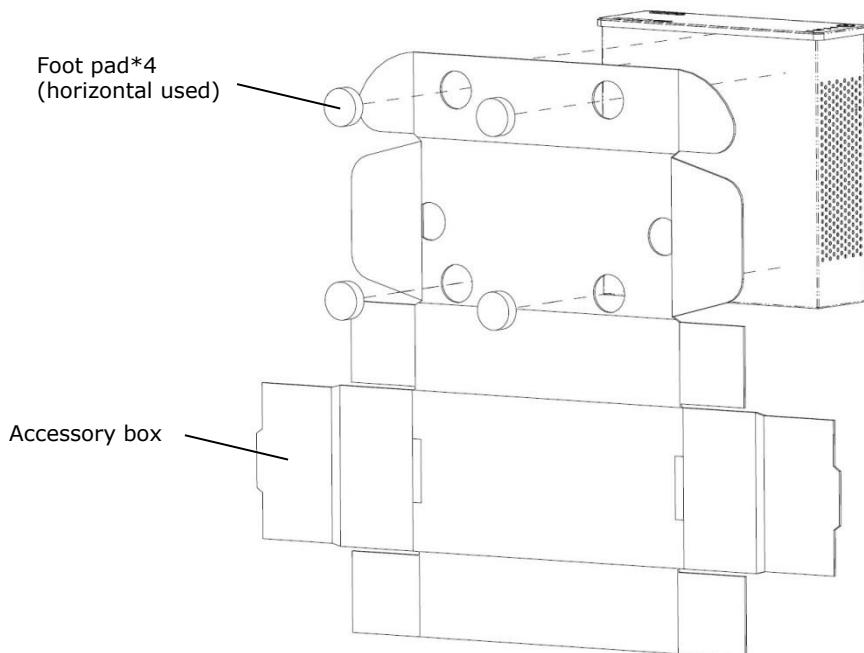

Front View (8 Bay Unit)

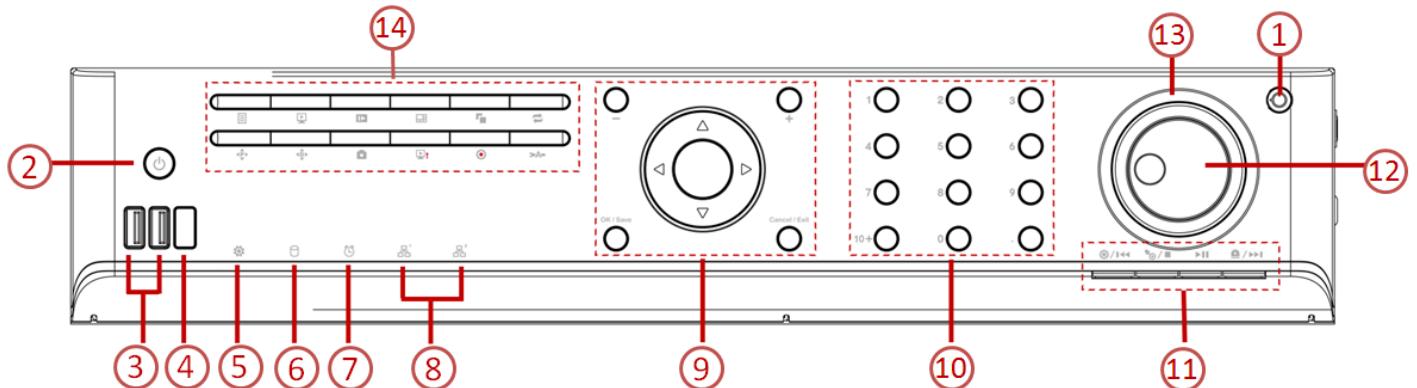

Status LED:


No.	Description	Status Notice	Remark
2	Power Status LED	<ul style="list-style-type: none"> ▶ Power-on: blue ▶ Power-off: dark 	--
5	System Status LED	<ul style="list-style-type: none"> ▶ Healthy: blue ▶ Unhealthy: orange ▶ Abnormal temperature status: orange with blinking ▶ Off: dark 	1) Orange: System is abnormal (including RAID) 2) Orange with blinking: CPU temperature/fan rpm is beyond the normal range 3) Blinking (200 ms On/ 200 ms Off)
6	HDD Status LED	<ul style="list-style-type: none"> ▶ Healthy: blue ▶ Failed: orange ▶ No disk: dark ▶ Rebuilding: orange with blinking 	1) LED for all disks 2) Blinking (200 ms On/ 200 ms Off)
7	Alarm LED	<ul style="list-style-type: none"> ▶ No event happened: dark ▶ Event detected: orange with blinking 	Blinking (200 ms On/ 200 ms Off)
8	Ethernet Status LED	<ul style="list-style-type: none"> ▶ Linking: blue ▶ Accessing: blue with blinking ▶ No linking: dark 	1) LED for Ethernet port (1*output for detecting connection status of switch) 2) Blinking (200 ms On/ 200 ms Off)

External Control and I/O Ports:

No.	Description
1	Lock
2	Power button

3	USB 2.0 connector
4	Remote control IR receiver
9~14	(For local display)

Rear View (8 Bay Unit)

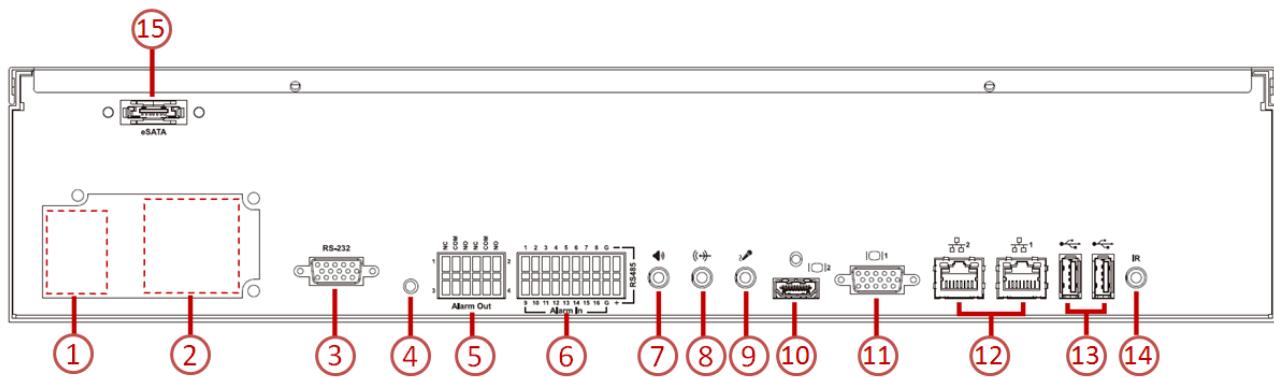

Status LED:

No.	Description	Status Notice	Remark
12	Ethernet Activity LED	<ul style="list-style-type: none"> ▶ Linking: green ▶ Accessing: green with blinking ▶ No linking: dark 	1) LED for Ethernet port 2) Blinking (200 ms On/ 200 ms Off)

External Control and I/O Ports:


No.	Description
1	Power cord connector
2	Cooling fan
3	COM port (RS-232 reserved)
4	Reset toggle
5	Relay output*4, support N.O. / N.C. 3A, 24 VDC/ 120 VAC max
6	Digital input*16, dry contact
7	3.5 mm audio out (headphone jack)
8	3.5 mm line-in (reserved)
9	3.5 mm mic-in (reserved)
10	HDMI connector
11	VGA connector
12	RJ-45 LAN ports 1 / 2
13	USB 2.0 connectors
14	Connection of IR extender
15	eSATA connector

Step 2: Install Hard Drives


Refer to compatibility list and install HDDs. For optimal performance consideration, install disks with the same model and storage capacity. The available RAID level depends on the amount of disks installed.

1. Open the lid of the unit.
2. Carefully lock the disks into the HDD tray with screws. 4 screws for each disk. Lock the lid of the unit once you finished.

1 bay unit: install 3.5" HDD

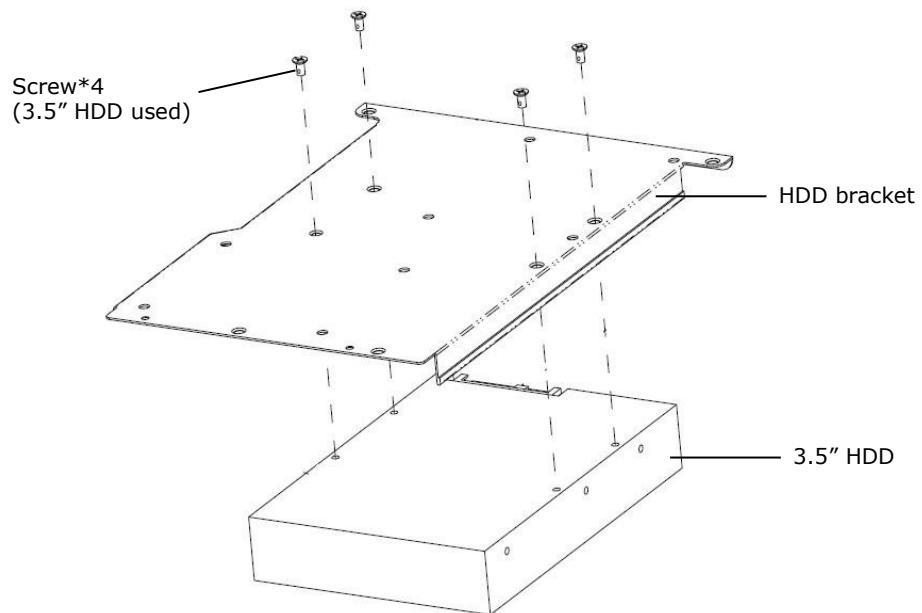


1 bay unit: install 2.5" HDD

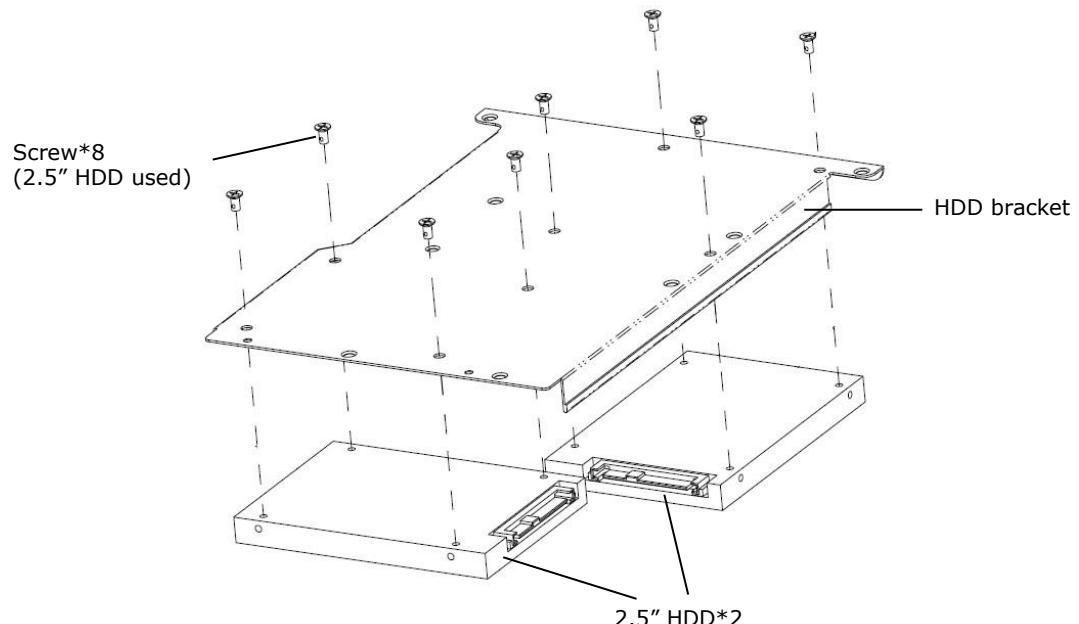




When installing HDDs on HDD bracket, please mind your hands from scratching.

2 bay unit: Install 3.5" HDD

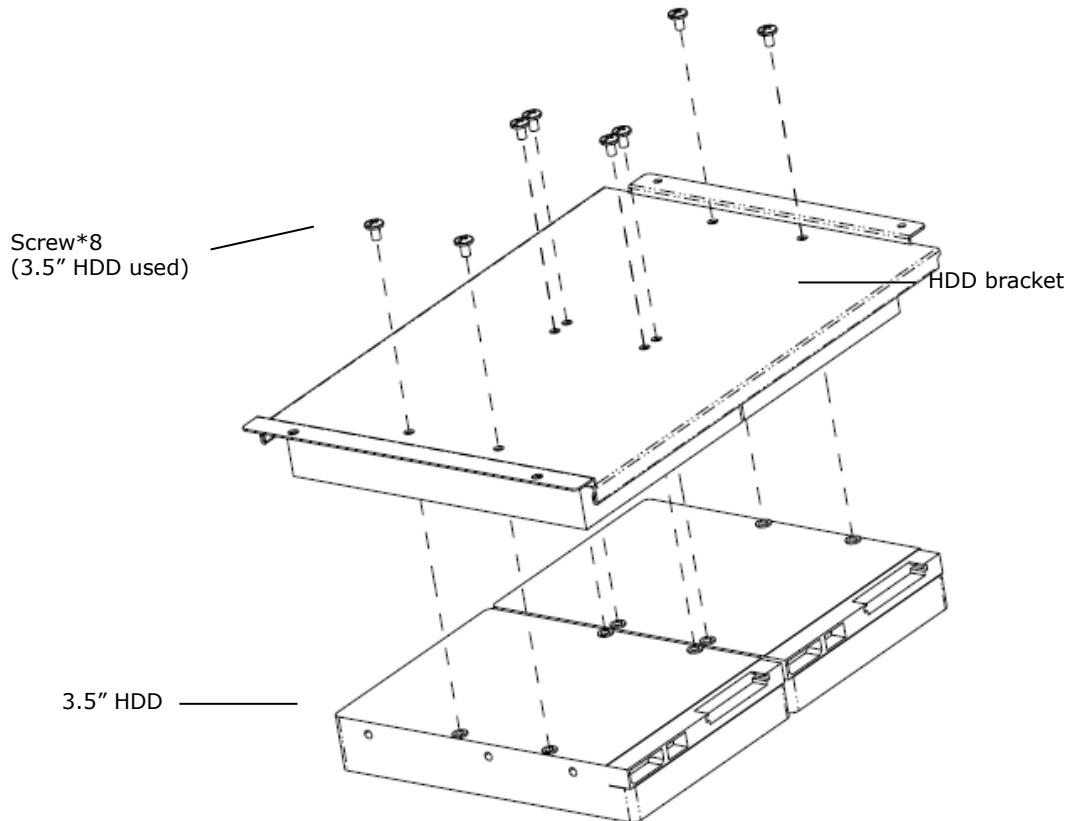

- For 2-bay installation, it is recommended to connect the SATA cable to HDDs before securing the HDDs to the bracket.
- When installing HDDs on HDD bracket, please beware of sharp edges.

8 bay unit: install 3.5" HDD

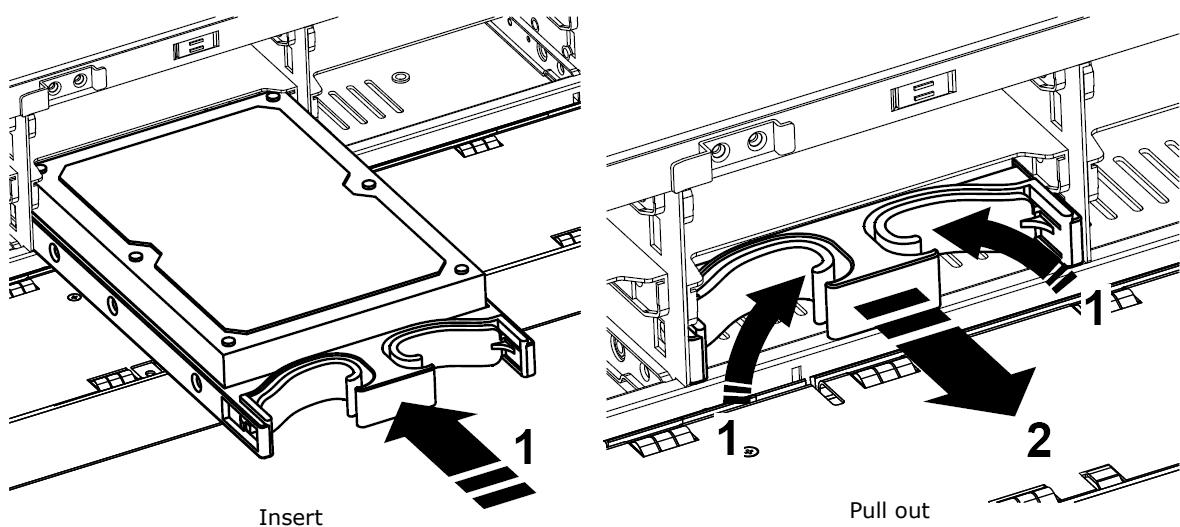

Step 3: Connect the Unit and Devices within the Network

1. Connect the unit, cameras, and router/switch.
2. If you need to make the video visible over the Internet, please connect to a “router” with Internet connection, and the unit will retrieve an IP address through DHCP by default.



The unit processes built-in DHCP service, which takes the job of router to assign IP addresses, which is suitable for the pure LAN environment.

Step 4: Connect the Monitor (Local)

1. The unit processes two display interfaces, VGA and HDMI. Connect the monitor to the unit.



The supporting display resolutions are 1920x1080, 1280x1024, 1280x720, and 1024x768. Please confirm that one of the resolutions is supported by your monitor.

Step 5: Connect the Power

1bay:

1. Attach the power cord from the power source to the power adapter.
2. Connect the power adapter to the back of the unit enclosure. See the rear view figure.
3. On the front of the unit, press the power button. See the front view figure.

8bay:

1. Connect the power cord directly to the back of the unit. See the rear view figure.
2. On the front of the unit, press the power button. See the front view figure.

It takes about a minute for the unit to fully power up. Once it is powered up:

- The System Status LED turns blue. See the front view figure.
- The buzzer beeps one time.

Step 6: Install the Software


Please be noticed that you can choose to start up system on the local side or from the remote side. Here is the introduction of remote startup. If you are interested in the local part, please refer to "User Manual (Local)".

1. Insert the CD into your CDROM.
2. Double-click **Setup.exe** to begin installation.
3. Follow the instruction of **Setup.exe**, and click the **Finish** button to close the installer.

Step 7: Set up the Unit


The software **Installation Wizard** performs the setup procedures on the unit. After the procedure, you can begin using it.

1. Go to Start > NVR > NVR Install Wizard.
2. This program will show the default language setting and initiation mode.
3. Choose your preferred language and initiation mode, and then click the  button.

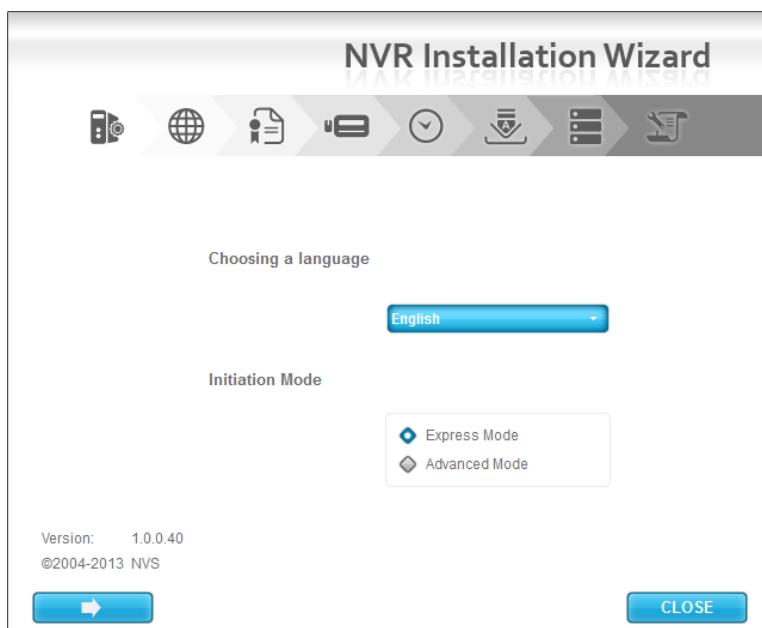


- **Express Mode:** you don't need to set up the network settings and RAID level.
 - **Advanced Mode:** configure all settings manually: network, license, camera, Date/Time, and RAID level
4. The **Installation Wizard** program starts searching for all the units on the

internet currently. Choose one of them, and then click the  button.

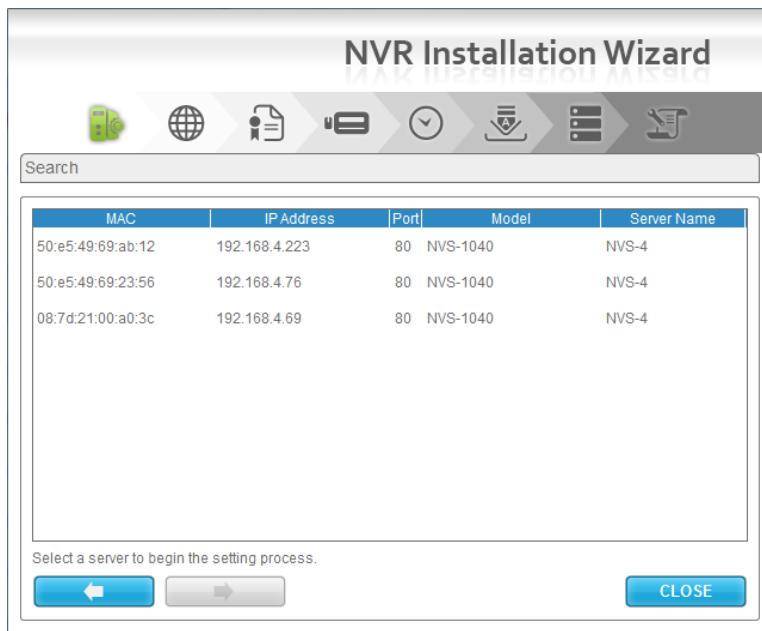


5. Type in the password, and then click the **OK** button.

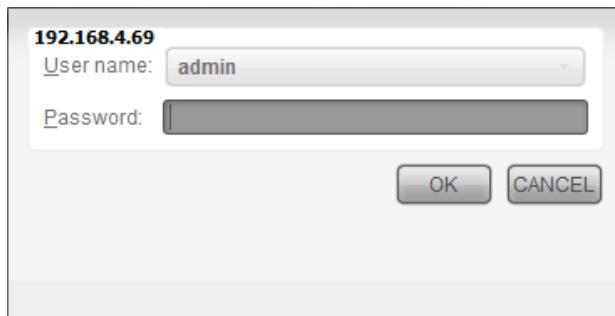


The default Administrator password is "admin".

6. Name this server and select the network type, and then click the  button.

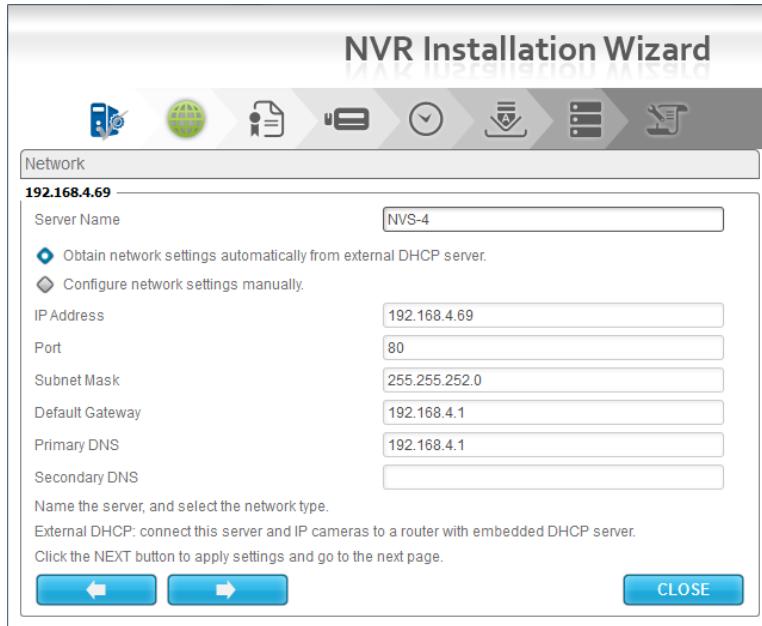



- **Obtain network settings automatically from external DHCP server:** apply all settings which are automatically generated by the DHCP server, such as IP, subnet mask, gateway, and DNS.
- **Configure network settings manually:** configure the preferred settings one by one.

7. Activate camera license to have more channel capacity, and click the button.

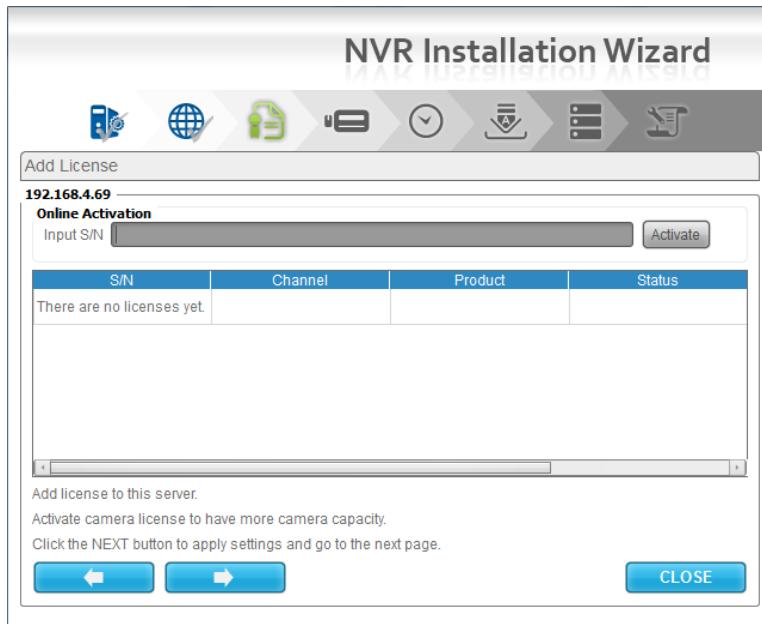


8. Add cameras for this server. There are two ways of adding cameras,

selecting the searched cameras and manually configuring the cameras. Click the  button after completing camera list.

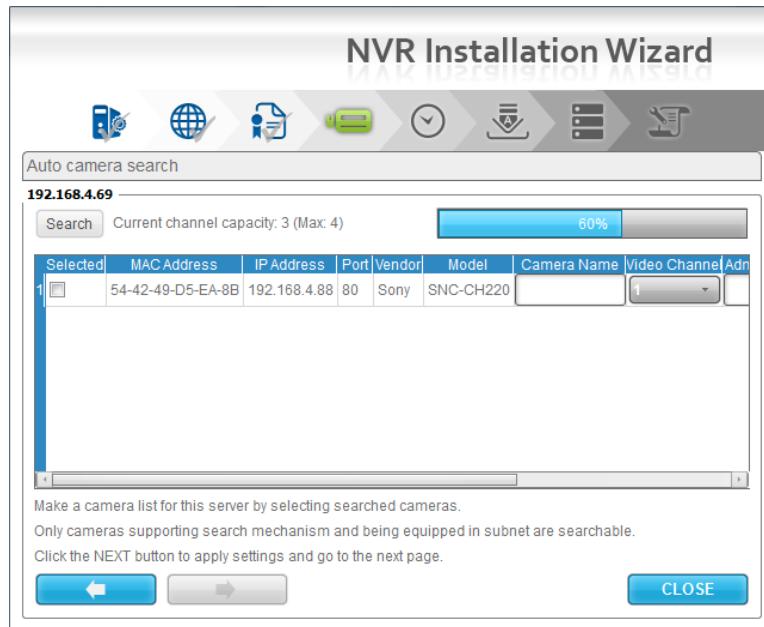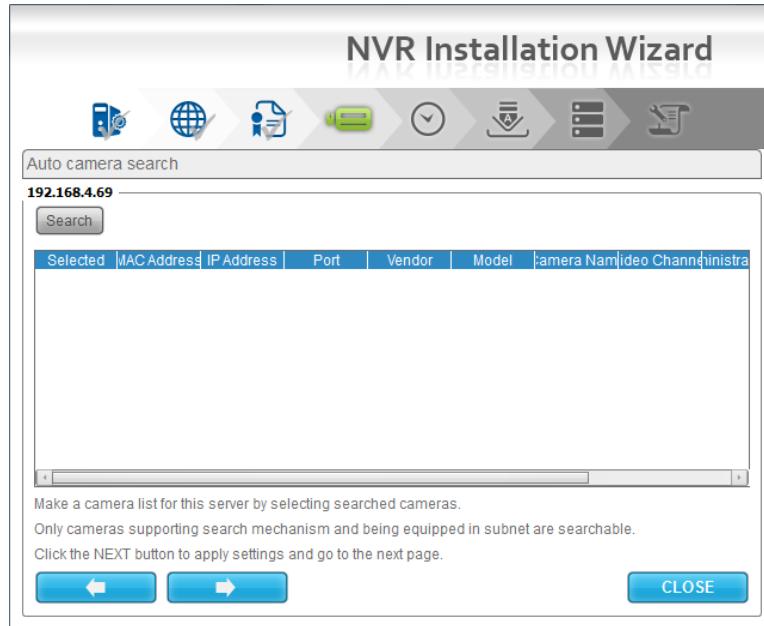




9. Set up the time zone, date, and time, and adjust daylight saving changes if needed. Once daylight saving function is enabled, the time change will activate automatically every year based on the recurrence you set. Click the button.

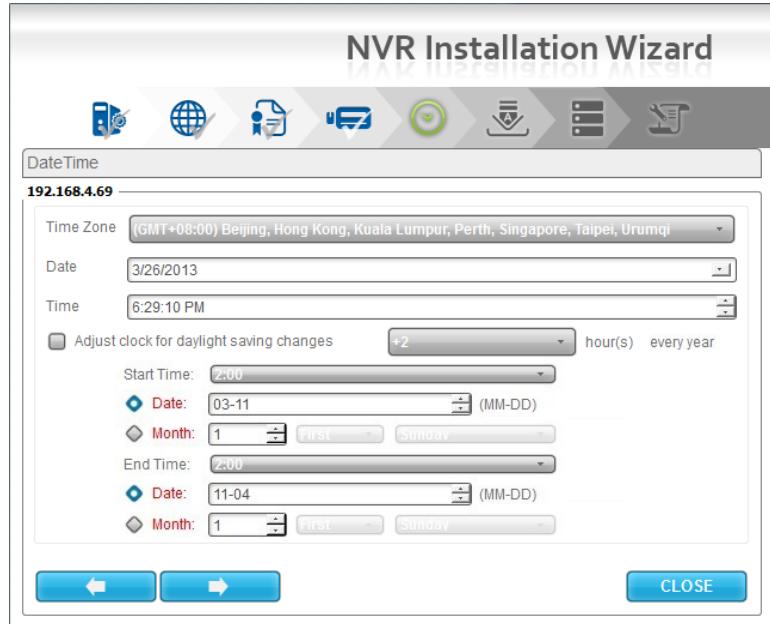


10. Follow the following instruction and select the RAID type you want to create. Click the button.

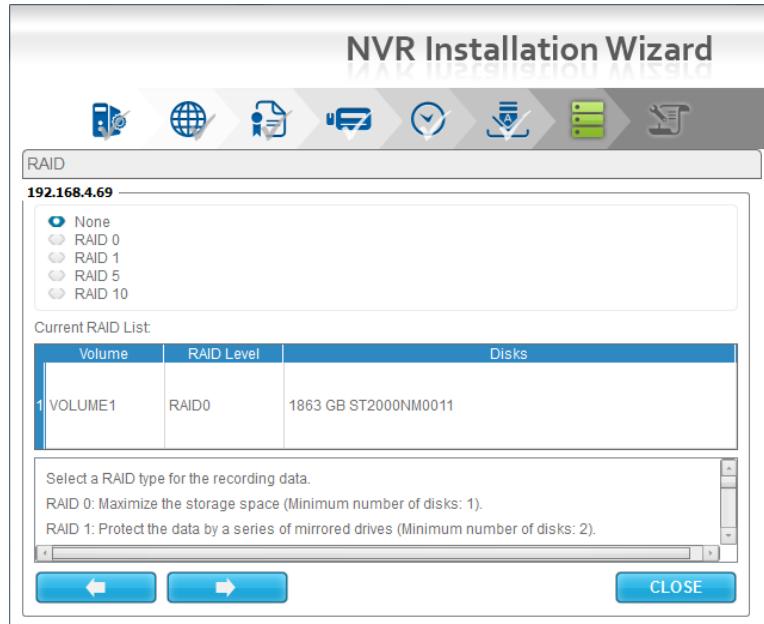

The available RAID level depends on the amount of disks installed.

11. Review your settings. If the settings are correct, click the **Finish** button to exit the settings procedure and activate the system.

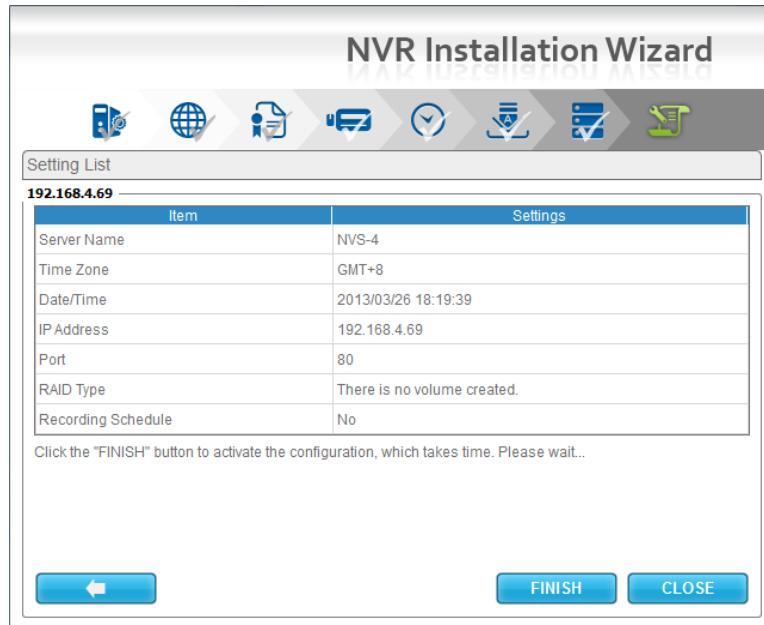

Once the "FINISH" button is clicked, the unit will start working. In order to ensure the stability of the unit, never pull any disks out when the system is running.

2. Settings

After setting up the unit, log in to the system by entering its IP address in the browser(Internet Explorer 8, 9, 10, Mac Safari 7.0, Windows Chrome). When connecting, choose your language, enter the username and password, and then begin using this system.



There are four main functions of this unit: settings, live view, playback, and logout. They will be shown on the top of the page. Current firmware version and free storage capacity are shown above the function list.




2.1 Camera Setup

2.1.1 Add Cameras by Camera Search


The function enables user to automatically search and add cameras in the same network. There are two search mechanisms, one is UPnP, another is camera search tool. Before searching UPnP cameras, make sure that the cameras possess UPnP function.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.

2. Click **IP Camera/ Camera Settings**.
3. Click the **Camera Search** tab.
4. Click the **Search** button.

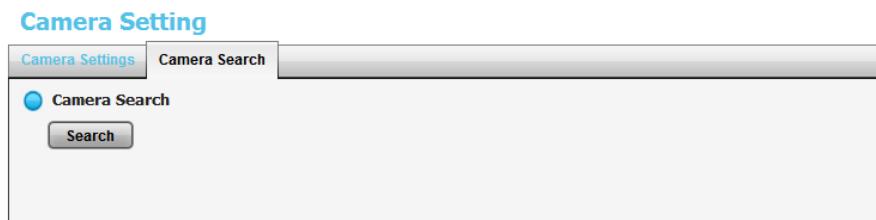

5. The system will list all the currently available cameras. The inserted cameras are shown in blue. Click the icon to add a camera into your camera list.

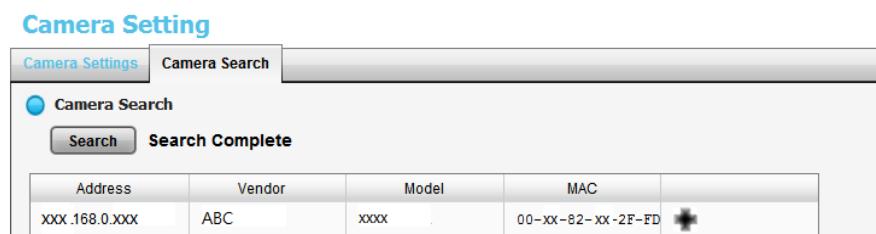

6. After clicking the , the camera setting page will pop up. Click the item to which you want to add a camera.
7. Insert the camera name, username, and password.

The screenshot shows a 'Add IP Camera' dialog box and a 'Current Camera Settings' table.

Add IP Camera Dialog:

Camera Name			
Address	192.168.0.74	Port	80
Administrator Name		Password	
Add to channel	1	Protocol	TCP
Vendor	Vivotek	Model	IP7330

Buttons: Add, Cancel

Current Camera Settings Table:

Channel	Camera Name	Address	Vendor	Model
1	Vivotek Model PZ7131	192.168.2.149	Vivotek	PZ7131
2		192.168.01.207	EverFocus	EHN3200
3		192.168.01.169	EverFocus	EVS410
4		192.168.02.19	EverFocus	EDN3240



To have better compatibility between camera and system, please make sure the privilege of camera credential is admin-level.

8. Click the **Add** button to add it.
9. After clicking the **Add** button, the updated camera list will be displayed in the **Camera Setting** tab.

No.	Camera Name	Address	Port	Vendor	Model
1	Camera 1	192.168.0.96	80	PPP	123
2	Camera 2	192.168.1.233	4088	AAA	214
3			80	-- none --	-- none --
4			80	-- none --	-- none --

2.1.2 Add Cameras Manually

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **IP Camera / Camera Settings**.
3. Click the **Camera Settings** tab, and the camera list will be displayed on the bottom of the page.
4. Click on the camera list for the channel you want to add and enter the camera's information.

No.	Camera Name	Address	Port	Vendor	Model
1	Camera 1	192.168.0.96	80	PPP	123
2	Camera 2	192.168.1.233	4088	AAA	214
3			80	-- none --	-- none --
4			80	-- none --	-- none --

Camera Settings

Camera No.	Camera 3			
Camera Name	<input type="text"/>			
Address	<input type="text"/>	Port	<input type="text" value="80"/>	
Administrator Name	<input type="text"/>	Password	<input type="text"/>	
Video Channel	<input type="button" value="▼"/>	Protocol	<input type="radio"/> TCP <input type="radio"/> UDP <input checked="" type="radio"/> HTTP	
Vendor	<input type="button" value="-- none --"/>	Model	<input type="button" value="-- none --"/>	
<input type="button" value="Save"/>		<input type="button" value="Reset"/>	<input type="button" value="Clear"/>	<input type="button" value="Auto Detection"/>

- **Camera name:** The name of the camera.
- **Address:** The IP address.
- **Port:** The transmission port.

- **Administrator Name**: Login username.
- **Password**: Login password.
- **Video Channel**: Select the number of analog cameras supported by one video server or select the number of IP cameras possessing multiple lens/channels.
- **Protocol**: Data transmission protocol.
- **Vendor**: Camera vendor name.
- **Model**: Camera model name.



To have better compatibility between camera and system, please make sure the privilege of camera credential is admin-level.

5. Click the **Save** button.

- **Save**: Save the information of this camera.
- **Reset**: Return to the latest saved settings of the selected camera.
- **Clear**: Set all the settings to default value.
- **Auto Detection**: After inserting IP address, port, username, and password, click this button to automatically detect other camera information, including Channel, Protocol, Vendor, and Model.

2.1.3 Modify Camera Information

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **IP Camera / Camera Settings**.
3. Click the **Camera Settings** tab.
4. Click the camera which you want to modify.
5. Modify the information of this camera.
6. Click the **Save** button.
7. Use the same method to replace a camera if needed.

2.1.4 Modify Camera Parameters

Stream profile is designed for mobile client and lower fps live stream display. Without stream profile integration, users cannot watch live video on mobile client nor select lower fps stream on live view. Further, for performance consideration, we fix the resolution and frame rate for each brand/series.

Refer to [**camera support list**](#).

1. Open Internet Explorer and log in to the unit.

2. Click **IP Camera / Camera Parameters**.
3. Click the **Camera Parameter** tab.
4. Click the camera which you want to modify on the camera list.
5. Modify the information of this camera.
6. Click the **Save** button.

Camera Parameters

Camera Parameters		Lens Settings																																					
Camera Parameters <table border="1"> <tr> <td>Camera No.</td> <td colspan="3">Camera 1</td> </tr> <tr> <td>Camera Name</td> <td colspan="3">Camera 1</td> </tr> <tr> <td>Multi-Stream Settings</td> <td colspan="3"> <input checked="" type="radio"/> Enable (Customize) <input type="radio"/> Enable (Auto) <input type="radio"/> Disable </td> </tr> <tr> <td>Stream</td> <td>Stream 1 (Main)</td> <td>Stream 2</td> <td>Stream 3</td> </tr> <tr> <td>Video Format</td> <td>H.264</td> <td>H.264</td> <td>H.264</td> </tr> <tr> <td>Frame Rate</td> <td>1</td> <td>5</td> <td>5</td> </tr> <tr> <td>Resolution</td> <td>half</td> <td>half</td> <td>half</td> </tr> <tr> <td>Quality / Bit Rate</td> <td>65535</td> <td>512</td> <td>96</td> </tr> <tr> <td>Audio</td> <td colspan="3"><input checked="" type="checkbox"/> Enable</td> </tr> </table>				Camera No.	Camera 1			Camera Name	Camera 1			Multi-Stream Settings	<input checked="" type="radio"/> Enable (Customize) <input type="radio"/> Enable (Auto) <input type="radio"/> Disable			Stream	Stream 1 (Main)	Stream 2	Stream 3	Video Format	H.264	H.264	H.264	Frame Rate	1	5	5	Resolution	half	half	half	Quality / Bit Rate	65535	512	96	Audio	<input checked="" type="checkbox"/> Enable		
Camera No.	Camera 1																																						
Camera Name	Camera 1																																						
Multi-Stream Settings	<input checked="" type="radio"/> Enable (Customize) <input type="radio"/> Enable (Auto) <input type="radio"/> Disable																																						
Stream	Stream 1 (Main)	Stream 2	Stream 3																																				
Video Format	H.264	H.264	H.264																																				
Frame Rate	1	5	5																																				
Resolution	half	half	half																																				
Quality / Bit Rate	65535	512	96																																				
Audio	<input checked="" type="checkbox"/> Enable																																						
<input type="button" value="Save"/> <input type="button" value="Reset"/>																																							

- **Camera Name:** The name of the camera.
- **Multi-stream Settings:** Enable/Disable camera multi-stream.
- **Stream:** Support up to three streams.
- **Video Format:** Choose the type of format which this camera supports.
- **Frame rate:** Select the frame rate of the camera.
- **Resolution:** Select the resolution of the camera.
- **Quality/Bit Rate:** Select the image quality of the camera.
- **Audio:** Check the **Enable Audio** option to view and enable audio recording.

2.1.5 Set up Lens Settings

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **IP Camera / Camera Parameters**.
3. Click the **Lens Settings** tab.
4. Click the camera which you want to modify in the camera list.
5. Modify the information of this camera.
6. Click the **Save** button.

Camera Parameters

Camera Parameters		Lens Settings																	
Lens Settings <table border="1"> <tr> <td>Camera Name</td> <td colspan="3">Camera 1</td> </tr> <tr> <td>Lens</td> <td colspan="3"><input type="checkbox"/> Enable</td> </tr> <tr> <td>Lens Type</td> <td colspan="3">ImmerVision IMV1-1/3</td> </tr> <tr> <td>Camera Position</td> <td colspan="3">-- none --</td> </tr> </table>				Camera Name	Camera 1			Lens	<input type="checkbox"/> Enable			Lens Type	ImmerVision IMV1-1/3			Camera Position	-- none --		
Camera Name	Camera 1																		
Lens	<input type="checkbox"/> Enable																		
Lens Type	ImmerVision IMV1-1/3																		
Camera Position	-- none --																		
<input type="button" value="Save"/>																			

- **Camera Name:** The name of the camera.
- **Lens Type:** There are two types of lens currently, ImmerVision and Vivotek (FE8171V). You are not allowed to select type so far, type depends on camera model.
- **Lens:** Enable or disable lens function.
- **Camera Position:** Select the position of the camera.



If users enable the lens while lens is not installed correctly or not even installed, a warning message will pop up as a notification if users are trying to operate lens on liveview page.

2.1.6 View Camera Status Details

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click IP Camera / Details

Camera Status

No.	Name	Address	Connection Status	Rec. Status	Frame Rate	Bit Rate
1	Camera 1	10.0.2.80			1.3 fps	168.9 Kbps
2					0.0 fps	0.0 Kbps
3					0.0 fps	0.0 Kbps
4					0.0 fps	0.0 Kbps
						168.9 Kbps

Estimated Remaining Recording Time: 164 day(s) 2 hour(s)
If your total bit rate becomes red, it means that the system load is too heavy
Last Update at 2014年3月17日下午 06:17:59

- **Stream 1:** The bit rate of stream 2
- **Stream 2:** The bit rate of stream 3
- **Stream 3:** The bit rate of stream 3
- **Total Bit Rate:** The total bit rate of the camera



If your total bit rate becomes red, it means that the loading of the system is too heavy.

- **Conn. Status:** The status of the connection. Click the **Connect** or **Disconnect** button to change the connection status.

Status	Icon
--------	------

Connection Status	Connected	
Connection Status	Disconnected	
Connection Status	Connecting	
Connection Button	Connected: Normal	
	Connected: Over	
Connection Button	Disconnected: Normal	
	Disconnected: Over	

- **Rec. Status:** The set recording schedule of this camera in this time.

	Status	Icon
Recording Status	No Recording	
Recording Status	Always Recording – Recording	
Recording Status	Always Recording – Stopped	
Recording Status	Schedule Recording – Recording	
Recording Status	Schedule Recording – Stopped	

- **Frame Rate:** The frame rate of this camera.
- **Bit Rate:** The transmission bit rate of this camera.
- **Estimated Remaining Recording Time:** Estimated remaining recording time is dividing the current free capacity by dynamic total bit rate.

	If your total bit rate becomes red, it means that the loading of the system is too heavy.
--	---

2.2 Recording & Event Setup

2.2.1 Recording Mode Setup

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / Recording settings**.
3. Click the **Recording Mode** tab.
4. If selecting **Always Record**, the chosen cameras will begin to record immediately.



- **No Recording**: Turn off the recording.
- **Recording by Schedule**: Recording by schedule.
- **Always Record**: Permanently turn on the chosen cameras.
- **Automatic Recycle**: Check the **Enable** option and select the timing of automatic recycle works. We strongly suggest recycling the disk(s) when the storage space is less than 10%. (default: 10%)
- **Keep Video**: Set a period during which the recorded video clips will be kept intact. (max: 365)



The privilege of automatically recycle is higher than keep video if you select both.

2.2.2 Recording Schedule / Event Setup

Instead of **Always Record**, you can begin the recording by setting the **Recording Schedule**.


1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / Recording Settings**.
3. Click the **Recording Schedule** tab.

4. Check the **Day** or **Week** mode.

- **Day**: Schedule the recording to turn the recorder on and off at the same time every day according to your setting.
- **Week**: Schedule the recording for each day of the week differently.

5. Click the schedule of the camera which needs to be modified.

6. Click the column at the bottom of the page.

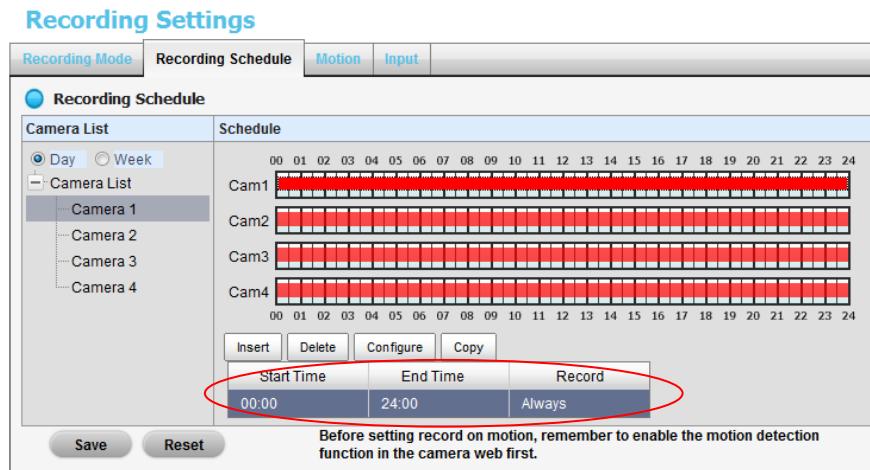



- **Insert**: Insert new schedules.

- **Delete**: Delete the selected schedule.


- **Configure**: Modify the schedule and recording mode settings.

- **Copy**: Copy current **Day Schedule** to other channel(s); copy current **Week Schedule** to other day(s) of a week or other channel(s).

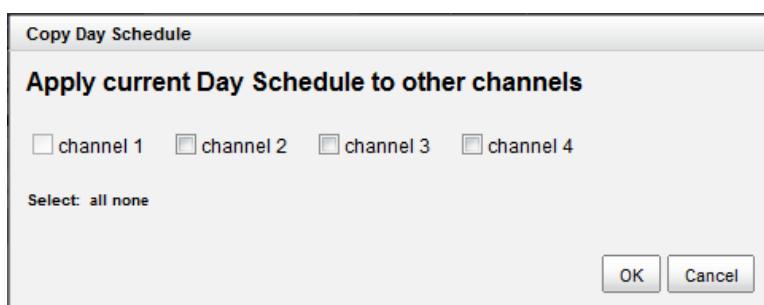


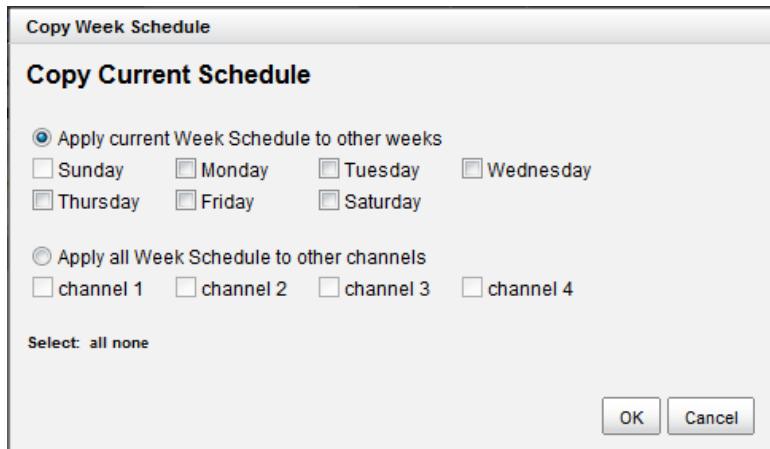

7. The default setting of the camera's recording schedule is from 00:00 to 24:00. If you want to modify the time slot, click the **Configure** button to modify the default settings first.

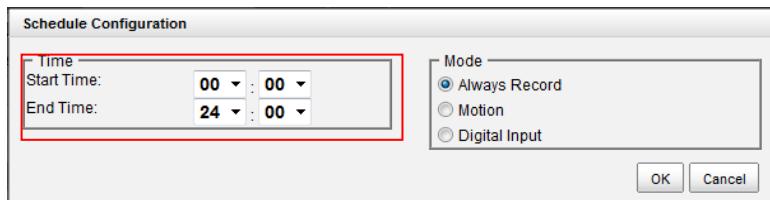

8. Choose the recording mode.

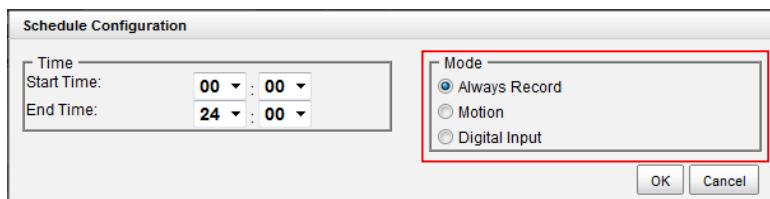

- **Always Record:** Always record.
- **Motion:** Record when camera motion is detected. Go to the "Motion" tab to define which camera's motion detection to associate with this channel of camera to start recording.

Camera Setting

Profile of Record on Motion

Profile	
Pre-Record	15 Sec.(Max.: 180)
Post-Record	15 Sec.(Max.: 180)
Motion	<input type="checkbox"/> Motion on Camera 1 <input type="checkbox"/> Motion on Camera 2 <input type="checkbox"/> Motion on Camera 3 <input type="checkbox"/> Motion on Camera 4

Save Reset

- **Digital Input:** Record when digital input is triggered. Go to the “Input” tab to define which input triggering to associate with this channel of camera to start recording.

Camera Setting

Profile of Record on Input


Profile	
Pre-Record	15 Sec.(Max.: 180)
Post-Record	15 Sec.(Max.: 180)
Digital Input	Expand All Digital Inputs' Camera 1 Camera 2 Camera 3 Camera 4

Save Reset

 When setting the event Motion, if you prefer Motion (NVR), or embedded motion, please enable it from the local setting of the NVR.

If camera motion is preferred, please first ensure that the motion detection function of the camera has been enabled, and disable Motion(NVR) in local setting.

9. If you want to add another new schedule, click the **Insert** button to add a new one.

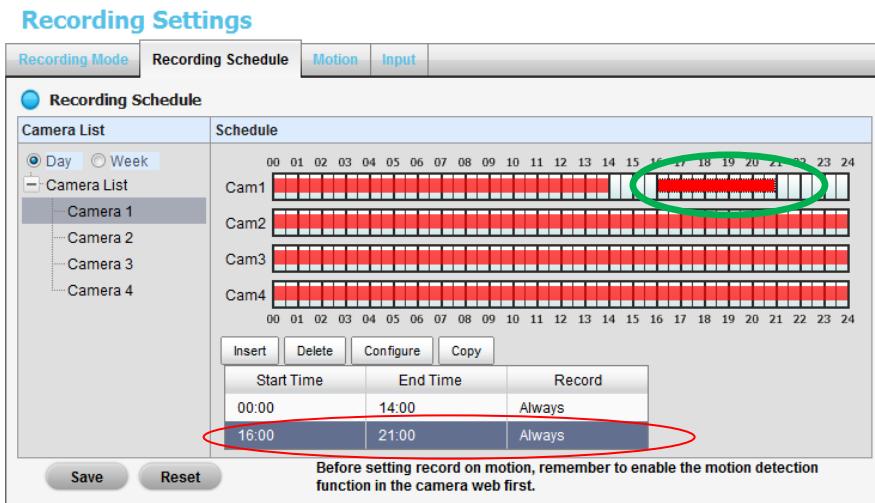

- Click the **Save** button.



When changing the motion detection settings of a camera, make sure to disconnect your unit and that camera first. Once you have finished, re-connecting them will update the settings in your unit.



There is another way to set the schedule. If you want to change the recording time length, drag the end of the time bar from 24:00 back to the length you wish, and then drag the beginning of the time bar to the point at which you would like it to commence recording. (You may also click the **Insert** button to add new schedules.)

2.2.3 Camera Events and Responding Actions Setup

- Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
- Click **Recording & Event / Event & Action Management**.
- Choose the camera, and then select one of the events. The event list depends on camera its own ability.


Event & Action Management

The screenshot shows the 'Event & Action' management interface. On the left, the 'Camera List' pane shows cameras: Camera1 (selected), Camera2, Camera3, Camera4, Camera5, Camera6, Camera7, Camera8, and System. Under Camera1, there are three event types: 'Connection lost', 'Motion from Camera', and 'Recurrent'. The 'Recurrent' checkbox is checked. On the right, the 'Event & Action' pane has tabs for 'Add', 'Del', and 'Configure'. It lists an action named 'Motion from Camera' with an 'Options' column. At the bottom, there are 'Save' and 'Reset' buttons, and a note: 'Before setting Motion from Camera, please enable the motion detection function on the camera's web interface first.' Another note says: 'Users have to sign in on mobile clients to start push notification service. If the user password is changed, please sign in with the new password to start the service again.'

- **Connect lost:** When a connection between the camera and this unit is lost, the system will trigger an action.
- **Motion from Camera:** When motion is detected, an action can be triggered.
- **Recurrent Event :** When Recurrent event is trigger, the Camera send a snapshot to FTP.
- **Input:** Any external input can trigger an action.

 When setting the event Motion, if you prefer Motion (NVR), or embedded motion, please enable it from the local setting of the NVR.
If camera motion is preferred, please first ensure that the motion detection function of the camera has been enabled, and disable Motion(NVR) in local setting.


4. Click the **Configure** button to enable the event and select the active period.

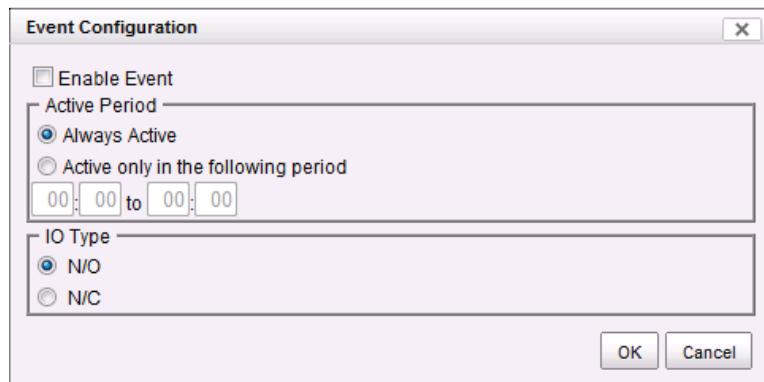

- **Always Active:** The selected event is always active.

- **Active only in the following period:** The selected event is only active in the designated time, which able to cover two days e.g. from 18:00 to 09:00.
- **I/O Type:** Check one of the options of I/O type. N/O means normal open, while N/C means normal close.

5. Click the **Add** button to set up the responding actions of this event.

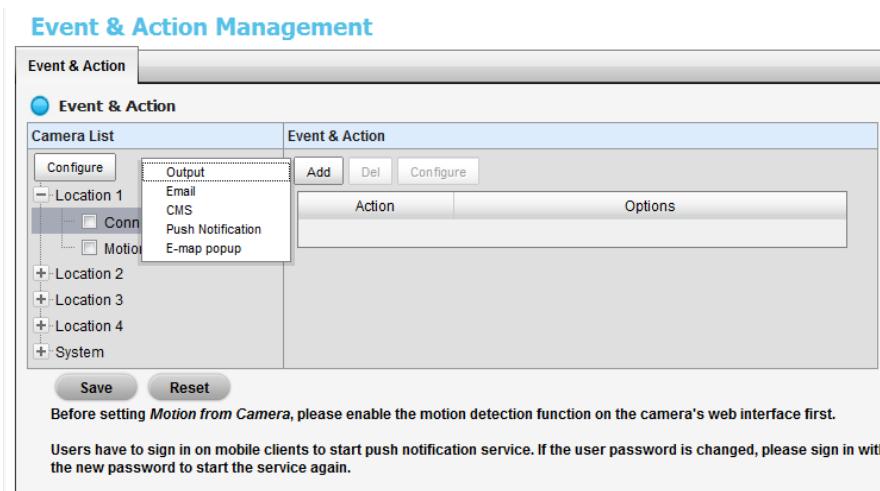

- **Output:** When an event occurs, the system will send an output signal to other connected devices.
- **Email:** When an event occurs, the system will send Email notifications and a snapshot. Make sure to add an Email address first.
- **CMS:** When an event occurs, the system will send out a signal and a snapshot to CMS. CMS will highlight this event.
- **Push Notification:** When an event occurs, the system will send instant message to the registered mobile clients as a notification. Mobile users can check the recording videos on mobile client to watch what just happened. Refer to **Push Notification**.
- **E-map popup:** When an event occurs, the system will pop up E-map with an event indicator to show users the location of the scene clearly.
- **Snapshot to FTP:** When an event occurs, the system will upload snapshots to assigned FTP server. Refer to **camera support list**.


6. Click the action, and then click the **Configure** button to modify the details of that action if necessary.
 7. Click the **Save** button.



After selecting camera events, the event information will display on the screen when it's triggered.

2.2.4 I/O Box Input and Responding Action Setup

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / Event & Action Management**.
3. Click the **Event & Action** tab.
4. Select an input of I/O Box from list.
5. Click the **Add** button to set up the responding actions of this event.
6. Click the action, and then click the **Configure** button to modify the details of that action if necessary.

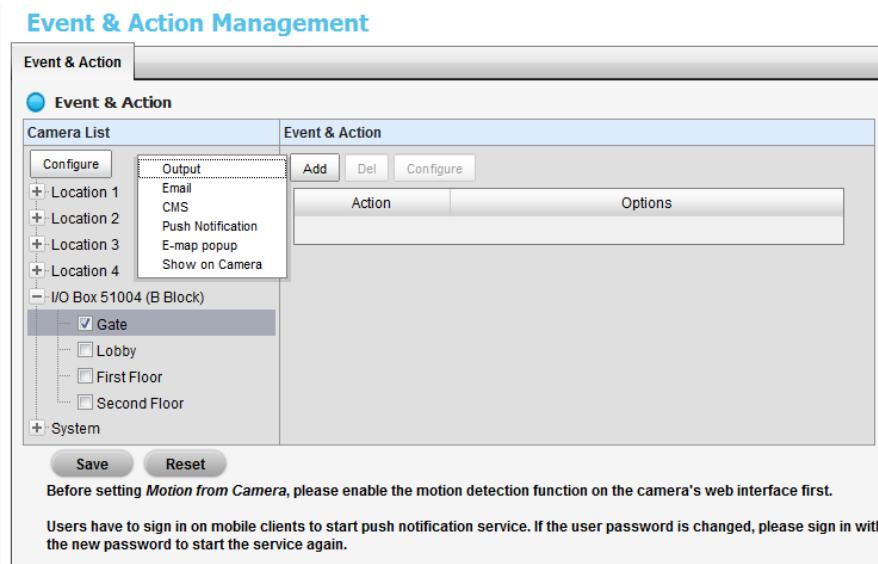

- **Output:** When an event occurs, the system will send an output signal to other connected devices.
- **Email:** When an event occurs, the system will send Email notifications. Make sure to add an Email address first.
- **CMS:** When an event occurs, the system will send out a signal to CMS. CMS will highlight this event.
- **Push Notification:** When an event occurs, the system will send instant message to the registered mobile clients as a notification. Mobile users can check the recording videos on mobile client to watch what just happened. Refer to **Push Notification**.
- **E-map popup:** When an event occurs, the system will pop up E-map with an event indicator to show users the location of the scene clearly.


- **Show on Camera:** When an event occurs, the system will show an alert message on selected camera(s) of screen.



7. Click the **Save** button.

2.2.5 System Events and Responding Actions Setup

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / Event & Action Management**.
3. Click the **Event & Action** tab.
4. Click **System** to unfold the list of system events, and then select one of the five events.

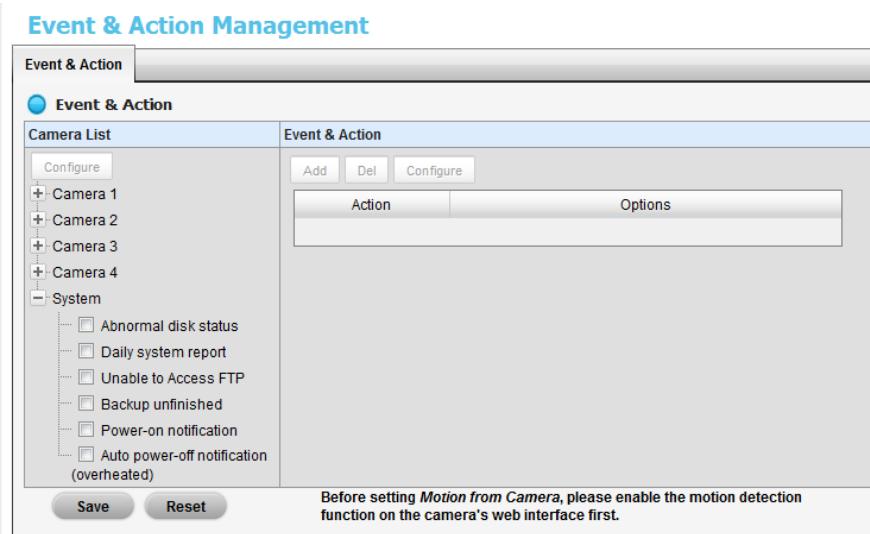


- **Abnormal disk status:** When there is no enough disk space for recording or when disk is abnormal for accessing, the system will trigger an action.
- **Daily system report:** Enable users to know the system information, HDD usage, and Disk status everyday through Email without accessing to the unit to check.
- **Unable to access FTP:** The action will be triggered when the connection

between the unit and FTP server is lost.

- **Backup unfinished:** If there is any file which the system didn't complete the backup process, the file(s) name will be listed and send out through Email after finishing the last file of this backup schedule.
- **Power-on notification:** Record the time as power was turning on.
- **Auto power-off notification:** If overheating was happened, users will be notified that power is auto off via Email.


5. Click the **Add** button to set up the responding actions of this event. Follow the steps in the previous section.
6. Click the **Save** button.

 Email and Push Notification are the only two actions to the event **Daily system report, Unable to access FTP, Backup unfinished, Power-on notification** and **Auto power-off notification (overheat)**. In addition to selecting a contact, remember to insert the time of sending daily system report.

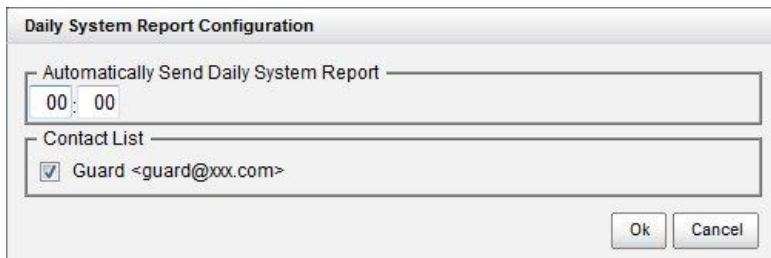


2.2.6 Push Notification

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / Event & Action Management**.
3. Click the **Event & Action** tab.
4. Add **Push Notification** as a responding action for an event. Configure the rearm interval and assign user(s).

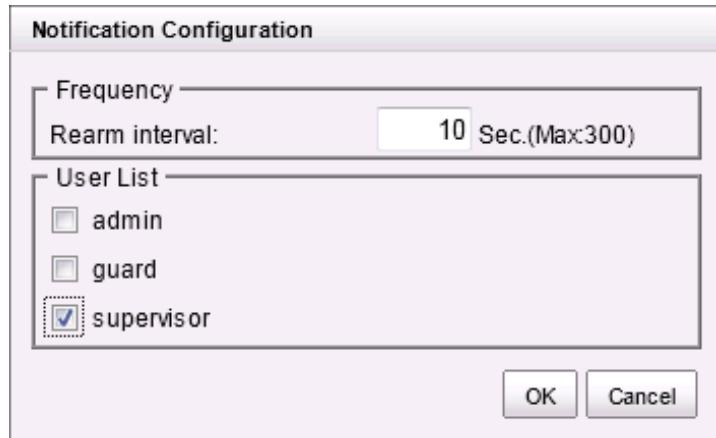


- **Frequency – Rearm interval:** The minimum interval of notifications as the event occurs. (default: 10, max: 300) For example, you set up push notification as the responding action for motion detection. When motion detected, it may trigger several alarms. In this case, you may not want to receive several push notifications frequently, then you can define the suitable rearm interval.
- **User List:** All user accounts in this unit.


5. Click the **Save** button.

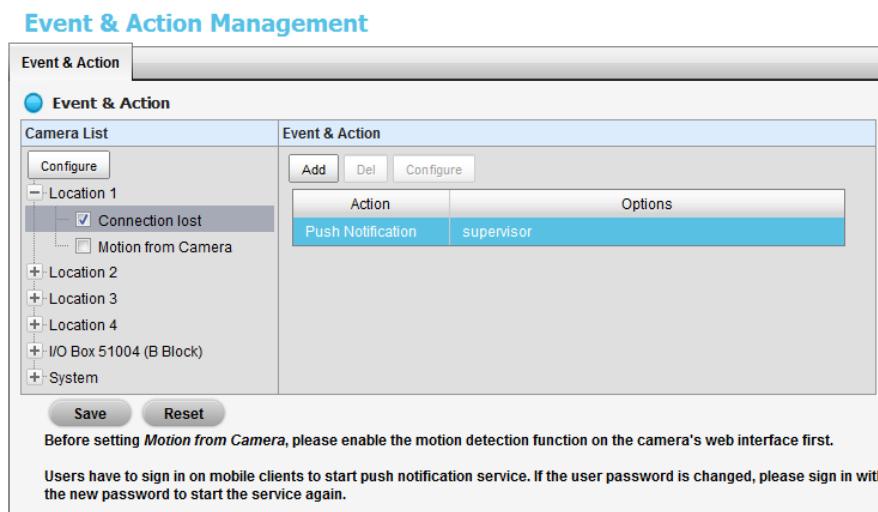

6. Sign in the unit on the mobile client with the user account assigned with push notification service.

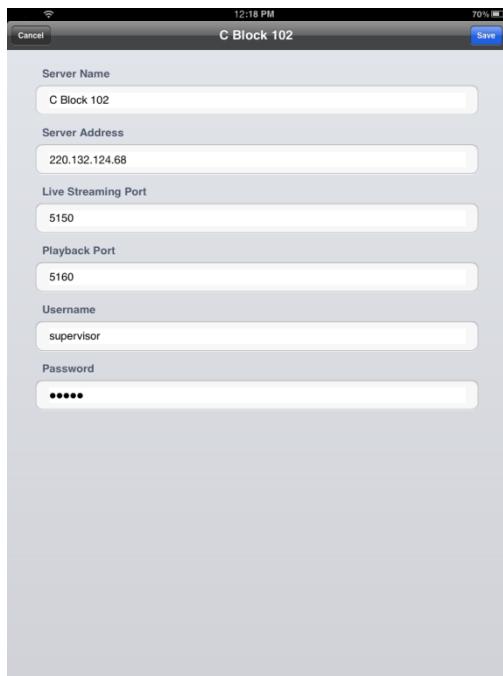

- When an event occurs, the user will get the push notification instantly. The user can click the "View" icon to watch the recording videos.

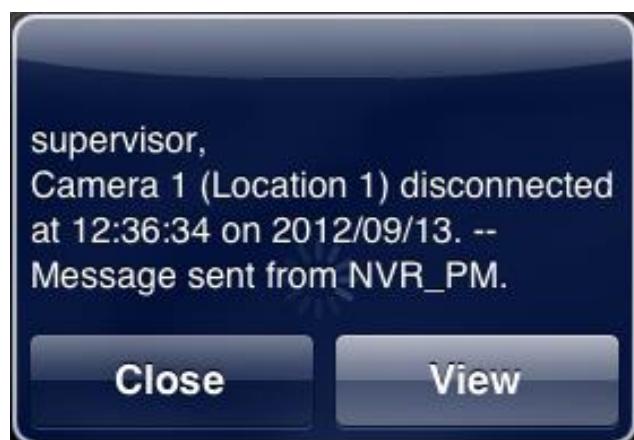

If the user password is changed, please sign in with the new password to start the service again.



If users don't want to **receive** notifications anymore, users can turn off this feature on the mobile client. There is one possibility of de-registering failed, that is, users have ever logged in to the mobile client by typing both LAN IP and WAN IP of the NVR, but only do de-registering on one side.



If users don't want to **send** notifications to certain user account, users can de-select the user account in Event & Action Management page.



User account won't be exported as saving configuration, which implies the user list of push notification won't be saved as well.

2.2.7 SMTP Server Setup

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / Email**.
3. Click the **SMTP Server** tab.

The screenshot shows the 'Email' configuration page. The 'SMTP Server' tab is selected. The 'SMTP Server' section contains the following fields:

Server Address	<input type="text"/>	Port	465	<input checked="" type="checkbox"/> use SSL
Sender	<input type="text"/>			
Subject	NVR Event			
Body	Some issue occurred! Please check the NVR server in B Block.			
SMTP Authentication	<input checked="" type="checkbox"/>			
Username	<input type="text"/>	Password	<input type="text"/>	

At the bottom are 'Save' and 'Reset' buttons, and a 'Send Test Mail' button.

- **Server Address:** SMTP (Simple Mail Transport Protocol) server IP address.
 - **Port:** SMTP port.
 - **Sender:** Sender information.
 - **Subject:** The subject of the mail.
 - **Body:** Email content.
 - **SMTP Authentication:** Before sending out an Email, enter the username and password for SMTP authentication.
 - **Username**
 - **Password**
4. Click the **Send Test Mail** button and the system will send a test mail to the sender. Check it after testing.
 5. Click the **Save** button.

2.2.8 Add Event Contacts

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / Email**.
3. Click the **Contacts** tab.

The screenshot shows a web-based configuration interface for an email server. At the top, there are two tabs: 'SMTP Server' and 'Contacts'. The 'Contacts' tab is currently active, indicated by a blue border. Below the tabs, there's a section titled 'Contact' with two input fields: 'Name' and 'Email'. Underneath these fields is a 'Add Contact' button. To the right, there's a table with three columns: 'Name', 'Email', and 'Delete'. A single row is visible in the table. At the bottom of the form are two buttons: 'Save' and 'Reset'.

- **Add Contact:** Add this new contact into the contact list. (Maximum: 40 contacts)
 - **Reset:** Return to the latest saved settings of the contact list.
 - **Save:** Save this time modification of the contact list.
4. Insert the name of a new contact.
 5. Insert the Email address of this new contact.
 6. Click the **Add Contact** button.
 7. Click the **Save** button to save this modification of the contact list.


2.2.9 Set up FTP Server

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Recording & Event / FTP Settings**.
3. Set up the FTP server and create a folder for backup files. The folder format is "FolderName", "FolderName/SubFolderName", and so on.

For example: NVR

D

4. After setting up all the information, click the **Test FTP** button and the system will create a folder to FTP. Check it after testing. In this case, the route of the tested file will be: **ftp://www.ftp.com/NVR/NVR_ComputerName**

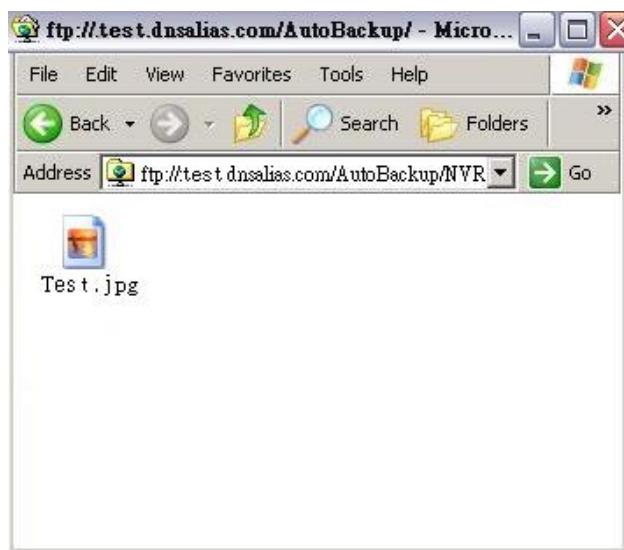

5. Click the **Save** button.

 Make sure the FTP account with privileges of administrator who is able to upload, rewrite, delete files, and create new folder. Besides, make sure the FTP server has enough space for auto backup.


 To avoid the failure of auto backup, please check the normality of FTP server regularly (e.g., enough space for video, system conditions.)

2.3 RAID & File Settings


2.3.1 Create a RAID Volume

In this system, the term RAID volume refers to one or more disk drives working together as a RAID logical drive. You must create a RAID volume before starting to record.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **Create** tab.

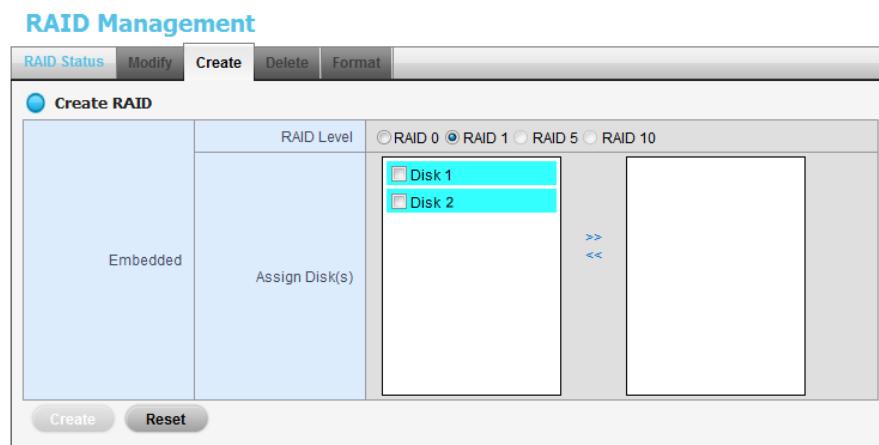

4. Choose the RAID level you prefer for your disk array.
5. Check boxes of disks and click the **>>** button to assign disk drives for this volume.
6. Click the **Create** button.
7. A confirmation dialog pops up. Check the **Yes, I want to create volume with those disk(s)** box, and click the **Yes, create it** button.

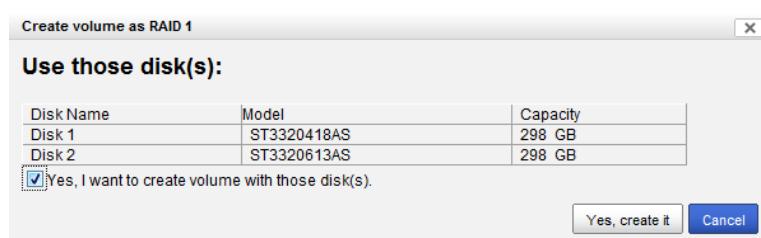

8. Creating RAID volume takes a while, depending on the size of disks and the RAID level you choose. You can start recording during RAID creation.

RAID Management

RAID Status	Modify	Create	Delete	Format
RAID Status				
List		Status		
<ul style="list-style-type: none"> - Volumes - VOLUME1 <ul style="list-style-type: none"> Disk 1 Disk 2 		RAID Name: VOLUME1 RAID Level: RAID1 RAID Status: Functional Total Capacity: 298.09 GB (305244 MB) Free Capacity: 290.03 GB (297000 MB) Used Capacity: 3.37 GB (3452 MB) Usage: <div style="width: 2%; background-color: red; height: 10px; display: inline-block;"></div> 2% Update Time: 2011年9月2日上午 01:43:14 Total Devices: 2 Active Devices: 2 Failed Devices: 0 Spare Devices: 0 Format Progress: <div style="width: 0%; background-color: gray; height: 10px; display: inline-block;"></div> 0% Recovery Progress: <div style="width: 0%; background-color: gray; height: 10px; display: inline-block;"></div> 0%		



The RAID Volume will be functional on another unit if **all** disks of this volume are moved to the unit.



After setting RAID level, you are not allowed to change neither the RAID level nor the number of disks containing in this volume.



Separate embedded disk(s) and external disk (DAS) from two groups, which implies there is no way to create a single volume with both embedded and external disks inside.

In 8bay RAID model, the embedded disk(s) are separated to two groups. Each group management its own RAID volume.



To reduce the possibility of having problems to access public folder via My Network Places, before creating new disk volume or modifying volume, please delete the invalid volume if any.



If you choose Express Mode when using the **Installation Wizard**, the disk(s) will be set to RAID 0 automatically unless the number of disks is not enough for this RAID level.



To make sure all the information of hard disk and RAID volume are correct, 8bay RAID model are not allowed to query status, create, modify, delete, format RAID volume when the front panel is opened.



Not support disk hot swap on external storage currently. Please reboot the unit after

the installation.

2.3.2 View RAID Volume Status

RAID status refers to the disk drives on your unit and how they are arranged into a RAID volume.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **RAID Status** tab to view the status of your RAID Volume.

RAID Management

RAID Status		Modify	Create	Delete	Format																												
RAID Status																																	
List	Status																																
<ul style="list-style-type: none">- Volumes<ul style="list-style-type: none">- VOLUME2<ul style="list-style-type: none">- Disk 2- VOLUME1<ul style="list-style-type: none">- Disk 1	<table border="1"><tr><td>RAID Name</td><td>VOLUME2</td></tr><tr><td>RAID Level</td><td>RAID0</td></tr><tr><td>RAID Status</td><td>Functional</td></tr><tr><td>Total Capacity</td><td>298.08 GB (305244 MB)</td></tr><tr><td>Free Capacity</td><td>289.87 GB (296832 MB)</td></tr><tr><td>Used Capacity</td><td>3.53 GB (3620 MB)</td></tr><tr><td>Usage</td><td><div style="width: 2%;"></div> 2%</td></tr><tr><td>Update Time</td><td>2011年9月2日下午 06:34:32</td></tr><tr><td>Total Devices</td><td>1</td></tr><tr><td>Active Devices</td><td>1</td></tr><tr><td>Failed Devices</td><td>0</td></tr><tr><td>Spare Devices</td><td>0</td></tr><tr><td>Format Progress</td><td></td></tr><tr><td>Recovery Progress</td><td></td></tr></table>					RAID Name	VOLUME2	RAID Level	RAID0	RAID Status	Functional	Total Capacity	298.08 GB (305244 MB)	Free Capacity	289.87 GB (296832 MB)	Used Capacity	3.53 GB (3620 MB)	Usage	<div style="width: 2%;"></div> 2%	Update Time	2011年9月2日下午 06:34:32	Total Devices	1	Active Devices	1	Failed Devices	0	Spare Devices	0	Format Progress		Recovery Progress	
RAID Name	VOLUME2																																
RAID Level	RAID0																																
RAID Status	Functional																																
Total Capacity	298.08 GB (305244 MB)																																
Free Capacity	289.87 GB (296832 MB)																																
Used Capacity	3.53 GB (3620 MB)																																
Usage	<div style="width: 2%;"></div> 2%																																
Update Time	2011年9月2日下午 06:34:32																																
Total Devices	1																																
Active Devices	1																																
Failed Devices	0																																
Spare Devices	0																																
Format Progress																																	
Recovery Progress																																	

- **RAID Name:** Name of your RAID, automatically assigned when it was created.
- **RAID Level:** RAID 0, 1, 5, or 10, specified when it was created.
- **RAID Status:** **Functional** is normal. **Critical** means there are some problems on RAID volume, but the recording status is normal. **Offline** means that no volume is found, so recording is stopped and you cannot access your data either. **File system error** means that RAID volume is existed but unmounted, so recording is stopped and you cannot access your data either.
- **Capacity:** Total, free, used data capacity of the RAID volume.
- **Update Time:** The time of volume created/updated.
- **Devices:** Total number of disks and the number of active, failed, spare disks.
- **Format Progress:** The status of RAID format
- **Recovery Progress:** The status of RAID recovery



To make sure all the information of hard disk and RAID volume are correct, 8bay RAID model are not allowed to query status, create, modify, delete, format RAID volume when the front panel is opened.

2.3.3 View Disk Drive Information

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **RAID Status** tab.
4. Click on a disk directly to view the information.

The screenshot shows the RAID Management interface with the 'RAID Status' tab selected. On the left, there's a tree view under 'List' showing 'Volumes' and 'VOLUME1'. Under 'VOLUME1', 'Disk 1' is selected. The main area, titled 'Status', contains the following details:

Vendor	ATA
Model	ST2000NM0011
Capacity	1863 GB
Firmware Version	SN02
Serial No.	Z1P0ZJ6N
RAID Status	Active
Drive Health (SMART)	Warning
Temperature	36 °C
Previous Test Time	-
SMART Status Check	<input checked="" type="radio"/> Short Test <input type="radio"/> Extended Test

At the bottom right is a 'Test' button.


- **Vendor**: Delivers the manufacturer of the disk.
- **Model**: Delivers the model number of the disk.
- **Capacity**: Total, free, used data capacity of the disk.
- **Firmware**: Delivers the firmware version of the disk.
- **Serial No.**: Delivers the serial number of the disk.
- **RAID Status**: Delivers the status of the RAID that the disk belongs to.
- **Drive Health (SMART)**: Delivers the status of drive health by SMART self-test. The results will show as follows. Click on the icon to view the detail SMART test report.

Icon	Status	Details
	Good	The disk is healthy and able to work normally.
	Warning	The disk is damaged. Recommend you to change the disk as soon as possible.
	Abnormal	The disk is damaged seriously and it may cause the system errors. Strongly recommend you to stop recording and

		change the disk immediately.
--	--	------------------------------

- **Temperature:** Delivers the temperature of the disk.
- **Previous Test Time:** Delivers the previous SMART self-test time.
- **SMART Status Check:** Run SMART test to update the Drive Health result. The test divides into 2 modes, **Short Test** and **Extended Test**. Both of the test modes may affect the recording performance. You may need to stop recording to run the test.

5. Enable and click on **Test** button to run SMART test.

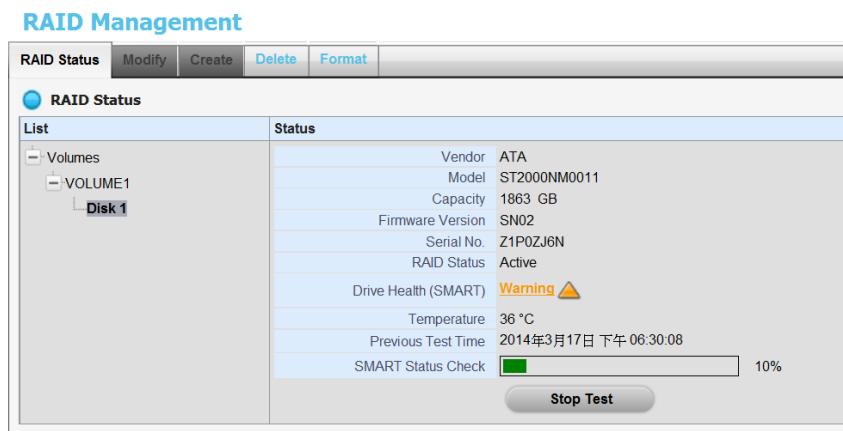

 SMART test may affect the recording performance. You may need to stop recording to run the test.

 Click on **Stop Test** to terminate SMART test.

6. Click on **Drive Health (SMART)** to view the details.

SMART Details						
ID	Attribute	Status	Raw	Value	Threshold	Worst
1	Raw Read Error Rate	Good	d536cbc	83	44	63
3	Spin-Up Time	Good	0	92	0	90
4	Start / Stop Count	Good	82	100	20	100
5	Reallocated Sector Count	Warning	1	100	36	100
7	Seek Error Rate	Good	280e6219ba	68	30	60
9	Power-On Time	Good	13f6	95	0	95
10	Spin-Up Retry Count	Good	0	100	97	100
12	Power Cycle Count	Good	79	100	20	100
184	End to End Error	Good	0	100	99	100
187	Reported Uncorrectable	Good	0	100	0	100
188	Command Timeout	Good	0	100	0	100
189	High Fly Writes	Good	0	100	0	100
190	Airflow Temperature	Good	22	66	45	54
191	G-Sense Error Rate	Good	37	100	0	100
192	Head Retract Cycle Count	Good	5d	100	0	100
193	Load / Unload Cycle	Good	612	100	0	100
194	Temperature (Celsius)	Good	22	34	0	46
195	Hardware ECC Recovered	Good	d536cbc	119	0	99
197	Current Pending Sector Count	Good	0	100	0	100
198	Offline Uncorrectable	Good	0	100	0	100
199	UDMA CRC Error Count	Good	0	200	0	200

7. Click on **OK** button to exit.

2.3.4 Modify RAID Volume

This function is designed for replacing a broken hard drive with a new one, instead of modifying RAID level.

In the condition of critical RAID status, it's a warning to show that one of disks of this RAID volume may be damaged. Even though it's no impact on the recording function, you'd better to replace a new disk to make sure the volume with data protection mechanism.



This function is not applied to RAID 0, since there is no data protection mechanism by its nature.



In case of any unexpected damage, we recommend users to unplug running HDD by this method, which can be viewed as security hard drive remove.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **Modify** tab.

RAID Management


RAID Status	Modify	Create	Delete	Format																															
RAID List <table border="1"> <thead> <tr> <th>Volume</th> <th>RAID Level</th> <th>RAID Capacity</th> <th>RAID Status</th> <th>Details</th> </tr> </thead> <tbody> <tr> <td>VOLUME1</td> <td>RAID1</td> <td>298.09 GB</td> <td>Critical</td> <td>Details</td> </tr> </tbody> </table>						Volume	RAID Level	RAID Capacity	RAID Status	Details	VOLUME1	RAID1	298.09 GB	Critical	Details																				
Volume	RAID Level	RAID Capacity	RAID Status	Details																															
VOLUME1	RAID1	298.09 GB	Critical	Details																															
Free Disk List <table border="1"> <thead> <tr> <th>Disk Name</th> <th>Model</th> <th>Capacity</th> <th>Details</th> </tr> </thead> <tbody> <tr> <td>Disk 2</td> <td>ST3320613AS</td> <td>298 GB</td> <td>Details</td> </tr> </tbody> </table>						Disk Name	Model	Capacity	Details	Disk 2	ST3320613AS	298 GB	Details																						
Disk Name	Model	Capacity	Details																																
Disk 2	ST3320613AS	298 GB	Details																																
Modify Volume <table border="1"> <tr> <td>RAID Name</td> <td colspan="5"></td> </tr> <tr> <td>RAID Level</td> <td colspan="5"></td> </tr> <tr> <td>Capacity</td> <td colspan="5"></td> </tr> <tr> <td>RAID Status</td> <td colspan="5"></td> </tr> <tr> <td>Actions</td> <td colspan="5"> <input type="radio"/> Remove Disk <input checked="" type="radio"/> Add Disk </td> </tr> </table> <p> <input type="button" value="Modify"/> <input type="button" value="Reset"/> </p>						RAID Name						RAID Level						Capacity						RAID Status						Actions	<input type="radio"/> Remove Disk <input checked="" type="radio"/> Add Disk				
RAID Name																																			
RAID Level																																			
Capacity																																			
RAID Status																																			
Actions	<input type="radio"/> Remove Disk <input checked="" type="radio"/> Add Disk																																		

- Click on the volume you want to modify. The information of this volume will be displayed under the **Modify Volume** section.

RAID Management

RAID Status	Modify	Create	Delete	Format																															
RAID List <table border="1"> <thead> <tr> <th>Volume</th> <th>RAID Level</th> <th>RAID Capacity</th> <th>RAID Status</th> <th>Details</th> </tr> </thead> <tbody> <tr> <td>VOLUME1</td> <td>RAID1</td> <td>298.09 GB</td> <td>Critical</td> <td>Details</td> </tr> </tbody> </table>						Volume	RAID Level	RAID Capacity	RAID Status	Details	VOLUME1	RAID1	298.09 GB	Critical	Details																				
Volume	RAID Level	RAID Capacity	RAID Status	Details																															
VOLUME1	RAID1	298.09 GB	Critical	Details																															
Free Disk List <table border="1"> <thead> <tr> <th>Disk Name</th> <th>Model</th> <th>Capacity</th> <th>Details</th> </tr> </thead> <tbody> <tr> <td>Disk 2</td> <td>ST3320613AS</td> <td>298 GB</td> <td>Details</td> </tr> </tbody> </table>						Disk Name	Model	Capacity	Details	Disk 2	ST3320613AS	298 GB	Details																						
Disk Name	Model	Capacity	Details																																
Disk 2	ST3320613AS	298 GB	Details																																
Modify Volume <table border="1"> <tr> <td>RAID Name</td> <td colspan="5">VOLUME1</td> </tr> <tr> <td>RAID Level</td> <td colspan="5">RAID1</td> </tr> <tr> <td>Capacity</td> <td colspan="5">298.09 GB</td> </tr> <tr> <td>RAID Status</td> <td colspan="5">Critical</td> </tr> <tr> <td>Actions</td> <td colspan="5"> <input type="radio"/> Remove Disk <input checked="" type="radio"/> Add Disk Disk 2: 298 GB ST3320613AS </td> </tr> </table> <p> <input type="button" value="Modify"/> <input type="button" value="Reset"/> </p>						RAID Name	VOLUME1					RAID Level	RAID1					Capacity	298.09 GB					RAID Status	Critical					Actions	<input type="radio"/> Remove Disk <input checked="" type="radio"/> Add Disk Disk 2: 298 GB ST3320613AS				
RAID Name	VOLUME1																																		
RAID Level	RAID1																																		
Capacity	298.09 GB																																		
RAID Status	Critical																																		
Actions	<input type="radio"/> Remove Disk <input checked="" type="radio"/> Add Disk Disk 2: 298 GB ST3320613AS																																		

- After removing the damaged disk. Add a free disk to replace the damaged, and click the **Modify** button.
- A confirmation dialog pops up. Check the **Yes, I want to modify this volume** box, and click the **Yes, modify it** button.

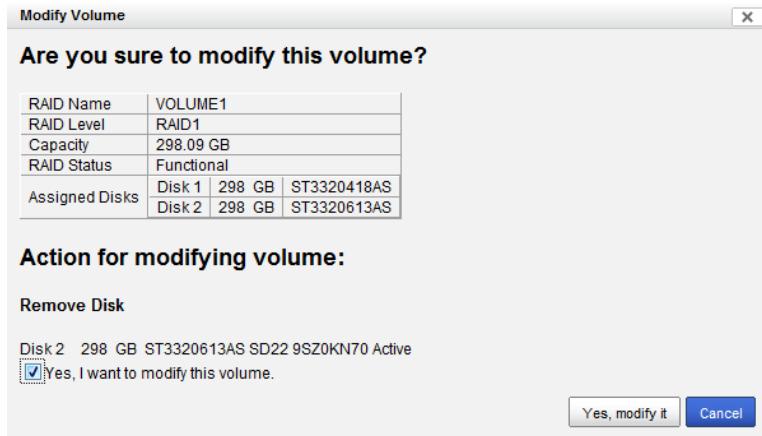

7. Modifying RAID volume takes a while, depending on the size of disks you choose. Recording won't be stopped during the modification, and the data of this RAID volume is fully accessible.

RAID Management

RAID Status	Modify	Create	Delete	Format
RAID Status				
List	Status			
- Volumes - VOLUME1 Disk 1 Disk 2	RAID Name: VOLUME1 RAID Level: RAID1 RAID Status: Functional Total Capacity: 298.09 GB (305244 MB) Free Capacity: 289.87 GB (296832 MB) Used Capacity: 3.53 GB (3620 MB) Usage: 2% Update Time: 2011年9月2日下午 06:26:54 Total Devices: 2 Active Devices: 1 Failed Devices: 0 Spare Devices: 1 Format Progress: Recovery Progress: 8%			




To make sure all the information of hard disk and RAID volume are correct, 8bay RAID model are not allowed to query status, create, modify, delete, format RAID volume when the front panel is opened.

2.3.5 Delete a RAID Volume

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **Delete** tab.

The screenshot shows the RAID Management software's main interface. At the top, there are tabs for RAID Status, Modify, Create, Delete, Format, and another unlabeled tab. The Delete tab is currently selected. Below the tabs is a table titled "RAID List" with columns: Volume, RAID Level, RAID Capacity, RAID Status, and Details. Two rows are present: VOLUME2 (RAID0, 298.08 GB, Functional) and VOLUME1 (RAID0, 298.08 GB, Functional). At the bottom of the list area are two buttons: "Delete" and "Reset".

4. Click the option button beside the RAID Volume you want to delete.
5. Click the **Delete** button.
6. A confirmation dialog pops up. Check the **Yes, I want to delete this volume** box, and click the **Yes, delete it** button.

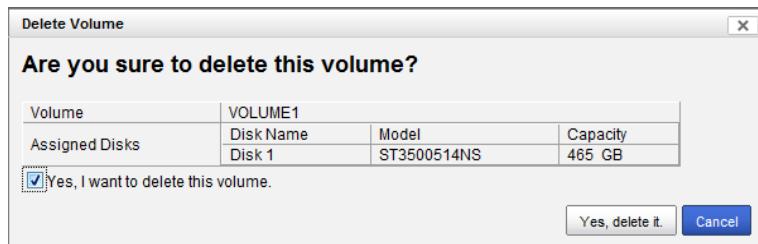

7. System will restart automatically after RAID volume is deleted


 When you delete a RAID Volume, all the folders in the RAID volume and all the data saved in the folders will be deleted. Backup any important data before deleting a RAID Volume.

 To make sure all the information of hard disk and RAID volume are correct, 8bay RAID model are not allowed to query status, create, modify, delete, format RAID volume when the front panel is opened.


2.3.6 Format

Neither pressing reset button nor loading default setting, the data of RAID volume won't be deleted, which implies that format is the only way to clean the RAID information from disks.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **Format** tab.

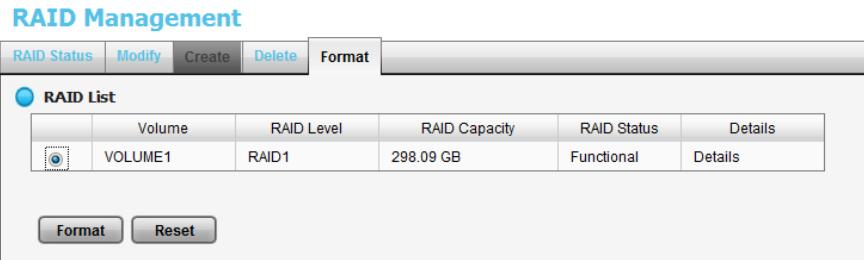

4. Click the option button beside the RAID Volume you want to format.
5. Click the **Format** button.
6. A confirmation dialog pops up. Check the **Yes, I want to format this volume** box, and click the **Yes, format it** button.

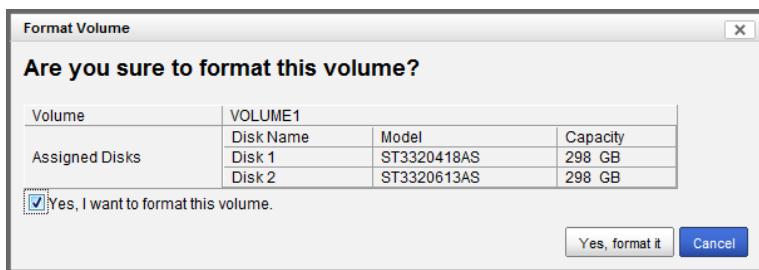


7. System will restart automatically after volume format is complete.



To make sure all the information of hard disk and RAID volume are correct, 8bay RAID model are not allowed to query status, create, modify, delete, format RAID volume when the front panel is opened.

2.3.7 Modify the FTP Protocol Settings

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / Protocol Control**.
3. Click the **FTP Sharing** tab.
4. Check and enter the settings of this unit.
5. Click the **OK** button.

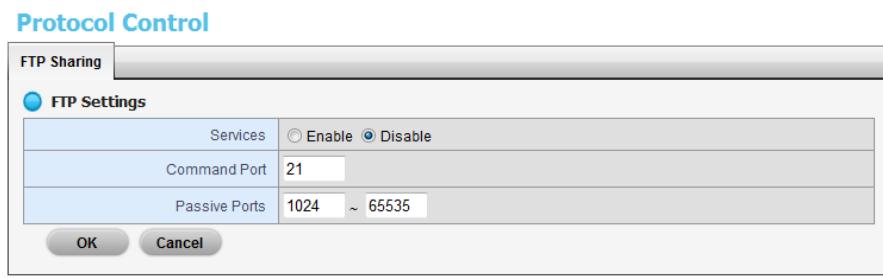


- **Services**: Whether users can access this unit through FTP or not.
- **Command Port**: The port for commands between a server and a client.
- **Passive Ports**: The data transmission port of passive mode.

2.4 Auto Backup

This feature enables you to automatically backup the recorded video of the previous date to FTP site. There are two steps to enable the function, one is **Set up Backup Schedule**, another is **Set up Backup Server**.

2.4.1 Set up Backup Schedule

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **RAID & File System / Auto Backup Management**.
3. Click the **Backup Schedule** tab.
4. Set up backup schedule, select the backup channels, and check the **Enable** option to enable **Auto Backup**.

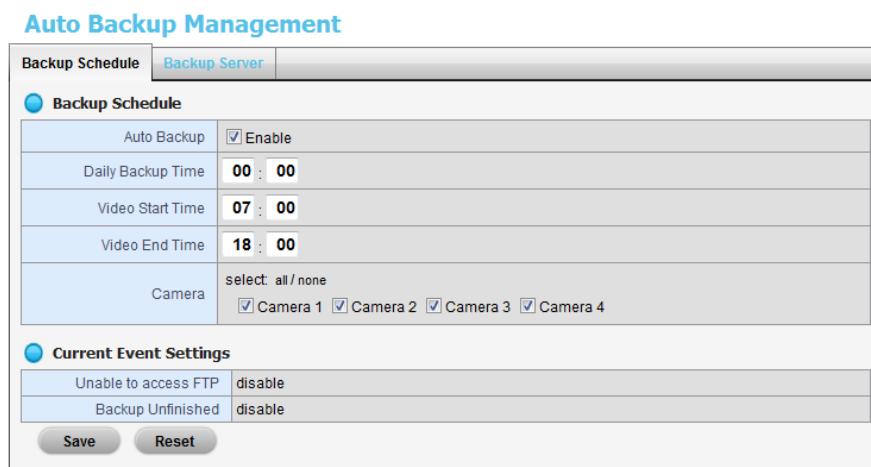

- **Auto Backup**: Check the **Enable** option to enable this function.
- **Daily Backup Time**: The daily scheduled time to start backup process.

- **Video Start Time**: The start time of recorded video of the previous date.
- **Video End Time**: The end time of recorded video of the previous date.
- **Camera**: Select the channel(s) to backup.

5. **Current Event Settings** shows the condition of the events of auto backup – enable or disable. Follow the steps of **System Events and Responding Actions Setup** to configure the event & action.



The system backups recorded video files one by one. If the connection between the unit and FTP server is normal, but some problems of FTP causes the system unable to write files on FTP, the system would try each file three times before starting to backup the next file. If the connection is lost, the system would wait for the connection, so no file would be skipped.



Please make sure the network is stable and the bandwidth is more than 2 Mbps for backup videos.

2.5 Network Setup

2.5.1 View Network Status

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Network Setup / Network Setup**.
3. Click the **Information** tab to view the unit's network information.

Network Setup

Information	Setup	DDNS Setup	UPnP Port Forwarding	
Common Information				
Server Name NVS-4				
Ethernet Adapter 1 Information				
IP Address	192.168.4.137			
Subnet Mask	255.255.252.0			
Default Gateway IP Address	192.168.4.1			
Primary DNS	192.168.4.1			
Secondary DNS				
Ethernet Adapter 2 Information				
IP Address				
Subnet Mask				
Default Gateway IP Address				
Primary DNS				
Secondary DNS				
Built-in DHCP Information				
Setting/Status	Always disable (Disable)			
IP Address	192.168.4.137			

2.5.2 Network Settings

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Network Setup / Network Setup**.
3. Click the **Setup** tab to set up the network settings of your unit.

Network Setup

Information	Setup	DDNS Setup	UPnP Port Forwarding																																													
<p>Common Setting</p> <table border="1"> <tr> <td>Server Name</td> <td>NVS-4</td> </tr> <tr> <td>Internet Interface (WAN)</td> <td>LAN 1</td> </tr> </table> <p>LAN 1 Setting</p> <table border="1"> <tr> <td>Internet Protocol</td> <td><input checked="" type="radio"/> Obtain an IP address automatically <input type="radio"/> Specify an IP address</td> </tr> <tr> <td>IP Address</td> <td>192.168.4.65</td> </tr> <tr> <td>Subnet Mask</td> <td>255.255.252.0</td> </tr> <tr> <td>Default Gateway IP Address</td> <td>192.168.4.1</td> </tr> <tr> <td>Primary DNS</td> <td></td> </tr> <tr> <td>Secondary DNS</td> <td></td> </tr> </table> <p>LAN 2 Setting</p> <table border="1"> <tr> <td>Internet Protocol</td> <td><input checked="" type="radio"/> Obtain an IP address automatically <input type="radio"/> Specify an IP address</td> </tr> <tr> <td>IP Address</td> <td>192.168.2.100</td> </tr> <tr> <td>Subnet Mask</td> <td>255.255.255.0</td> </tr> <tr> <td>Default Gateway IP Address</td> <td>192.168.2.1</td> </tr> <tr> <td>Primary DNS</td> <td>192.168.2.1</td> </tr> <tr> <td>Secondary DNS</td> <td></td> </tr> </table> <p>Built-in DHCP Setting</p> <table border="1"> <tr> <td>Setting</td> <td><input type="radio"/> Smart enable <input checked="" type="radio"/> Always disable</td> </tr> <tr> <td>IP Address</td> <td></td> </tr> <tr> <td>Subnet Mask</td> <td></td> </tr> <tr> <td>Default Gateway IP Address</td> <td></td> </tr> <tr> <td>Primary DNS</td> <td></td> </tr> <tr> <td>Secondary DNS</td> <td></td> </tr> <tr> <td>Starting IP Address</td> <td></td> </tr> <tr> <td>Ending IP Address</td> <td></td> </tr> </table> <p>Buttons: OK, Cancel</p>					Server Name	NVS-4	Internet Interface (WAN)	LAN 1	Internet Protocol	<input checked="" type="radio"/> Obtain an IP address automatically <input type="radio"/> Specify an IP address	IP Address	192.168.4.65	Subnet Mask	255.255.252.0	Default Gateway IP Address	192.168.4.1	Primary DNS		Secondary DNS		Internet Protocol	<input checked="" type="radio"/> Obtain an IP address automatically <input type="radio"/> Specify an IP address	IP Address	192.168.2.100	Subnet Mask	255.255.255.0	Default Gateway IP Address	192.168.2.1	Primary DNS	192.168.2.1	Secondary DNS		Setting	<input type="radio"/> Smart enable <input checked="" type="radio"/> Always disable	IP Address		Subnet Mask		Default Gateway IP Address		Primary DNS		Secondary DNS		Starting IP Address		Ending IP Address	
Server Name	NVS-4																																															
Internet Interface (WAN)	LAN 1																																															
Internet Protocol	<input checked="" type="radio"/> Obtain an IP address automatically <input type="radio"/> Specify an IP address																																															
IP Address	192.168.4.65																																															
Subnet Mask	255.255.252.0																																															
Default Gateway IP Address	192.168.4.1																																															
Primary DNS																																																
Secondary DNS																																																
Internet Protocol	<input checked="" type="radio"/> Obtain an IP address automatically <input type="radio"/> Specify an IP address																																															
IP Address	192.168.2.100																																															
Subnet Mask	255.255.255.0																																															
Default Gateway IP Address	192.168.2.1																																															
Primary DNS	192.168.2.1																																															
Secondary DNS																																																
Setting	<input type="radio"/> Smart enable <input checked="" type="radio"/> Always disable																																															
IP Address																																																
Subnet Mask																																																
Default Gateway IP Address																																																
Primary DNS																																																
Secondary DNS																																																
Starting IP Address																																																
Ending IP Address																																																

- **Server Name:** Name your unit.



Because of the internal data modifications required, it takes a few seconds to change the name of your unit. Log in again after configuration activated.

-
- **Internet Interface (WAN):** The selection is for choosing which LAN is connected to the internet, which implies that there is no longer to fix the Internet access to LAN 1 for sending mails, activating license online, receiving auto upgrade notification, etc.
- **Internet Protocol:** Choose to obtain an IP address from external DHCP server automatically, or configure the IP address manually.
- **IP Address:** IP address of this unit.
- **Subnet Mask:** Subnet mask address.
- **Default Gateway IP Address:** Gateway IP address.
- **Primary DNS:** Primary DNS (Domain Name System) address.
- **Secondary DNS:** Secondary DNS address.

	The unit specifies two Giga LANs. We recommend using them under the scenario of two subnets, one is for cameras/devices, and the other is for remote access. If you deploy two LANs on the same subnet, it's likely to make parts of camera disconnected as either one of LAN is disconnected.
---	--

	If all cameras are disconnected, please check if the network settings are - LAN 1: static IP 192.168.1.100 (default) / not connected - LAN 2: DHCP / connected to switch, which subnet is 192.168.1.X or static IP 192.168.1.X / connected to switch, which subnet is 192.168.1.X The reason of disconnection is that system transmits package via LAN 1 in such condition. The solution is changing the LAN 1 settings to DHCP or connecting network cable on LAN 1.
---	--

4. The unit possesses built-in DHCP service, which enables the system to dynamically assign IP addresses to the connected camera clients within the same subnet.
 - **Setting:** Two options of built-in DHCP service, smart enable and always disable. When you have router in your network, we strongly recommend choosing “always disable” to avoid any IP conflicts. If you are not sure if there is any router in your network, please choose “smart enable”, which detects the network environment then decide to enable or disable the service.
 - **Starting IP Address:** The IP address for the built-in DHCP to start assigning from.
 - **Ending IP Address:** The end of the IP address that the built-in DHCP assigns.
5. If you are using findNVR service. You can skip the DDNS setup. For more information, please refer to [findNVR](#).
6. Click the **DDNS Setup** tab to enable Dynamic Domain Name Server function, allowing you to connect unit with dynamic IP address.

Network Setup

Information	Setup	DDNS Setup	UPnP Port Forwarding												
Dynamic DNS Setting <table border="1"> <tr> <td>DDNS</td> <td><input type="checkbox"/> Enable</td> </tr> <tr> <td>Provider</td> <td>DynDns</td> </tr> <tr> <td>User name</td> <td>[]</td> </tr> <tr> <td>Password</td> <td>[]</td> </tr> <tr> <td>Host name</td> <td>[]</td> </tr> <tr> <td>Update Period</td> <td>16 minutes</td> </tr> </table>				DDNS	<input type="checkbox"/> Enable	Provider	DynDns	User name	[]	Password	[]	Host name	[]	Update Period	16 minutes
DDNS	<input type="checkbox"/> Enable														
Provider	DynDns														
User name	[]														
Password	[]														
Host name	[]														
Update Period	16 minutes														
<input type="button" value="Save"/> <input type="button" value="Reset"/>															

2.5.3 Auto Port-Forwarding

If you are using findNVR service. You can skip this section. For more information, please refer to [findNVR](#).

This function is designed for saving time in port configuration on router if users want to access the unit (in LAN) from WAN. Once enabling UPnP Service on router, users can do port-forwarding for setting page (default: 80), liveview (default: 5150), playback (default: 5160), and CMS (default: 5170) automatically.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Network Setup / Network Setup**.
3. Click the **UPnP Port-Forwarding** tab.
4. Click the **Search** button, and the searched routers will be listed.

Network Setup

Information	Setup	DDNS Setup	UPnP Port Forwarding										
UPnP Router Search <table border="1"> <tr> <td><input type="button" value="Search"/></td> <td>Search complete</td> </tr> <tr> <td>No.</td> <td>Device Name</td> <td>IP Address</td> <td></td> </tr> <tr> <td>1</td> <td>D-Link DIR-300</td> <td>192.168.8.1</td> <td><input type="button" value="+"/></td> </tr> </table>				<input type="button" value="Search"/>	Search complete	No.	Device Name	IP Address		1	D-Link DIR-300	192.168.8.1	<input type="button" value="+"/>
<input type="button" value="Search"/>	Search complete												
No.	Device Name	IP Address											
1	D-Link DIR-300	192.168.8.1	<input type="button" value="+"/>										
UPnP Port Forwarding List <table border="1"> <tr> <td>Physical Port</td> <td>Virtual IP</td> <td>Virtual Port</td> </tr> </table>				Physical Port	Virtual IP	Virtual Port							
Physical Port	Virtual IP	Virtual Port											

5. Select the searched router, and all UPnP ports configured on this router will show under the **UPnP Port Forwarding List**.

Network Setup

The screenshot shows the 'UPnP Port Forwarding' tab selected in the top navigation bar. The 'UPnP Router Search' section displays two routers found: 'D-Link DIR-300' and 'D-Link DAP-1360'. The 'UPnP Port Forwarding List' section shows a table of port mappings. A red box highlights the last four rows of the table, which correspond to the ports listed in the note below.

No.	Device Name	IP Address	LAN
1	D-Link DIR-300	192.168.8.1	LAN1 (192.168.8.82)
2	D-Link DAP-1360		LAN1 (192.168.8.82)

Physical Port	Virtual IP	Virtual Port
18403	192.168.9.55	80
554	192.168.9.55	554
80	192.168.9.159	80
26674	192.168.8.226	26673
1938	192.168.8.50	5868
33561	192.168.8.198	33561
33561	192.168.8.198	33561
7800	192.168.8.238	6663
65133	192.168.8.222	65133
14860	192.168.8.205	14860
14860	192.168.8.205	14860
26673	192.168.8.226	26673
26673	192.168.8.226	26673

- After selecting one of searched routers, click the icon to set up port-forwarding to this router automatically. You will find ports of setting, liveview, playback and CMS are listed.

Network Setup

The screenshot shows the 'UPnP Port Forwarding' tab selected in the top navigation bar. The 'UPnP Router Search' section displays one router found: 'D-Link DAP-1360'. The 'UPnP Port Forwarding List' section shows a table of port mappings. A red box highlights the last four rows of the table, which correspond to the ports listed in the note below.

No.	Device Name	IP Address	LAN
1	D-Link DAP-1360		LAN1 (192.168.8.82)

Physical Port	Virtual IP	Virtual Port
18910	192.168.8.238	18910
18910	192.168.8.238	18910
14861	192.168.1.190	14860
554	192.168.9.55	554
18403	192.168.9.55	80
33561	192.168.8.198	33561
33561	192.168.8.198	33561
26673	192.168.8.226	26673
26673	192.168.8.226	26673
14860	192.168.8.205	14860
14860	192.168.8.205	14860
64315	192.168.8.222	64315
64315	192.168.8.222	64315
8126	192.168.1.234	8126
8126	192.168.1.234	8126
80	192.168.8.82	80
5150	192.168.8.82	5150
5160	192.168.8.82	5160
5170	192.168.8.82	5170

For security reason, the privilege of UPnP port-forwarding is LOWER than port-forwarding configured on router. Therefore, if the ports have been used on router, we are unable to know before finding out access failure.



UPnP port-forwarding is for temporarily use only. Most of UPnP router will clean up all UPnP ports after router reboots. Furthermore, for some routers, if the port you want to add has already been used for other devices in the same way (UPnP port forwarding), this “enable” action will cover over the settings.

2.5.4 Network Service Setup

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Network Setup / Network Service**.
3. Click the **Web Service** tab
4. Set up a port for this unit and click the **Save** button.

Network Service

Web Service	Live View & Playback Service	CMS Service
Web Server		
Management Port	80	
Save Reset		

5. Click the **Live View & Playback Service** tab.

Network Service

Web Service	Live View & Playback Service	CMS Service
Live Streaming Server		
Port	5150	
Maximum Connections	16	
Playback Server		
Port	5160	
Maximum Users	4	
Log Access	<input checked="" type="checkbox"/> Enable	
Black/White List		
White List	<input type="checkbox"/> Enable	
Black List	<input type="checkbox"/> Enable	
IP Range	to Add to White List Add to Black List Index IP Access Delete	
Save Reset		

● Live Streaming Server

- **Port**: Live streaming transmission port.
- **Maximum Connections**: Maximum connections from remote access.
(Max: 64)

- **Playback Server**

- **Port**: Playback transmission port.
- **Maximum Users**: The number of users who can access playback functions at the same time. (Max: 8)
- **Log Access**: Check to record playback access information on NVR Log page, including access time, playback video channels, and time frame.

- **Allowed/ Blocked List**

- **Allowed List**: Only IP addresses from the allowed list are allowed to log in.
- **Blocked List**: IP addresses from the blocked list will be unable to log in.

	When setting Maximum Connections in Live Streaming Server settings, 1 connection means that one user connects to one camera. If the maximum connections value is set to 16, and each user connects to 4 cameras, the allowed connections per user will become 4, rather than 16.
---	--

2.5.5 CMS Service Setup

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Network Setup / Network Service**.
3. Click the **CMS Service** tab.

Network Service

Web Service	Live View & Playback Service	CMS Service
CMS Server		
CMS Server	<input type="checkbox"/> Enable	
Port	5170	
Maximum Connections	8	
Save Reset		


- **CMS Server**: Check the **Enable** option to enable CMS service.
- **Port**: the port number through which the CMS connects to this unit.
- **Maximum Connections**: The maximum number of allowed CMS connections.

2.5.6 findNVR

findNVR is designed to truly simplify the process of establishing Internet access to NVR systems. It eliminates the need for setting up port forwarding and configuring DDNS. Simply register a server ID on the setting page, then

go to findNVR website or sign in iSecurity App to watch live videos and playback from wherever you are.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Network Setup / findNVR Registration**.
3. Click the **Registration** tab.

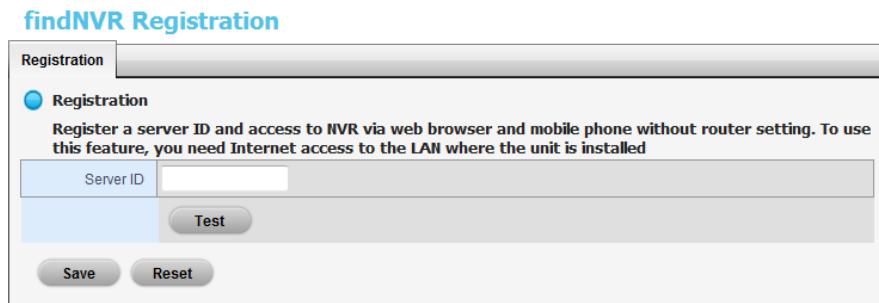

4. Enter a desired server ID in the Server ID field.
5. Click the **Test** button to check the availability of the desired server ID.
6. Click the **Save** button.
7. Now you can login to www.findnvr.com on a web browser to configure, watch live videos and playback with any other settings, such as port forwarding or DDNS setup. All you need to know is the server ID, username and password. What's more, you can also sign in to mobile app iSecurity to watch live videos and playback from everywhere you are.



To support to access to the NVR system via mobile app iSecurity, you have to upgrade the iSecurity to v3.0 or above.

2.6 Management

2.6.1 View the List of Users

1. Open Internet Explorer, Mac Safari or Windows Chrome and login the unit.
2. Click **Management/ User Management**.
3. Click the **Create New Users** tab.
4. The list will be displayed on the bottom of the page.

User List								
No.	Name	Group	Live View	Playback	Local Sign-in	Local Configuration	Backup Data	Delete Data
1	supervisor	power user	1,2,3,4	1,2,3,4	O	O	O	O
2	guard	user	1,2,3,4	1,2,3,4	O	X	O	X
3	temp	guestuser	1,2,3,4		X	X	X	X

2.6.2 Create New Users

1. Open Internet Explorer, Mac Safari or Windows Chrome and login the unit.
2. Click **Management/ User Management**.
3. Click the **Create New Users** tab.

User Management

Create New Users Modify Users Change Password

Create User

Username	<input type="text"/>
Password	<input type="password"/>
Group	power user <input type="button" value="▼"/>
Live View Access	<input checked="" type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4
Playback Access	<input checked="" type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4
Local Privilege	<input checked="" type="checkbox"/> Local Sign-in <input checked="" type="checkbox"/> PTZ Control <input checked="" type="checkbox"/> Configuration <input checked="" type="checkbox"/> Stream Override <input checked="" type="checkbox"/> Talk
Remote Privilege	<input checked="" type="checkbox"/> PTZ Control <input checked="" type="checkbox"/> IO Control <input checked="" type="checkbox"/> E-map Settings <input checked="" type="checkbox"/> Backup Data <input checked="" type="checkbox"/> Delete Data <input checked="" type="checkbox"/> Talk
Advanced	<input type="checkbox"/> Browse log

4. Insert the username of this new user.
 5. Insert the password of this new user.
 6. Choose the group of this user.
- **Power user:** Power user can do all the settings except the **Network Settings, RAID Settings, and Management function**.
 - **User:** User just can change his/her password and do the live view and playback functions.
 - **Guest user:** User can do live view and playback function only.

7. Select the live view cameras which this user can access.
8. Select the playback channels which this user can access.
9. Check whether this user can backup or delete recorded data.
10. Check whether this user can browse log or not.
11. Click the **Create New User** button to finish it.



The Administrator will be the only user who can use all of the functions. There is a default administrator account in the system, and you cannot create neither another "Administrator" account, nor another username named "admin".

2.6.3 Modify User Information

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / User Management**.
3. Click the **Modify Users** tab.
4. Click one of the users in the User List on the bottom of this page.

User Management

Create New Users	Modify Users	Change Password																																								
Modify Users <table border="1"> <tr> <td>Username</td> <td>guard</td> </tr> <tr> <td>Group</td> <td>user</td> </tr> <tr> <td>Live View Access</td> <td><input type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4</td> </tr> <tr> <td>Playback Access</td> <td><input type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4</td> </tr> <tr> <td>Local Privilege</td> <td><input checked="" type="checkbox"/> Local Sign-in <input type="checkbox"/> PTZ Control <input type="checkbox"/> Configuration</td> </tr> <tr> <td>Remote Privilege</td> <td><input checked="" type="checkbox"/> PTZ Control <input checked="" type="checkbox"/> IO Control <input checked="" type="checkbox"/> E-map Settings <input checked="" type="checkbox"/> Backup Data <input type="checkbox"/> Delete Data</td> </tr> <tr> <td colspan="2"> <input type="button" value="Modify User"/> <input type="button" value="Clear"/> </td> </tr> </table>			Username	guard	Group	user	Live View Access	<input type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4	Playback Access	<input type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4	Local Privilege	<input checked="" type="checkbox"/> Local Sign-in <input type="checkbox"/> PTZ Control <input type="checkbox"/> Configuration	Remote Privilege	<input checked="" type="checkbox"/> PTZ Control <input checked="" type="checkbox"/> IO Control <input checked="" type="checkbox"/> E-map Settings <input checked="" type="checkbox"/> Backup Data <input type="checkbox"/> Delete Data	<input type="button" value="Modify User"/> <input type="button" value="Clear"/>																											
Username	guard																																									
Group	user																																									
Live View Access	<input type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4																																									
Playback Access	<input type="checkbox"/> All <input checked="" type="checkbox"/> Channel 1 <input checked="" type="checkbox"/> Channel 2 <input checked="" type="checkbox"/> Channel 3 <input checked="" type="checkbox"/> Channel 4																																									
Local Privilege	<input checked="" type="checkbox"/> Local Sign-in <input type="checkbox"/> PTZ Control <input type="checkbox"/> Configuration																																									
Remote Privilege	<input checked="" type="checkbox"/> PTZ Control <input checked="" type="checkbox"/> IO Control <input checked="" type="checkbox"/> E-map Settings <input checked="" type="checkbox"/> Backup Data <input type="checkbox"/> Delete Data																																									
<input type="button" value="Modify User"/> <input type="button" value="Clear"/>																																										
User List <table border="1"> <thead> <tr> <th>No.</th> <th>Name</th> <th>Group</th> <th>Live View</th> <th>Playback</th> <th>Local Sign-in</th> <th>Local Configuration</th> <th>Backup Data</th> <th>Delete Data</th> <th></th> </tr> </thead> <tbody> <tr> <td>1</td> <td>supervisor</td> <td>power user</td> <td>1,2,3,4</td> <td>1,2,3,4</td> <td>O</td> <td>O</td> <td>O</td> <td>O</td> <td></td> </tr> <tr> <td>2</td> <td>guard</td> <td>user</td> <td>1,2,3,4</td> <td>1,2,3,4</td> <td>O</td> <td>X</td> <td>O</td> <td>X</td> <td></td> </tr> <tr> <td>3</td> <td>temp</td> <td>guestuser</td> <td>1,2,3,4</td> <td></td> <td>X</td> <td>X</td> <td>X</td> <td>X</td> <td></td> </tr> </tbody> </table>			No.	Name	Group	Live View	Playback	Local Sign-in	Local Configuration	Backup Data	Delete Data		1	supervisor	power user	1,2,3,4	1,2,3,4	O	O	O	O		2	guard	user	1,2,3,4	1,2,3,4	O	X	O	X		3	temp	guestuser	1,2,3,4		X	X	X	X	
No.	Name	Group	Live View	Playback	Local Sign-in	Local Configuration	Backup Data	Delete Data																																		
1	supervisor	power user	1,2,3,4	1,2,3,4	O	O	O	O																																		
2	guard	user	1,2,3,4	1,2,3,4	O	X	O	X																																		
3	temp	guestuser	1,2,3,4		X	X	X	X																																		

5. Change the group of this user.
6. Select the live view cameras which this user can access.
7. Select the playback channels which this user can access.
8. Check whether this user can backup or delete recorded data.
9. Click the **Modify User** button to finish it.

2.6.4 Change a User's Password

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / User Management**.
3. Click the **Change Password** tab.

User Management

Create New Users | Modify Users | Change Password

Change Password

Username	guard
New Password	
Retype Password	

OK | Clear

4. Choose the user.
5. Enter a new password.
6. Enter this new password again.
7. Click the **OK** button.

2.6.5 Delete Users

Except for the administrator, you can delete any users with the following steps.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / User Management**.
3. Click the **Modify Users** tab.
4. Click the Delete icon of the user you want to delete.

No.	Name	Group	Live View	Playback	Local Sign-in	Local Configuration	Backup Data	Delete Data
1	supervisor	power user	1,2,3,4	1,2,3,4	O	O	O	O
2	guard	user	1,2,3,4	1,2,3,4	O	X	O	X
3	temp	guestuser	1,2,3,4		X	X	X	X

5. In the confirmation box, click the **OK** button.


2.6.6 Online License Activation

There are two types of license currently, camera license and POS license. With the camera license upgrade, the 4ch-device will possess up to 8ch capacity, while the 6ch-device will possess up to 16ch. With the POS license upgrade,

users can use **POS function**.

There are two ways to activate license, online and offline.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / License Management**.

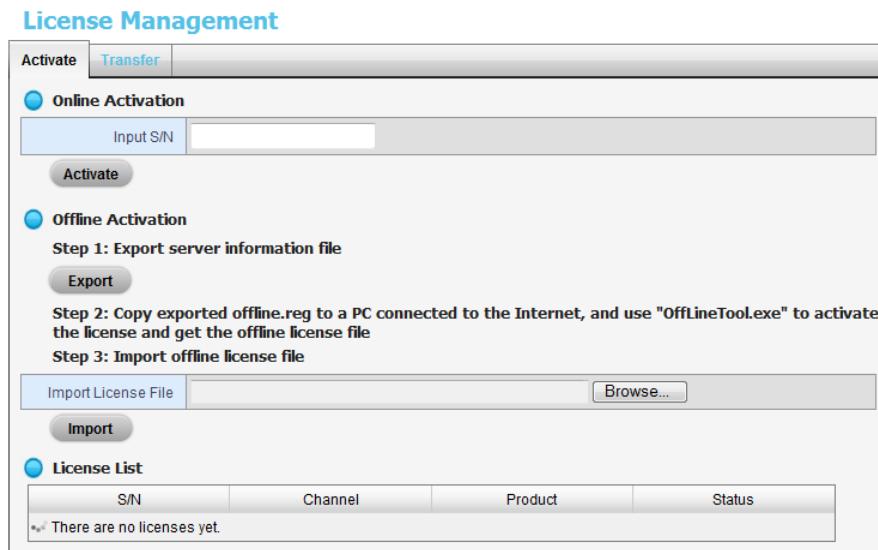


3. Input serial number under the section of **Online Activation**, and click the **Activate** button.
4. The license will be updated in License List if activated successfully.

License List			
S/N	Channel	Product	Status
XXXX-XXXX-XXXX-XXXX	2	NVS	Activated


2.6.7 Offline License Activation

If the device is set up in Intranet (Local LAN) without Internet connection, there is another way to activate license.


1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / License Management**.

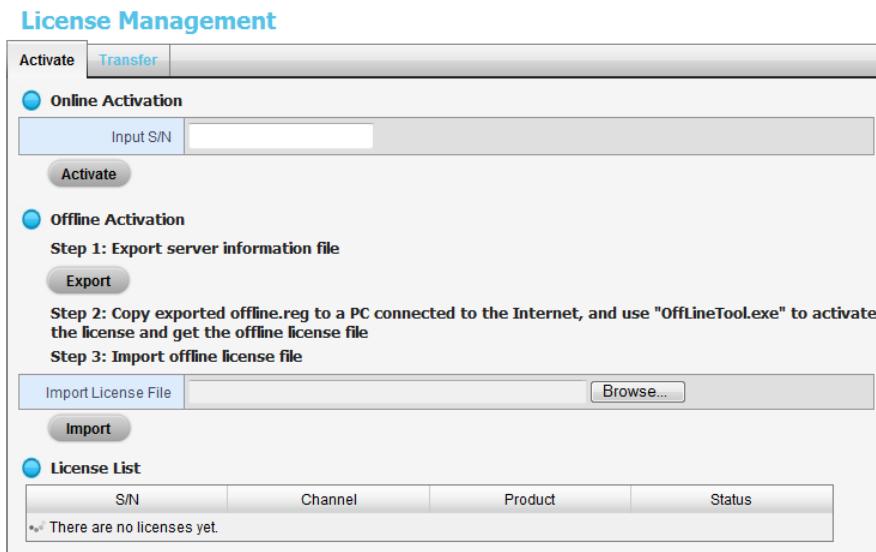


3. Click the **Export** button under the section of **Offline** Activation to export the information of this unit.
4. Download dialog pops up. Save the request file and take it to other PC which is connected to the Internet. Furthermore, the PC should be installed **OffLineTool.exe** which can be found from NVR toolkit.

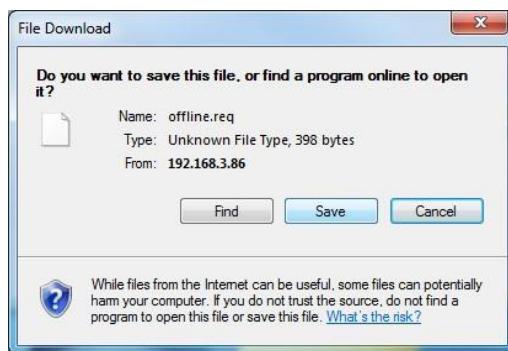


5. Execute the OffLineTool.exe in that PC with Internet connection, and select the request file **offline.req**.

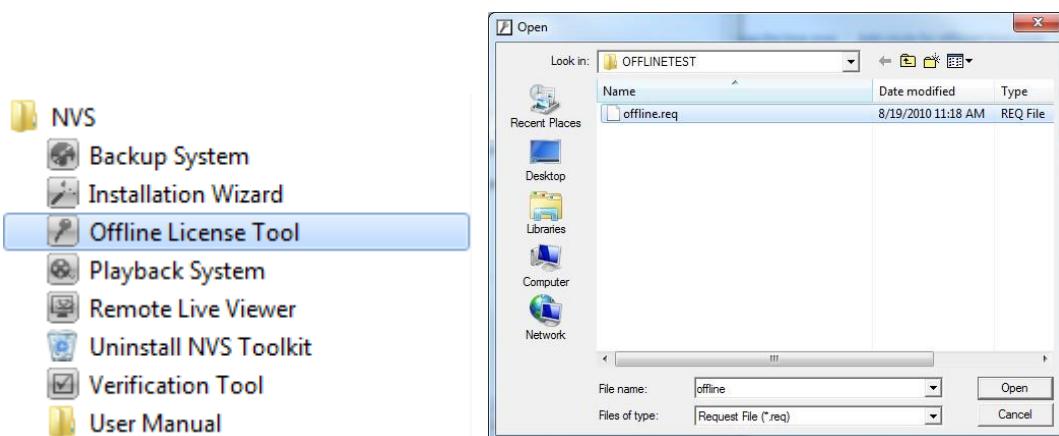

6. Input the serial number, click the **Activate** button, and save the .dll file **offline_license.dll**.

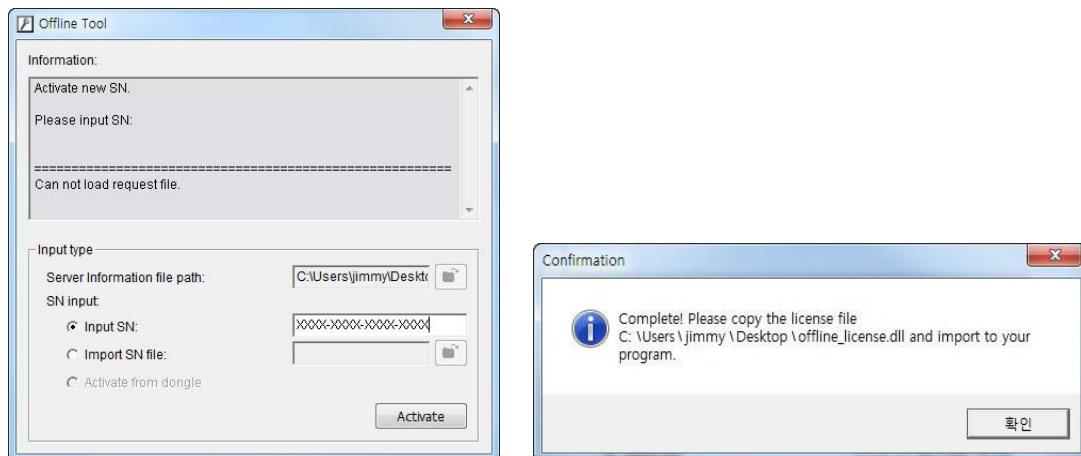

7. Import the license file to the unit.

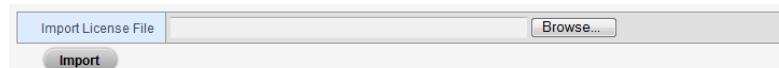

8. The license will be updated in License List if activated successfully. System will reboot automatically.

License List			
S/N	Channel	Product	Status
XXXX-XXXX-XXXX-XXXX	2	NVS	Activated

2.6.8 Online License Transfer

There are two ways to transfer license, online and offline.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / License Management / Transfer**.

License Management

Activate	Transfer											
<p>Online Transfer/Offline Export</p> <table border="1" style="width: 100%;"> <tr> <td style="width: 10%;">Input S/N</td> <td>XXXX-XXXX-XXXX-XXXX</td> </tr> </table> <p>Online Transfer: Click the Transfer button to transfer license(s).</p> <p>Transfer</p> <p>Offline Export: Click the Export button to export the server information file, copy the exported offline.reg file to a PC connected to the Internet, and execute "OffLineTool.exe" to transfer license(s).</p> <p>Export</p> <p>License List</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>S/N</th> <th>Channel</th> <th>Product</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>XXXX-XXXX-XXXX-XXXX</td> <td>2</td> <td>NVS</td> <td>Activated</td> </tr> </tbody> </table>			Input S/N	XXXX-XXXX-XXXX-XXXX	S/N	Channel	Product	Status	XXXX-XXXX-XXXX-XXXX	2	NVS	Activated
Input S/N	XXXX-XXXX-XXXX-XXXX											
S/N	Channel	Product	Status									
XXXX-XXXX-XXXX-XXXX	2	NVS	Activated									

3. Select the license you want to transfer from the License List below, and click the **Transfer** button.
4. The license will be removed from License List if transferred successfully.

2.6.9 Offline License Transfer

If the device is set up in Intranet (Local LAN) without Internet connection, there is another way to transfer license.


1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / License Management / Transfer**.

License Management


Activate	Transfer											
<p>Online Transfer/Offline Export</p> <table border="1" style="width: 100%;"> <tr> <td style="width: 10%;">Input S/N</td> <td>XXXX-XXXX-XXXX-XXXX</td> </tr> </table> <p>Online Transfer: Click the Transfer button to transfer license(s).</p> <p>Transfer</p> <p>Offline Export: Click the Export button to export the server information file, copy the exported offline.reg file to a PC connected to the Internet, and execute "OffLineTool.exe" to transfer license(s).</p> <p>Export</p> <p>License List</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>S/N</th> <th>Channel</th> <th>Product</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>XXXX-XXXX-XXXX-XXXX</td> <td>2</td> <td>NVS</td> <td>Activated</td> </tr> </tbody> </table>			Input S/N	XXXX-XXXX-XXXX-XXXX	S/N	Channel	Product	Status	XXXX-XXXX-XXXX-XXXX	2	NVS	Activated
Input S/N	XXXX-XXXX-XXXX-XXXX											
S/N	Channel	Product	Status									
XXXX-XXXX-XXXX-XXXX	2	NVS	Activated									

3. Select the license you want to transfer from the License List below, and click the **Export** button.
4. Download dialog pops up. Save the request file. The license will be removed

- from License List temporarily, but the transfer process is not finished yet.
5. Take it to other PC which is connected to the Internet. Furthermore, the PC should be installed **OffLineTool.exe** which can be found from NVR toolkit.
 6. Execute the OffLineTool.exe in that PC with Internet connection, and select the request file **offline.req**.

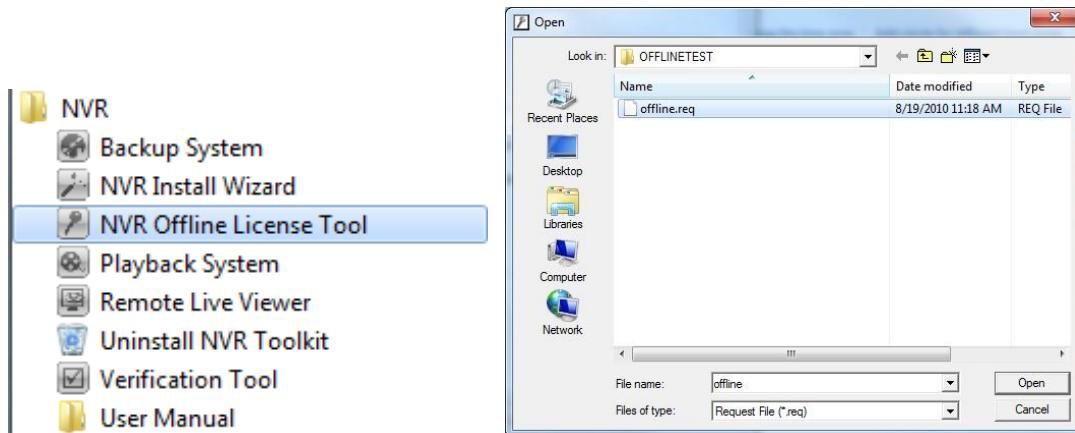

7. The license you are going to transfer is listed. Click the **Transfer** button to finish the transfer process.

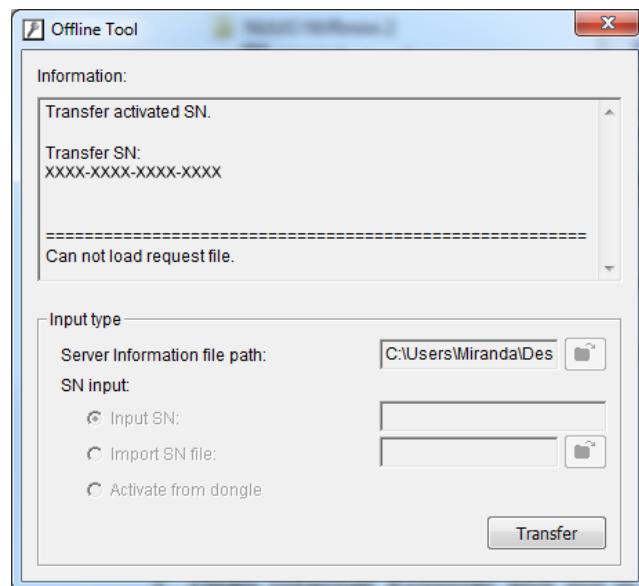

2.6.10 View the Event Log

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / Log System** to find the event list of your unit.

Log System				
System Log NVR Event Log Export and Backup Log				
<input checked="" type="radio"/> System Log				
From : <input type="text" value="2014/03/17"/> To : <input type="text" value="2014/03/17"/> Type : <input type="button" value="All"/> <input type="button" value="Query"/> <input type="button" value="Export"/>				
Date	Time	Type	Level	Log
2014-03-17	18:15:27	User Login	info	admin (10.0.2.37) is logging in to Settings
2014-03-17	18:08:04	User Login	info	(localhost) is logging in to Live Streaming Service
2014-03-17	18:06:44	User Login	info	(localhost) is logging in to Live Streaming Service
2014-03-17	18:06:10	Network	info	Start LAN eth0 with DHCP IP 10.0.2.19
2014-03-17	18:05:17	User Login	info	(localhost) is logging in to Live Streaming Service
2014-03-17	17:48:54	Hardware	info	NVS System Started
2014-03-17	17:48:46	Hardware	info	NVR system starts
2014-03-17	17:48:46	RAID	info	VOLUME1 is ready
2014-03-17	17:48:45	Disk	info	Disk1 is found
2014-03-17	17:48:45	RAID	info	RAID info of Disk1: level 0, uuid 5c2d8946:d2306bdb:24e0d54a:0a28ef7b, 1 device (s)
2014-03-17	17:48:42	Hardware	info	Enable smart fan
2014-03-17	17:48:42	Hardware	info	NVR system close

There are four kinds of event which will be listed on this page.

- **System Log**: The log information of the operations to your unit, such user access information, as reboot or shut down.
- **NVR Event Log**: The log information of the “Event & Action Management”, such as motion detection or camera connection lost.
- **Export and Backup Log**: The log information of the track of video data exported and backup.

 The NVR Event Log will be recorded only if event is selected on **Event & Action Management** page. As for user access information, please go to **Network Service** to check **Log Access** box to enable this function.

 You may click on  to view the event playback in a separated page at **NVR Event Log** page.

2.6.11 Save Unit Configuration

Save configuration can let you save the settings of this unit. These settings can be applied to other units, which will let you set other units more easily.

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **Management / Save / Load Configuration**.
3. Click the **Save Configuration** tab.

Save/Load Configuration

Save Configuration	Load Configuration
<input checked="" type="radio"/> Save Configuration	
Click the Save button to save the configuration of Camera Settings, Recording Settings, Event & Action Settings, E-Mail Settings and Server Settings.	
<input type="checkbox"/> Optional <input type="checkbox"/> E-Map Settings <input type="checkbox"/> POS Settings	
<input type="button" value="Save"/>	

4. Check the box of **E-Map Settings** or **POS Settings** if you want to keep the configuration.
5. Click the **OK** button.
6. The configuration file will be generated into the chosen folder.



User account won't be exported as saving configuration, which implies the user list of push notification won't be saved as well.

2.6.12 Load Unit Configuration / Default Settings

Load configuration can let you apply another unit's settings to the current unit; Load Default Settings will revert all of the unit's settings back to the default factory settings.

1. Click **Management / Save / Load Configuration**.
2. Click the **Load Configuration** tab.

Save/Load Configuration

Save Configuration	Load Configuration
<input checked="" type="radio"/> Load Default Settings	
Click the Load button to load default factory settings. <i>Uncheck</i> the following box if you want to keep the network settings.	
<input type="checkbox"/> Optional <input checked="" type="checkbox"/> Network Settings	
<input type="button" value="Load"/>	
<input checked="" type="radio"/> Load Configuration	
Click the Load button to load the configuration of Camera Settings, Recording Settings, Event & Action Settings, E-Mail Settings and Server Settings.	
File Name	<input type="text"/> <input type="button" value="Browse..."/>
<input type="checkbox"/> Optional <input type="checkbox"/> E-Map Settings <input type="checkbox"/> POS Settings	
<input type="button" value="Load"/>	

3. Follow the direction to **Load Default Settings** or **Load Configuration**.
For the former, uncheck the box of **Network Settings** to keep the IP address; for the latter, check the box of **E-Map Settings** or **POS Settings**

if you want to restore the configuration.

4. Click the **Load** button.
5. A confirmation dialog pops up. Click the **OK** button to begin to load the settings into your unit.



If there is POS database existed in the unit, loading configuration with different POS application config is likely to make the original POS data unsearchable.



If the saved configuration is without E-map or POS settings, selecting loading configuration with E-map/POS settings will lead you get the default. The original E-map/POS settings (if any) are covered and untraceable.



User account and privilege will be kept even if loading default settings, while camera settings, recording schedule, event & action settings, Email setting and server settings won't be. **RAID information** will always be kept whether loading default settings or loading configuration.

2.7 System

2.7.1 View System Information

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **System / System Information**.

System Information

System Information	
Information	
Operating System	Linux
NVR Version	01.00.0104.0215
Device Pack Version	02.08.0000.0011
CPU	ARMv7 Processor rev 0 (v7l)
MAC Address 1	08:7D:21:00:A0:3C
MAC Address 2	08:7D:21:00:A0:3D
CPU Temperature	37.000 °C
System Fan Speed	3110 RPM
Locate	<input type="button" value="Locate"/>


The system information includes the following items.

- **Operating System**: Embedded Linux
- **NVR Version**: NVR system version
- **Device package version**: Camera package version
- **CPU**: CPU model number

- **CPU Loading**: The approx. CPU loading of this unit
- **MAC Address**: MAC address of this unit
- **CPU Temperature**
- **System Fan Speed**
- **Locate**: Click to trigger the buzzer to let you know where the unit is

2.7.2 Smart Fan Control

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **System / System Settings**.
3. Click the **Fan Control** tab.

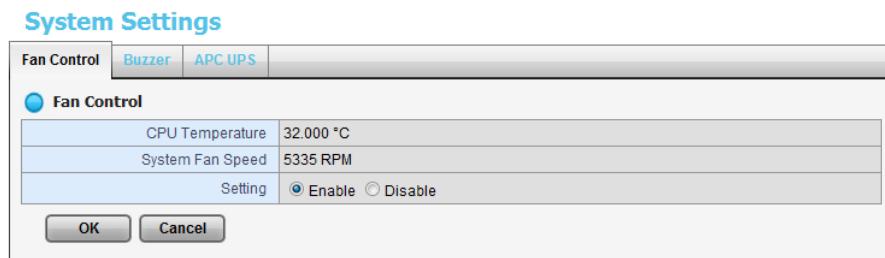

4. Check the **Enable** or **Disable** option.
5. Click the **OK** button.

2.7.3 Buzzer Configuration

There is a buzzer in the unit. When the unit finishes booting or when a problem is detected, this buzzer will sound. This buzzer is enabled by default. You can disable/enable this buzzer with the following steps. (We recommend that this buzzer should be enabled.)

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **System / Settings**.
3. Click the **Buzzer** tab.




4. Check the **Enable** or **Disable** option.
5. Click the **OK** button.

2.7.4 UPS Setup

This feature enables you to tell your unit how long to run on APC Uninterruptable Power Supply (UPS) battery power and when to shut down, after power failure.

1. Attach the APC UPS to one of the unit's USB ports.
2. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
3. Click **System / Settings**.
4. Click the **APU UPS** tab.
5. Check one of the options:

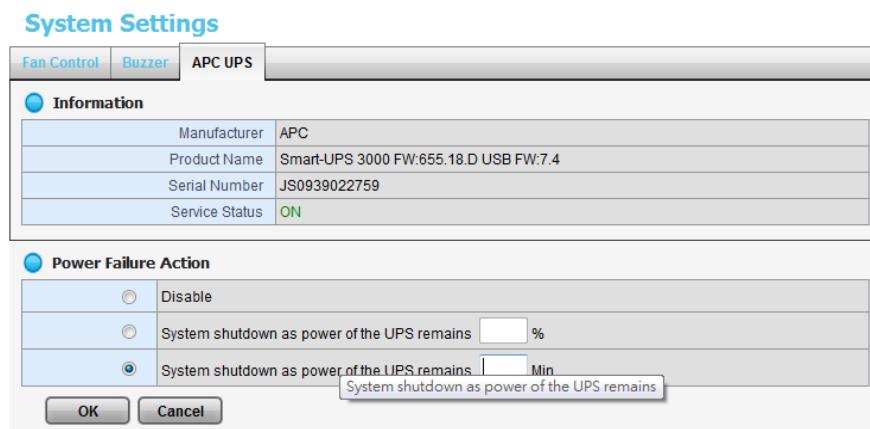

- **Disable**: Run until the UPS battery is depleted
- **System shutdown as power of the UPS remains ___ %**: Run until the UPS battery remains this percentage.
- **System shutdown as power of the UPS remains ___ min.**: Run until the UPS battery remains the certain period of time.


6. Fill in the specific value if you choose the last two options.
7. Click the **OK** button.

2.7.5 Upgrade the System

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the

unit.

2. Click **System / Upgrade**.
3. Click the **Firmware Upgrade** tab.

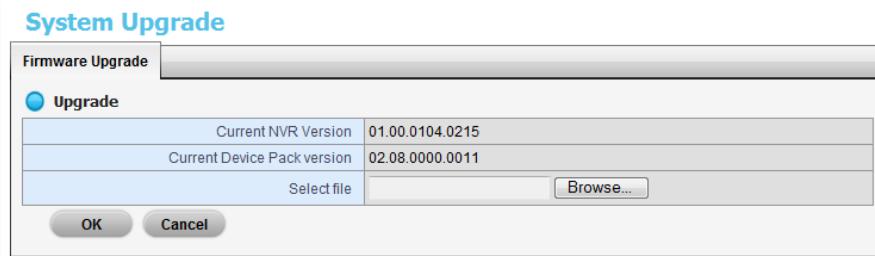

4. Browse the FW for upgrading and click the **OK** button.
5. A confirmation dialog pops up. Click the **OK** button to start upgrade process.
6. After upgrade, the system will restart. You need to re-access the unit again after this.



Please do not power off the server while system upgrading.



When upgrading firmware, please make sure the network is stable and the bandwidth is more than 2 Mbps.

2.7.6 System Date and Time Setup

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **System / Date/Time**.

Date/Time

Setup	
Time Zone Time Zone (GMT) Coordinated Universal Time, Greenwich Mean Time: Dublin, Lisbon, London	
Date/Time List Year: 2012 Month: 10 Day: 5 Time: 17 : 55 : 30	
Daylight Saving Time Daylight Saving Time <input checked="" type="checkbox"/> Adjust the clock for daylight saving changes +2 hour(s) Start Time: March 25, 1:00 (Sunday) End Time: October 28, 2:00 (Sunday)	
NTP Setup Network Time <input checked="" type="checkbox"/> Enable Time Server: pool.ntp.org (e.g. pool.ntp.org) Update Time Interval: Every week, Saturday, 23:00 <input type="button" value="Update Now"/>	
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

3. Choose the time zone.
4. Configure the year, month, day and time manually, or enable NTP server to synchronize time automatically. When NTP server enabled, the date/time settings will be grayed out.
5. Check the **Adjust clock for daylight saving changes** option and select the time change of daylight saving time in your location. Choose the start time and end time of recurrence.
6. Click the **OK** button to restart system to activate the changes.



Clicking the **Update Now** button will save the settings automatically before restarting system.

2.7.7 Restart the Unit

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **System / Reboot/Shut down**.



3. Check the **Reboot** option.
4. Click the **OK** button.
5. A confirmation dialog pops up. Click the **OK** button to reboot the unit.

The restart procedure runs automatically. When the unit is fully online:

- The System Status LED turns blue.
- The buzzer beeps one time (if the buzzer is enabled).




During system restart, none of your files will be accessible from your desktops/laptops.

2.7.8 Shut Down the Unit

The only time you need to shut down the unit is to replace the disk drive cooling fan or the power supply. During and after the shut \down, none of your files will be accessible from your desktops/laptops. There are two ways to shut down the unit.

- **Shut down by Software**

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **System / Reboot / Shut down**.

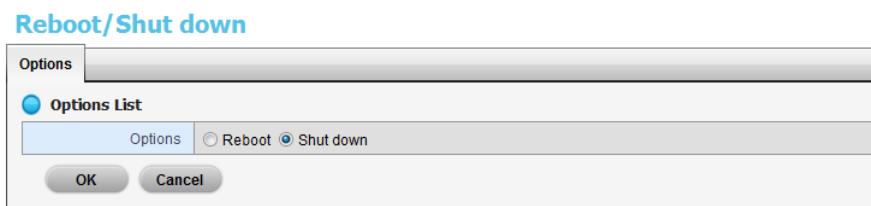

3. Check the **Shut down** option.
4. Click the **OK** button.
5. A confirmation dialog pops up. Click the **OK** button to shut down the unit.

- **Direct Shutdown**

1. Open the lid of the unit.
2. Press and hold the power button for 2 seconds and release your hands when the buzzer is beeping once.
3. System will begin the shutdown process, which takes about 30 seconds to few minutes depends on number of recording channels and other factors.




If the system is crashed and stocked, you can press the power button and hold it for 10 seconds to force to cut off the power directly. We don't recommend to do it if the system work properly.

3.POS

3.1 Introduction

3.1.1 System Introduction

POS, a Point of Sales Systems based on NVS provides financial transaction's surveillance solution in one central system. The architecture is as below; POS transaction data flows to NVS by Ethernet. Each Cash Register with an external receipt printer is connected by DB9 cable. The transaction information delivered in R232 format can be converted to Ethernet through SCB-C31A POS data capture converter.

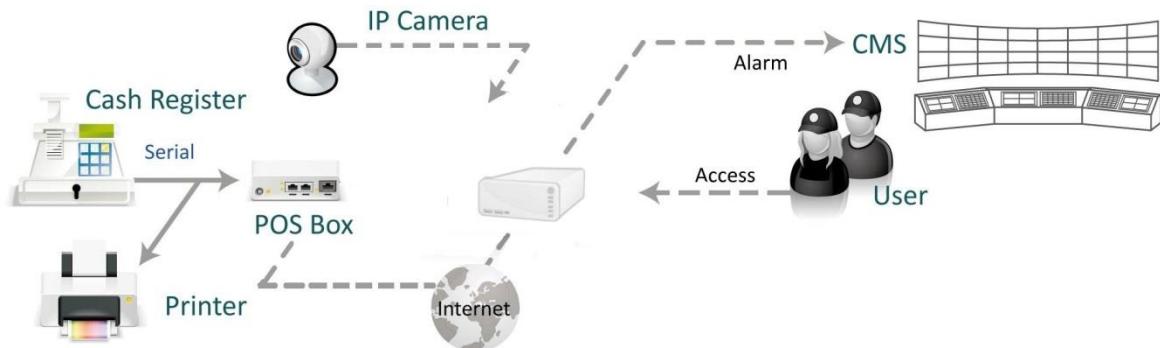

Definition of Terms

Terms	Definition
POS Original Data	Original data from POS. Usually with a lot of symbols and no line feed.
POS Transaction	Filtered result by user-defined tag-filter.

Product Specification

POS Box SCB-C31A	
Input	RS232
Output	Ethernet
DC In	DC +10V to +15V
Power consumption	500 mA
Operating Temperature	-20 to 65°C
Operating Humidity	0-90 % Non-Condensing

Baud Rate	110 bps to 230.4 kbps
Data Bits	5, 6, 7 or 8
Stop Bits	1, 1.5 or 2
Parity	None, Even, Odd, Mark, Space
Flow Control	None, RTX/CTS, XON/XOFF, DTR/DSR

3.1.2 Hardware Installation – SCB-C31A


To connect Cash Register, Printer, and SCB-C31A POS data capture converter together, please follow below steps:


- Step 1: Please refer the user manual to setup Cash Register and printer.
- Step 2: Using a “Y-shape” DB-9 cable, one DB-9 female connect to POS system and one DB-9 male connect to the receipt printer Y-shape (provided by Printer vendor).
- Step 3: Using another DB-9 female connect to SCB-C31A POS Data Capture R232/Ethernet converter with Null modem.



There are two kinds of serial cable: Straight pass-through and Null-Modem. The connection between SCB-C31 POS Data capture box and Y-cable must be null modem (in package).

- Step 4: Check the system switch of the SCB-C31A is switched to OFF-OFF position.
- Step 5: Connect SCB-C31A with power source.
- Step 6: Connect SCB-C31A with internet port by RJ45 LAN cable.

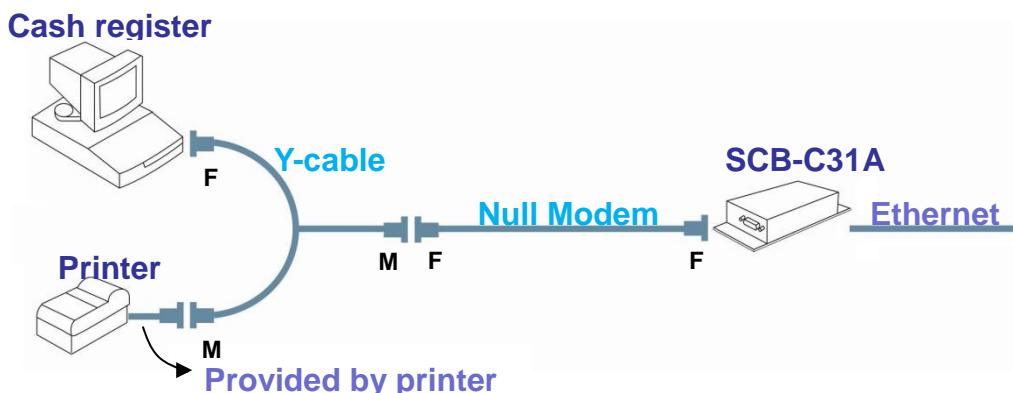

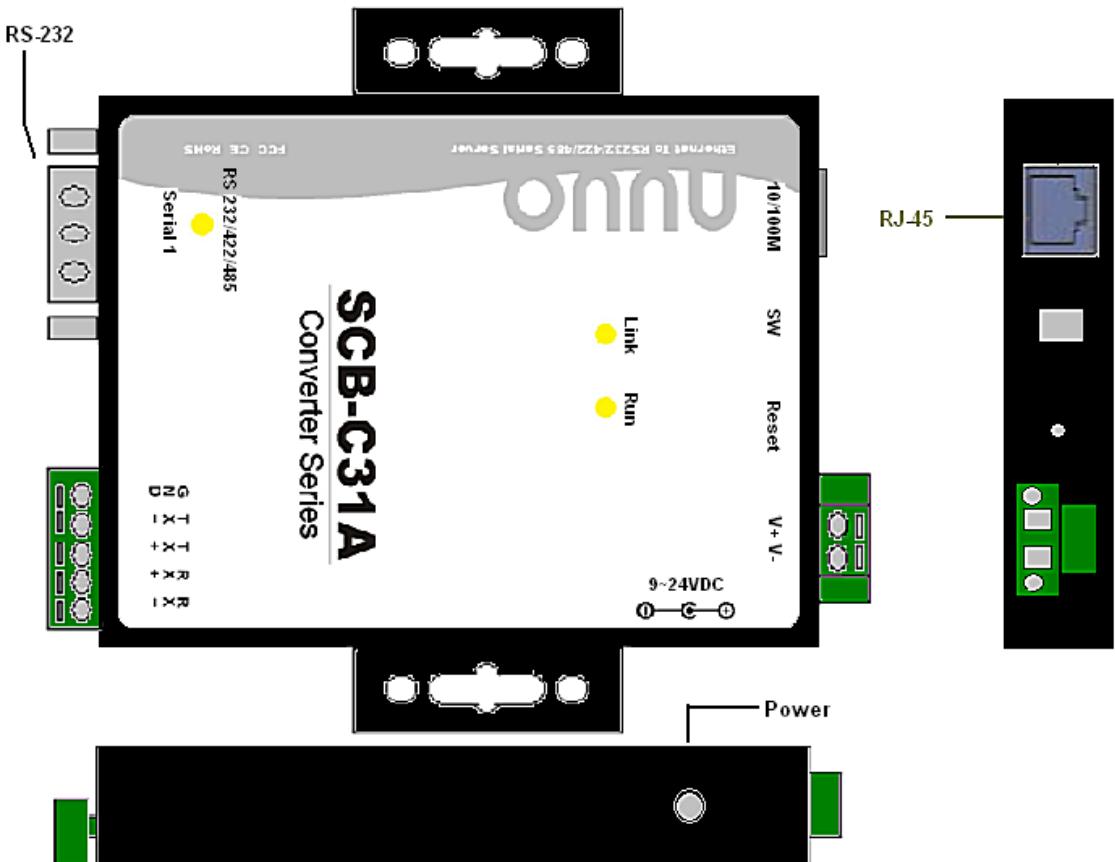

The LED Indicators:

LINK LED: Ethernet cable connection and data active.


RUN LED: System is ready (Blinking).

Serial 1: Transiting/Receiving Indicator.

3.1.3 Software Installation – SCB-C31A

Step 1: Use IE-browser to setup SCB-C31A, the default IP address is

192.168.1.1

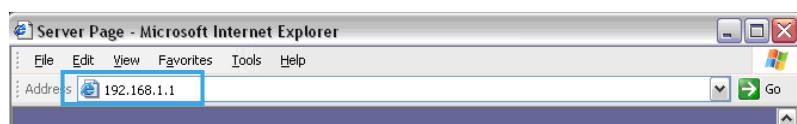

Step 2: Setup IP address and password in **Server** page, and click the **Save** button.



Each time you switch the page of the web, please click Save at first. If you leave this page without saving, all changes will be ignored.

Step 3: Setup Password if needed. Password is only using to activate a security feature on the serial server. Once a password is entered it will be required to access the menu and make change of configuration when access.



Please write down the Serial number and MAC address, these two parameters are necessary when user forget your password.

The screenshot shows the 'SCB-C31A Web Configuration - SCB-C31A' interface. On the left, there's a vertical navigation bar with tabs: 'Server', 'Serial Port', and 'Operation'. The 'Server' tab is active. At the top right, a note says: 'Note: If you leave this page without saving, all changes will be ignored!'. Below the note, there are several configuration fields:

- Server name: SCB-C31A
- Serial number: 00814
- Version & Date: 1.8.30 & 050910
- Password: (This field is highlighted with a red box.)
- DHCP: Enable
- IP address: 192.168.1.29
- Netmask: 255.255.252.0
- Gateway: 192.168.1.1
- MAC address: 00:0B:B4:81:12:B8
- Link status: 100/Full Duplex
- Hardware ID: PP-1001-A2

At the bottom, there are four buttons: 'Save', 'Default', 'Running', and 'Reset'.

Step 4: Setup according to your POS or Cash Register. Usually all devices are default setting, you can reserve your time to pass this step.

Step 5: Please **restart/reset** the box after changing configurations to active setup.


To reset the unit manually apply power, insert a small plastic tool, and press lightly depressing reset located between the switch. Hold for 3 seconds and release. The Link and Run light will go out and turn back on. The SCB-C31A will revert to the last setting.



Every time you change the configuration of SCB-C31, please check above setting, especially maximum connection and Remote IP address to avoid connection fail.

3.1.4 Connection via TCP Client

If the cash register possess network, please install system according to following diagram and purchase a POS license to activate this function.

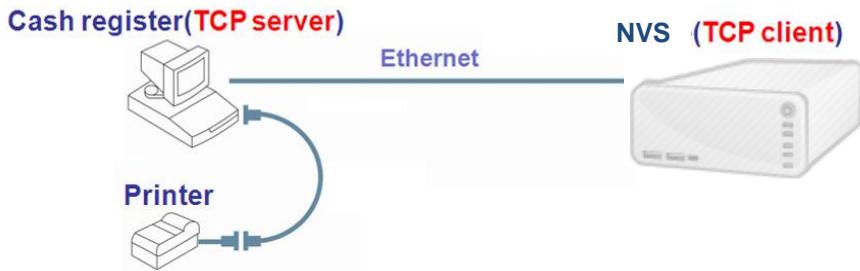


3.2 Software Setup

3.2.1 Activate POS License


If you are not the SCB-C31 user, you need to activate POS license before starting the following settings, please refer to [License Activation](#) for details.

3.2.2 NVR POS Setting

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **POS & I/O / POS Settings**.

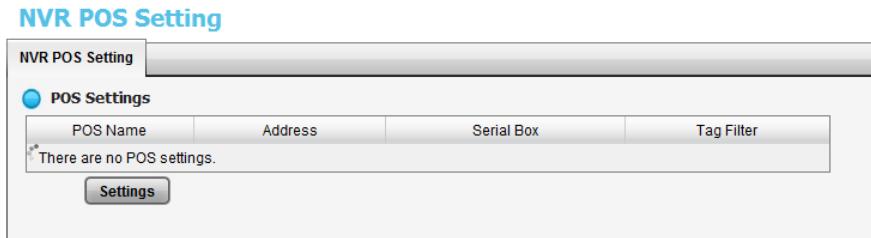

3. Click the **Settings** tab to set POS application.

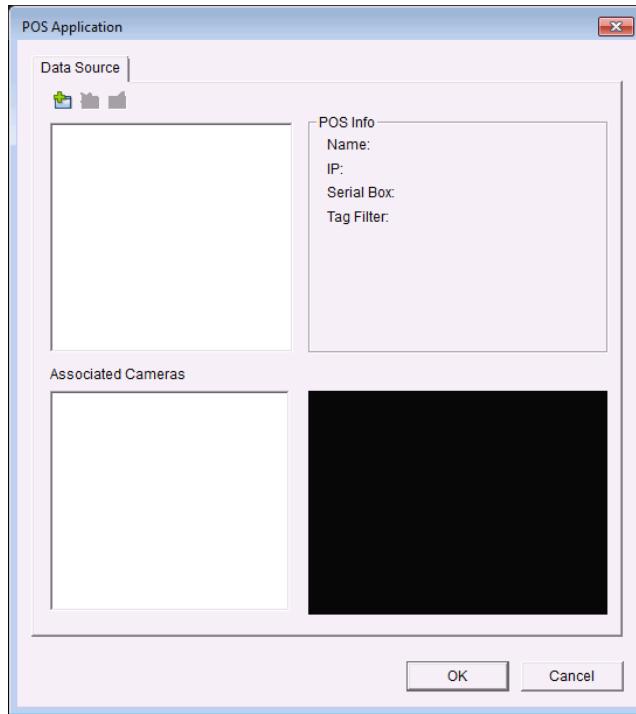

- **Data Source:** List of all the data sources.
 - [Insert](#): Click to insert POS and do the POS settings. See [Insert POS Setting](#) for details.
 - [Delete](#): Click to remove the selected POS from the list. See [Delete POS Device](#) for details.
 - [Configure](#): Click to configure the selected POS and modify the POS settings. See [Configure POS Setting](#) for details.
- **POS info:** The setting information of the selected POS on this window.
 - [Name](#): Name of the POS data source.
 - [IP](#): IP of the POS data source.
 - [Serial Box](#): The serial box data source used.
 - [Tag Filter](#): Tag type to filter the data from POS. See [Tag Filter](#) for details.
- **Associated Cameras:** List of all the associated cameras of the selected POS.


4. Click the OK button to finalize the modification.

3.2.3 Insert POS Setting

1. Click [Insert](#) button to open the **POS Setting** window.
2. Set up basic data source, including **Name**, **Model**, **IP address**, and **Port**. There are three types of models.

- **SCB-C31**: The device possesses one POS license, and should be equipped with the cash register not working as TCP server.
- **SCB-C31A**: The difference from SCB-C31 is not possessing one POS license, so user should activate POS license.
- **TCP Client**: Cash register possesses with network, so no need to have SCB-C31A as a converter. POS license is needed.

3. After setting, click **Test Connection** to test POS device connection.

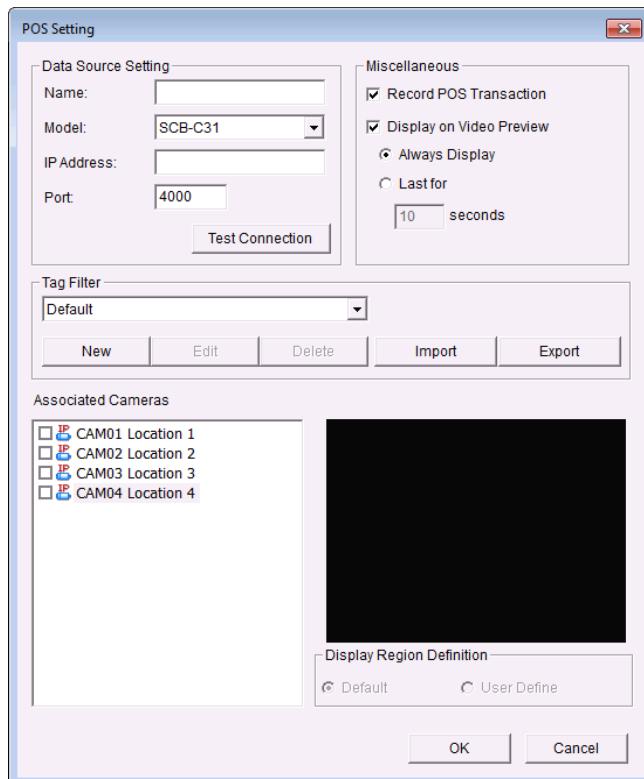

4. Set up Miscellaneous options, including **Record POS Transaction** and **Display on Video Preview**.

- **Record POS Transaction**: Select this checkbox to record POS transaction data. Users are allowed to search the POS data.
- **Display on Video Preview**: Select this checkbox to display POS transaction overlay on associated camera live video. Two types of transaction data display time:
 - **Name**: Name of the POS data source.
 - **Always**: Keep transaction data on video until receiving next transaction date.
 - **Last for ___ seconds**: Each transaction data only lasts on video for ___ seconds after receiving the last data of transaction.

5. Select **Tag Filter**. See [**Tag Filter**](#) for details.
6. Select the camera of **Associated Cameras** to display POS transaction data overlay on live video.
7. Set up display area for each camera video in **Display Region Definition**.
 - **Default**: The default display area is in the upper left corner of video image.
 - **User Define**: Enable **User Define**, and define display area by dragging rectangle
8. Click the **OK** button to save.

3.2.4 Delete POS Device

1. Choose POS device.
2. Click  **Delete** button to remove this POS device from the system.

3.2.5 Configure POS Setting

1. Choose POS device.
2. Click  **Configure** button to open the POS Setting window.
3. Refer to [**Insert POS Setting**](#) to modify configuration.

3.3 Tag Filter


The original transaction data from POS system is hard to read. Users can define filters to make the POS strings meaningful. The system also provides a simple default tag filter to filter out same common EPSON commands, users can base on this default tag filter to edit their customized filters.

3.3.1 Add New Tag Filter

1. Click  **Insert** button or choose a device and click  **Configure** button to open the **POS Setting** window.
 2. Click **New** to open tag filter window.
- **General**: Name of Tag Filter and Connect button.
 - **Original Data**: Original transaction data from POS device.
 - **Filtered Data**: Filtered data after definition.
 - **Filter Function**: Tool used for defining filter type.
 - **Filter List**: List of all filters.
 - **Data Tool**: Clear/import/export buttons to clear/import/export the

original and filtered data.

- **Filter Tool:** Upper/down buttons to arrange the priority of each filter; remove button to remove the filter from list.

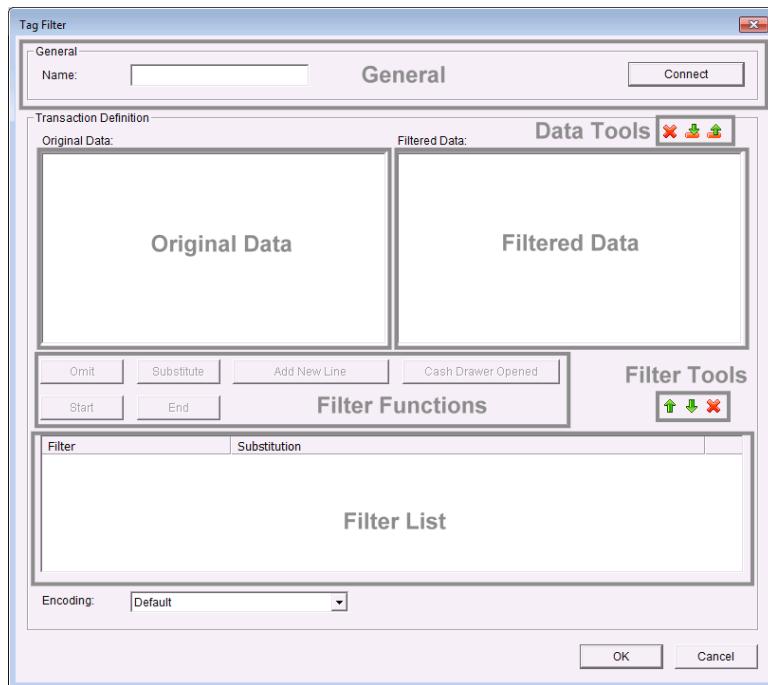

3. Enter name of this tag filter.
4. Click **Connect** button to capture POS transaction data from POS device.
The original transaction data will be shown on the left window.




If you don't want the data keep importing when editing filter, click **Disconnect** button to stop connecting.

5. Data Tools

- **Clear:** Remove data from Original Data window and Filtered Data window.
- **Import:** Reload exported binary data.
- **Export:** Capture and export original binary data.

6. Start to edit tag filters. Click and drag to select text from Original Data window, and then use the below six buttons to define filters. The filtered transaction data will be shown on the right window.

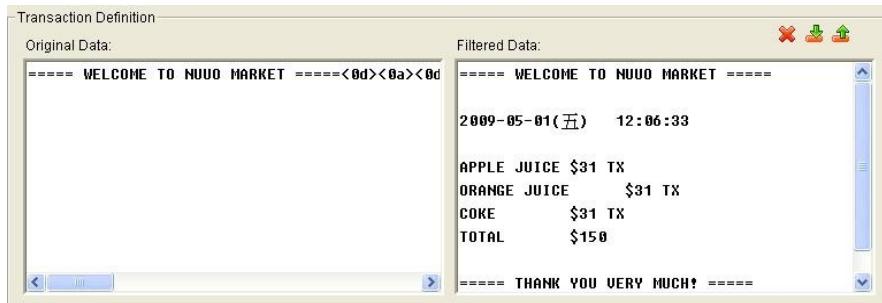


- **Omit:** Neglect the selected text which is meaningless or not important. The text will disappear on the right window.



- **Substitute:** Use another word(s) to replace the selected text. The system will pop up a substitution panel for replacing word(s) users want. The replaced text will be shown on the right window.




- **Add New Line:** Define the selected text as the symbol for changing to new line. The result will be shown on the right window.

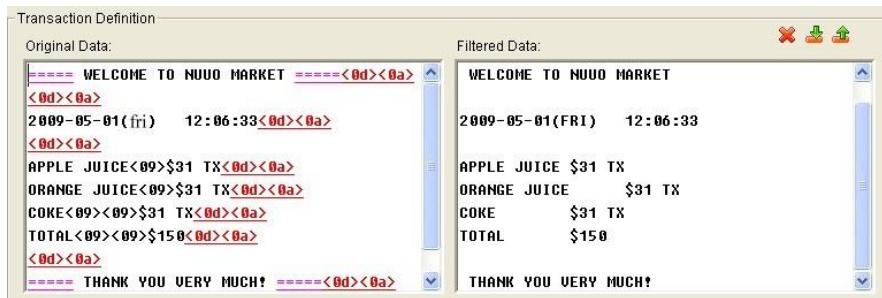


- **Start:** Define the selected text as the symbol for transaction beginning. The filtered data will be separated line as below.



- **Cash Register Opened:** Define the selected text as the symbol for opening cash register. The filtered data will be shown the <Cash Drawer Open> mark as below.

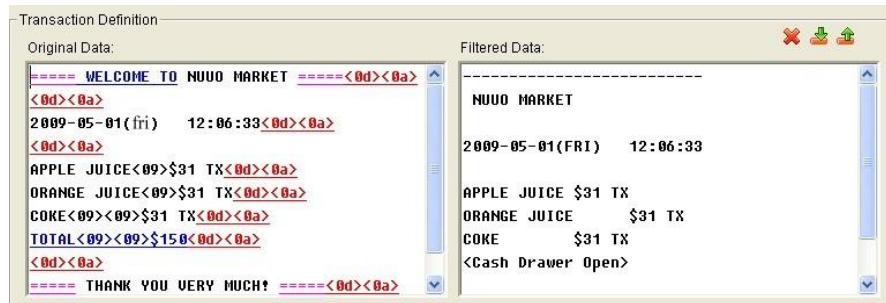

- **End:** Define the selected text as the symbol for transaction ending. The filtered data will be separated line as below.

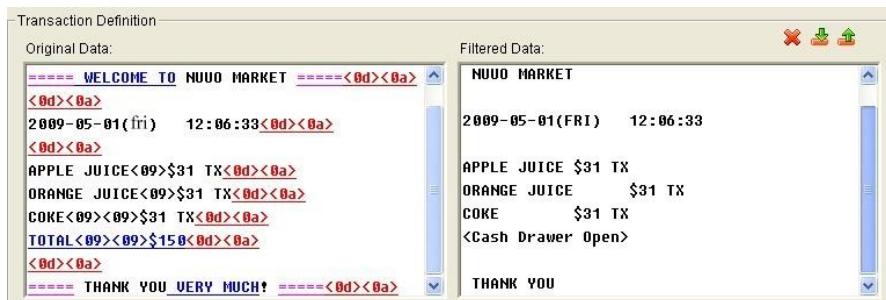

7. Filter Tools

- **Up:** Move a tag filter up; the upper filter will be operated earlier.
- **Down:** Move a tag filter down; the lower filter will be operated later.
- **Delete:** Remove a filter from this tag filter list.

Filter	Substitution
=====	
fri	FRI
<0d><0a>	<New Line>
WELCOME TO	<Transaction Start>
TOTAL<09><09>\$150	<Cash Drawer Open>
VERY MUCH	<Transaction End>

8. Click the **OK** button to save.

3.3.2 Edit Tag Filter

1. Select Tag Filter name from drop-down menu.
2. Click **Edit** button.
3. Configure the Tag Filter window.
4. Click the **OK** button to save.

3.3.3 Delete Tag Filter

1. Select Tag Filter name from drop-down menu.

2. Click **Delete** button to delete it.

3.3.4 Import/Export Tag Filter


1. Click **Import/Export** button and select Import/Export URL.
2. Click **Open/Save** to Import/Export Tag Filter.
3. After importing tag filters, users can simply select tag filter from drop-down menu without editing new tag filter.

3.4 POS Display Font


The system allows users to set up the fonts of POS transaction data on live view video and playback video.

3.4.1 Live View

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click the **Live View**.
3. Click the **General Setting** button to open **Live View Setting** window.

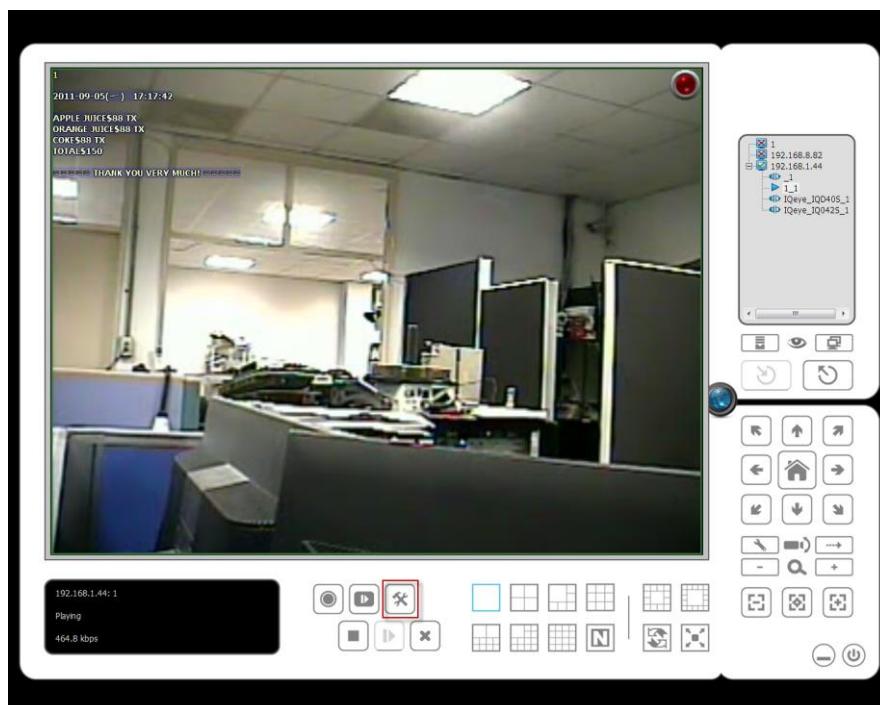


4. Select the font, font size, font color and background for the POS transaction data overlaid the video.

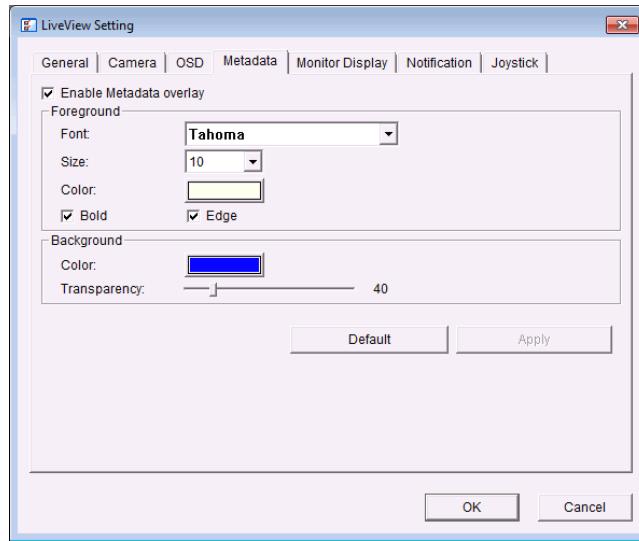


5. Click the **OK** button to save.

3.4.2 Remote Live Viewer

1. Startup > NVS > Remote Live Viewer
2. Click the **General Setting** button to open **Live View Setting** window.

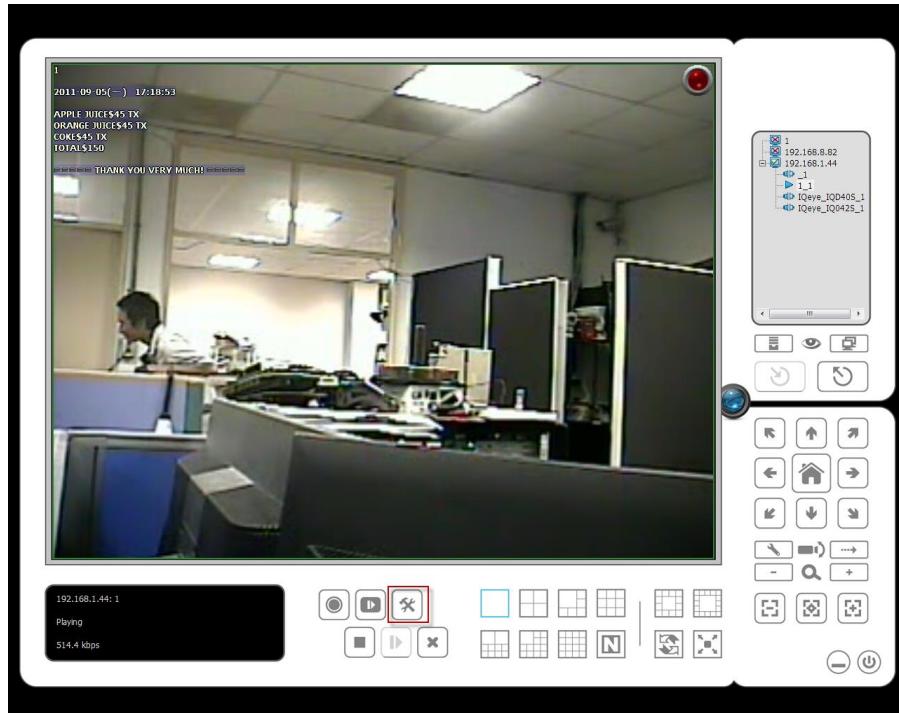


3. Select the font, font size, font color and background for the POS transaction data overlaid the video.

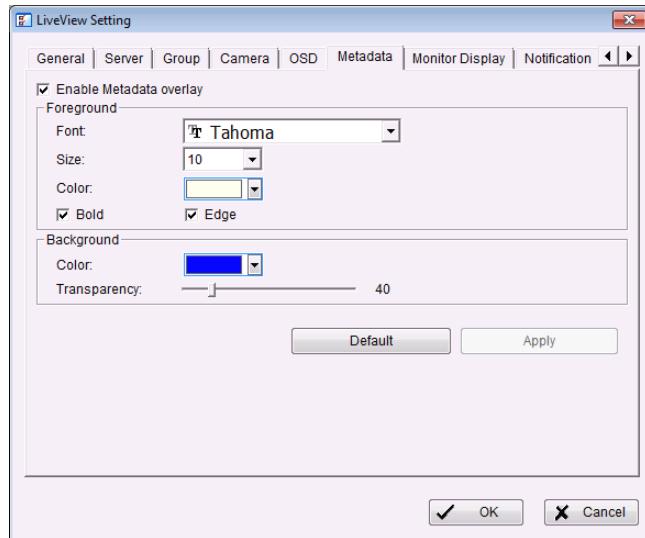


4. Click the **OK** button to save.

3.4.3 Playback

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click the **Playback** button.
3. Click the **Setting** button to open **Setting** window.

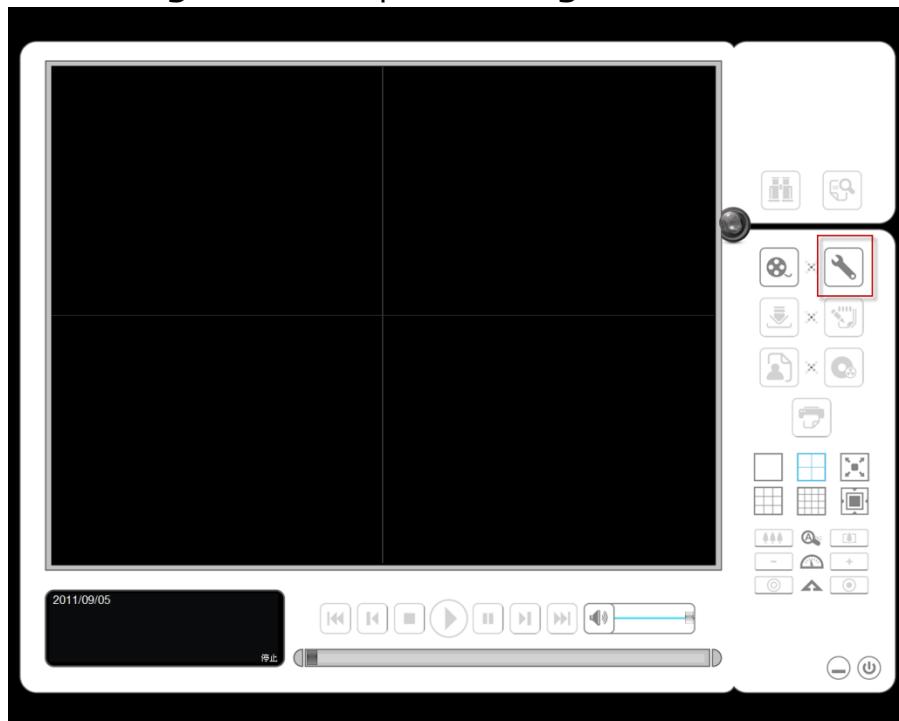


4. Select the font, font size, font color and background for the POS transaction data overlaid the video. Also, select the type of transaction data display time.

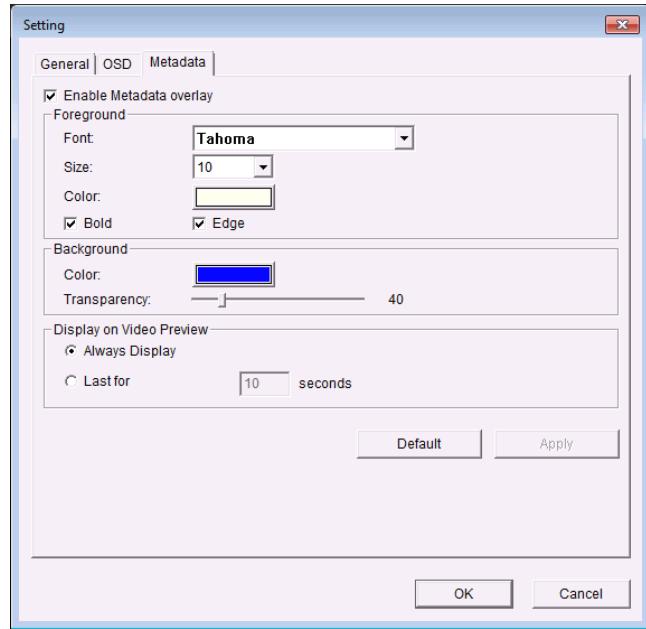


3.4.4 Playback System

1. Startup > NVS > Playback System
2. Click the **Setting** button to open **Setting** window.

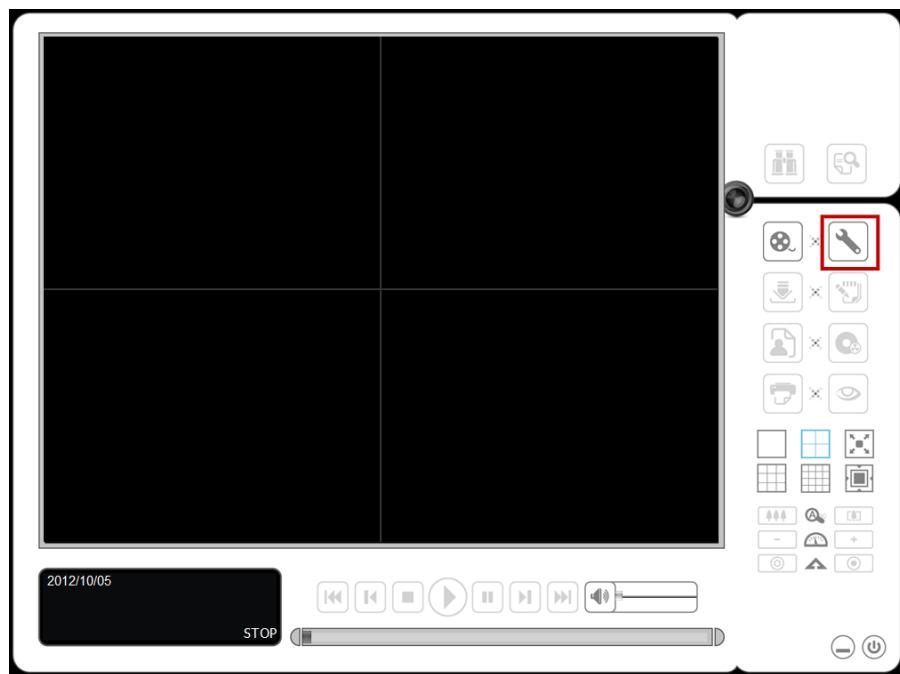

3. Select the font, font size, font color and background for the POS transaction data overlaid the video. Also, select the type of transaction data display time.

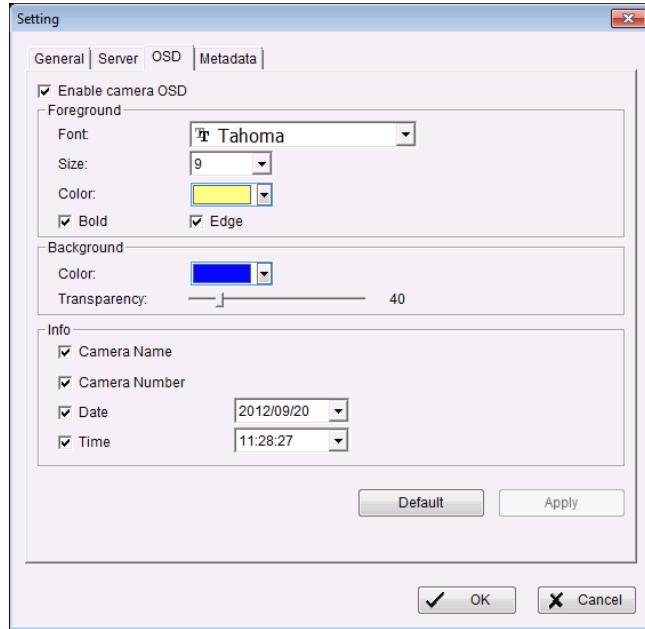


3.5 POS Transaction Data Search


POS Search tool is used to search key word of all transaction data.

3.5.1 Search POS Transaction Data through Playback

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click the **Playback** button.
3. Click the **Open Record** button to open **Data Time Search Dialog** window.

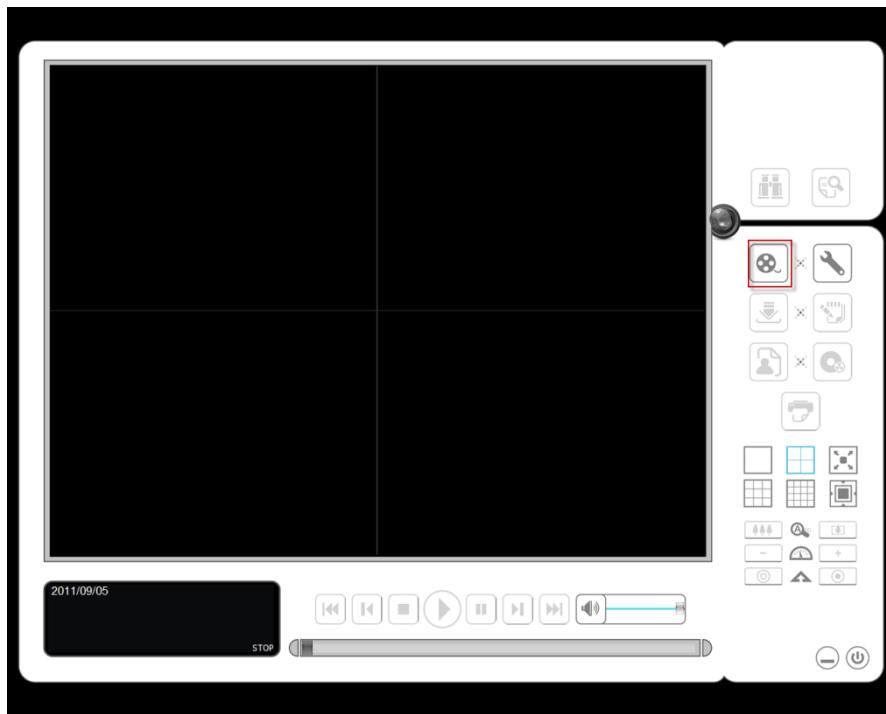

4. Click the **POS Search** button  to open **POS Search Dialog** window.

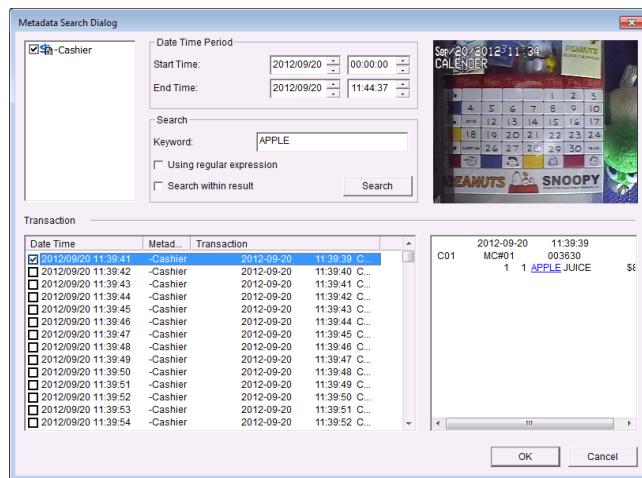

5. Select a POS device(s) from the POS list.
6. Set up Start Time and End Time in **Data Time Period** section.
7. Enter the keyword you want to search.
8. Click the **Search** button, the results will be shown in Transaction table.
9. Select an item from Transaction table, the transaction detail will be shown in the table of lower right corner, and the recorded video of associated camera will be shown in the upper right corner.
10. Select the checkbox of **Search within result**, and enter a keyword, you can search the data within the results.

3.5.2 Search POS Transaction Data through Playback System

1. Startup > NVS > Playback System.
2. Click the **Open Record** button to open **Data Time Search Dialog** window.
3. Click the **Remote Server Site**  icon on the top of the window to select the server users want to access.
4. Follow the step 4 through 10 of **Search POS Transaction Data by Playback** to search the data.

3.6 Playback Video with POS Data


Enable POS overlay in **Setting** window to view recorded video with POS transaction data (Refer to **POS Display Font**). If the option is enabled, the system will auto display transaction data when playing recorded video. There are two modes to select video period.

3.6.1 Select Period by POS Search

1. Refer to **POS Transaction Data Search**.
2. Select the transaction data from the result list, and click **OK**.

Date Time	Metad...	Transaction
2012/09/20 11:39:41	-Cashier	2012-09-20 11:39:39 C...
2012/09/20 11:39:42	-Cashier	2012-09-20 11:39:40 C...
2012/09/20 11:39:43	-Cashier	2012-09-20 11:39:41 C...
2012/09/20 11:39:44	-Cashier	2012-09-20 11:39:42 C...
2012/09/20 11:39:45	-Cashier	2012-09-20 11:39:43 C...
2012/09/20 11:39:46	-Cashier	2012-09-20 11:39:44 C...
2012/09/20 11:39:47	-Cashier	2012-09-20 11:39:45 C...
2012/09/20 11:39:48	-Cashier	2012-09-20 11:39:46 C...
2012/09/20 11:39:49	-Cashier	2012-09-20 11:39:47 C...
2012/09/20 11:39:50	-Cashier	2012-09-20 11:39:48 C...
2012/09/20 11:39:51	-Cashier	2012-09-20 11:39:49 C...
2012/09/20 11:39:52	-Cashier	2012-09-20 11:39:50 C...
2012/09/20 11:39:53	-Cashier	2012-09-20 11:39:51 C...
2012/09/20 11:39:54	-Cashier	2012-09-20 11:39:52 C...

3. The period you select from POS search results will be selected automatically.

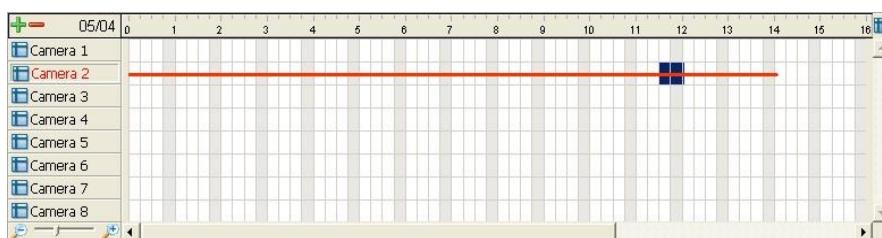

4. Click **OK** to playback videos.

3.6.2 Select Period by Data & Time through Playback

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click the **Playback** button.
3. Click the **Open Record** button to open **Data Time Search Dialog** window.
4. Highlight the video clip you want to review by left-clicking and dragging the time period. You may also utilize the Start Time and End Time in **Date Time Period** section after choosing cameras.
5. Click **OK** to playback videos.

3.6.3 Select Period by Data & Time through Playback System


1. Startup > NVS > Playback System.
2. Click the **Open Record** button to open **Data Time Search Dialog** window.
3. Click the **Remote Server Site**  icon on the top of the window to select the server users want to access.
4. Highlight the video clip you want to review by left-clicking and dragging the time period. You may also utilize the Start Time and End Time in **Date Time Period** section after choosing cameras.
5. Click **OK** to playback videos.

3.7 Backup Video with POS Data

There are three ways to backup video with POS transaction data.

3.7.1 Backup through Internet Explorer

1. Open Internet Explorer and log in to the unit.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.

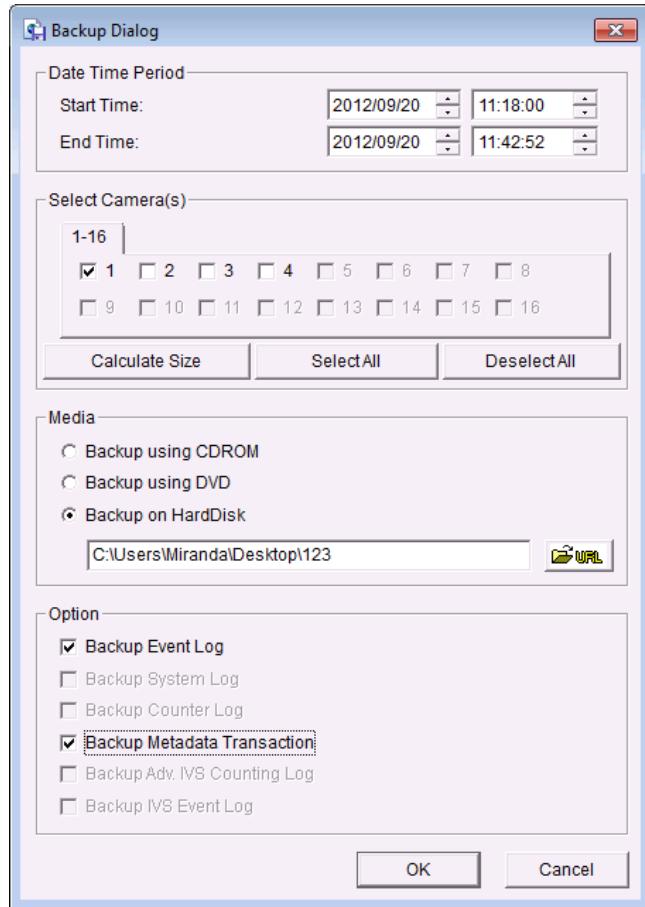

4. Check the **Backup POS Transaction** option.
5. Set the Start Time and End Time you want to backup.
6. Select the cameras you want to backup.
7. Select the directory you want to save the backup data.
8. Click the **Backup** button.
9. The system will then begin backup process automatically.

3.7.2 Backup through Playback System

1. Startup > NVS > Playback System.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.
4. Check the **Backup POS Transaction** option.
5. Set the Start Time and End Time you want to backup.
6. Select the cameras you want to backup.
7. Select the directory you want to save the backup data.
8. Click the **Backup** button.

3.7.3 Backup through Backup System


Please refer to step 1 to 14 of the content of **Backup and Delete Records**, and check the **Backup POS Transaction** option.

4.I/O

4.1 Introduction

4.1.1 System Introduction

We provide remote I/O solution for NVR by connecting SCB-C31 with I/O Box SCB-C24/26/28. Refer to the below architecture, I/O device is connected directly with I/O Box, and input/output signal delivered in RS485 format are converted to Ethernet through SCB-C31. NVR can use the signals to do more sophisticated setup, such as starting recording when input triggered, triggering output as an event happened, and much more.

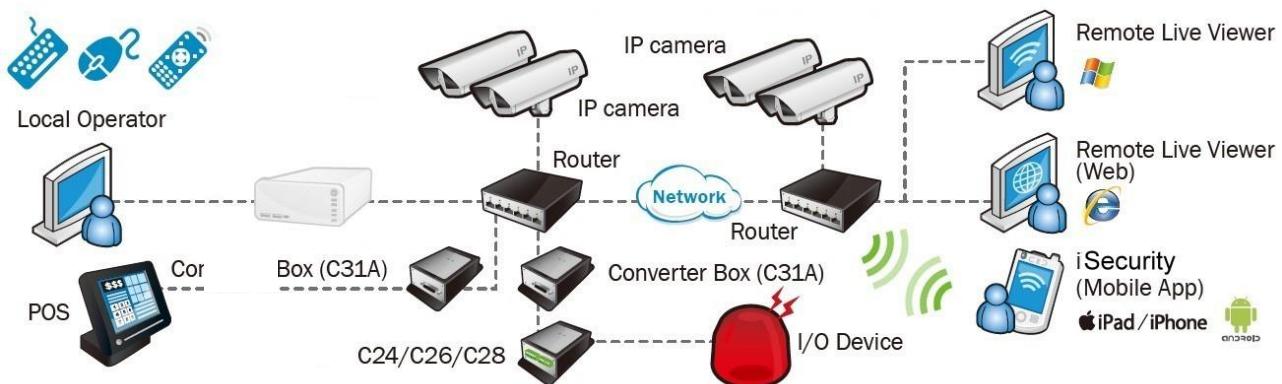


4.1.2 HW Installation

SCB-C24/26/28 must work with SCB-C31 (Ethernet-RS485 converter).

Further, **the C31 Box cannot be used for POS and converter at the same time, and one C31 Box can be paired with one NVR unit only**. Please follow the steps below to configure the devices.

- Step 1: Check the system switch of SCB-C31 is switched to OFF-OFF position.
- Step 2: Connect SCB-C31 with power source.
- Step 3: Connect SCB-C31 with internet by RJ45 LAN cable.
- Step 4: Connect I/O Box with power source.
- Step 5: Connect SCB-C31 and I/O Box with cable, positive connection (**TX+/D+ and DATA+**) and negative connection (**TX-/D- and DATA-**). Take SCB-C31 with I/O Box SCB-C24 for example as below.

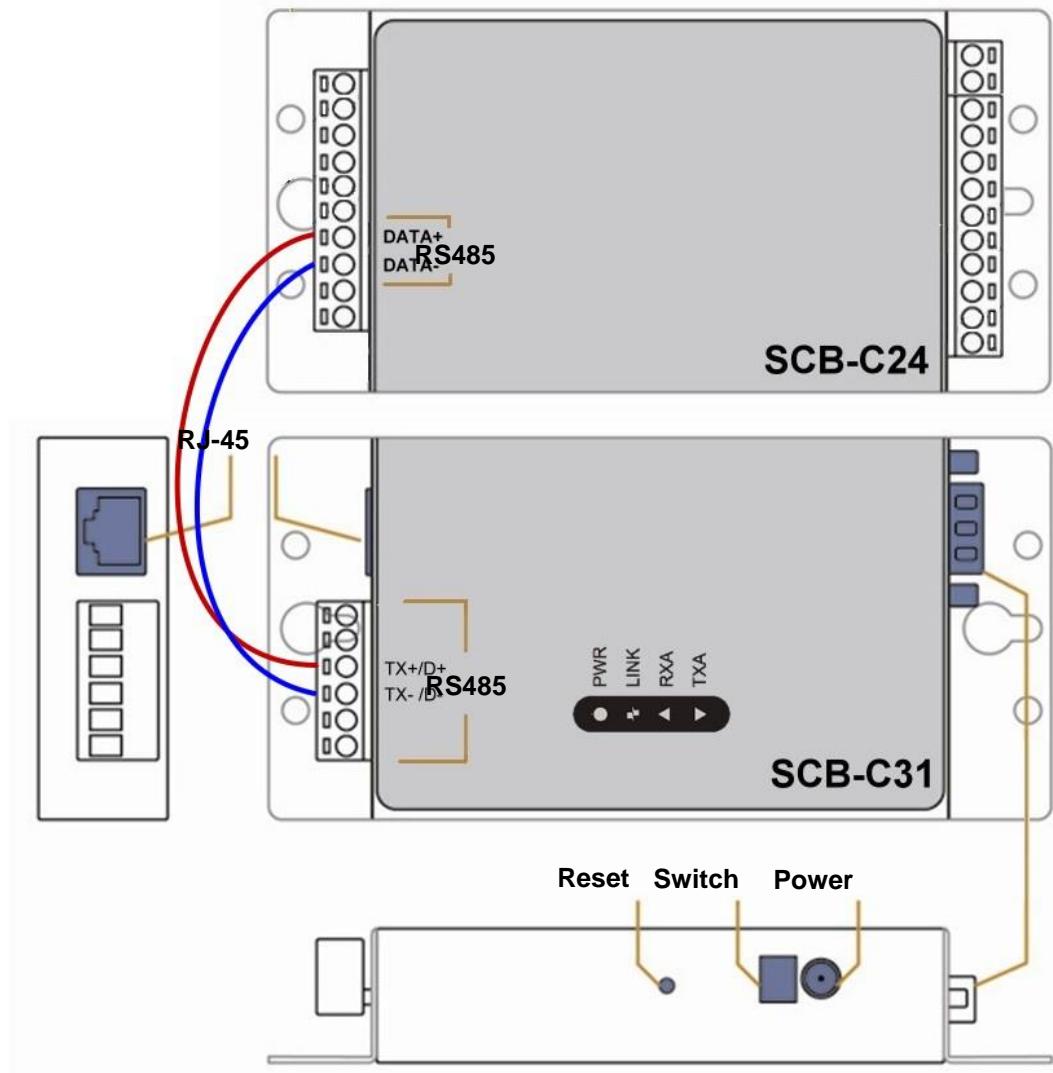

Multiple I/O Boxes can be connected to a single SCB-C31. However, series connection of I/O boxes is forbidden. Furthermore, the default ID for each I/O Box is the same. Please follow the direction to setup I/O Box one by one.

4.1.3 Software Installation – SCB-C31

Step 1: Open Internet Explorer to setup SCB-C31. The default IP address is 192.168.1.1.



Step 2: Setup IP address and port.

1. Static IP Address

2. **Server Listening Port:** The default port is 4000, which is not the port for setting page, but for signal transmission.

The screenshot shows the configuration interface for the SCB-C31. It has two main sections: 'Serial Settings' and 'Network Settings'. In the 'Serial Settings' section, the Data Baud Rate is set to 9600, Data Bits to 8, Data Parity to None, Stop Bits to 1, and Flow Control to None. In the 'Network Settings' section, 'Enable DHCP' is checked, and the Static IP Address is set to 192.168.1.1, Static Subnet Mask to 255.255.255.0, Static Default Gateway to 192.168.1.3, and Static DNS Server to 168.95.1.1. The Connection Type is set to TCP, and the Transmit Timer is set to 30. Under 'Server/Client', the Server is set to 'Server' with a listening port of 4000. The Client is set to 'Destination IP' 192.168.1.2 and 'Destination Port' 4000. There is also an unchecked checkbox for 'Enable Reboot'. At the bottom are 'Apply', 'Reset', and 'Firmware Upgrade' buttons.

Step 3: Click the **Apply** button to activate configuration.




Due to the stability of data transmission, one SCB-C31 can be paired with one NVR unit only.

4.1.4 Software Installation – SCB-C24/26/28


The default ID of I/O Box is identical. To avoid the conflict between Boxes, please connect only one Box with SCB-C31 and execute the setup application to change the ID from the default value (1).

1. Execute IOConfig.exe, type in the IP address and port of SCB-C31, and click the **Scan** button.

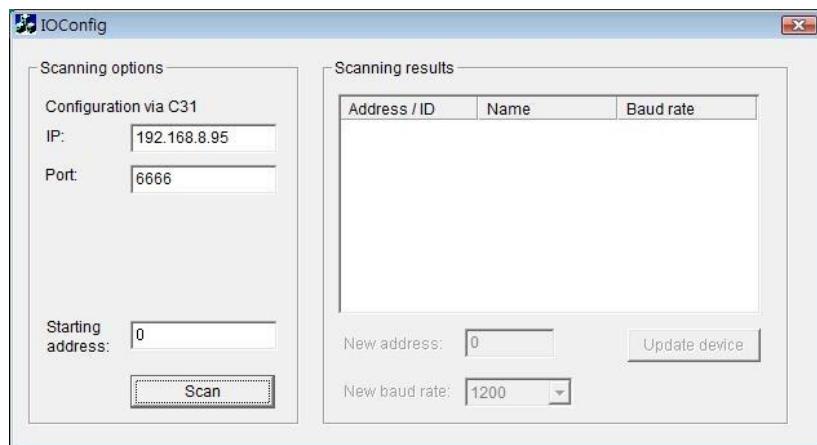


 IOConfig.exe starts scanning the ID from 0 to 255, and it may take around a minute to finish scan.

- When the I/O Box is discovered, click on the item and change the ID from the **New Address** field. Click the **Update device** button to activate the settings.

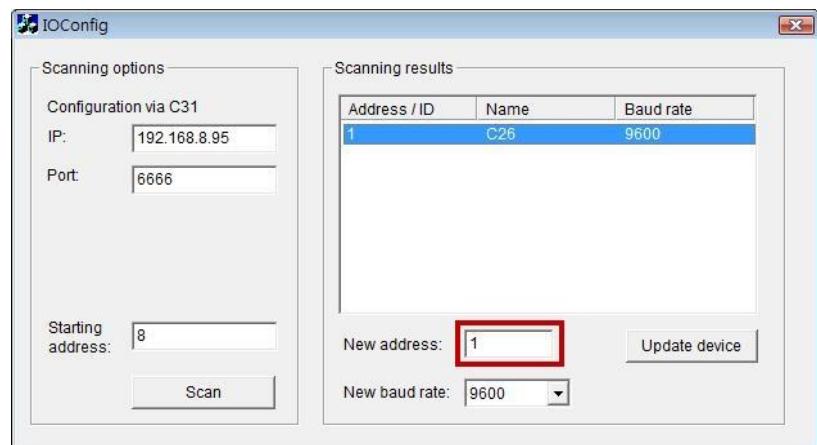

- Scan again to make sure the configuration is validated. In this case, we changed the ID to 10, so we can modify the number of "Starting address" to 10 to save the searching time.

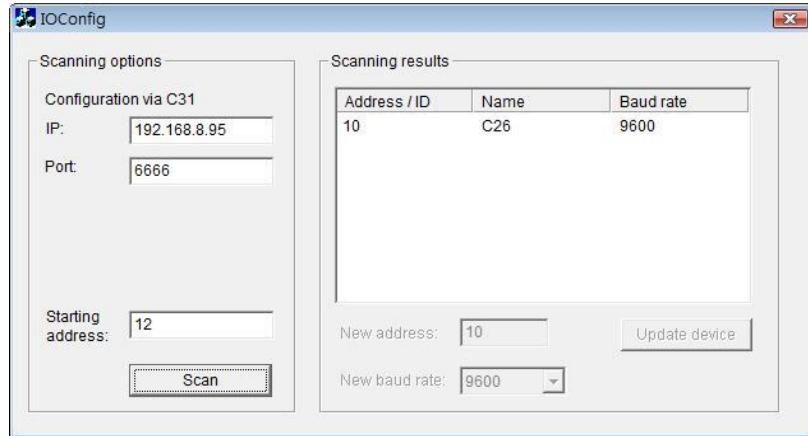

- Refer to the **HW Installation** section to connect other I/O Box and repeat the steps 1 through 3 above to configure more I/O Boxes.

4.2 Software Setup

4.2.1 Add I/O Box

- Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
- Click **POS & I/O / I/O Settings / I/O Box Settings**.
- Enter the information of I/O box.

I/O Settings

I/O Box Settings	I/O Pin Settings														
<input checked="" type="radio"/> I/O Box Settings <table border="1"> <tr><td>Device No.</td><td></td></tr> <tr><td>Device Name</td><td></td></tr> <tr><td>Device Type</td><td>SCB-C31 + SCB-C24</td></tr> <tr><td>IP Address</td><td></td></tr> <tr><td>ID</td><td>Addr:000</td></tr> </table>	Device No.		Device Name		Device Type	SCB-C31 + SCB-C24	IP Address		ID	Addr:000					
Device No.															
Device Name															
Device Type	SCB-C31 + SCB-C24														
IP Address															
ID	Addr:000														
<input type="button" value="Create"/> <input type="button" value="Modify"/>															
<input checked="" type="radio"/> I/O Box List <table border="1"> <thead> <tr><th>No.</th><th>Name</th><th>Type</th><th>IP Address</th><th>Port</th><th>ID</th><th>Delete</th></tr> </thead> <tbody> <tr><td>1</td><td>C Block</td><td>SCB-C28</td><td>192.168.8.2</td><td>4000</td><td>Addr:000</td><td></td></tr> </tbody> </table>	No.	Name	Type	IP Address	Port	ID	Delete	1	C Block	SCB-C28	192.168.8.2	4000	Addr:000		
No.	Name	Type	IP Address	Port	ID	Delete									
1	C Block	SCB-C28	192.168.8.2	4000	Addr:000										
<input type="button" value="Save"/> <input type="button" value="Reset"/>															

- Device No:** The unique ID system distributes in sequence automatically.
- Device Name:** The name of the I/O box.
- Device Type:** The types of I/O box, including SCB-C24, SCB-C26, and SCB-C28.
- IP Address:** The IP Address of SCB-C31.

- **Port**: The transmission port of SCB-C31.
- **ID**: The ID of the I/O box.

4. Click the **Create** button, and the information will be updated in I/O Box List.
5. Repeat steps 3 and 4 to add more I/O boxes in the list.
6. Click the **Save** button to activate the settings. Meanwhile, system will distribute an unique ID to each device.

4.2.2 Modify I/O Box Information

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **POS & I/O / I/O Settings / I/O Box Settings**.
3. Click the I/O box which you want to modify from the list.
4. Modify the information of this I/O box, and click the **Modify** button.
5. Click the **Save** button to activate the settings.

4.2.3 I/O Pin Setting

1. Open Internet Explorer, Mac Safari or Windows Chrome and log in to the unit.
2. Click **POS & I/O / I/O Settings / I/O Pin Settings**.
3. All input and output pins are shown in this page, including the ones from cameras and I/O boxes. Check the box to enable a pin (defaulted), and type a name in the field for each I/O pin.

I/O Settings

I/O Pin Settings					
I/O Box Settings		I/O Pin Settings			
I/O Pin Settings					
Device Name		I/O Pin	Name	Output Duration	Associated Camera
Location 1		<input checked="" type="checkbox"/>	Input #0		Location 1 ▾
		<input checked="" type="checkbox"/>	Output #0	N/A ▾	
I/O BOX 51001(C Block)		<input checked="" type="checkbox"/>	Input #0	Gate	Location 1 ▾
		<input checked="" type="checkbox"/>	Input #1	Lobby	N/A ▾
		<input checked="" type="checkbox"/>	Input #2	Ground	N/A ▾
		<input checked="" type="checkbox"/>	Input #3		N/A ▾
		<input checked="" type="checkbox"/>	Output #0	10 sec. ▾	
		<input checked="" type="checkbox"/>	Output #1	N/A ▾	
		<input checked="" type="checkbox"/>	Output #2	N/A ▾	
		<input checked="" type="checkbox"/>	Output #3	N/A ▾	

Save **Reset**

4. For input pin, you can select an associated camera for it, which will be the communication media for server and client. (e.g. when an input was triggered and pushed a notification to mobile, users can playback the videos of its associated camera.)
5. For output pin, you can configure its duration time to control how long output acts after it's triggered. The duration range is 3 sec~60 sec. N/A stands for no duration time pre-defined, output stops acting when the event stops.
6. Click the **Save** button.



If the box of I/O pin is unchecked, this pin won't be shown on relative application pages. In other words, you cannot do any setting/operation with this pin. See details in next section.

4.3 Relative Configuration and Application

4.3.1 Record on Input Trigger

Refer to [Recording Schedule / Event Setup](#).

4.3.2 Input and Responding Actions

Refer to [I/O Box Input and Responding Action Setup](#).

4.3.3 I/O Control Panel in Live View


Refer to [Live View Control Panel](#).

5. Live view

There are two ways to execute the live view function: with Internet Explorer, Mac Safari or Windows Chrome or with the **Remote Live Viewer** application.

5.1 Internet Explorer


5.1.1 Live View Control Panel

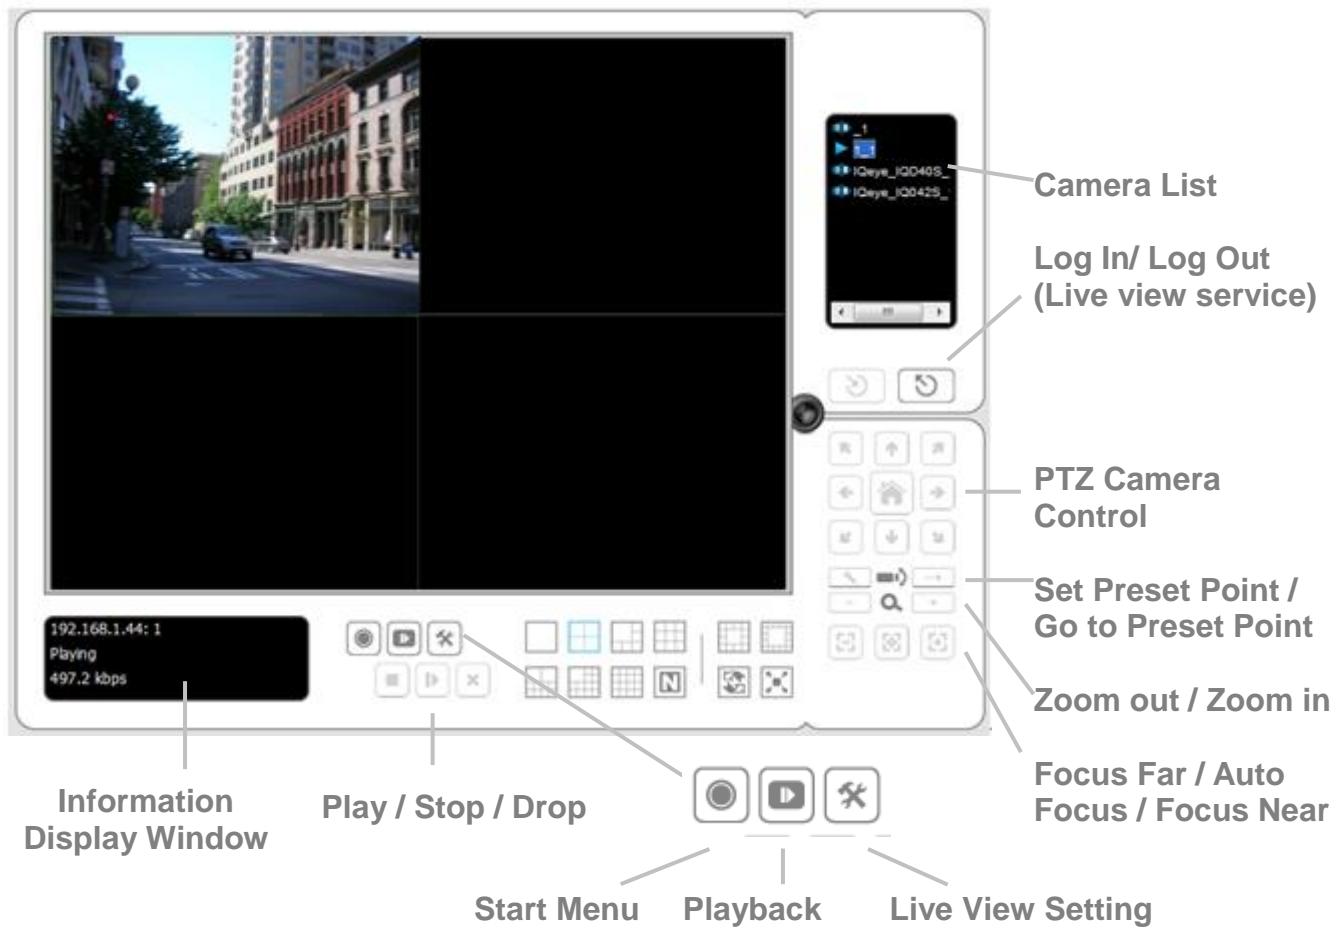


- **PTZ Camera Control:** You may control the camera view by using the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support the PTZ function.
- **Set Preset Point / Go to Preset Point:** Adjust the camera view and click the button to set up this view as preset point. Repeat the process to add more preset points. Click the button to see the preset view.
- **Zoom:** Click the + or - button to zoom in or zoom out the view.
- **Play / Stop / Drop:** Select a camera / video and click this button to play/stop/disconnect a particular channel.
- **Information Display Window:** Display video information including

server name, video current status, and bit rate for a selected channel.


- **Start Menu > E-Map:** Upload map and drag camera or I/O on it to track device location and alarm status with instant response when an event occurred. See details in the chapter of [E-Map](#).
- **Start Menu > I/O Control Panel:** Utilize I/O device function remotely. User can remotely adjust the Output Pins by turning it on or off.

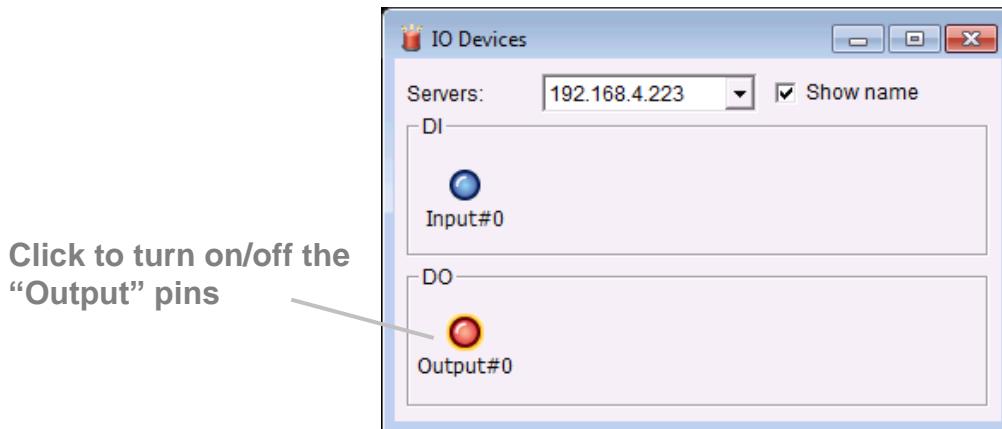

- **Playback:** View playback video remotely.
- **Auto Scan:** Activate auto scan to rotate the channels on the display screen. For instance, you may select to show only 4-split screen on the liveview, while connecting 16 channels to the system. With auto scan function, you are able to see all 16 channels by turns.
- **Layout:** Click to change the multiple-split layout.

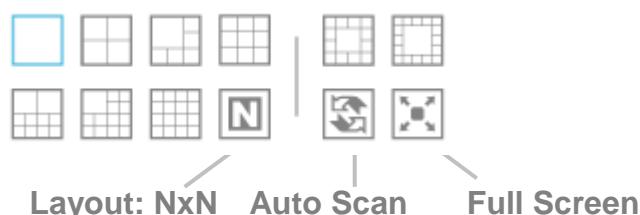

You can right click on the camera screen to enable the following function.

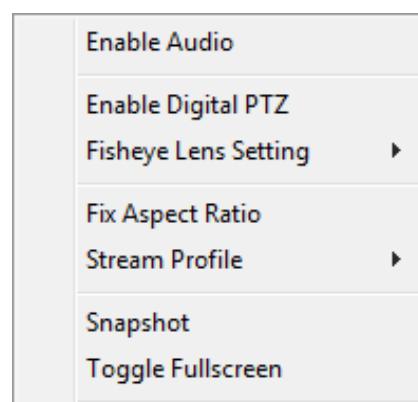

- **Enable Move**: Adjust the current view of camera which supports PT function by dragging the button on the display screen.
- **Enable Digital PTZ**: Click the + or - button to zoom in or zoom out the view. The lower right square flashing on the video grid indicates the correspondent view of the camera.
- **Fisheye Lens Setting**: Select the mode of lens. There are four modes for **Generic Dewarp**, including Original, Rectilinear mode, Quad mode and Dual-view panorama mode; four modes for **ImmerVision**, including Original, PTZ mode, Quad mode and Perimeter mode; and other four modes for **Vivotek Fish Eye**, including Original, Rectilinear mode, Full-view panorama mode, Dual-view panorama mode. Type of modes depends on lens location.
- **Stream Profile**: Select the stream profiles, original, low, minimum.
- **Enable Audio**: Enable audio on active channel(s).
- **Snapshot**: Select the snapshot function to capture a specific video image immediately.
- **Toggle Fullscreen**: Select it to view cameras with full screen. Press "Esc" or right click un-select full screen to go back to the original view.

Also, right click on camera list to duplicate and connect/disconnect designate cameras, and do other functions.




- **Duplicate Camera**: Select the duplicate camera function to create multiple views. The duplicated camera will be shown with green indicator as the right picture. Combine this function with digital PTZ, users are allowed to enlarge different spots and view them in different channels without failing to record the whole view.
- **Connect / Disconnect**: Click to connect or disconnect the designate camera.
- **Login / Logout Server**: Click to login or logout.
- **Connect All / Disconnect All**: Click to connect or disconnect all

cameras.

5.1.2 Live View Setting


1. Open Internet Explorer and log in to the unit.
2. Set the cameras.
3. Click the **Live View** button on the top of the page.
4. Select a camera(s) from the camera list on the right and then drag it to where you wish the image to be displayed.

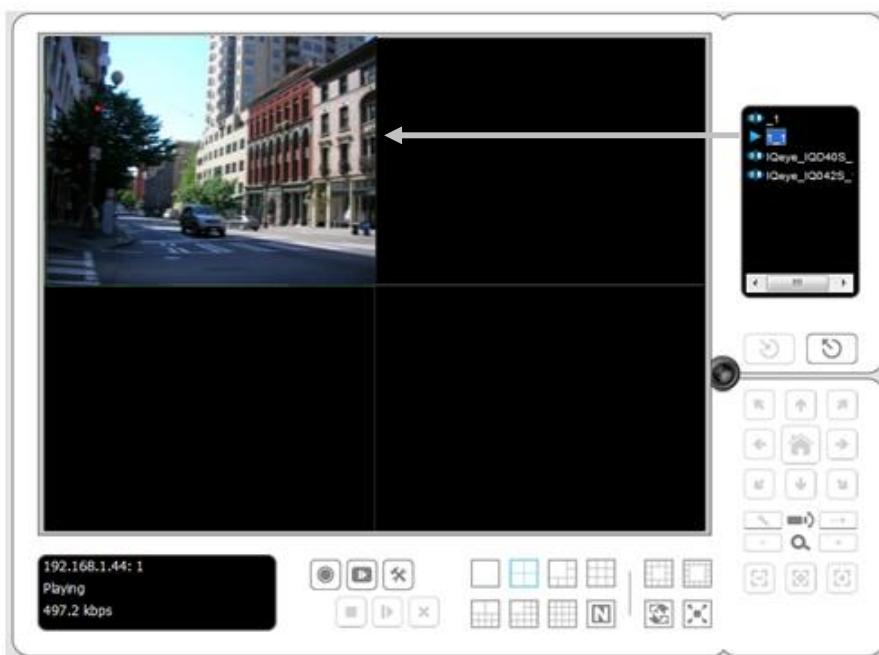

When running Internet Explorer, do not use the function "Open in New Window". Using this function may cause Internet Explorer to become unstable.

5.1.3 General Setting

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **General** tab.

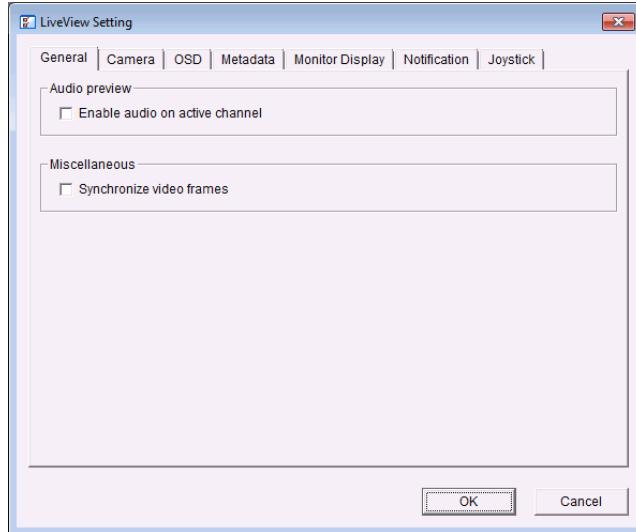


5. Check the **Enable audio on active channel** option to enable audio streaming on active channel. This function synchronizes with right click on camera to enable audio.
6. Check **Synchronize video frames** to avoid the tearing problem occurring in video display while increasing the CPU loading.
7. Click the **OK** button.

5.1.4 Stream Profile Setting

Select the preferred stream type of each camera as default live view profile.


1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Camera** tab.

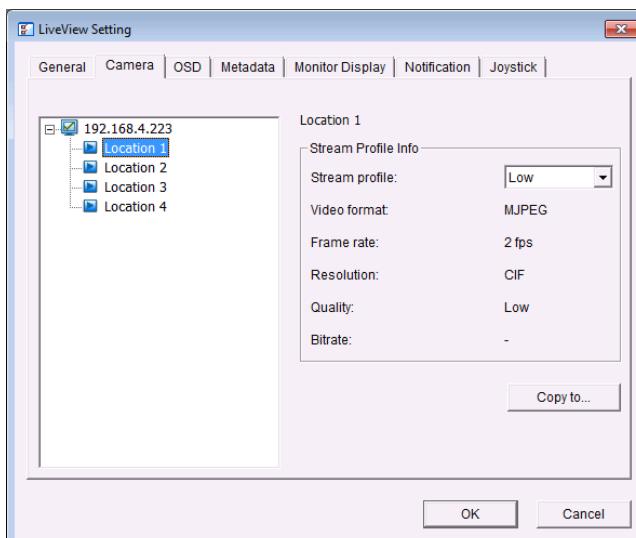

5. Adjust the stream profile of every camera with stream profile enabled in the **setting page**.
6. Click a camera and select its stream profile, and click the **Copy to...** button to apply this profile to other channels.
7. Click the **OK** button.

5.1.5 OSD (On-screen display) Setting


1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **OSD** tab.

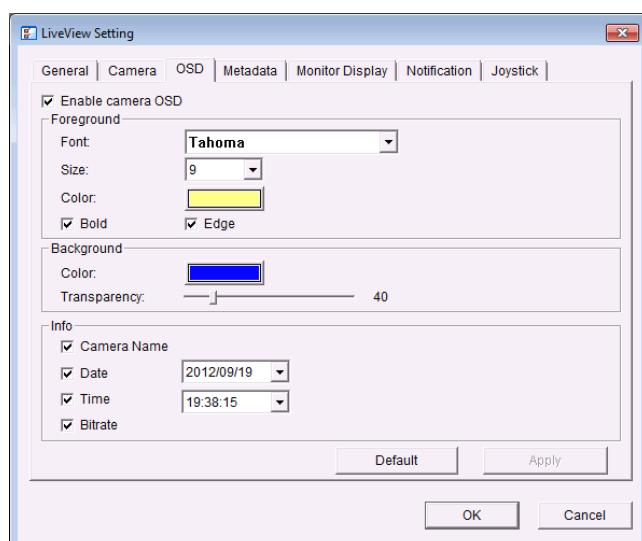

5. Check the **Enable camera OSD** option.
6. Set the foreground and background settings of the OSD.
7. Select which kinds of information will be displayed on the screen.
8. Click the **Apply** button to preview the result.
9. Click the **Default** button to back to the default settings if necessary.
10. Click the **OK** button.

5.1.6 Monitor Display Setting


1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Monitor Display** tab.

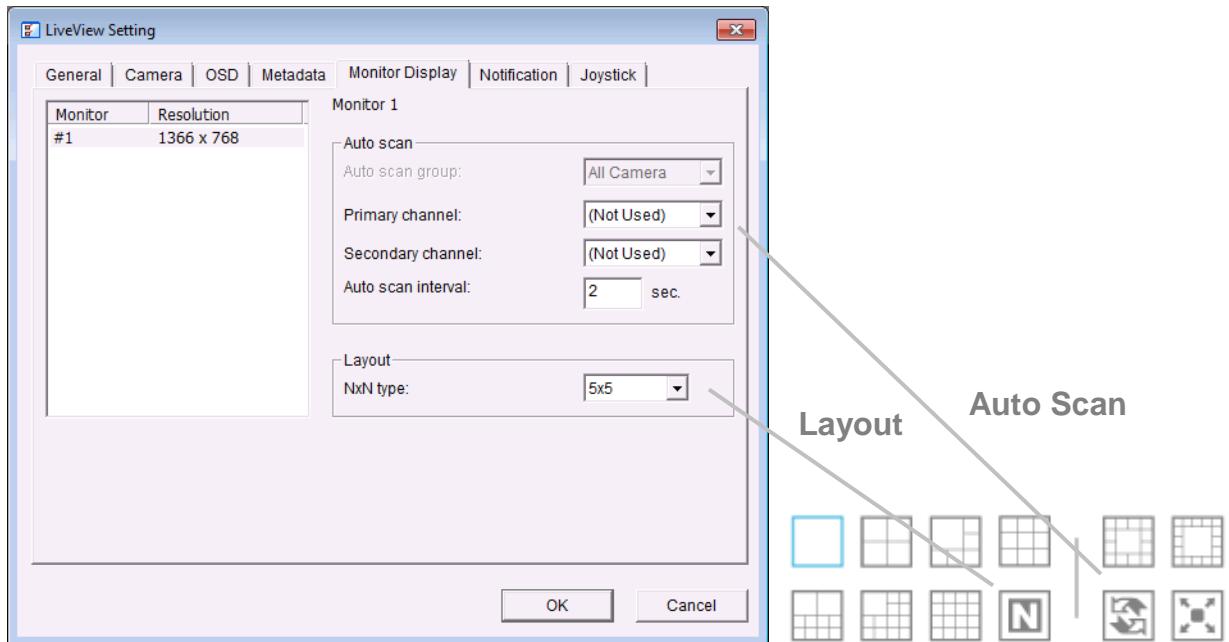

5. Select **Primary channel** which will always be on the screen when activating auto scan; while select **Secondary channel** which has second priority when activating auto scan. Enter the time interval for auto scan.
6. Select the screen division of NxN type.
7. Click the **OK** button.

5.1.7 Notification

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Notification** tab.

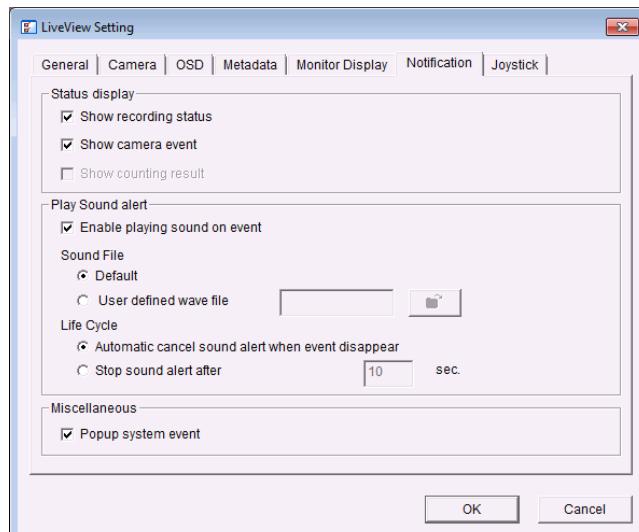


5. Check **Show recording status** to show the crystal ball with recording status on monitor display.
6. Check **Show camera event** to display the words of detected camera event on the correspondent screen.
7. Check the **Enable playing sound on event** option. Select sound file, default sound or user defined sound (.wav), and define the cycle.
8. Check **Popup system event** to pop up system event message dialog as a warning when a system event occurred.
9. Click the **OK** button.




The function only activates on event, which means you have to setup camera motion, camera I/O and I/O Box I/O as an event. Refer to [**Event & Action Management**](#) to do the setting.

5.1.8 Set up Joystick Control

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Joystick** tab.

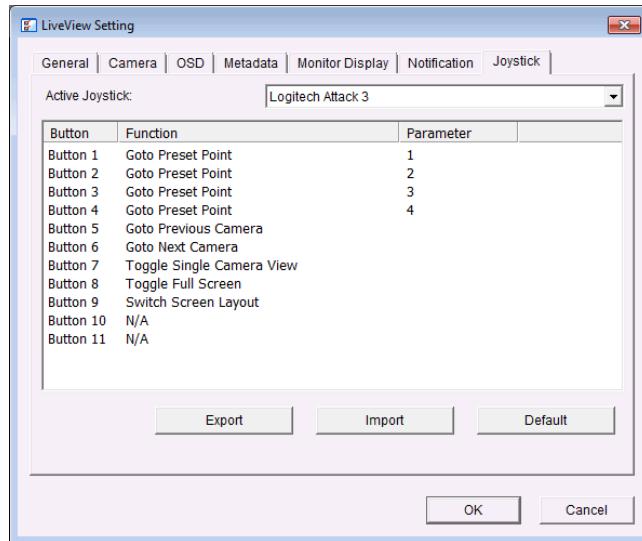

- **Function:** You can choose the function from the drop-down menu for the button of the joystick.

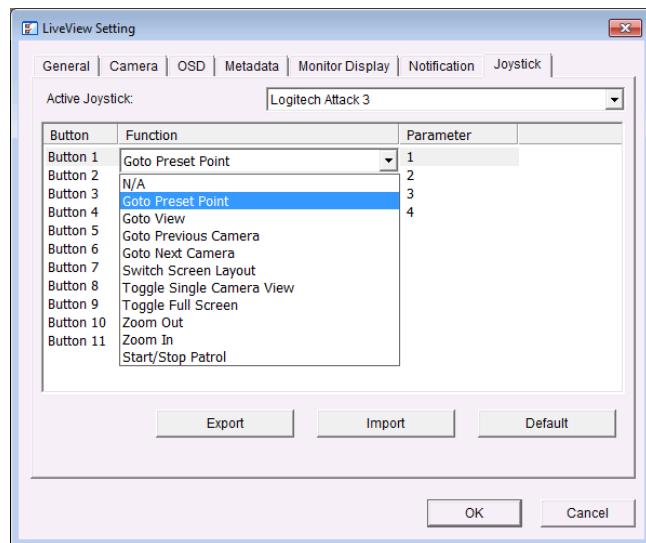


- **Parameter:** Choose the preset point from the drop-down menu.
- **Default:** Click to back to default setting.
- **Import:** Click to import the settings.
- **Export:** Click to export the settings.

5. Click the **OK** button.

5.2 Remote Live Viewer Application


5.2.1 Remote Live Viewer Application Control Panel

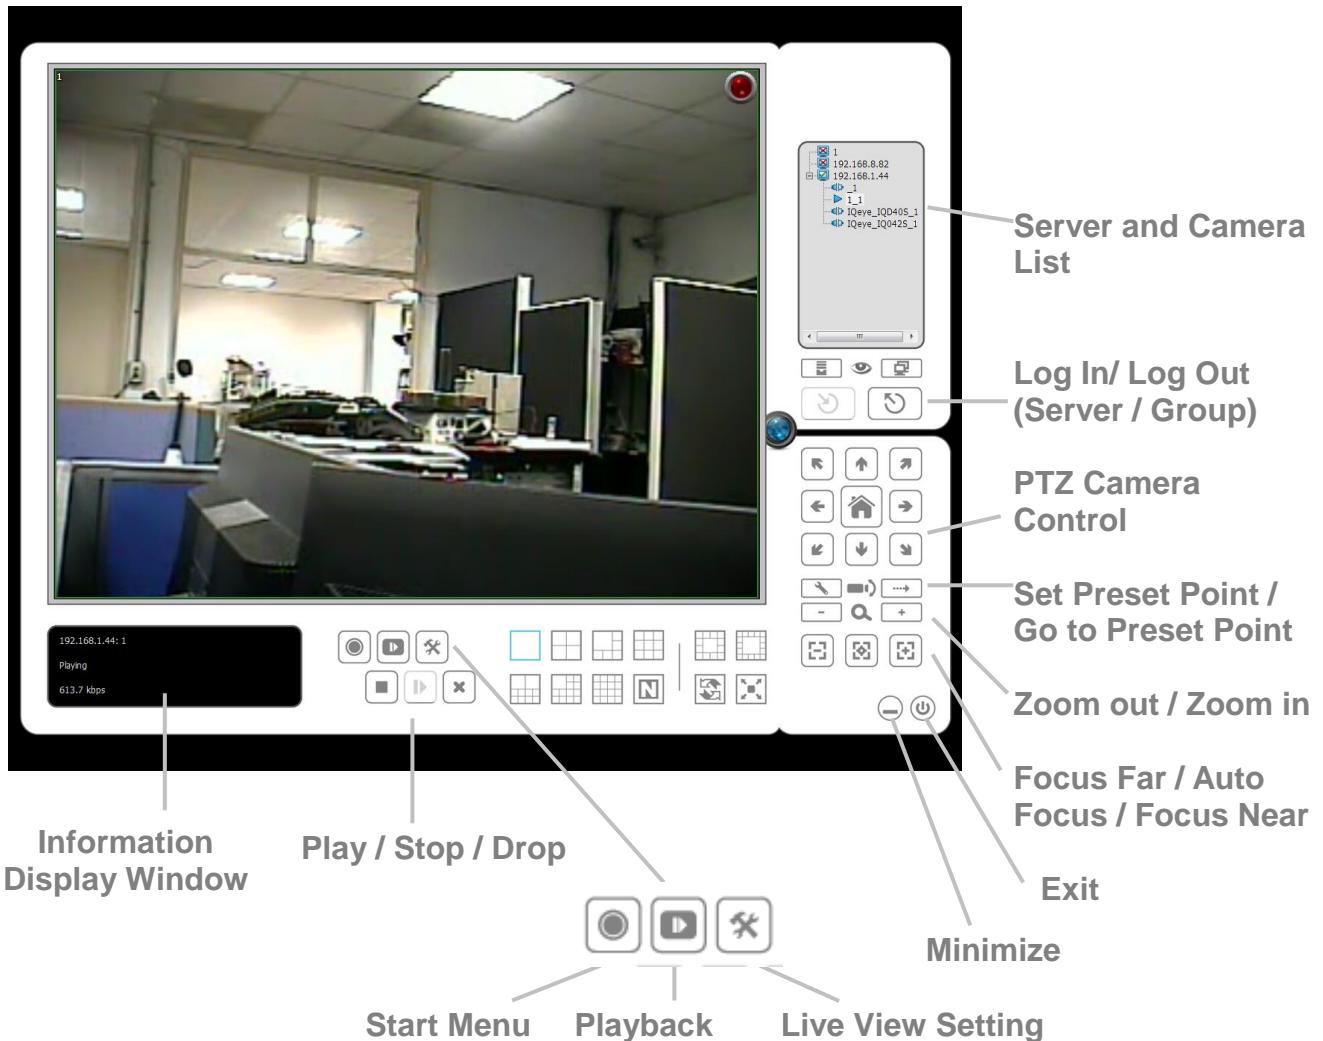


- **PTZ Camera Control:** You may control the camera view by using the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support the PTZ function.
- **Set Preset Point / Go to Preset Point:** Adjust the camera view and click the button to set up this view as preset point. Repeat the process to add more preset points. Click the button to see the preset view.
- **Zoom:** Click the + or - button to zoom in or zoom out the view.
- **Minimize:** Minimize the Remote Live Viewer window.
- **Exit:** Shut down the application.
- **Play / Stop / Drop:** Select a camera/ video and click this button to play/stop/disconnect a particular channel.
- **Information Display Window:** Display video information including

server name, video current status, and bit rate for a selected channel.

- **Start Monitor > Monitor:** Select Open Monitor to append monitor to view more live videos on multiple monitors.
- **Start Monitor > E-Map:** Upload map and drag camera or I/O on it to track device location and alarm status with instant response when an event occurred. See details in the chapter of [E-Map](#).
- **Start Monitor > I/O Control Panel:** Utilize I/O device function remotely. User can remotely adjust the Output Pins by turning it on or off.

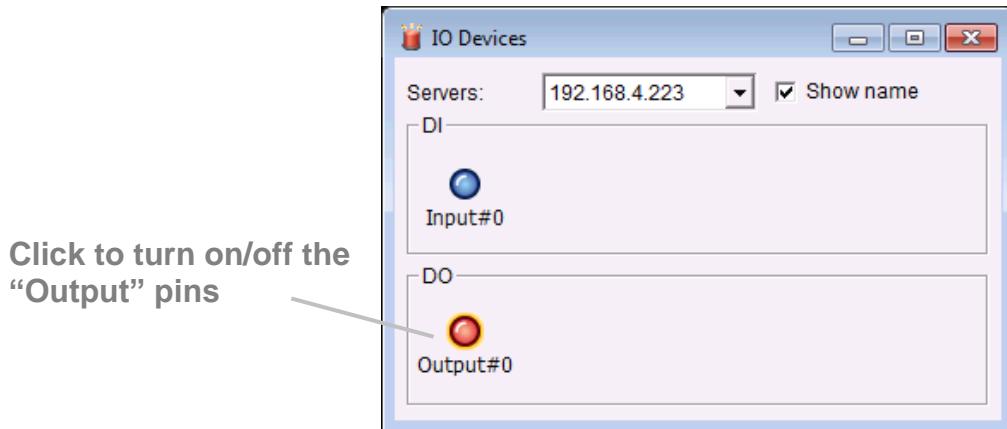

- **Playback:** View playback video remotely.
- **Auto Scan:** Activate auto scan to rotate the channels on the display screen. For instance, you may select to show only 4-split screen on the liveview, while connecting 16 channels to the system. With auto scan function, you are able to see all 16 channels by turns.
- **Layout:** Click to change the multiple-split layout.

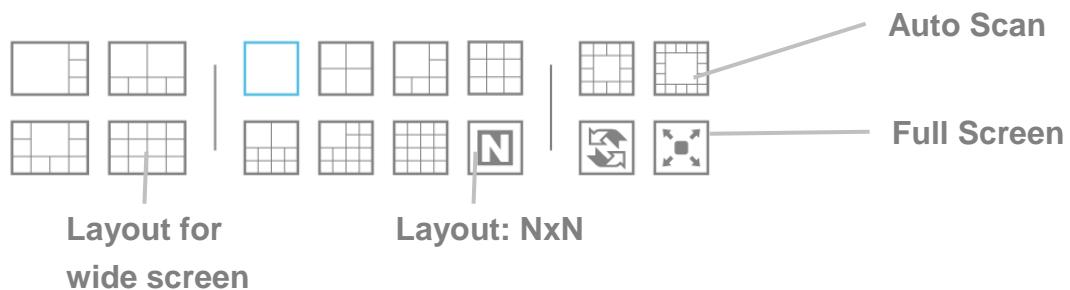

You can right click on the camera screen to enable the following function.



- **Enable Move:** Adjust the current view of camera which supports PT function by dragging the button on the display screen.
- **Enable Digital PTZ:** Click the + or - button to zoom in or zoom out the view. The lower right square flashing on the video grid indicates the correspondent view of the camera.
- **Fisheye Lens Setting:** Select the mode of lens. There are four modes for **Generic Dewarp**, including Original, Rectilinear mode, Quad mode and Dual-view panorama mode; four modes for **ImmerVision**, including Original, PTZ mode, Quad mode and Perimeter mode; and other four modes for **Vivotek Fish Eye**, including Original, Rectilinear mode, Full-view panorama mode, Dual-view panorama mode. Type of modes depends on lens location.
- **Stream Profile:** Select the stream profiles, original, low, minimum.
- **Enable Audio:** Enable audio on active channel(s).
- **Snapshot:** Select the snapshot function to capture a specific video image immediately.
- **Toggle Fullscreen:** Select it to view cameras with full screen. Press "Esc" or right click un-select full screen to go back to the original view.


Also, right click on camera list to duplicate and connect/disconnect designate cameras, and do other functions.




- **Duplicate Camera:** Select the duplicate camera function to create multiple views. The duplicated camera will be shown with green indicator as the right picture. Combine this function with digital PTZ, users are allowed to enlarge different spots and view them in different channels without failing to record the whole view.
- **Connect / Disconnect:** Click to connect or disconnect the designate camera.
- **Login / Logout Server:** Click to login or logout.
- **Connect All / Disconnect All:** Click to connect or disconnect all cameras.

5.2.2 Unit Connection Setting

1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.

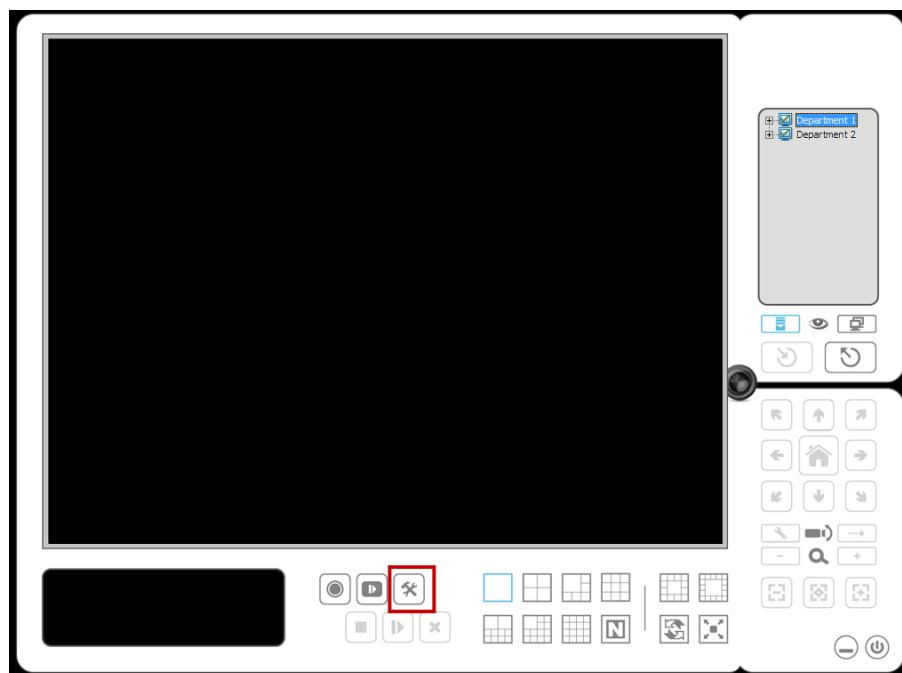


3. Click the **Server** tab.
4. Insert the unit name.

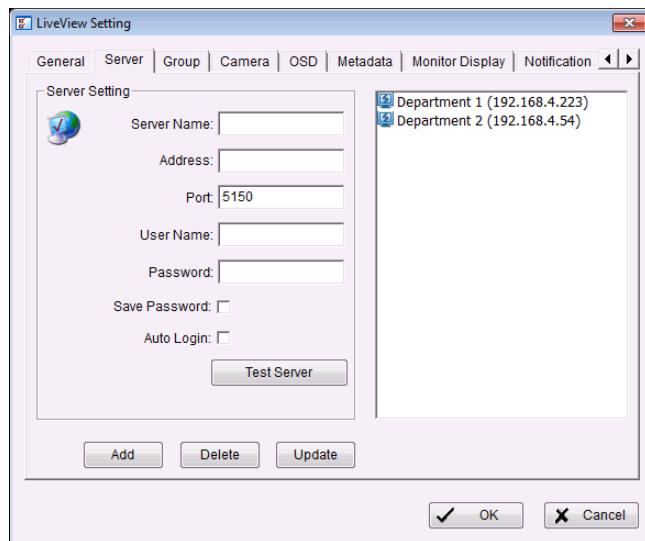


5. Insert the IP address.
6. Modify the port if necessary.
7. Insert the username.
8. Insert the password.
9. Check the **Save Password / Auto login** option.
10. Click the **Test Server** button to test the connection between the local application and the remote unit.
11. Click the **Add** button to add this unit into your remote server list.
12. Click the **OK** button.

5.2.3 General Setting

1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.

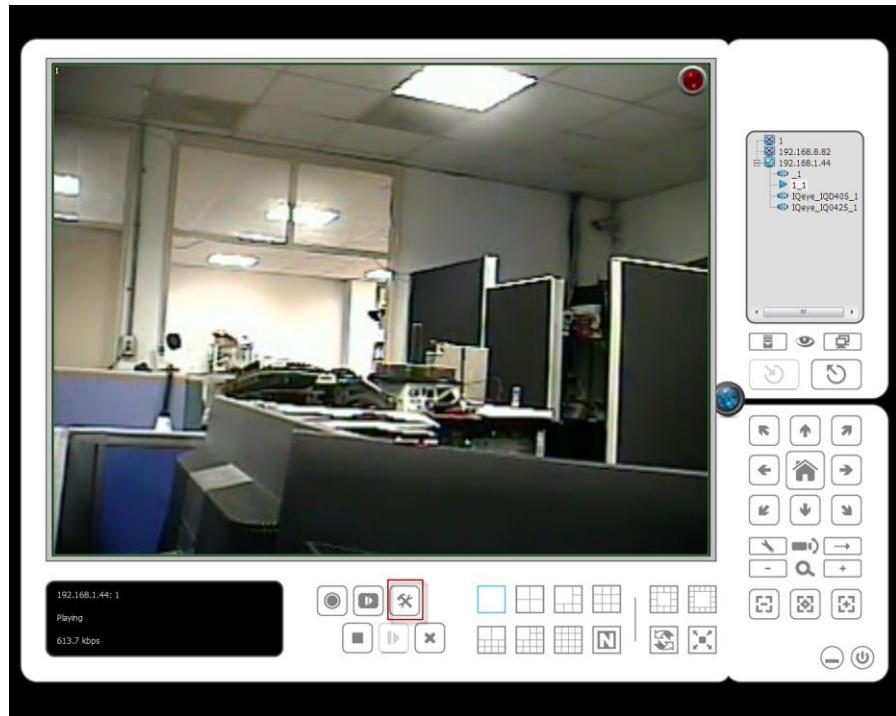

3. Click the **General** tab.

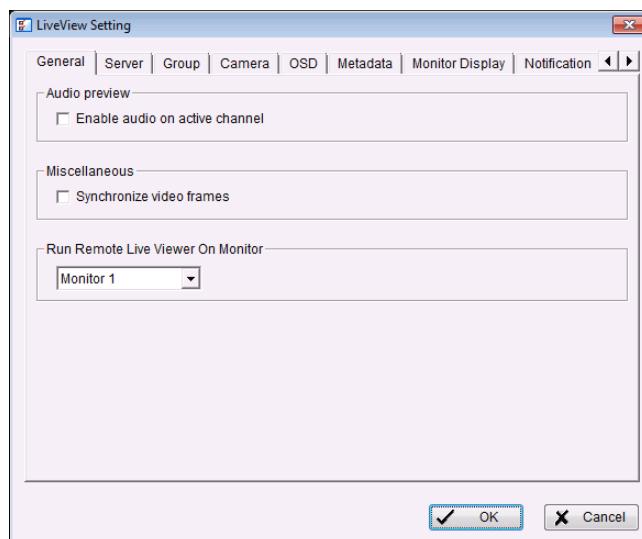


4. Check the **Enable audio on active channel** option to enable audio streaming on active channel. This function synchronizes with right click on camera to enable audio.
5. Check **Synchronize video frames** to avoid the tearing problem occurring in video display while increasing the CPU loading.
6. Select monitor(s) to run LiveView.
7. Click the **OK** button.

5.2.4 Camera Group Setting

You can put different cameras into the same group.

1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Group** tab.

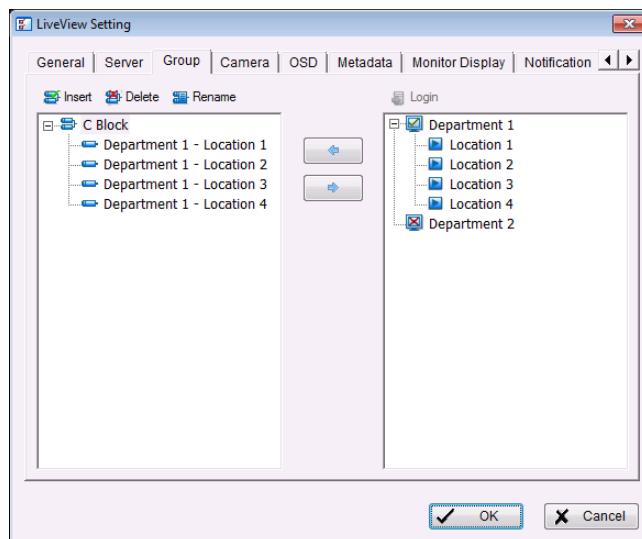

4. Log in to all the servers that contain the camera(s) you would like to put into the group(s).
5. Click the **Insert** button to create a new group.
6. Name this group.
7. Highlight the camera(s) that you would like to add into this group and then click the <-- button.
8. Repeat step 6 to establish the group.
9. Repeat steps 3 through 7 to establish other groups.
10. Click the **OK** button.


5.2.5 Delete/ Rename Camera Groups

1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Group** tab.
4. Click the group which you want to modify.
5. Click the **Delete** or **Rename** button to remove or rename that group.
6. Repeat steps 3 and 4 to modify other groups.
7. Click the **OK** button.

5.2.6 Stream Profile Setting

Select the preferred stream type of each camera as default live view profile.


1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Camera** tab.

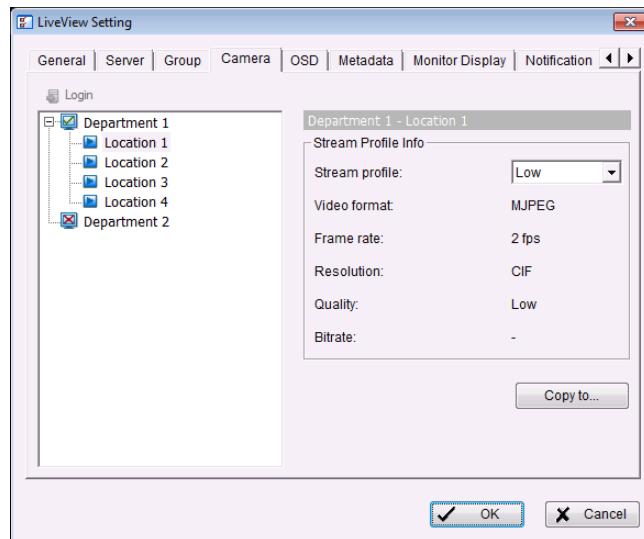

4. Adjust the stream profile of every camera with stream profile enabled in the **setting page**.
5. Click a camera and select its stream profile, and click the **Copy to...** button to apply this profile to other channels.
6. Click the **OK** button.

5.2.7 OSD (On-screen display) Setting


1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **OSD** tab.

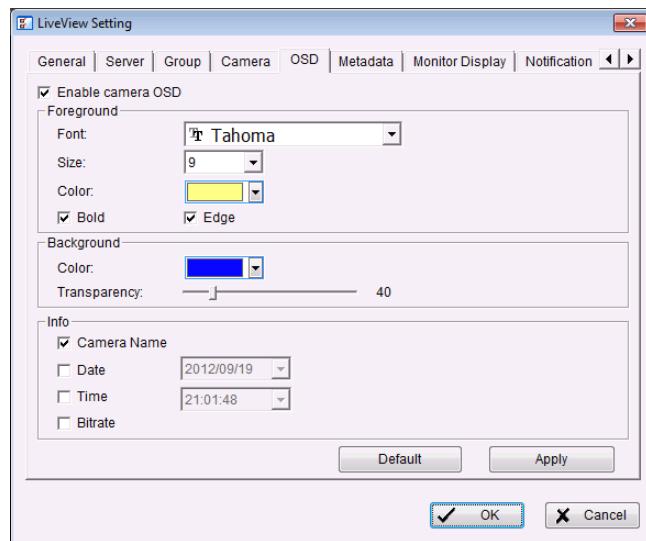

4. Check the **Enable camera OSD** option.
5. Set the foreground and background settings of the OSD.
6. Select which kinds of information will be displayed on the screen.
7. Click the **Apply** button to preview the result.
8. Click the **Default** button to back to the default settings if necessary.
9. Click the **OK** button.

5.2.8 Monitor Display Setting


1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Monitor Display** tab.

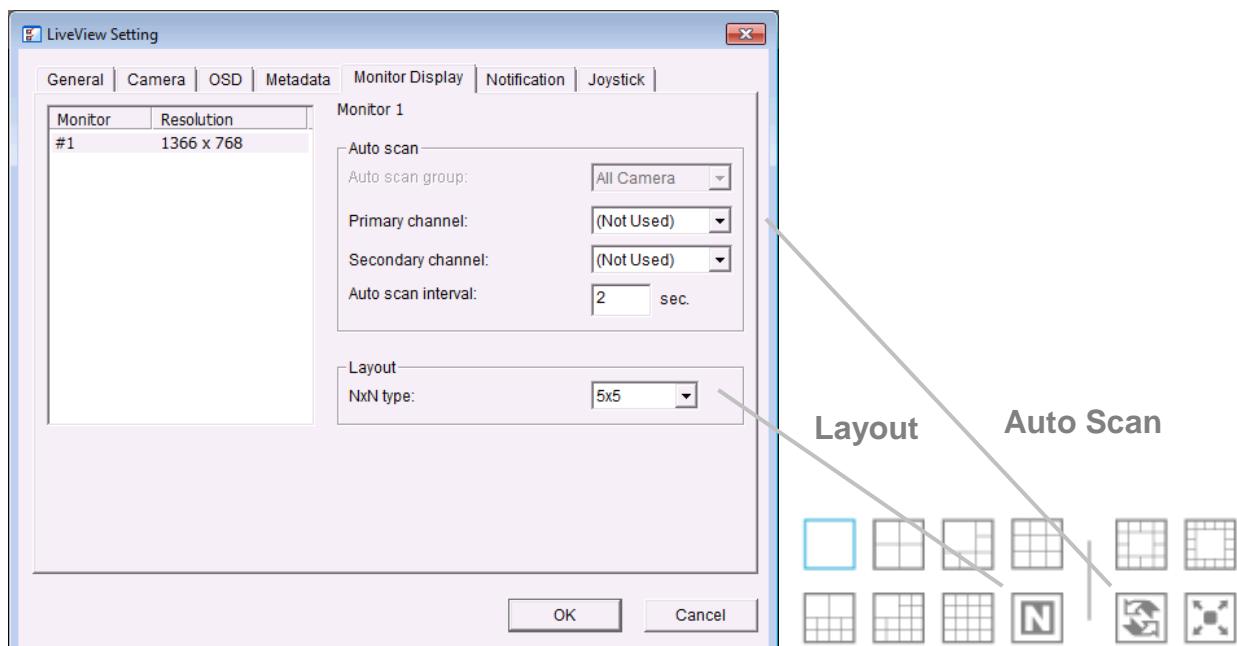

4. Select appointed server group to activate auto scan.
5. Select **Primary channel** which will always be on the screen when activating auto scan; while select **Secondary channel** which has second priority when activating auto scan. Enter the time interval for auto scan.
6. Select the screen division of NxN type.
7. Click the **OK** button.

5.2.9 Notification

1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Notification** tab.

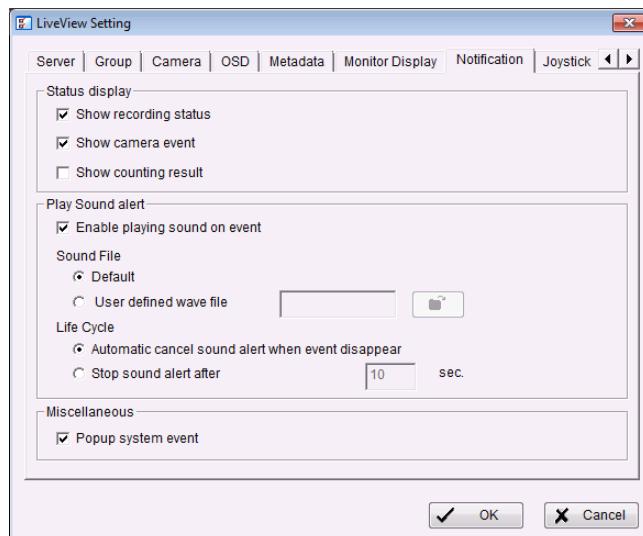


4. Check **Show recording status** to show the crystal ball with recording status on monitor display.
5. Check **Show camera event** to display the words of detected camera event on the correspondent screen.
6. Check the **Enable playing sound on event** option. Select sound file, default sound or user defined sound (.wav), and define the cycle.
7. Check **Popup system event** to pop up system event message dialog as a warning when a system event occurred.
8. Click the **OK** button.


	The “playing sound” function only activates on event, which means you have to setup camera motion, camera I/O and I/O Box I/O as an event. Refer to <u>Event & Action Management</u> to do the setting.
--	---

5.2.10 Set up Joystick Control

1. Startup > NVS > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Joystick** tab.

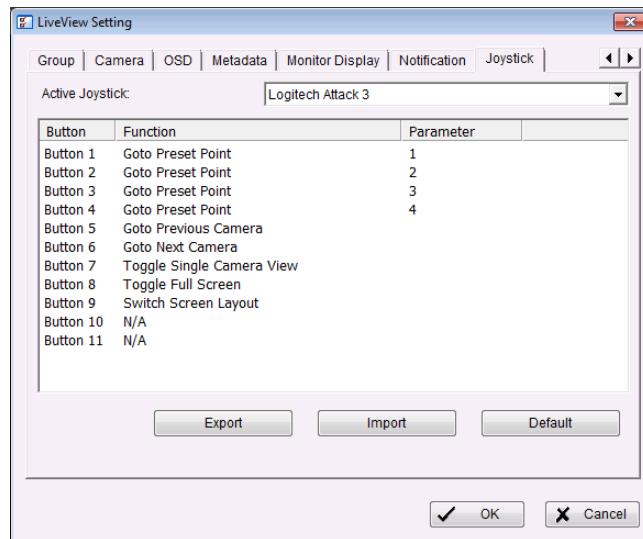

- **Function:** You can choose the function from the drop-down menu for the button of the joystick.

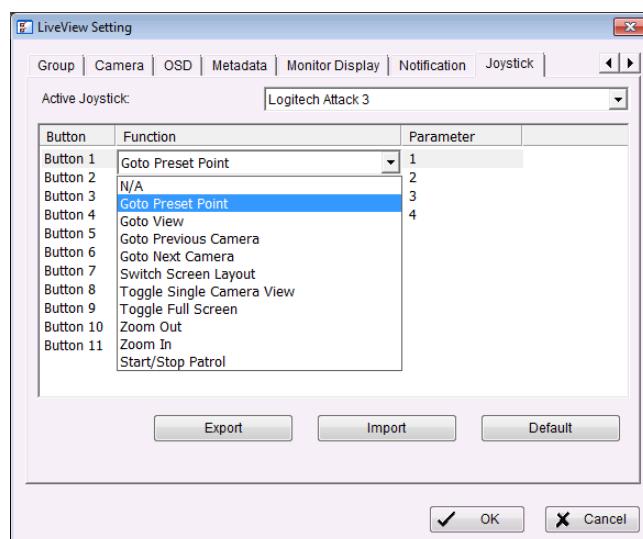

- **Parameter:** Choose the preset point from the drop-down menu.
- **Default:** Click to back to default setting.
- **Import:** Click to import the settings.
- **Export:** Click to export the settings.

4. Click the **OK** button.

5.2.11 Set up Remote Live Viewer

1. Startup > NVS > Remote Live Viewer.
2. Click the unit you wish to access in your remote server list.
3. Click the **LOG IN** button to access your unit.
4. Select a camera(s) from the camera list on the right and then drag it to where you wish the image to be displayed.

6. E-Map

There are two ways to execute the live view function: by Internet Explorer or by **Remote Live Viewer** application.

With E-map, user can easily track the device location and alarm status with instant response when an event occurs. The arrows and lightening icon on E-map represent cameras and I/O devices. These icons will turn red as being triggered by alarms.


There are two modes in E-map application, Edit Mode and Browse Mode.

-  **Edit Mode**: The function buttons on the bottom of this E-map dialog will be active. Users can add/edit/delete maps and indicators of devices.
-  **Browse Mode**: Users are not allowed to do any configuration but check the map hierarchies and device list to see indicators and related information.

6.1 Internet Explorer

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **Start Menu** button and select **Open E-Map**.

6.1.1 E-Map Control Panel

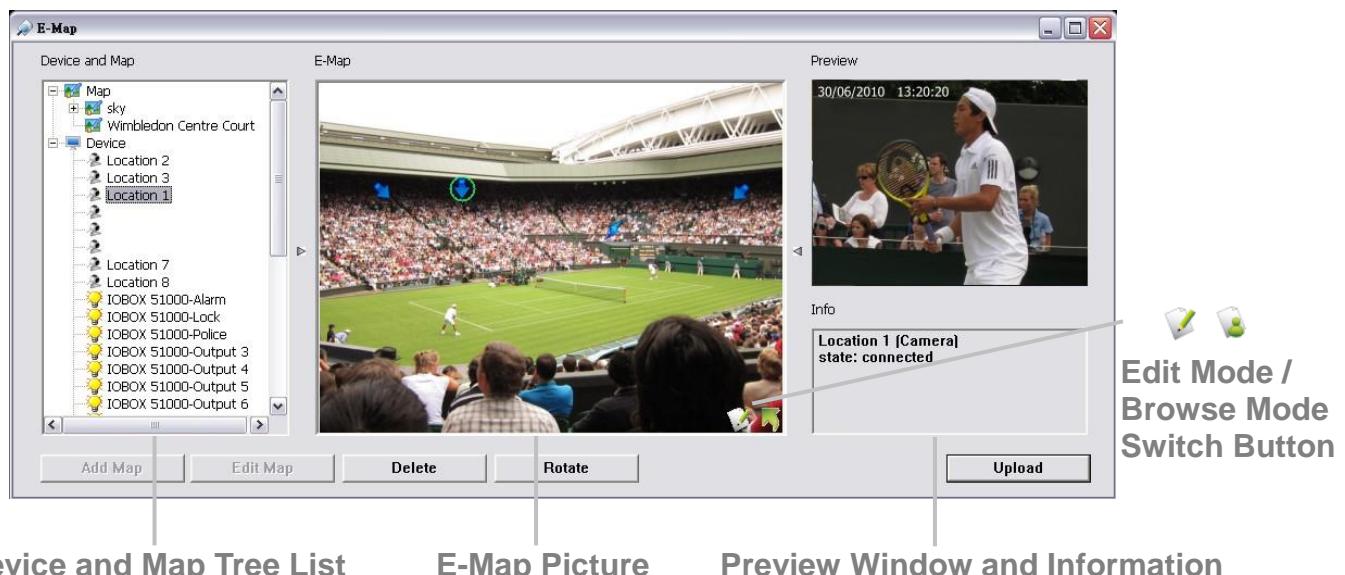

-  **Map**: Select a map you want to show on E-map Window.
-  **Camera**: Select the camera to see preview video or mark indicator on

E-map.

- **⚡ Digital Input:** Select it to highlight the device with green ring on map and show status on Information Window. If the Digital Input is from IP camera, the preview window will display live video of the camera.
- **💡 Digital Output:** Select it to highlight the device with green ring on map and show status on Information Window. If the Digital Output is from IP camera, the preview window will display live video of the camera.
- **gMaps Map Indicator:** Clicking the indicator will lead to the next map layer. If you want to move to the upper layer, select it by mouse directly or click  icon on the map.
- **⬇ Camera Indicator:** The indicator of cameras dragged from Device and Map Tree List to show preview video and related information. When event occurs, the color of indicator will turn red.
- **⚡ Digital I/O Indicator:** The indicator of I/O devices dragged from Device and Map Tree List to show related information. When event occurs, the color of indicator will turn red.
- **Information Window:** The window shows the related information of each indicator.
 - **Map:** Show map name.
 - **Camera:** Show camera name and connecting status.
 - **Digital Input:** Show Digital Input name and status (0 or 1).
 - **Digital Output:** Show Digital Output name and status (0 or 1).

6.1.2 Add Map

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Right click on the Map icon  in Device and Map Tree List to obtain the option menu to add map, or just click the **Add Map** button to configure.



3. Select a map file and insert a name. Click the **OK** button, and then the map you added appears in the Device and Map Tree List.
4. The map indicator  appears on the upper left of map. Drag it to the position you want on appointed map.

5. Repeat steps 2 through 4 to add more maps.
6. Click the **Upload** button to activate all the settings.



The maximum file size of each map is 500KB. There are 10 layers of map, and the map capacity of each layer is 10.

6.1.3 Edit Map

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Right click on the Map icon  in Device and Map Tree List to obtain the option menu to edit map, or just click the **Edit Map** button to configure.
3. Repeat step 2 to edit more maps.
4. Click the **Upload** button to activate all the settings.

6.1.4 Delete Map

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Right click on the Map icon  in Device and Map Tree List to obtain the option menu to delete map, or just click the **Delete** button.
3. Repeat step 2 to delete more map.
4. Click the **Upload** button to activate all the settings.


6.1.5 Add/Rotate Device Indicator

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Select the map which you want to add device indicator on.
3. Select a device from list and directly drag it to the desired location on the map.
4. Select a camera indicator and right click on the indicator or click the **Rotate** button to adjust the direction of camera indicator if needed.
5. Repeat steps 2 and 4 to add more indicators on.
6. Click the **Upload** button to activate all the settings.

6.1.6 Delete Device Indicator

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Select the indicator and right click on the indicator or click the **Delete** button.
3. Repeat step 2 to delete more indicators.
4. Click the **Upload** button to activate all the settings.

6.1.7 Layout Adjustment

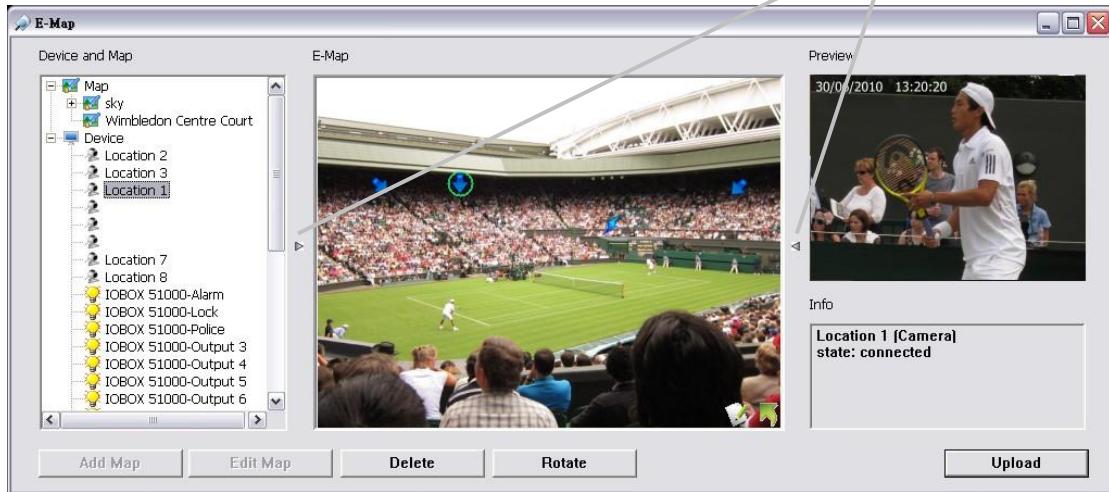

- ► ◄ **Adjust the Layout:** Click the triangular indicator to hide the Device and Map Tree List / Preview and Information Window on right and left side of the window. Click the indicator again to back to the default.
- ☒ **Maximize the Map:** Click the icon on the upper right to get the full screen display of E-map.

6.1.8 Relative Configuration and Application

When an event occurs, related E-map pops up to indicate the location of this event. Please check the **Notification** function for details.

6.2 Remote Live Viewer Application

1. Startup > NVS > Remote Live Viewer.
2. Click the **Start Monitor** button and select Open E-Map.

6.2.1 E-Map Control Panel



Device and Map Tree List

E-Map Picture

Preview Window and Information

Edit Mode /
 Browse Mode
Switch Button

- **Server List:** Select a server to display the E-map of the server.




The E-Map function of Remote Live Viewer is quite similar with the one in Internet Explorer, so you can refer to the section of [Internet Explorer](#) for the details.

7. Playback

There are two ways to execute the playback function: with Internet Explorer or with the **Playback System** application.

7.1 Internet Explorer

7.1.1 Playback Control Panel

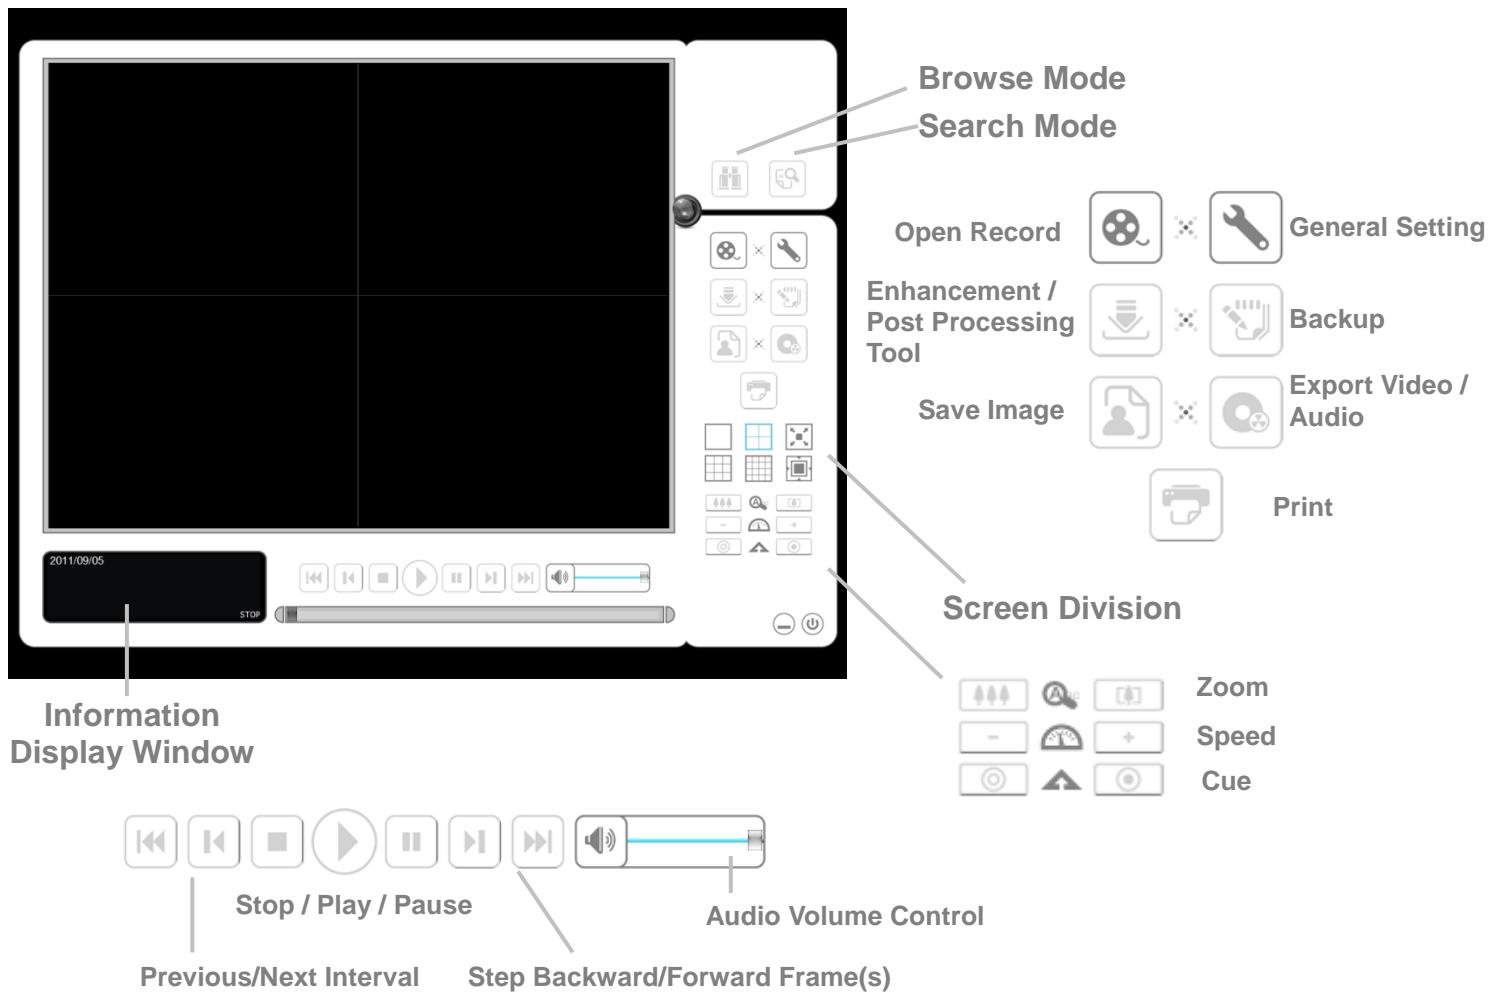

- **Information Display Window**: Displays video date and time, cue-in / cue-out point times, and speed.
- **Audio Volume Control**: Adjust the sound level.
- **Screen Division**: Allocate the sub-screen display by clicking on the desired layout icon. To switch to single camera display, double click a particular sub-screen. Double click the screen again to regain previous screen division layout.
- **Browse Mode**: Play the recorded video when in Search Mode.

- **Open Record:** Click the **Open Record** button to access the Date-Time Panel and select the video records which you want to review.
- **General Setting**
 - **Record Display**
 - Calendar View: view the Record Display Window as a calendar.
 - List Control: view the Record Display Window as a list control.
 - **Play**
 - Play when open: check this option to set the system to start playing the video clip every time a record is withdrawn.
 - Auto-skip when recording in motion-only mode: check this option to set up the system to automatically skip to the points where there were motions recorded.
 - Next interval: set the interval with which the video goes forward when you click the **Next** button on the control panel.
 - Previous interval: set the interval with which the video goes backward when you click the **Previous** button on the control panel.
 - **Capture Image**
 - Save in clipboard: the image will be saved in the clipboard and can be pasted to other application software.
 - Manually save the image file: you can manually select where you want to save the image, name the saved file, and choose the format you want to save the image.
 - Automatically save the image file: by presetting a path/URL and the image format, the system will automatically save the image accordingly when you click the **Save Image** button on the control panel.


You can right click on the camera screen to enable the following function.



- **Toggle Fullscreen:** Select it to view cameras with full screen. Press "Esc" or right click un-select full screen to go back to the original view.
- **Enable ImmerVision PTZ:** Adjust PTZ in PTZ mode.
- **ImmerVision Lens Setting:** Select the mode of lens, original, PTZ mode, Quad mode and Perimeter mode.
- **Enable Vivotek Fish Eye PTZ:** Adjust PTZ in PTZ mode.
- **Vivotek Fish Eye Setting:** Select the mode of lens, Original, Rectilinear

mode, Full-view panorama mode, Dual-view panorama mode. Type of modes depends on lens location.

7.1.2 Search the Recorded Video

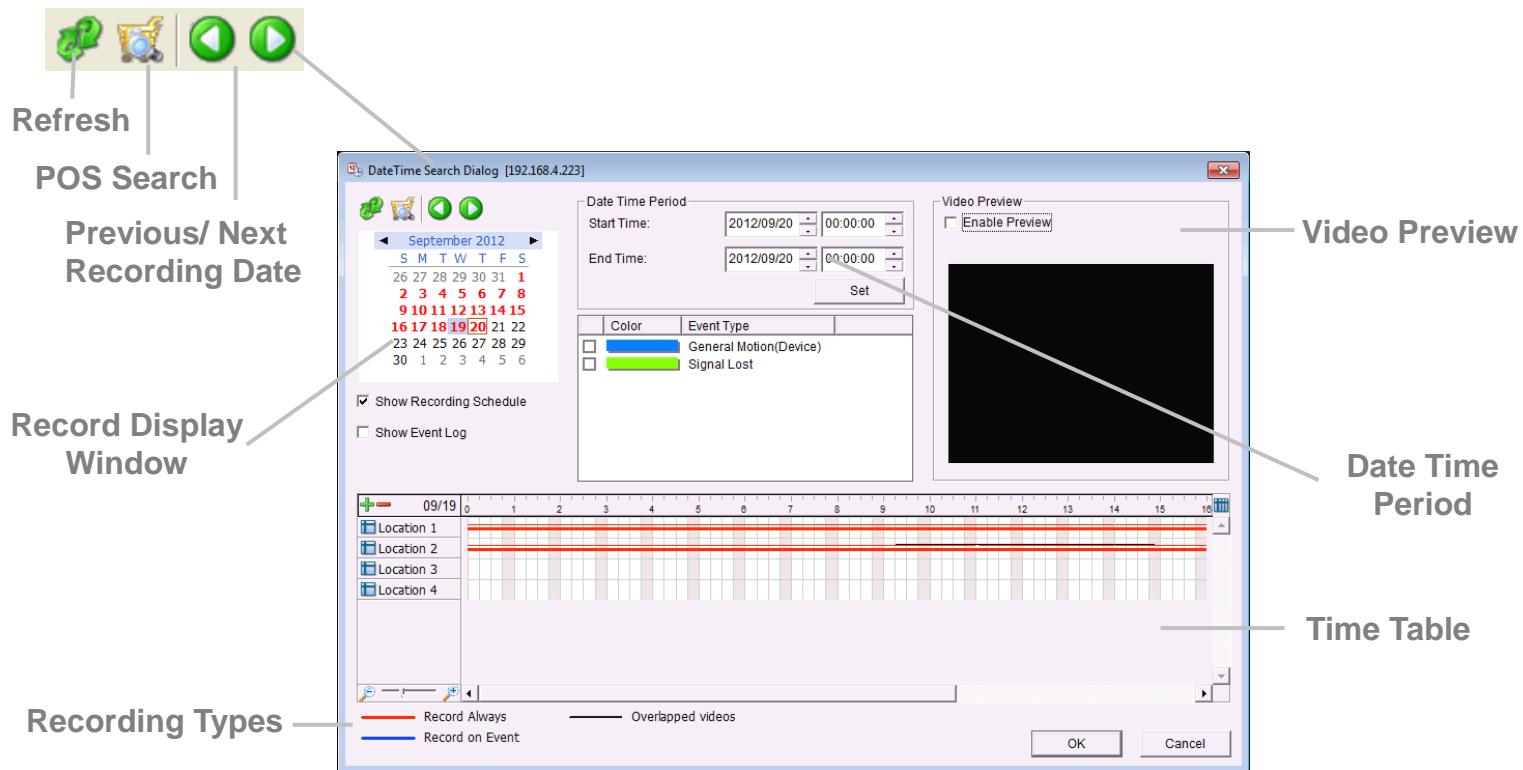




- : refresh the Record Display Window.
- or : go to previous or next recording date.
- **Record Display Window:** Display the available recorded video records.
- **Date Time Period:** Select the start and end time points that indicate the time period you would like to view after choosing cameras.
- **Video Preview:** Check the **Enable Preview** option to view the selected video.
- **Time Table** (preset recording schedule): Click the icon to select all channels; click the icon to deselect all channels. Finally, use the scale bar to modify the scale of the time table.
- **Recording Types:** Red line in bold represents always record. Blue line in bold represents record on event. Red thin line represents recording data. Black thin line represents that there are multiple video clips within the same period due to system time change (e.g. daylight saving time)


	Record Always		Record on Event		Overlapped videos
--	---------------	--	-----------------	--	-------------------
- **Show Recording Schedule:** Show the period of recording schedule in the time table.

- **Show Event Log:** Show the time of event detection in the time table. Color of event type can be defined by preference.

Color	Event Type
<input type="checkbox"/>	General Motion(Device)
<input type="checkbox"/>	Signal Lost

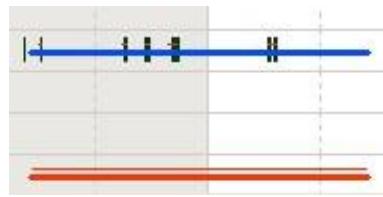

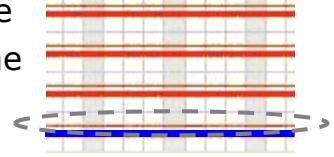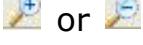1. From the Record Display Window at the top left of the Date Time Panel, select the date you want to search the record from. The red lines shown on the time table  indicate available recorded video records.
2. Use color bars to differentiate recording types from each other. This will help you select video clips.
3. Highlight the video clip you want to review by left-clicking and dragging the time period. You may also utilize the Start Time and End Time in Date Time Period Section after choosing camera. In addition, modify the scale of the time table with the  or  icon on the bottom left.
4. If there are multiple videos of the time period you select, the following dialog may popup to guide you to select one to play.

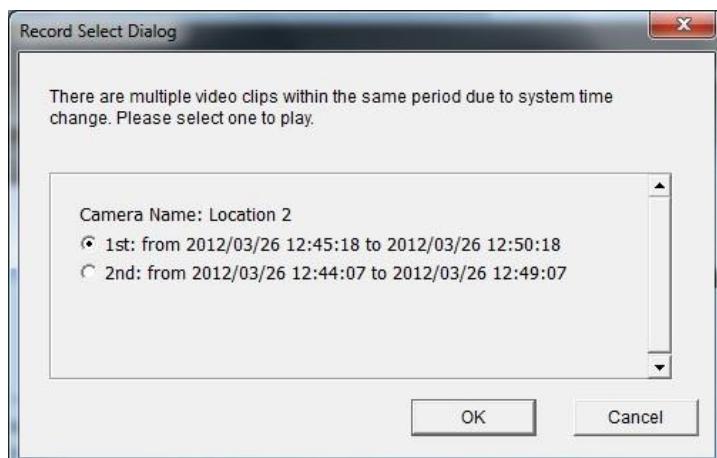

5. Check the **Enable Preview** option to get the preview of the video you select.
6. Click the camera name to increase or decrease cameras you want to playback.
7. Click the **OK** button.



The Record Display Window can be shown in (a) calendar view or (b) list control view. To modify the settings of the record display window, click the **General Setting** button at the right of the page.

7.1.3 Play the Recorded Video

1. Be sure that you have set the schedule / recording event first.
2. Open Internet Explorer and log in to the unit.
3. Click the **Playback** button on the top of the page.
4. Click the **Open Record** button.
5. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
6. Highlight the video records that you want to review.
7. Click the **OK** button.


7.1.4 Intelligent Search

After opening the recorded video, click the **Search Mode** button to obtain the Intelligent Search Tool panel. You can search for unusual events during the recording period.

There are 5 types of unusual events: **General Motion**, **Foreign Object**, **Missing Object**, **Focus Lost**, and **Camera Occlusion**.

- **General Motion:** Detect all movements in the defined area.

1. Define detection zone by dragging to draw a detection zone. You may define more than one zone by repeating this step.
2. Modify the sensitivity setting by changing the slider control. Moving toward the right will increase the sensitivity level, which means a relatively small movement will trigger the alarm.
3. Set the interval. Moving toward right will increase time interval so that the alarm will only be triggered when the movement lasts longer.
4. Check the **Stop when found** option. If unchecked, the search tool will list all the events it found, instead of stopping at the moment the event found.
5. Click the **Search** button.

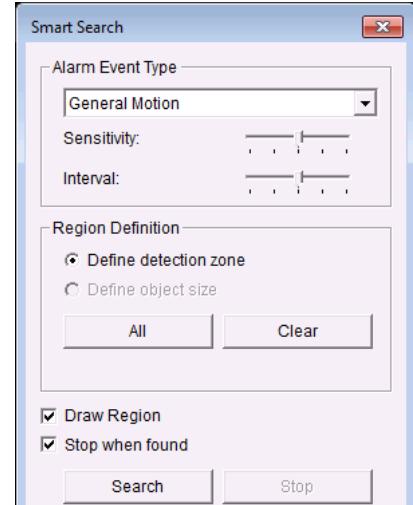


- **Foreign Object:** Alarm is set on when any additional object appears in the defined area on the screen.

1. Define detection zone by dragging to draw a detection zone.
 2. Modify the sensitivity setting.
 3. Set the Interval.
 4. Check the **Stop when found** option. If unchecked, the search tool will list all the events it found, instead of stopping at the moment the event found.
 5. Click the **Search** button.
- **Missing Object:** Alarm is set on when the selected object is removed from the defined area on the screen.
1. Define detection object by dragging to draw a detection zone.
 2. Modify the sensitivity setting.
 3. Set the Interval.
 4. Check the **Stop when found** option. If unchecked, the search tool will list all the events it found, instead of stopping at the moment the event found.
 5. Click the **Search** button.
- **Focus Lost:** System will inform you when the camera(s) lose its focus.
 - **Camera Occlusion:** Alarms when the camera is blocked.

7.1.5 Recorded Video Enhancement

1. Open Internet Explorer and log in to the unit.
 2. Click the **Playback** button on the top of the page.
 3. Click the **Open Record** button.
 4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
 5. Highlight the video clip you want to review, and then click the **OK** button.
 6. Click the **Enhancement** button.
 7. Check the General Setting.
- **Apply active channel:** The settings will only be applied to the selected channel.
 - **Apply all channels:** The settings will be applied to those currently shown on the screen.
8. Set the Filter Setting.
- **Visibility:** Check the option and adjust the gamma value of the image to enhance the image and make

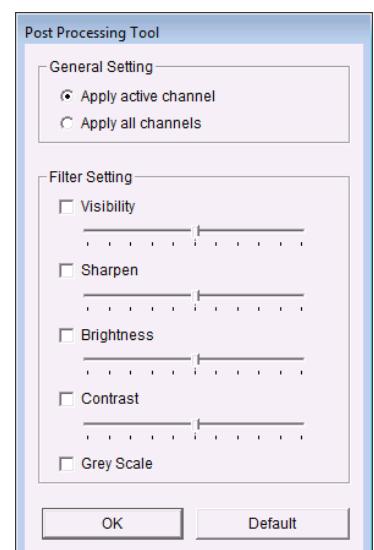

it cleaner.


- **Sharpen**: Check the option to activate the function. Move the slider control to the right to sharpen the image, to the left to soften it.
- **Brightness**: Check the option to activate the function. Move the slider control to the right to make the image brighter.
- **Contrast**: Check the option to activate the function. Move the slider control to the right to increase contrast.
- **Grey Scale**: Check the option to show the record in gray-scale mode so the image displays in black and white.

9. Click the **OK** button.


- **Stop**: Stop the enhancement function and close the enhancement tool. (The system will automatically back to the default settings.)
- **Default**: Back to the default settings, however, the enhancement tool still works.
- **OK**: Apply the modifications of the settings.

7.1.6 Save a Video

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button on the top of the page.
3. Click the **Open Record** button.
4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
5. Highlight the video clip you want to review, and then click the **OK** button.
6. Choose the camera display that you want to save as a video clip.
7. Set up the cue in and cue out points; the cue in and cue out time will be shown on the information window.

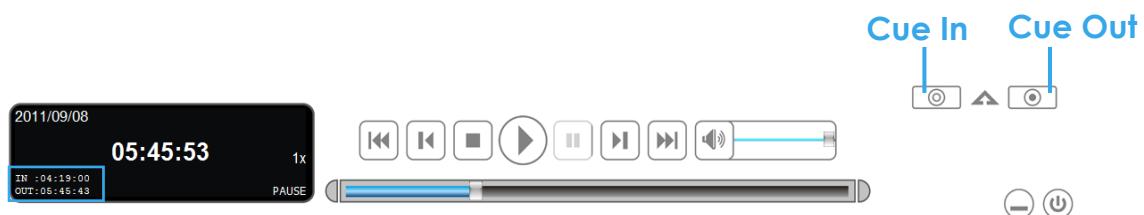

8. Click the **Save Video** button.

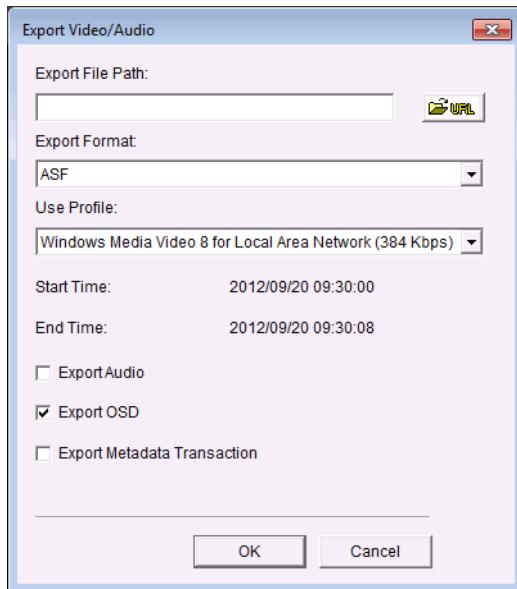

9. Choose the folder where you want to save the file.
10. Insert the file name and click the **Save** button.
11. Choose the export format.
12. Choose the use profile.
13. Check to export the recorded video with Audio, OSD and POS Transaction.
14. Click the **OK** button.



We recommend that you export to the .asf format when saving video. In exporting to the .avi format, the frame rate will be increased when playing in the video player, causing the video to run faster than normal.

7.1.7 Save an Image

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button on the top of the page.
3. Click the **Open Record** button.
4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
5. Highlight the video clip you want to review, and then click the **OK** button.
6. Choose the camera display that you want to save pictures.
7. Click the **Save Image** button when the image you want is shown on the screen.
8. Choose the folder where you want to save the file at.
9. Choose the folder and the image format (BMP or JPEG) you prefer.
10. Insert the file name.
11. Click the **Save** button.




You may skip step 3 by presetting the folder where you want to save the images and the format you want to save them in.

7.1.8 Print an Image

Print the current image of the video you choose.

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button on the top of the page.
3. Click the **Open Record** button.
4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
5. Highlight the video clip you want to review, and then click the **OK** button.
6. Choose the camera display from which you want to print pictures.
7. Click the **Print** button when the image you want is shown on the screen.
8. Set print settings.

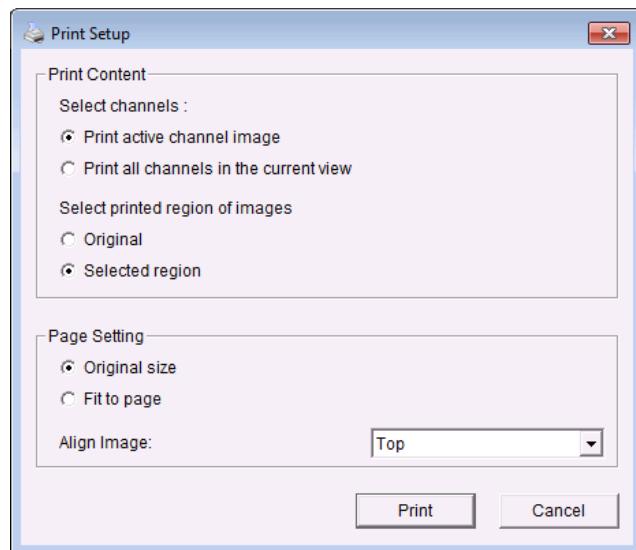


- **Print Content:** Print the image from currently selected channel or all the channels shown on the screen.
- **Page Setting**
 - **Print in original size:** Check to have the image print in original size.
 - **Fit the page:** Check to have the image fit the page.
 - **Align Image:** Top, center, or bottom

9. Click the **Print** button.


7.1.9 Backup the Recorded Video

Different from Save Video, the Backup function will save all the recorded videos which belong to the time slot you set, instead of the clips.

1. Open Internet Explorer and log in to the unit.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.

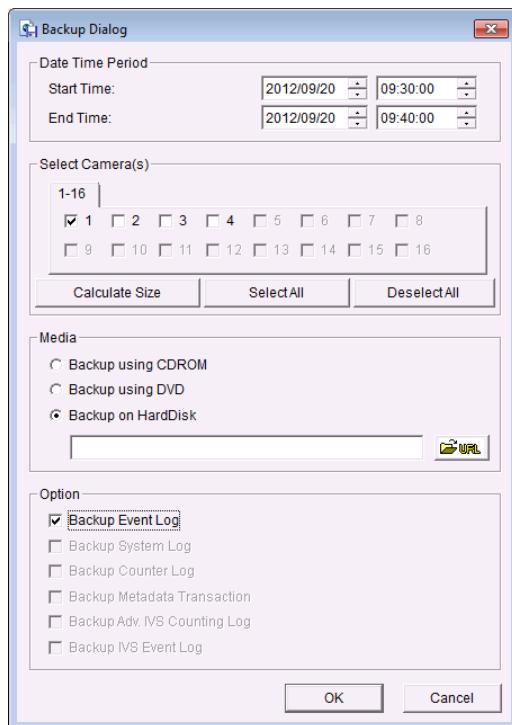


4. Set the Start Time and End Time you want to backup.
5. Select the cameras you want to backup.
6. Select the directory you want to save the backup data.
7. Click the **Backup** button.
8. The system will then begin backup process automatically.

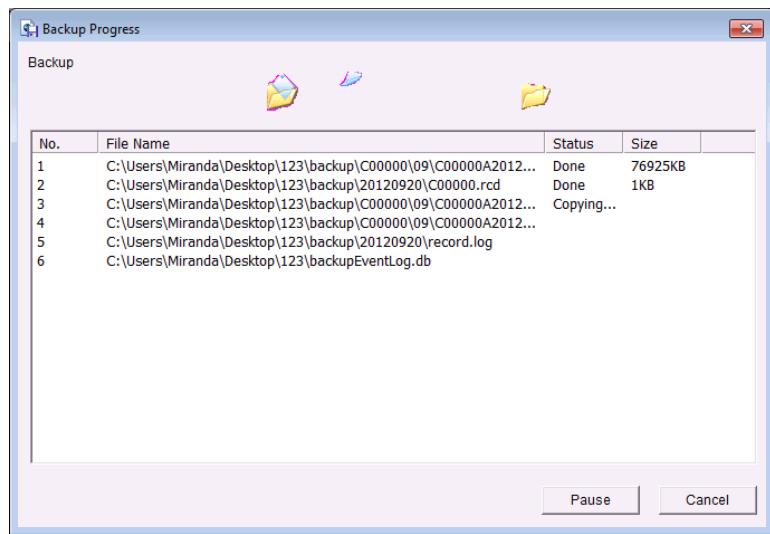

7.2 Remote Playback System Application

7.2.1 Playback System Application Control Panel


The **Playback System** control panel is similar to the playback panel in Internet Explorer. Check [**Playback Control Panel**](#) for more details about those buttons.

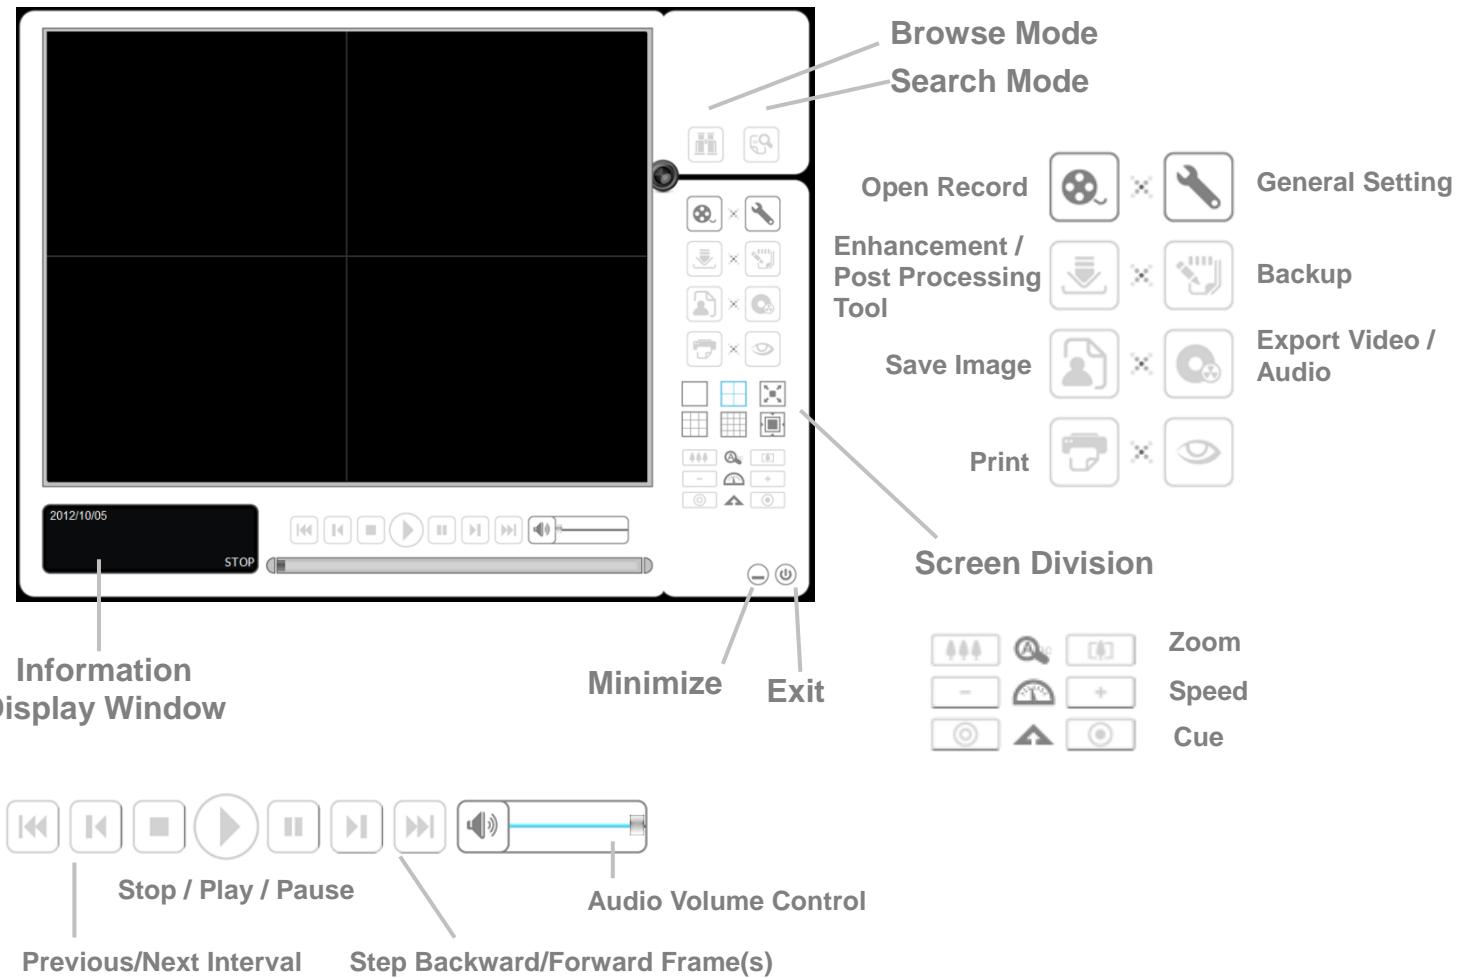

7.2.2 Set up Unit Connections

Before using the **Playback System** application, you need to set a connection to your unit first.


1. Startup > NVS > Playback System.
2. Click the **General Setting** button.
3. Click the **Server** tab.

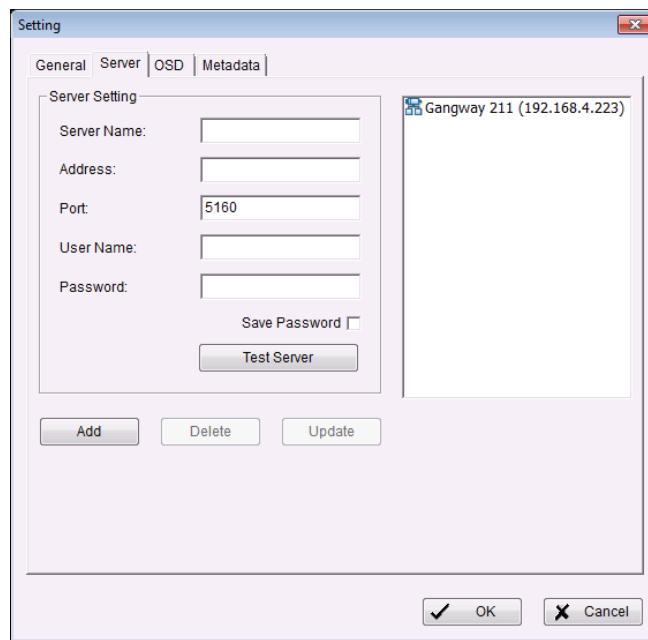

4. Insert the name of your unit.
5. Insert the IP address of that unit.
6. Modify the port if necessary.
7. Insert the username.
8. Insert the password.
9. Check the **Save Password** option.
10. Click the **Test Server** button to test the connection between the local application and the remote unit.
11. Click the **Add** button to add this unit into the remote server list.
12. Click the **OK** button.

7.2.3 Search the Recorded Video

Remote Playback
Site Management

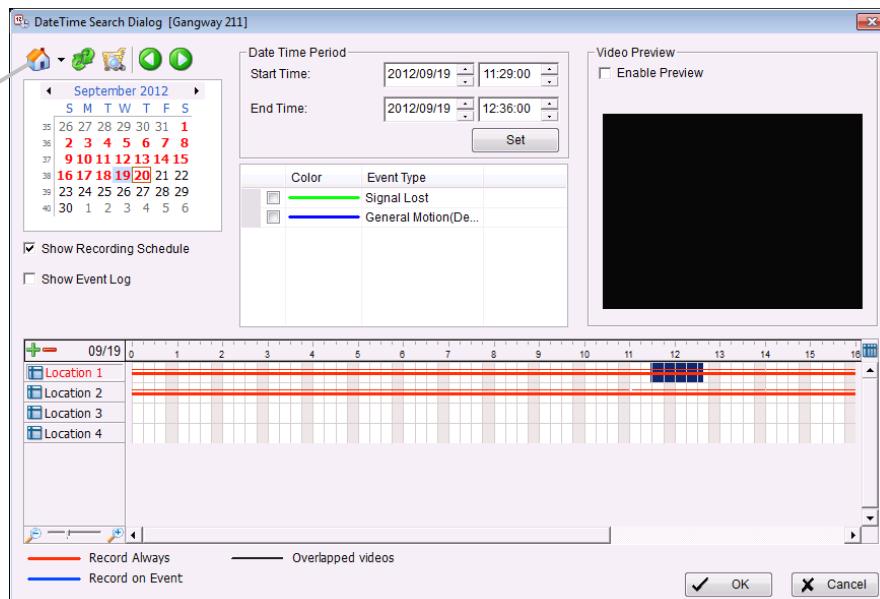

1. Startup > NVS > Playback System.
2. Click the **Open Record** button.
3. Click the  icon on the top of the Date-Time Panel to obtain the Remote Playback Site Management dialog, and then select the server you want to access.
4. Highlight the records you want to view in the Time Table.
5. Set the Date Time Period.

The search process in the **Playback System** application is similar to that of Internet Explorer. Check [**Search the Recorded Video**](#) for more details about the setting process.

7.2.4 Play the Recorded Video

1. Be sure that you have set up the recording schedule / response first.
2. Startup > NVS > Playback System.
3. Click the **General Setting** button and the **Server** tab to set connections to your unit. See [**Set up Unit Connections**](#) for more details.
4. Click the **Open Record** button.
5. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from. Check [**Search the Recorded Video**](#) for more details.
6. Highlight the video records that you want to review.
7. Select the start and end points in Date Time Period to adjust the time slot.
8. Click the **OK** button.

7.2.5 Intelligent Search

1. Startup > NVS > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from. Check [**Search the Recorded Video**](#) for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display for which you want to implement smart search.
6. Click the **Search Mode** button to open the Intelligent Search Tool panel.
7. Set up unusual events here to detect abnormalities occurring during the recording period. Check [**Intelligent Search**](#) for more details.

8. The searched events will be listed. Click to find that event.

There are 5 types of unusual events: **General Motion**, **Foreign Object**, **Missing Object**, **Focus Lost**, and **Camera Occlusion**.

- **General Motion**: Detect all movements in the defined area.
- **Foreign Object**: Alarm when any additional object appears in the defined area on the screen.
- **Missing Object**: Alarm when the selected object is removed from the defined area on the screen.
- **Focus Lost**: System will inform you when the camera(s) lose focus.
- **Camera Occlusion**: Alarm when the camera is blocked.

The intelligent search in the **Playback System** application is similar to that of Internet Explorer.

7.2.6 Recorded Video Enhancement

1. Startup > NVS > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from. Check **Search the Recorded Video** for more details.

4. Highlight the video records that you want to review.
5. Choose the camera display that you want to implement video enhancement.
6. Click the **Enhancement** button.
7. Check the General Setting.

- **Apply active channel**: The settings will only be applied to the selected channel.
- **Apply all channels**: The settings will be applied to those currently shown on the screen.

8. Set the Filter Setting.

● **Visibility**: Check the option and adjust the gamma value of the image to enhance the image and make it cleaner.
● **Sharpen**: Check the option to activate the function. Move the slider control to the right to sharpen the image, to the left to soften it.


- **Brightness:** Check the option to activate the function. Move the slider control to the right to make the image brighter.
- **Contrast:** Check the option to activate the function. Move the slider control to the right to increase contrast.
- **Grey Scale:** Check the option to show the record in gray-scale mode so the image displays in black and white.

9. Click the **OK** button.

- **Stop:** Stop the enhancement function and close the enhancement tool. (The system will automatically revert back to the default settings.)
- **Default:** Back to the default settings, however, the enhancement tool still works.
- **OK:** Apply the modifications of the settings.

7.2.7 Save a Video

1. Startup > NVS > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date from which you want to search the record. Check [Search the Recorded Video](#) for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display that you want to save as a video clip.
6. Set up the cue in and cue out points; the cue in and cue out time will show on the information window.

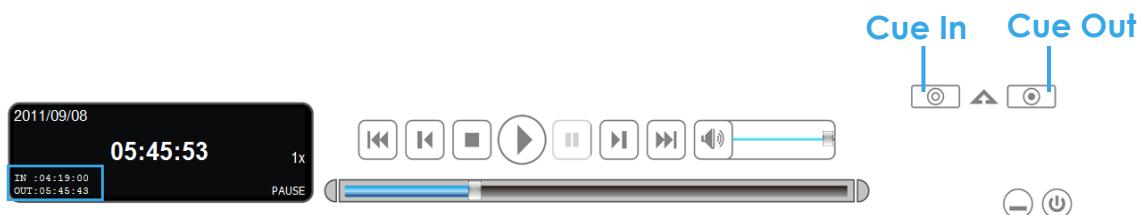

7. Click the **Save Video** button.
8. Choose the folder where you want to save the file.
9. Insert the file name and click the **Save** button.
10. Choose the export format.
11. Choose the use profile.
12. Check the **Export Audio** option.
13. Click the **OK** button.

7.2.8 Save an Image

1. Startup > NVS > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date from which you want to search the record. Check [**Search the Recorded Video**](#) for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display from which you want to save pictures.
6. Click the **Save Image** button when the image you want is shown on the screen.
7. Choose the folder where you want to save the file at.
8. Choose the format of image (BMP or JPEG) you prefer.
9. Insert the file name.
10. Click the **Save** button.



You may skip step 7 by presetting a folder where you want to save the images and a format which you want to save the images in.

7.2.9 Print an Image

Print the current image of the video you choose.

1. Startup > NVS > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from. Check [**Search the Recorded Video**](#) for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display that you want to print pictures.
6. Click the **Print** button.
7. Set the print settings.

- **Print Content:** Print the image from currently selected channel or all the channels shown on the screen.
- **Page Setting**
 - **Print in original size:** Select to have the image print in original size.
 - **Fit the page:** Select to have the image fit the page.
 - **Align Image:** Top, center, or bottom

7.2.10 Backup the Recorded Video

Different from Save Video, the Backup function will save all the recorded videos which belong to the time slot you set, instead of the clips.


1. Startup > NVS > Playback System.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.
4. Set the Start Time and End Time you want to backup.
5. Select the cameras you want to backup.
6. Select the directory you want to save the backup data.
7. Click the **Backup** button.

8. Backup and Delete Records


8.1 The Backup System Application

In addition to the ways mentioned in the previous chapters, you can apply the application to backup your files.

1. Startup > NVS > Backup System.

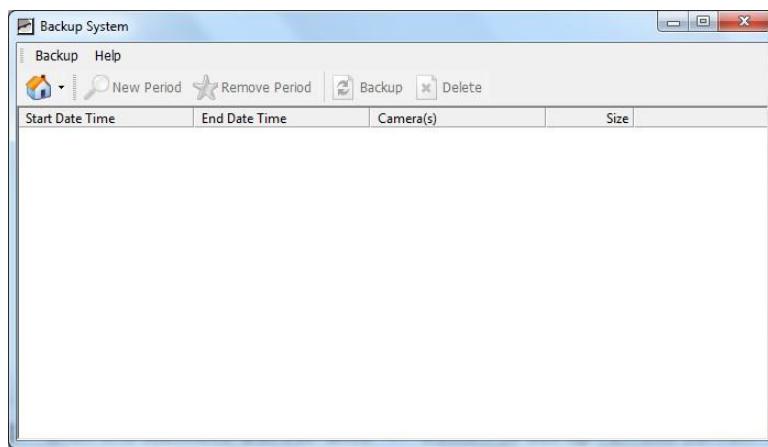


2. Click the **Remote Server Site** button to set up remote server.

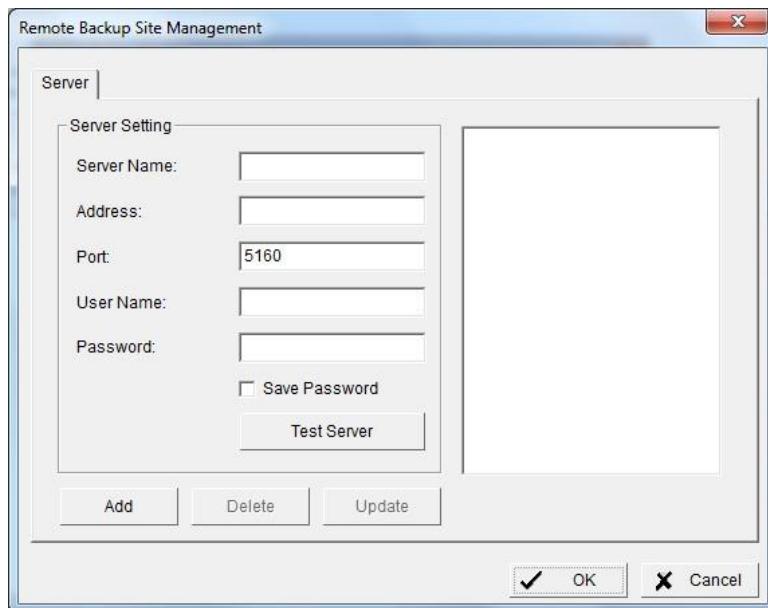


3. Insert the name of your unit.
4. Insert the IP address of that unit.
5. Modify the port if necessary.

6. Insert the username.
7. Insert the password.
8. Check the **Save Password** option.
9. Click the **Test Server** button to test the connection between the local application and the remote unit.
10. Click the **Add** button to add this unit into the remote server list.
11. Click the **OK** button.
12. Click the ▼ button next to **Remote Server Site** button, and select one of servers you added.

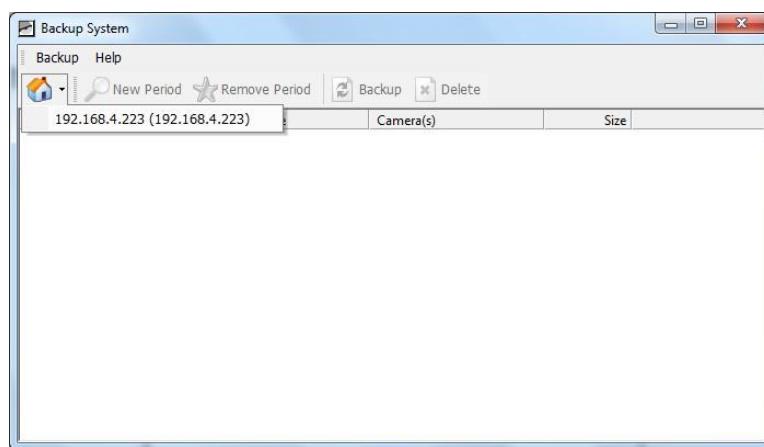


13. Click the **New Period** button to select the record date.

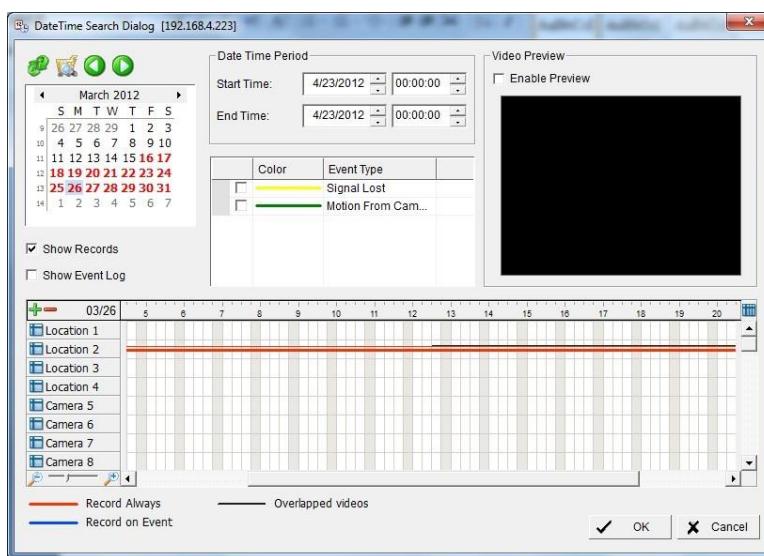

14. Set the Start Time and End Time you want to backup. (or highlight the video records which you want to backup)
15. Select the cameras you want to backup.
16. Click the **OK** button.


17. Select the time slot which you want to backup.

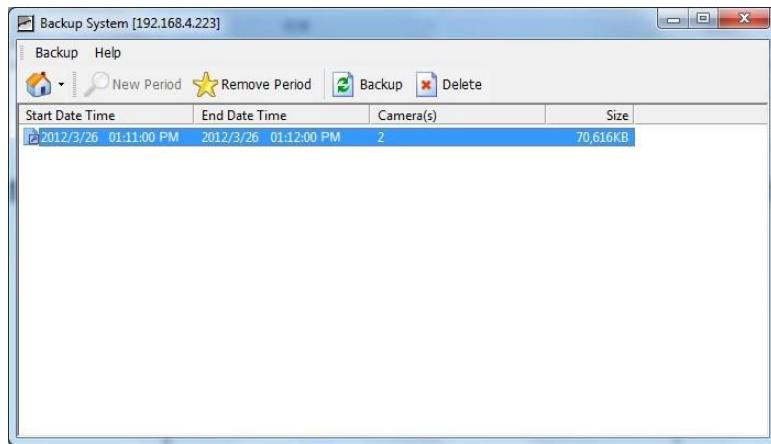

18. Click the **Backup** button.

19. Select the way and directory you want to save the backup data.

20. Check the **Include Playback application** option, which will add **Playback** application into the backup folder.

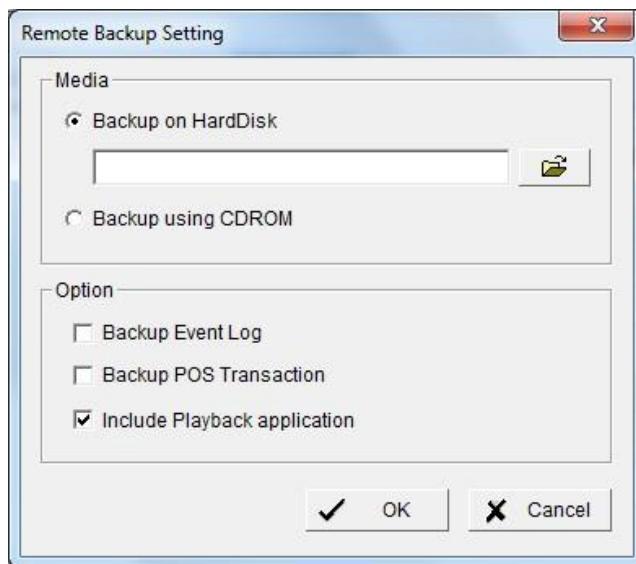

21. Click the **OK** button.

8.2 Backup the Recorded Video through Windows Explorer

1. Find your unit through Windows Explorer (insert "\\\" plus the IP address of your unit)
2. Open the "public" folder.
3. Insert the name and password of the administrator.

4. Select the volume and open the "VIDEODATA" folder.
5. Copy the date folder which you want to backup to your desktop / laptop.

8.3 Backup the Recorded Video through FTP

1. Find your unit through Windows Explorer (insert "ftp://" plus the IP address of your unit)
2. Insert the name and password of the administrator.
3. Select the volume and open the "VIDEODATA" folder.
4. Copy the date folder which you want to backup to your desktop / laptop.

8.4 Playback the Backup Records

8.4.1 With Playback Application

1. Use the Backup System application to backup your records.
2. Check the **Include Playback application** option, which will add the **Playback** application into the backup folder.
3. Open that folder.
4. Double-click the Playback application icon.
5. Select the recorded data to play back.


8.4.2 Without Playback Application

1. Use the Playback function to backup your records.
2. Put your backup folder into the program folder of NVR. (Default directory is "C:\Program Files\NVR".)
3. Startup > NVS > Playback System.
4. Click the **Open Record** button.
5. Select the recorded data to play back.


8.5 Delete the Recorded Video

8.5.1 With Backup Application


1. Startup > NVS > Backup System.

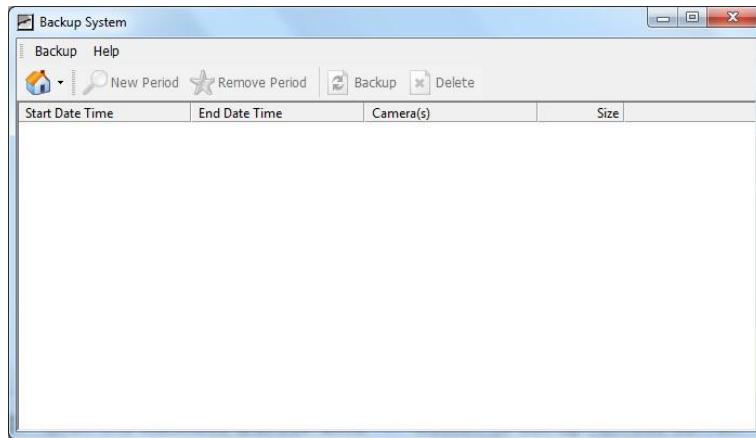


2. Click the **Remote Server Site** button to set up remote server.

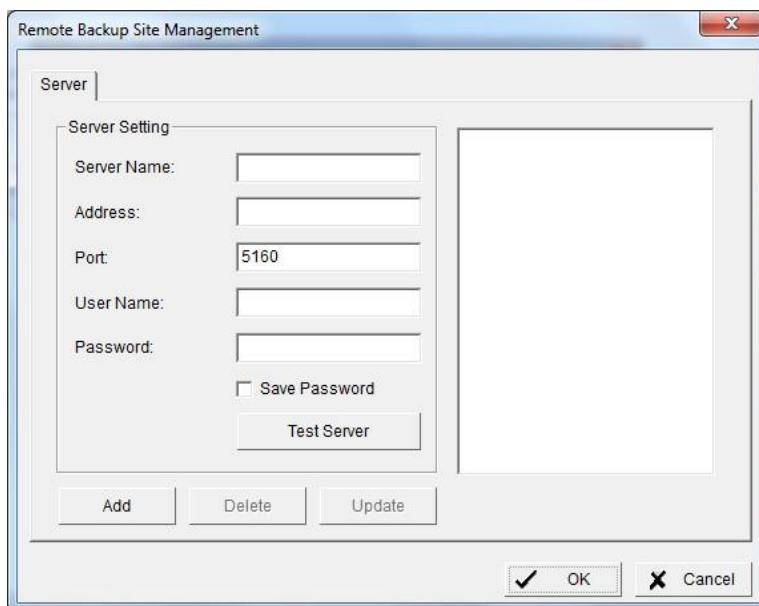


3. Insert the name of your unit.
4. Insert the IP address of that unit.
5. Modify the port if necessary.
6. Insert the username.
7. Insert the password.
8. Check the **Save Password** option.
9. Click the **Test Server** button to test the connection between the local application and the remote unit.
10. Click the **Add** button to add this unit into the remote server list.
11. Click the **OK** button.
12. Click the ▼ button next to **Remote Server Site** button, and select one of servers you added.

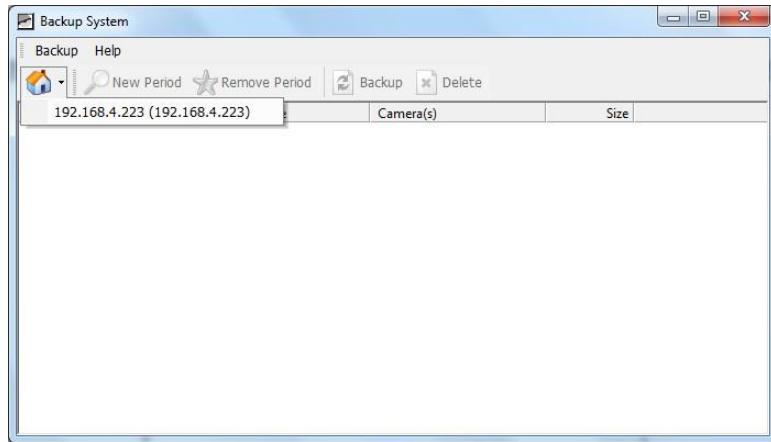

13. Click the **New Period** button to select the record date.

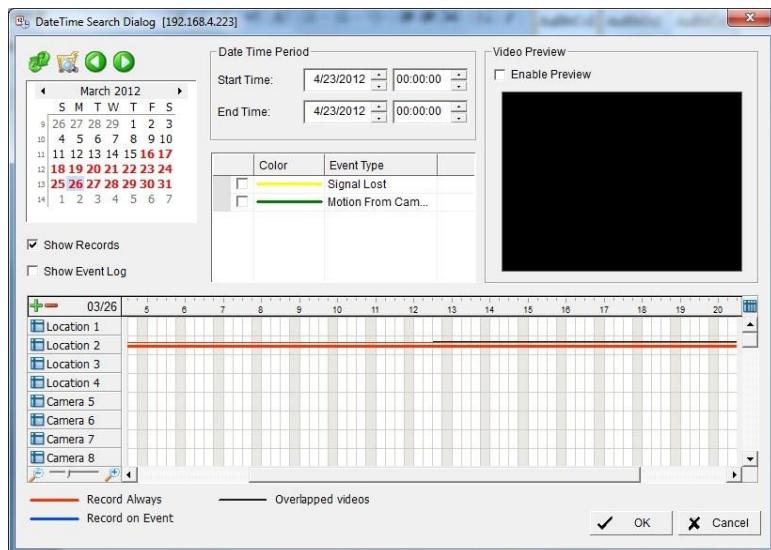

14. Set the Start Time and End Time. (or highlight the video records which you want to delete)
15. Select the cameras you want to delete the records.
16. Click the **OK** button.
17. Select the time slot which you want to delete.

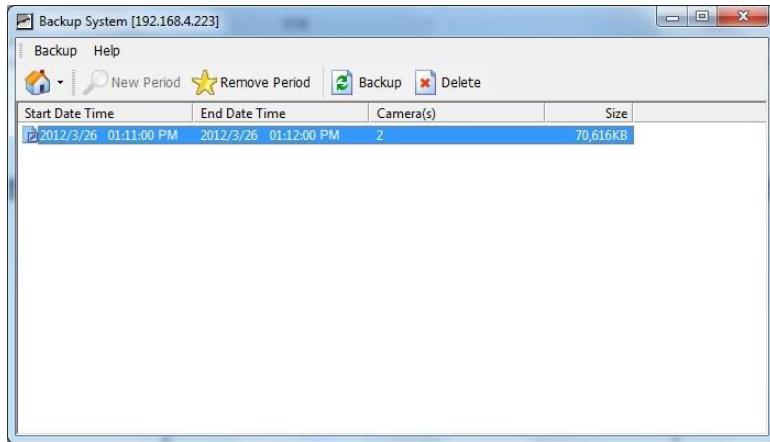

18. Click the **Delete** button.
19. Confirm the check dialog.

8.5.2 Without Backup Application

1. Find your unit through Windows Explorer (insert "\\\" plus the IP address of your unit).
2. Open the "public" folder.
3. Insert the name and password of the administrator.
4. Select the volume and open the "VIDEODATA" folder.
5. Select the date folder which you want to delete.
6. Delete the folder.



In order to keep the system stable, do not delete recorded data from the day in which you do the delete process.

9.Verification Tool


The Verification Tool verifies whether the data created by the system has been tampered with. It's the process by which a digital watermark (a digital signature) is added to each recorded video frame to ensure its authenticity.

There are three types of data could be verified by Verification Tool:

1. File in (.dat) (.264) format will be displayed as .
2. File in (.avi) (.ASF) format will be displayed as .
3. File in (.bmp) (.jpg) format will be displayed as .

9.1 Execute Verification Tool

1. Startup > NVS > Verification Tool.
2. Verification Tool Overview

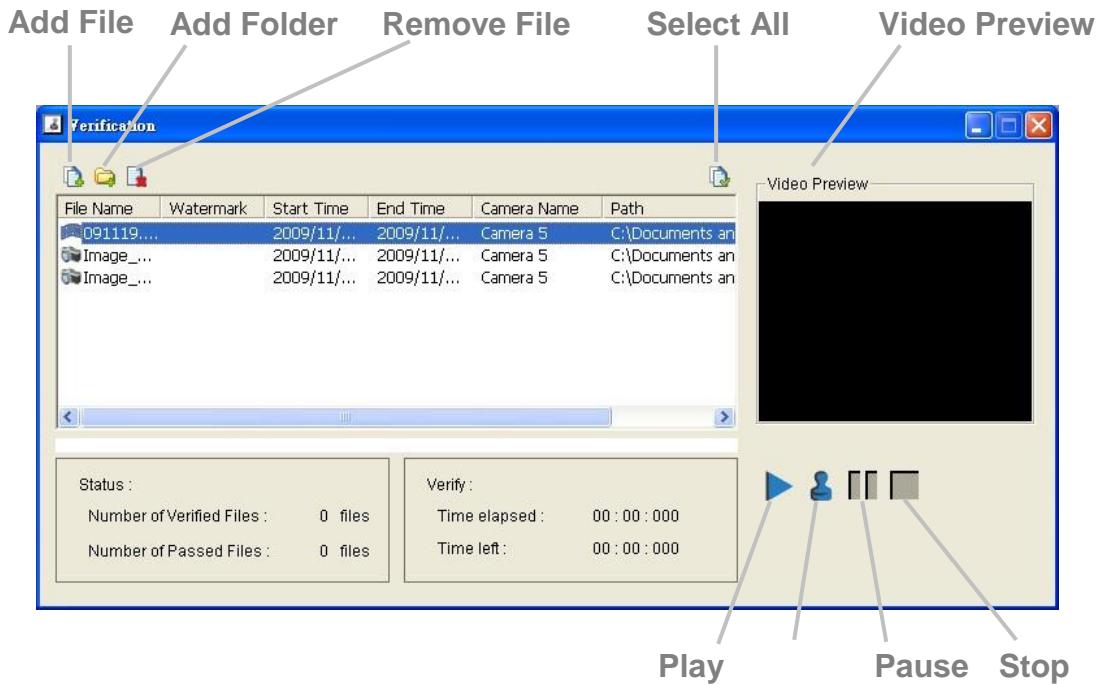

- **Add File:** Insert the single file to list for verification.
- **Add Folder:** Choose the folder with multiple files to list for verification.
- **Remove File:** Remove indicated file(s) from list.
- **Select All:** Select all files in list for verification.




Choose the file type first before selecting files. Only (.dat) (.264) (.avi) (.ASF) (.bmp) (.jpg) are available to open.

- **Video Preview:** Preview designate file in verification list. Select the buttons below to play ▶, pause ■, and stop □ the video file.

9.2 Verify Image / Video

1. Select single or multiple files for verification.
2. Click the **Verify**  button to start verification.
3. The verification result will show on watermark column. If a file was tampered with, it will show ; if a file passed verification, it will show .

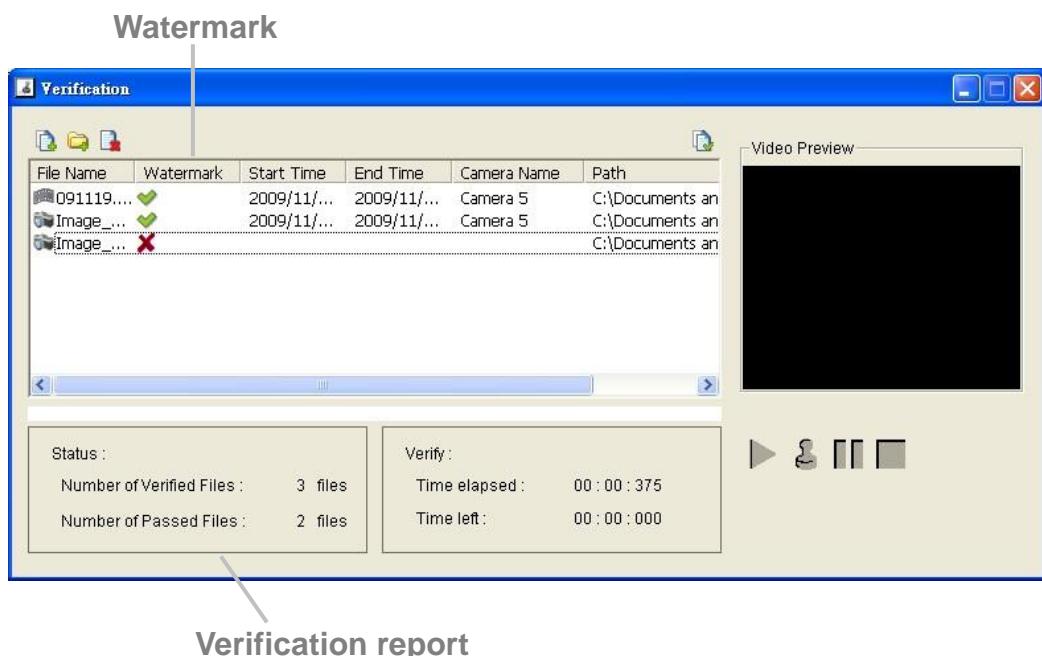

4. The verification report will indicate the information related to the verification.

10. External Storage

Total recording space can be expanded largely by connecting DAS through eSATA port. Follow the directions to enlarge your recording space.

10.1 Create a Volume on DAS

The current compatible DAS is AXUS FiT Series. We don't guarantee the quality of other DAS models. Please refer to the manual of AXUS FiT Series to create a single volume on DAS.



We are unable to create a volume on external storage in NVR setting page, so do NOT skip this step before connecting to NVR device.

10.2 Create an External Storage

1. Log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. You will find External SATA Disk displayed in Disk List.

RAID Management				
RAID Status	Modify	Create	Delete	Format
RAID Status				
List	Status			
Volumes VOLUME1 Disk 1 Free Disks Disk 6 (eSATA)	RAID Name	VOLUME1		
	RAID Level	RAID0		
	RAID Status	Functional		
	Total Capacity	931.51 GB (953868 MB)		
	Free Capacity	583.5 GB (597504 MB)		
	Used Capacity	333.39 GB (341392 MB)		
	Usage			
	Update Time	Tuesday, August 16, 2011 2:56:17 AM		
	Total Devices	1		
	Active Devices	1		
	Failed Devices	0		
	Spare Devices	0		
	Format Progress			
	Recovery Progress			

4. Click on the eSATA disk directly to check the disk drive information.

RAID Management

RAID Status	Modify	Create	Delete	Format
RAID Status				
List		Status		
Volumes		Vendor Seagate		
VOLUME1		Model ST32000542AS		
Disk 1		Capacity 1929GB		
Free Disks		Firmware Version 0957		
Disk 6 (eSATA)		Serial No. 6RY6GK1T		
		Smart Support Yes		
		Smart Enable Enable		

Refer to the section of [**Create a RAID Volume**](#) to create a volume for it.

11. Log out

Click the **Logout** button on the top of the page to log out of the system. If there is no action in 10 minutes, the system will log out automatically to avoid unauthorized access.

12. Remote PC System Requirements

Remote PC Minimum Requirements	
Model	1/8 bay
OS Supported	Windows XP 32 bit, Windows 7 32/64 bit, Windows 8 32/64 bit
CPU	Intel Core 2 Duo, 2.6GHz
RAM	1GB
User Interface	<ol style="list-style-type: none">1. HTTP Web browser - Internet Explorer 8, 9, 10 (32 bit)2. NVR Client application program

13. Troubleshooting

13.1 Replace a Failed Disk Drive

If a disk drive fails, the Disk Status LED becomes orange. If the disk drive belongs to a RAID Volume, the Volume goes Critical or Offline, depending on RAID level. See [**Check RAID Volume Status**](#) for details.

Replace the failed disk drive with a new disk drive of the same or slightly greater capacity. You do not have to power down the unit. Refer to [**Modify RAID Volume**](#) to remove the failed disk and replace it with a new one.

13.2 Respond to a Critical RAID Volume

How the unit responding to a Critical RAID Volume depends on the RAID level of your Volume:

- For **RAID 1, 5, and 10** volumes, you must replace the failed disk drive with a new one. The RAID Volume will begin rebuilding itself when you install the new disk drive. See [**Replace a Failed Disk Drive**](#) for details.
- **RAID 0** volumes go offline after a disk drive failure. A **RAID 0** Volume cannot be recovery. All data of the volume is lost.

13.3 Respond to a File System Error RAID Volume

When encountering file system error, you are unable to keep the data anymore. It's likely due to abnormal usage and disk damage. In this case, if you want to keep recording, we suggest replacing new disks, or try the following methods.

1. Format this volume, and check if the status becomes ***functional***. If yes, you can start recording. If it doesn't, try the second method.
2. Delete this volume, and create volume again to see if the status is ***functional***.

13.4 Restore the Default Administrator's Password

If you forget the password, and want to reset the Administrator's password to the default password: **admin**, follow the following steps.

1. Verify that the system is fully booted.
2. Insert your reset tool into the reset button hole on the back of the device.
3. Press and hold the reset button for 8 seconds, release your hands until the

buzzer beeps one time and the System Status LED flashes in blue.

4. System will restart and the Administrator's password is now reset to **admin**.

13.5 Restore All Default Configuration

If you want to restore all configurations to default setting, follow the following steps.

1. Verify that the system is fully booted.
2. Insert your reset tool into the reset button hole on the back of the device.
3. Press and hold the reset button for 14 seconds, release your hands until the buzzer beeps twice and the System Status LED flashes in orange.
4. System will restart and all settings are reset to default.




RAID volume and data within the volume won't be reset to default. Refer to [**Format**](#) for the details.

13.6 Install ActiveX

If you cannot see the complete page of the system when using Internet Explorer, it may be because the ActiveX installation process is not completed.

1. Open Internet Explorer and log in to the unit.
2. Click the **Live view / Playback** button on the top right.
3. The browser will ask whether to install ActiveX.

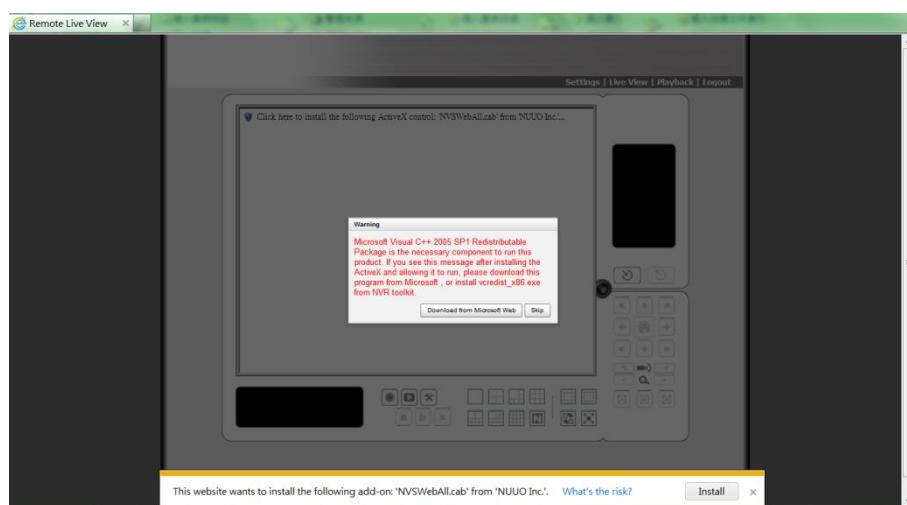

4. Click the upper bar to begin the installation process.

5. Click the **Install** button to complete the process.

13.7 Cannot Log in to the Unit with Internet Explorer

1. Check the settings of your antivirus software.
2. Change to appropriate settings or turn off this antivirus software.

Appendix – RAID System

Introduction to RAID

RAID (Redundant Array of Independent Disks) allows multiple disk drives to be combined together into a RAID Volume. You will create a RAID Volume on your unit when you perform the setup procedure.


The benefits of a RAID can include:

- Higher data transfer rates for increased server performance
- Increased overall storage capacity for a single Volume
- Data redundancy/fault tolerance for ensuring continuous system operation in the event of a disk drive failure

Different RAID levels use different organizational models and have varying benefits. The following outline breaks down the properties for each RAID level supported on this unit:

RAID 0 – Stripe

When a RAID Volume is striped, the read and write blocks of data are interleaved between the sectors of multiple disk drives. Performance is increased, since the workload is balanced between drives or “members” that form the RAID Volume. Identical drives are recommended for performance as well as data storage efficiency.

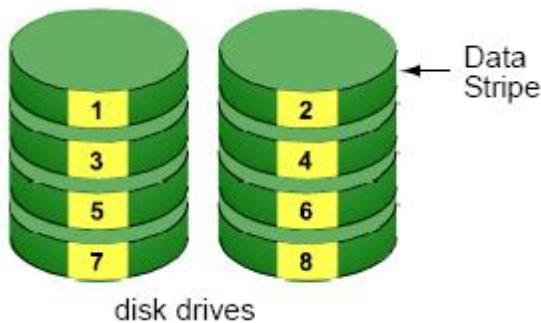

The RAID Volume's data capacity equals the capacity of the smallest disk drive times the number of disk drives. For example, one 100 GB and three 120 GB drives will form a 400 GB (4×100 GB) RAID Volume instead of 460 GB.

If disk drives of different capacities are used, there will also be unused capacity on the larger drives.


Because RAID 0 does not offer Fault Tolerance, meaning that you cannot recover your data after a disk drive failure, we do not recommend a RAID 0 Volume for your unit.

RAID 0 Volumes on this unit consist of one or more disk drives.

RAID 1 – Mirror

When a RAID Volume is mirrored, identical data is written to a pair of disk drives, while reads are performed in parallel. The reads are performed using elevator seek and load balancing techniques where the workload is distributed in the most efficient manner. Whichever drive is not busy and is positioned closer to the data will be accessed first.

With RAID 1, if one disk drive fails or has errors, the other mirrored disk drive continues to function. This is called Fault Tolerance. Moreover, if a spare disk drive is present, the spare drive will be used as the replacement drive and data will begin to be mirrored to it from the remaining good drive.

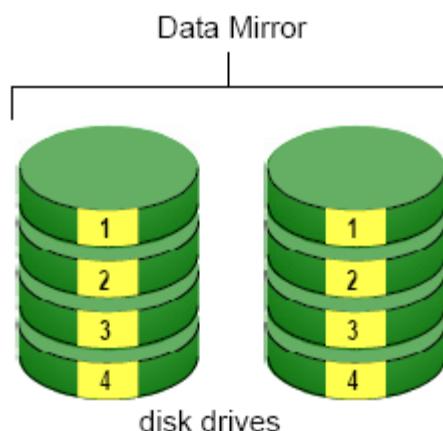

The RAID Volume's data capacity equals the smaller disk drive. For example, a 100 GB disk drive and a 120 GB disk drive have a combined capacity of 100 GB in a mirrored RAID Volume.


If disk drives of different capacities are used, there will also be unused capacity on the larger drive.

RAID 1 Volumes on this unit consist of two disk drives.

If you want a mirrored RAID Volume with more than two disk drives, see **RAID 10 – Mirror / Stripe** for details.

RAID 5 – Block Striping with Distributed Parity

RAID 5 organizes block data and parity data across the disk drives. Generally, RAID level 5 tends to exhibit lower random write performance due to the heavy workload of parity recalculation for each I/O. RAID 5 works well for file, database, application and web servers.

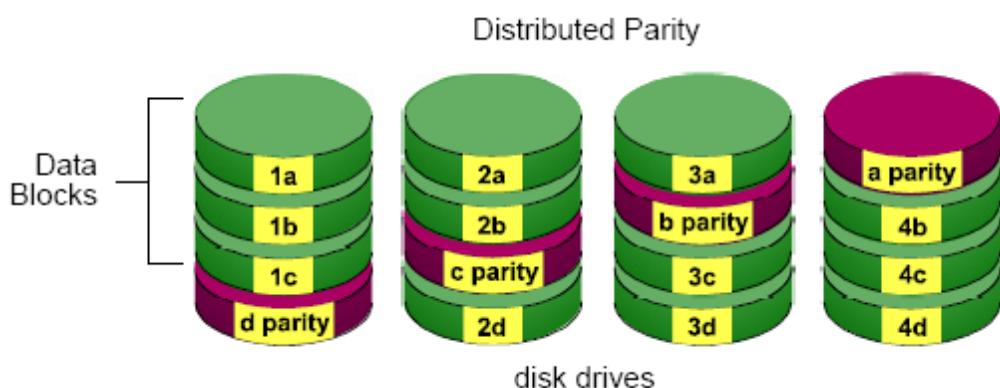


The capacity of a RAID 5 Volume equals the smallest disk drive times the number of disk drives, minus one. Hence, a RAID 5 Volume with four 100 GB disk drives will have a capacity of 300 GB. A RAID Volume with two 120 GB disk drives and one 100 GB disk drive will have a capacity of 200 GB.

RAID 5 is generally considered to be the most versatile RAID level.

RAID 5 requires a minimum of three disk drives.

RAID 10 – Mirror / Stripe

Mirror/Stripe combines both of the RAID 0 and RAID 1 types. RAID 10 can increase performance by reading and writing data in parallel while protecting data with duplication. At least four disk drives are needed for RAID 10 to be installed. With a four-disk-drive RAID Volume, one drive pair is mirrored together then striped over a second drive pair.

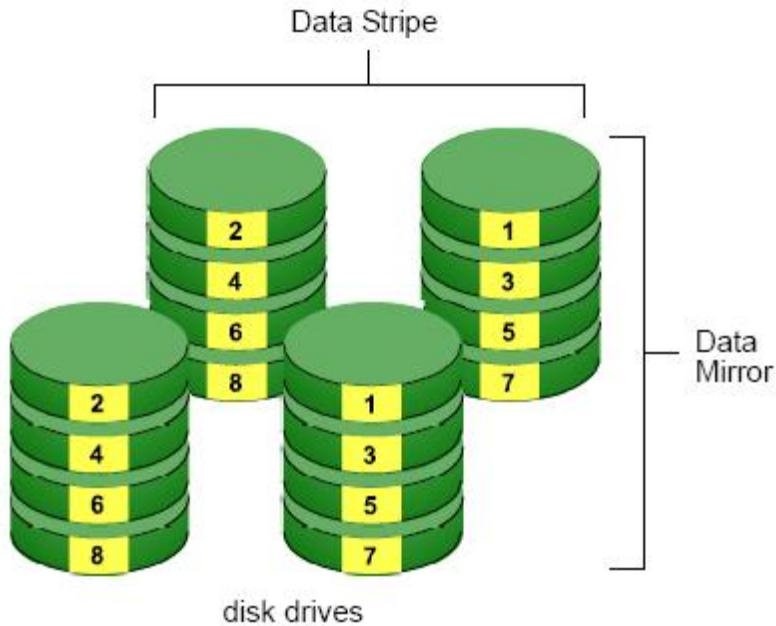

The data capacity RAID 10 Volume equals the capacity of the smallest disk drive times the number of disk drives, divided by two.

In some cases, RAID 10 offers double fault tolerance, depending on which disk drives fail.

RAID 10 Volumes on this unit consist of four disk drives.

Because all of the available disk drives are used for the RAID Volume, you cannot set up a spare drive with RAID 10.

Choosing a RAID Level

There are several issues to consider when choosing the RAID level. The following summarizes some advantages, disadvantages and applications for each choice.

- **RAID 0**

Advantage	Disadvantage
<ul style="list-style-type: none"> ● Implements a striped disk RAID Volume, the data is broken down into blocks and each block is written to a separate disk drive ● I/O performance is greatly improved 	<ul style="list-style-type: none"> ● Not a true RAID because it is not fault tolerant ● The failure of just one drive will result in all data in a RAID Volume being lost

<p>improved by spreading the I/O load across many channels and drives</p> <ul style="list-style-type: none"> No parity calculation overhead is involved 	<ul style="list-style-type: none"> being lost Should not be used in mission critical environments
--	---

- **RAID 1**

Advantage	Disadvantage
<ul style="list-style-type: none"> Simplest RAID storage subsystem design Can increase read performance by processing data requests in parallel since the same data resides on two different drives 	<ul style="list-style-type: none"> Very high disk overhead - uses only 50% of total capacity

- **RAID 5**

Advantage	Disadvantage
<ul style="list-style-type: none"> High Read data transaction rate Medium Write data transaction rate Good aggregate transfer rate Most versatile RAID level 	<ul style="list-style-type: none"> Disk failure has a medium impact on throughput

- **RAID 10**

Advantage	Disadvantage
<ul style="list-style-type: none"> Implemented as a mirrored RAID Volume whose segments are RAID 0 RAID Volumes High I/O rates are achieved thanks to multiple stripe segments 	<ul style="list-style-type: none"> Very high disk overhead – uses only 50% of total capacity