

# PRIME

## PRO MEGA NETWORK VIDEO RECORDER

Model: **NVST MP-04/08/16**



**User's Manual v1.6.0**

## Table of Contents

<b>Product Description</b>	6
<b>Install Hard Disk</b>	7
<b>Hardware Illustration</b>	10
<b>I/O Ports and RS-485</b>	12
<b>LEDs Definition</b>	13
<b>Connect to the NVR</b>	15
<b>1. Live View</b>	19
1.1 Retrieve camera's video stream	21
1.2 Retrieve camera's status	21
1.3 Perform Sequence Viewing	22
1.4 PTZ Control	23
1.5 Perform PTZ Preset Viewing	26
1.6 Live Video Control Buttons	29
1.7 Change Web UI Display Language	29
1.8 Live View Through iPhone	30
1.9 Live View through Blackberry Phones	33
<b>2. Playback</b>	36
2.1 Methods to Search Playback Videos	37
2.2 Export Playback Videos to AVI Files	43
2.3 Play Exported AVI Videos With NVR Media Player	45
2.4 Open Event Snapshot Images with NVR Media Player	46
<b>3. System Setup</b>	47
3.1 System Configurations	47
3.1.1 Network Settings	47
3.1.2 DDNS Service	49
3.1.3 Time and Date	55
3.1.4 User Account	56
3.1.5 Group Privilege	57
3.1.6 Disk Setup	59
3.2 Channel Configurations	60
3.2.1 Add a Camera	60
3.2.2 OSD Settings	63
3.2.3 PTZ Preset Settings	64
3.2.4 PTZ Preset Sequence	65
3.2.5 E-Map Setting	66
3.2.5.1 Local Map Setting	66
3.2.5.2 Google Map Setting	69
3.3 Event Configurations	71
3.3.1 General Settings	71
3.3.2 I/O Settings	72
3.3.3 Event Servers	74
3.3.4 Event Triggers	77
3.4 Recording Configurations	79
3.4.1 General Settings	79
3.4.2 Schedule Recording	82



3.5 System Options	84
3.5.1 Device Information	84
3.5.2 Logs and Reports	85
3.5.3 Maintenance	85
Reboot the NVR	86
Firmware Upgrade	87
Reset the NVR to Factory Default	89
3.5.4 DO Status	90
3.5.5 Disk Status	90
3.5.6 USB Backup	91
3.5.7 UPS Configuration	97

## Copyrights & Trademarks

### *Copyright*

UNIX CCTV Corp © 2010

### *Trademarks*

PRIME NVST MP-04/08/16 Network Video Recorder (NVR) is a registered trademark of UNIX CCTV Corp.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other trademarks mentioned in this document are trademarks of their respective owners.

### *Disclaimer*

This document is intended for general information purposes only, and due care has been taken in its preparation.

Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty.

PRIME reserves the right to make adjustments without prior notification.

All names of people and organizations used in this document's examples are fictitious. Any resemblance to any actual organization or person, living or dead, is purely coincidental and unintended.

## System Requirements

The following are minimum system requirements for the system to operate Embedded Network Video Recorder (ENVR):

### Operating System

Microsoft® Windows® 2000 Professional, Windows® XP Professional (32 bit) or Windows® Server 2003 (32 bit)

### Browser

Microsoft Internet Explorer 7 or above

### CPU

Minimum Intel® Pentium® 4 2.4 GHz or higher (Dual Core is recommended)

### RAM

Minimum 1 GB of RAM, 2GB or above is recommended

### Network

Minimum 10/100 Ethernet (Gigabit Ethernet is recommended)

### Graphics Adapter

AGP or PCI-Express, minimum 1024×768, 16 bit colors.

(We highly recommend to work above the 1024 x 768 resolution to get the full experience of the software)

- *Make sure your display DPI setting is set to default at 96DPI*
- *To set DPI value, right-click on desktop, choose “Settings” tab >> “Advanced” >> “General”*

## Contents Inside the Installation CD

- Adobe Acrobat Reader
- Smart Device Search Utility
- Central Basic CMS software
- NVR Media Player
- User’s Manual
- Quick installation Guide
- Datasheet




## Product Description

The Embedded Network Video Recorder is designed for use within a surveillance system, and performs recordings and playbacks pictures from network cameras in the system. It is a recording device using a hard disk drive to record camera pictures instead of using video tapes so that pictures recorded by repeated overwriting will not experience deterioration of the recorded picture quality. Up to 4 (for NVST MP-04) or 8 (for NVST MP-08) or 16 (for NVST MP-16) cameras can be connected via a network and it is possible to record their camera pictures. It is possible to perform the settings or operate the NVR using a web browser installed on a PC connected to a network, or remote controller. Recorded video can be played back from remote site by a PC. Up to 4 PCs (web browsers) can access this unit concurrently and it is possible to perform the settings and operate this unit. The NVR is compatible with most major brand cameras and its ability to automatically search and find the available cameras on the network can greatly reduce the user effort when expanding the system.

- **Advance PTZ Control**
- **Various Types Event Alerts**
- **Pure Web Based Administration**
- **Linux-embedded Operating System**
  - **Export Recorded Videos to AVI**
  - **Compatible with Major Brand Cameras**
  - **High Quality Live/Playback Videos**
  - **Smart Camera Search**

## Install Hard Disk

Start by removing the screws on the side:

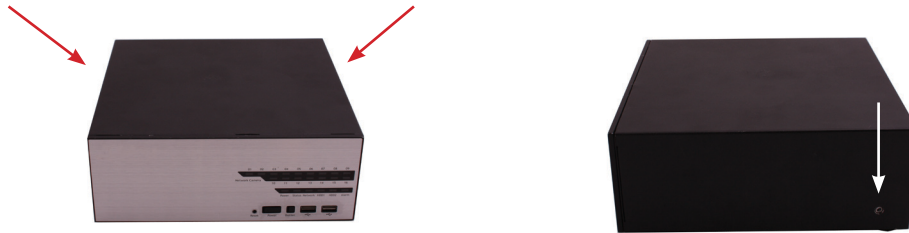

Push the top housing forward




Then lift it up




- *The NVR supports SATA I or SATA II hard disks*
- *The NVR supports max. 1.5TB per hard disk and it supports total of 2 hard disks (3TB)*

There is a cable connected between the front LED board and the main board

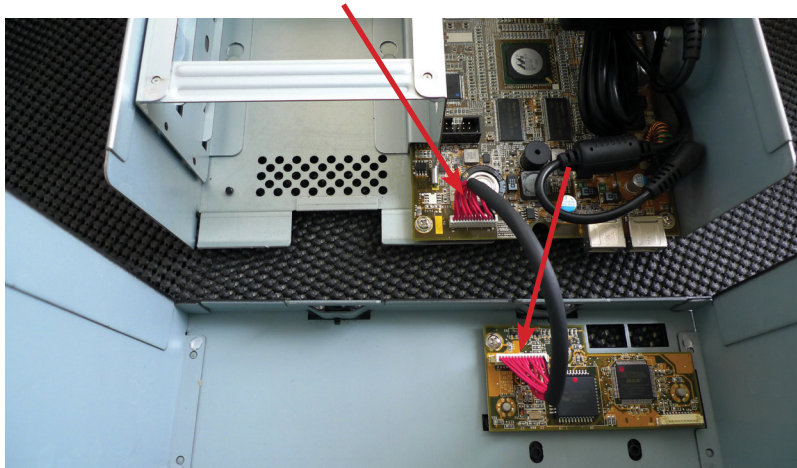

You can remove it from the main board or simply put the top housing on the side like shown below:

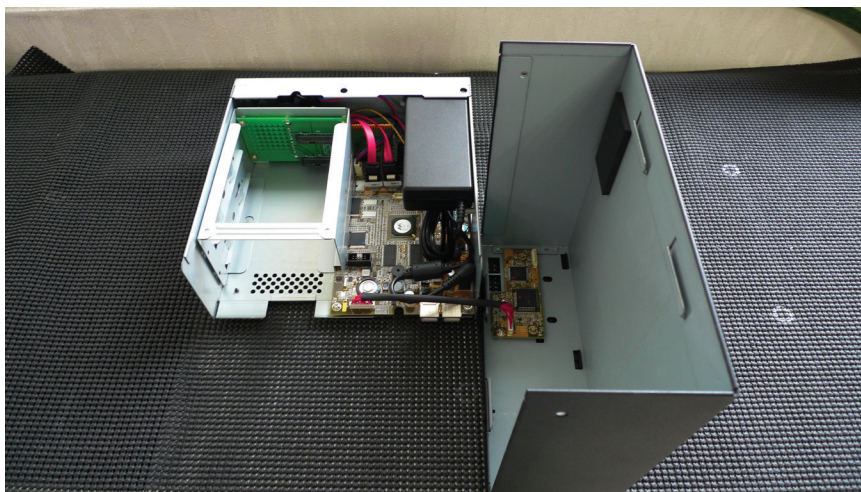

Next, slide the hard drive into the tray:





Make sure the SATA connectors are aligned with each other correctly



Secure the hard drive with the tool-less screw provided in the box




Place the top housing back and secure it with the bottom housing




## Hardware Illustration (Front)


### 16 Channel

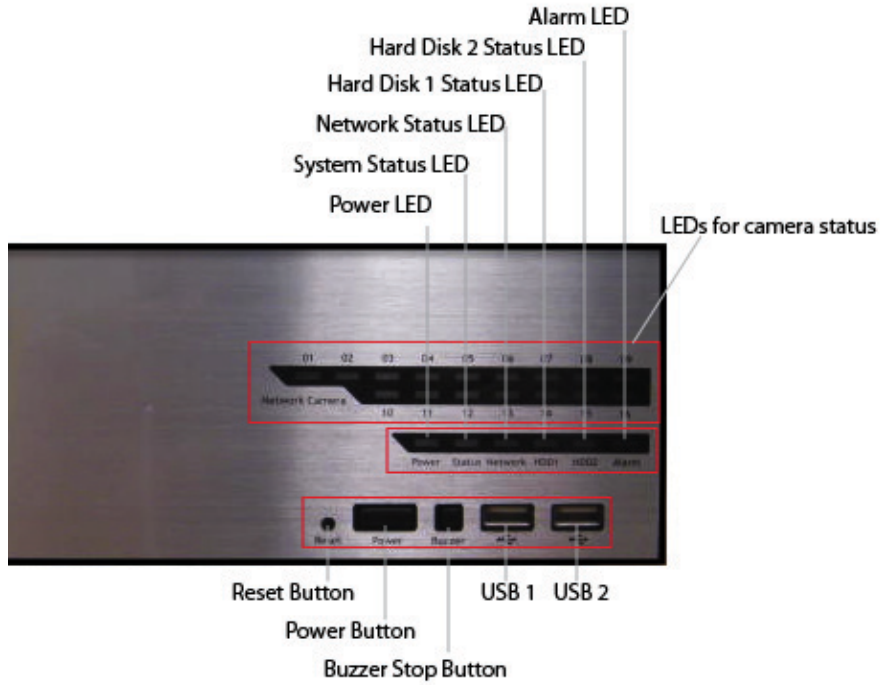

### 8 Channel

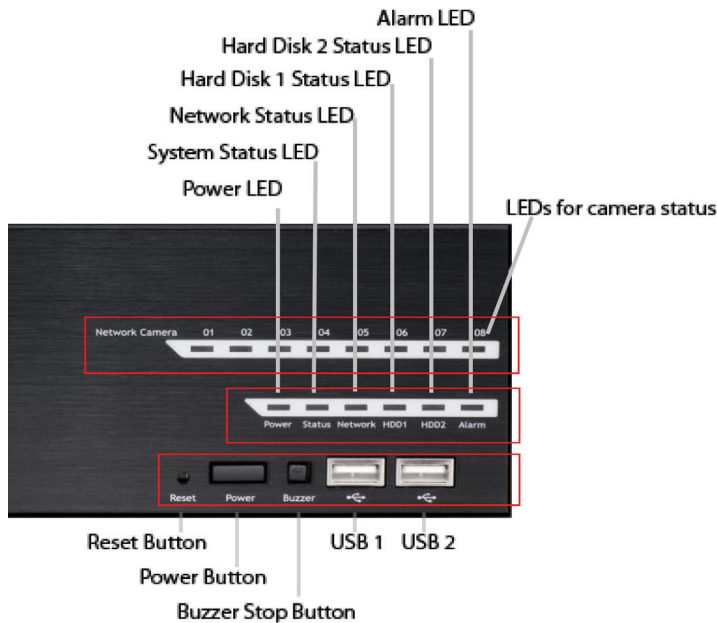


## 4 Channel

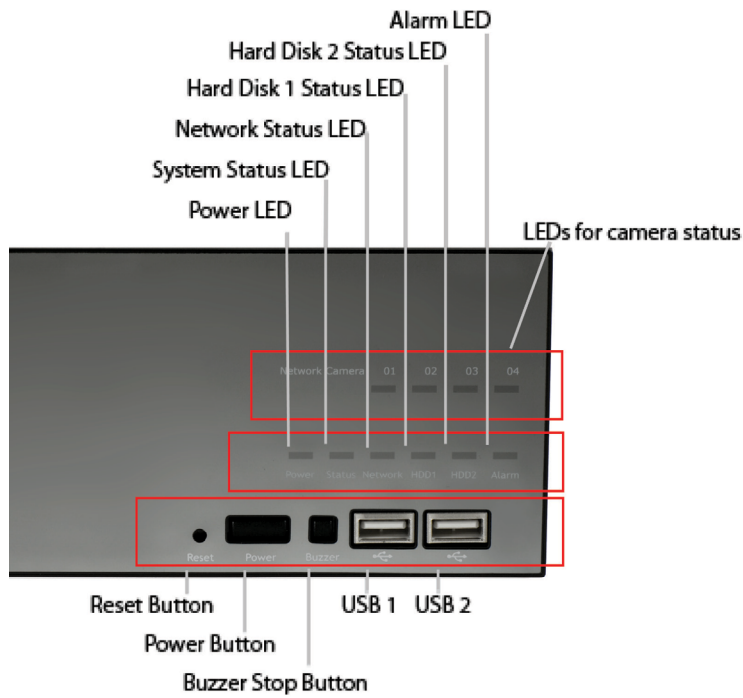




## I/O Ports and RS-485 (Rear)

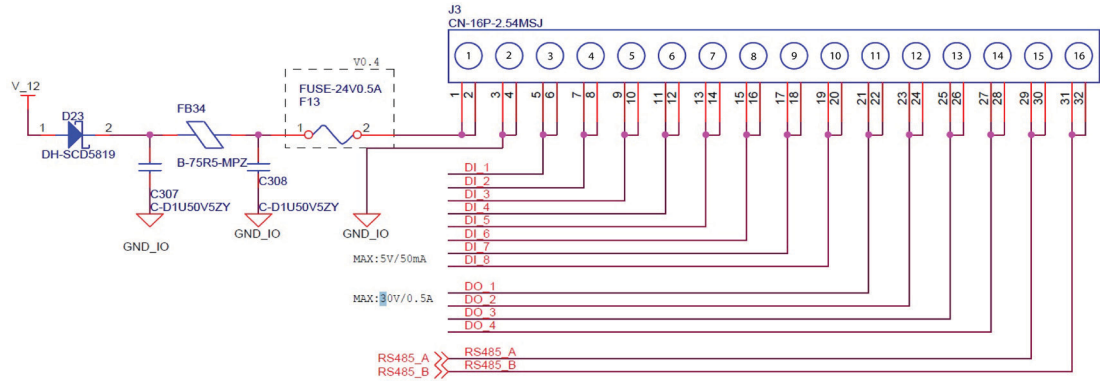


Pin	Signal
1	12V DC
2	GND
3~10	Alarm input
11	Out1
12	Out2
13	Out3
14	Out4
15	RS485+
16	RS485-

## LEDs Definition


### 4 Channel

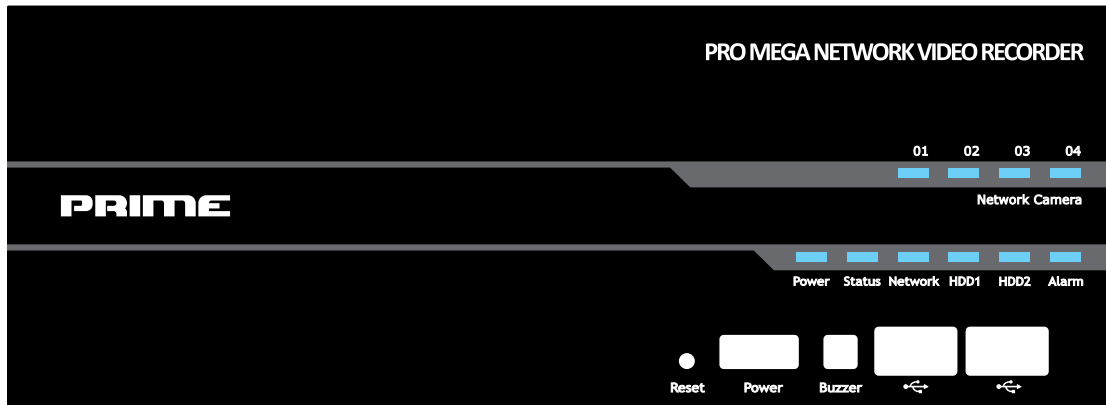

### 8 Channel

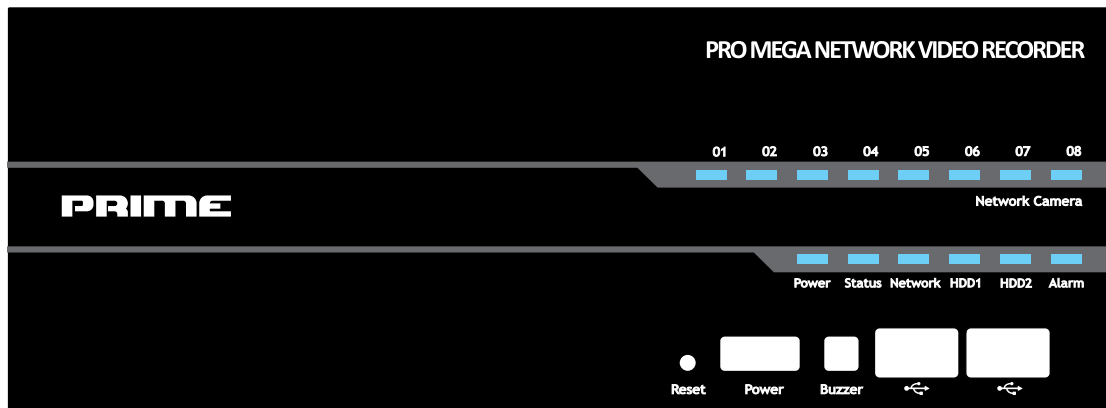

### 16 Channel

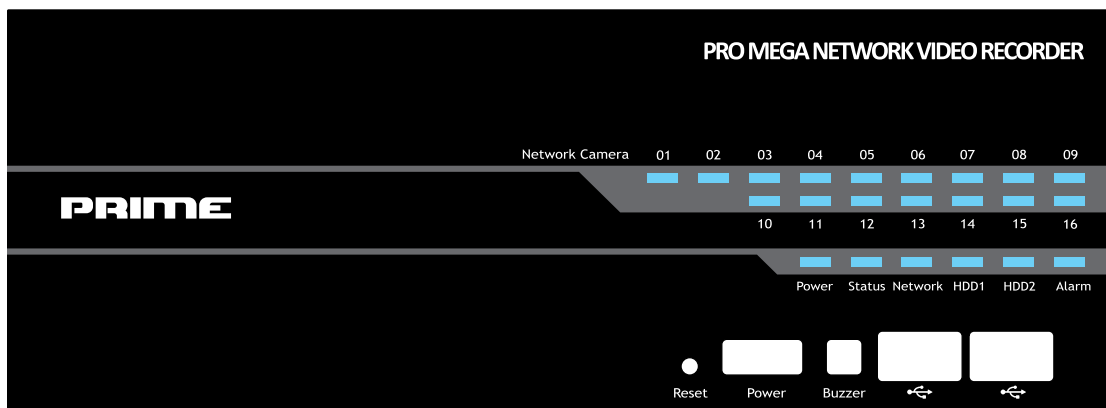

## LEDs Definition

HDD x 2	Green	Solid green when the hard disk is mounted and being accessed
	Red	Solid red for disk fail
	Amber	Solid amber when recording is in process Blinking when recycling
Network	Amber	Solid amber for activity on a 1G bps network.
	Green	Solid green for activity on a 10/100 Mbps network.
Status	Amber	Blinking during firmware upgrade
	Green	Shows solid green for normal operation. Blinking green when firmware upgrade is done
	Red	Flashes red for failed firmware upgrade.
Power	Green	Normal operation
	Red	System off (power adapter remains plugged in)
	Amber	Blinking amber indicating device is initializing
Alarm	Red	Blinking when an alarm occurs
	None	When alarm is reset

Camera LED	Green	Solid green, live connected with no event or recording activity
	Amber	Blinking amber, manual or event recording is being performed
	Amber	Solid amber, schedule or continuous recording is being performed
	Red	Recording is set but no video from camera




## Connect to the NVR

There are various ways you can connect to the NVR and below are the suggested methods for different network setup:


- The NVR is placed in a network with a DHCP server: Connect to the NVR by using **“PRIME Device Search” Utility**
- The NVR is placed in a network without DHCP server (or you are connecting to it directly): **Access NVR with its default IP**

### Use PRIME Device Search Utility


If the NVR is placed in a corporate network or a local area network where a DHCP server is already presented, install the “PRIME Device Search” utility on the CD from a computer that is on the same network and locate the NVR with its IP address that is assigned by the top-level DHCP server.

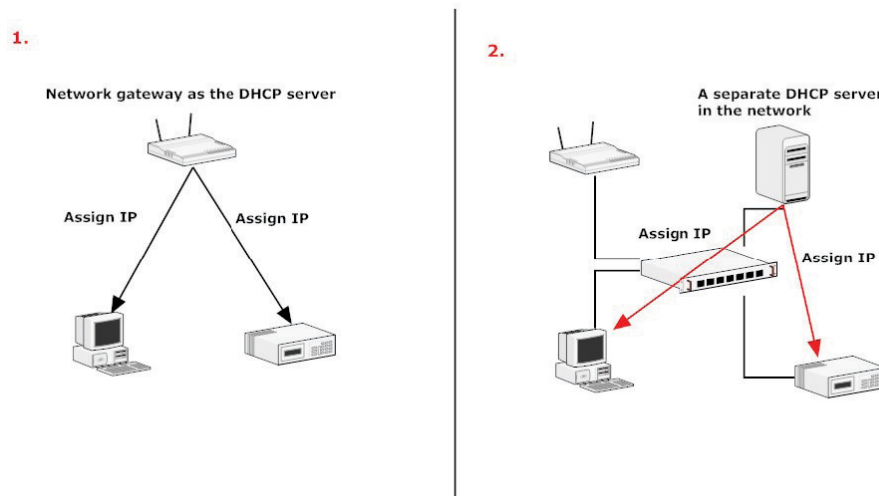


To begin, launch the “PRIME Device Search” utility from the CD and proceed with the installation:

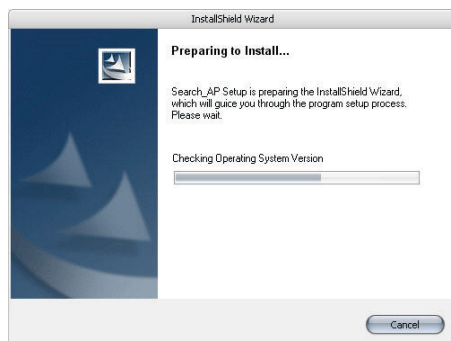

Once the installation is complete, check the “Launch the Search AP” option and click “Finish”:

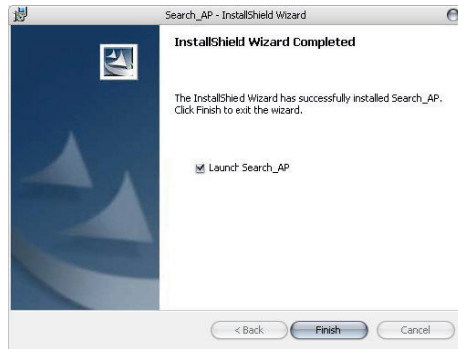


The search should start automatically and its status should be displayed:

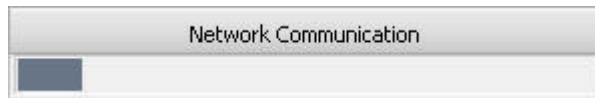


The NVR should be located and its IP address should be displayed:



Double-click on it and the program should automatically access the NVR’s web administration page from your default browser

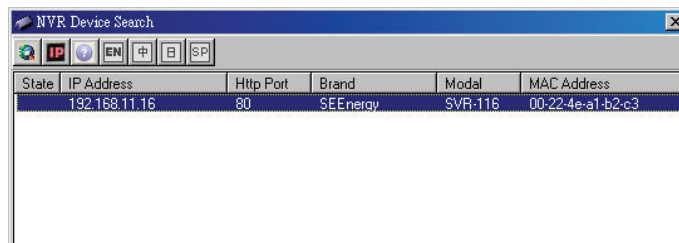


You may change NVR’s IP address by click on the button highlighted below.

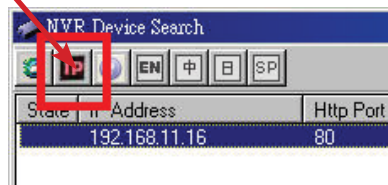

You will be prompted for the NVR's login information before proceeding to change device's IP address.

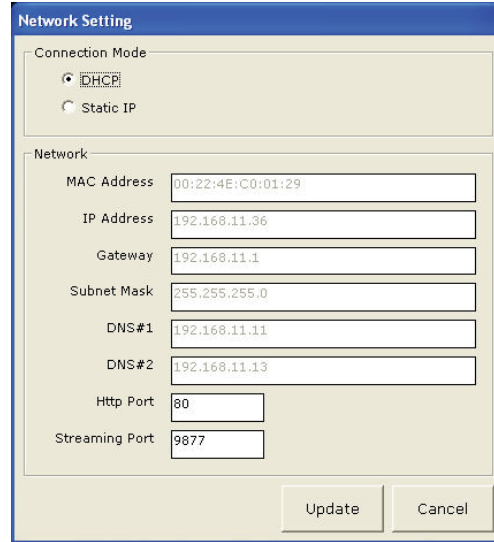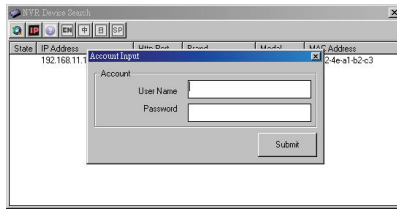

You may click on the button highlighted below to perform search again. Or double-click on any of the search results to access NVR's web administration page

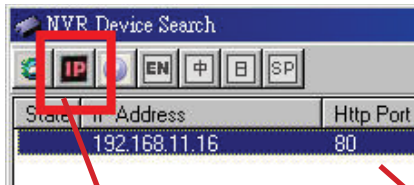

perform search again


access NVR's web administration page

You should be prompted for the NVR's username and password. Enter its default username "admin" and password "admin" and then click "OK" to enter the system




## Access NVR with its default IP address

The NVR comes with a pre-configured static IP “192.168.101.50”. However, it is only used when there is no DHCP server presented in the network. The NVR will turn on its DHCP server function and act as the DHCP server in the network. To connect to the NVR, use a PC that is on the same network over a switch or hub, or connect the PC directly to the NVR using a crossover CAT5 Ethernet cable.

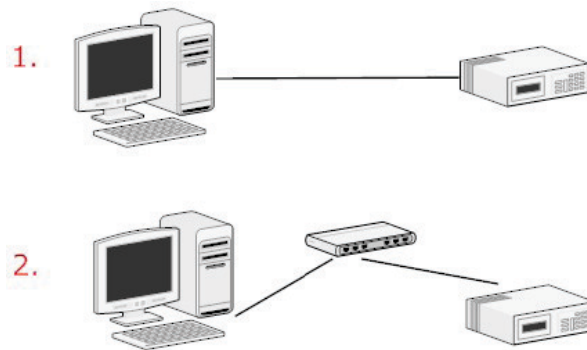

The PC that is connected directly to the NVR (or within the same local area network) should receive an IP from it. Simply access the NVR from your web browser with its IP address

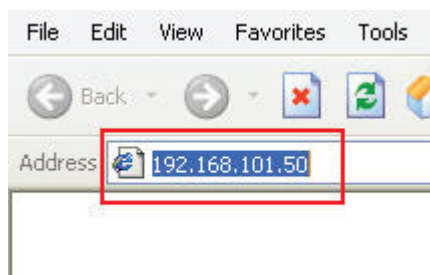

Again, you should be prompted for the username and password. Enter its default username “admin” and password “admin” and then click “OK” to enter the system



## 1. Live View NVST MP-16




## NVST MP-08



The 8 channel NVR comes with a 8-video split window view with one video displays on a larger window. Select a channel from the drop-down menu to display its video on the larger split window. You can also double-click on any of the smaller one to display its video to the larger window.




## NVST MP-04

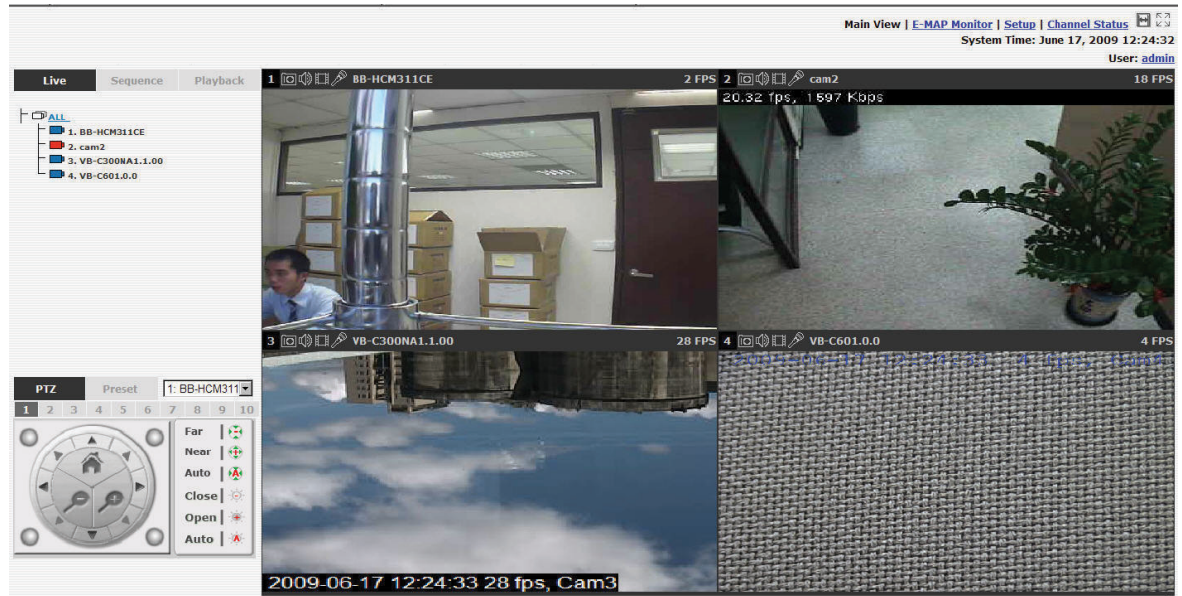

The “Live View” page provides the following functions:

- Retrieve camera’s video stream
- Retrieve camera’s status
- Perform Live Sequence Viewing
- PTZ Control
- Perform PTZ Preset Sequence viewing
- Perform manual recording
- Take snapshot
- Receive audio of a video stream
- Send audio
- Control “Buzzer”
- Change web UI display language

## 1.1 Retrieve camera's video stream

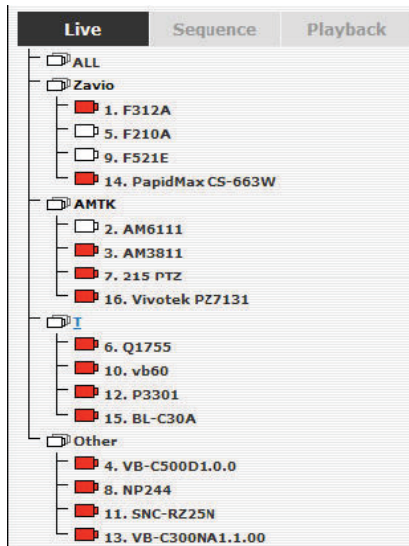



The camera list is expanded and displayed on the Live View page.


- Click “All” to display videos in the 8-video mode (NVST MP-08) or 16-video mode (NVST MP-16)
- Click on a “Group” (ex. Group 1) to display videos from cameras under that group in quad view
- Click on any camera to display video in single-view mode

## 1.2 Retrieve camera's status

The camera list can show each camera's current status. Each status is represented with different colors and their meanings are explained on the left

 Camera is connected

 Camera is NOT connected

 Camera is current performing recording


## 1.3 Perform Sequence Viewing

Sequence view is a function that allows you to view multiple video streams from certain cameras in sequence automatically without having to select them one by one.


To perform sequence view, select “SEQ View” from the upper-left hand corner



Next, select one or more camera(s) or camera group(s) for sequence viewing

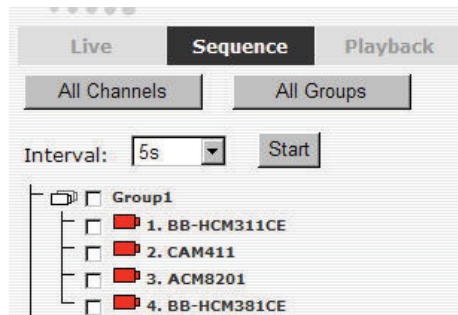

Then select dwell interval from the drop-down menu

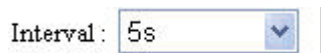

Finally click “Start” to start sequence viewing


*\* Click “All Channels” to quickly select all available channels and start sequence view in single-view mode.*

*Click “All Groups” to quick select all available groups and start sequence view in quad-view mode*

*Or simply select the desired channels and press “Start” to start sequence view*

## 1.4 PTZ Control

PTZ control provides functions to pan, tilt, zoom a PTZ camera as well as the ability to adjust camera focus and iris

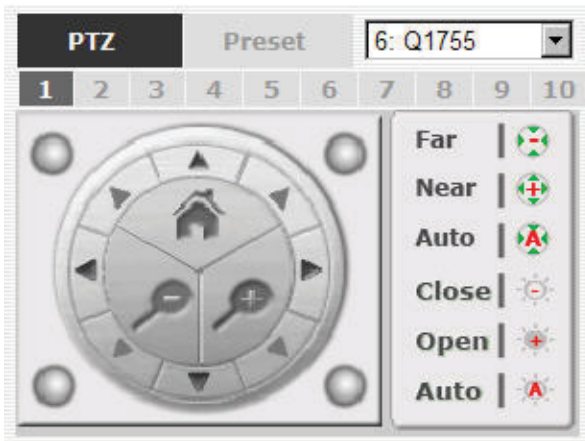

Camera(s) that are currently being selected for live viewing will be listed in the PTZ drop-down menu. Simply select a camera then use the PTZ control panel to control the camera



The bar shown below allows you to control the pan/tilt speed



## 1.5 Perform PTZ Preset Viewing

There are three functions provided in the “Preset” section:

- Perform preset point viewing of a particular camera
- Auto pan a particular camera
- Perform preset point sequence viewing



### Preset Point Viewing

Start by selecting a PTZ camera from the drop-down list:



Its available PTZ preset points will be listed in the drop-down list shown below:



Select a preset position from the drop-down list and click “Go to” to move the live view to that position




## Auto Pan Viewing

Start by selecting a PTZ camera from the drop-down list:




Use the Auto Pan control buttons to pan right, left and stop auto pan

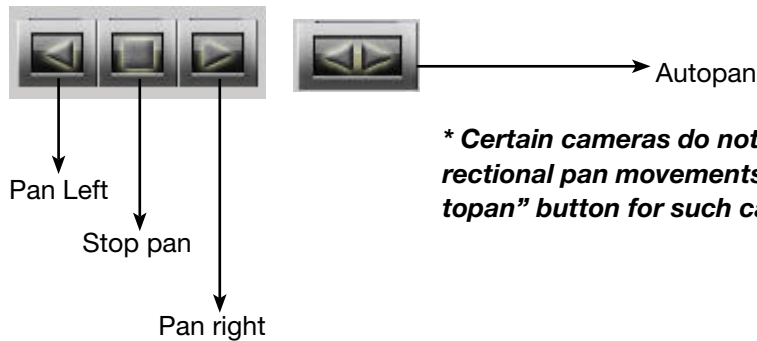


## Preset Point Sequence Viewing

This function allows you to view multiple preset points from a video of a camera without having to select them one by one. Once you have defined the preferred preset points in **“Channel Configurations”** >> **“PTZ Setting”** >> **“PTZ Sequence”** under the **“Setup”** menu, click **“Start”** in the lower-left hand corner in Live View under **“Preset”** and the recorder will begin to display videos from those preset points in sequence automatically until you click **“Stop”**

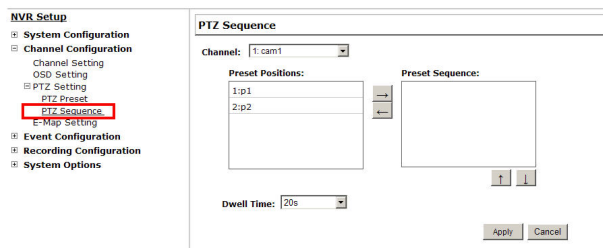


“In the Setup page”

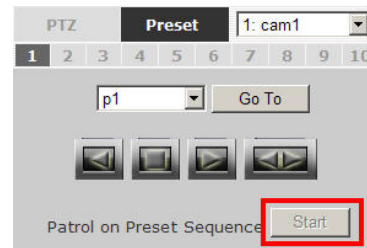





In the Live View

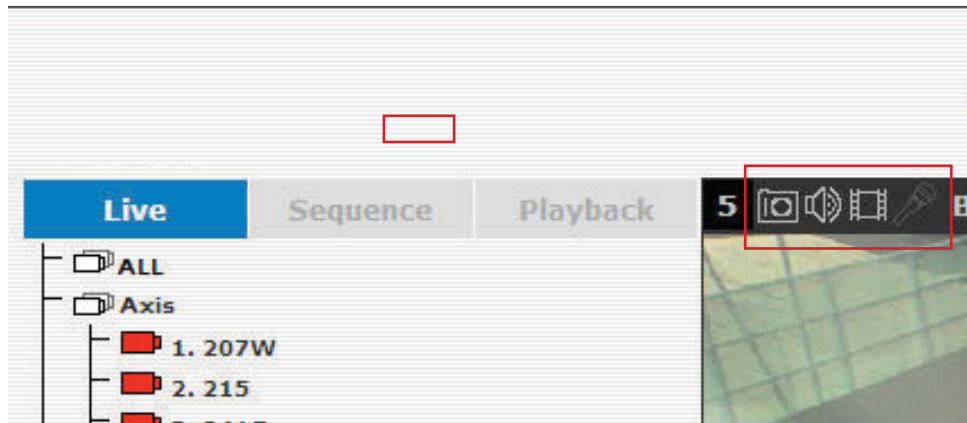

## 1.6 Live Video Control Buttons

Each live video window comes with control buttons with functions described below:




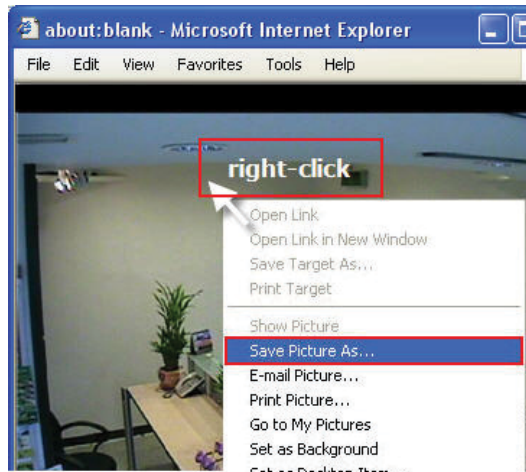
-  Take a snapshot of a live video
-  Turn on/off audio of a live video
-  Start/stop recording of a live video (manual recording)
-  Audio post function



-  Full screen view of a live video
-  Display video in its original ratio


## Take a snapshot of a live video

To take a snapshot of a live video, click the  button and the snapshot of the video will be displayed in a pop up window shown like below




Right-click anywhere on the image and select “Save Image as” from the pull-down menu


In the pop up dialog, name the image file and choose which directory the image will be saved to and click “Save”

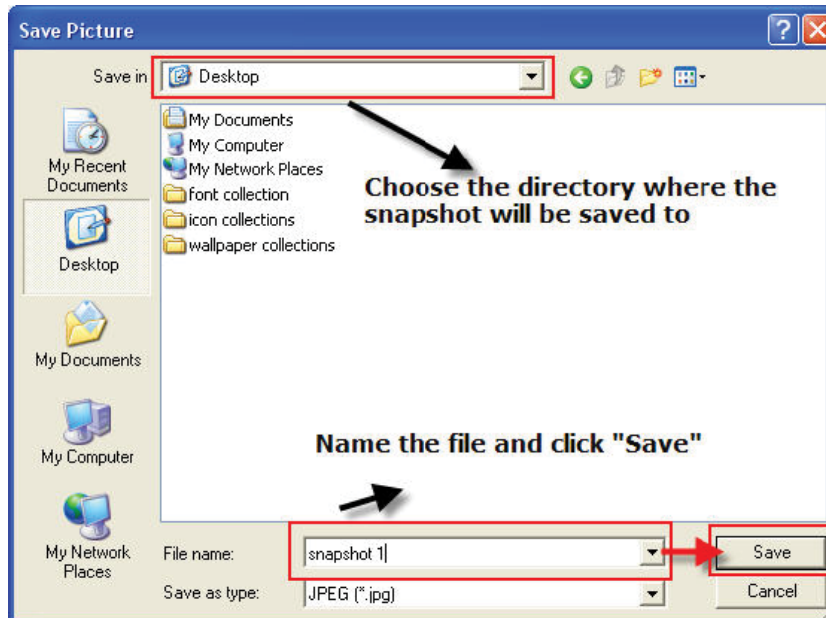

## Full Screen View of a Live Video

To view a video in full screen, click the  button. To exit full screen video, double-click anywhere on the video.


## Turn On/Off Audio of a Live Video


You can retrieve audio from a particular camera. Simply click the  button to do so.

The button will show in different color once the audio is turned on.

 Click on it again to turn off audio.

## Start/Stop Recording of a Live Video

You can manually start or stop recording of a live video by using the  button.


The button will show in different color once the recording is started manually.  Click on it again to stop recording.

## Audio post

This function allows user to speak from a PC through a microphone and the audio can be played at the camera side if it has a speaker connected to it.

## 1.7 Change Web UI Display Language

You can change the web UI display language from the current login user-name link located at the upper-right hand corner. Click on the link opens up a new window which displays detail information about the user as well as a drop-down menu which lets you change the display language.

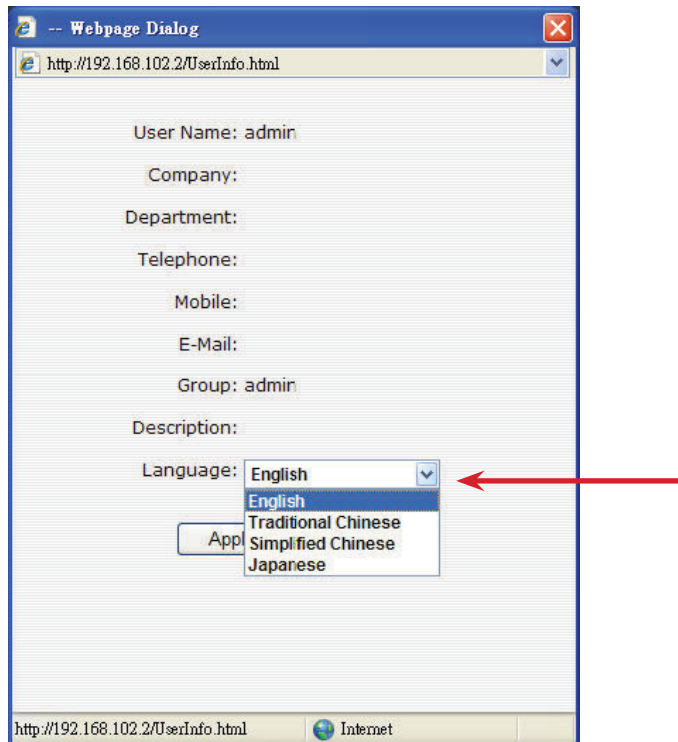



## 1.8 Live View through iPhone


You can use iPhone and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through the Safari browser, make sure “javascript” is on under “Settings” >> “Safari” >> “Javascript”




Once Javascript is enabled, click the “Home” button on the iPhone to go back to the home screen and open the Safari browser



Type in the IP address of the NVR in the address bar

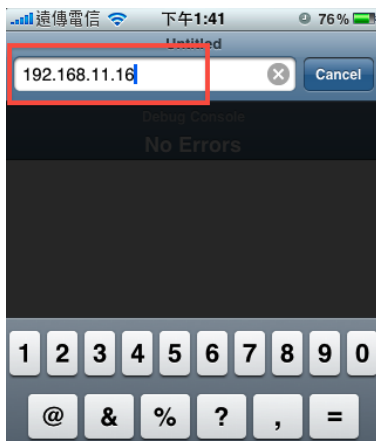


You should be prompted to enter the username and password to access the NVR

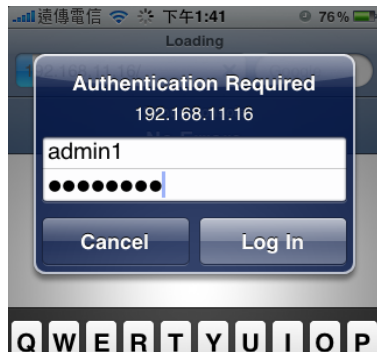

Upon successful login, you should see the live view video of the first channel



Click on the “Channe” drop-down menu to select other cameras

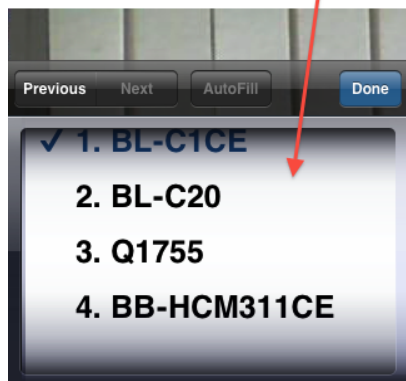


If a PTZ camera is selected, the corresponding control buttons will display (control PT only)



*\* Please note that this function is camera dependent and is not available to all cameras. Certain cameras do not allow adjusting image size and the selection "Auto" will be used.*

## 1.9 Live View through Blackberry Phones


You can use Blackberry and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through its browser, make sure “javascript” is enabled under “Browser” >> “Menu button” >> “Options” >> “Browser Configuration”

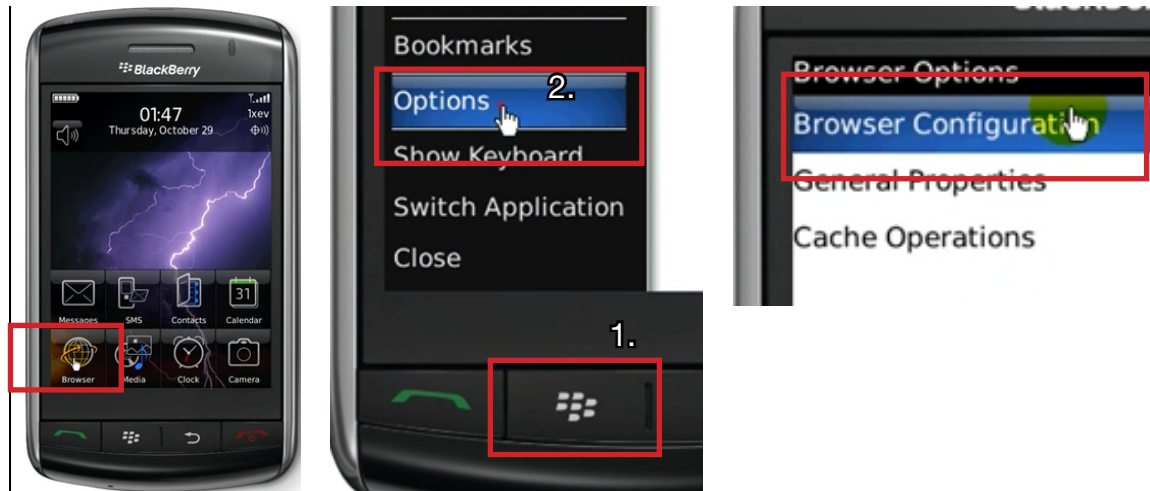


Enable the “Support Javascript” option and click the menu button and click “Save Options”



Go to “General Properties”

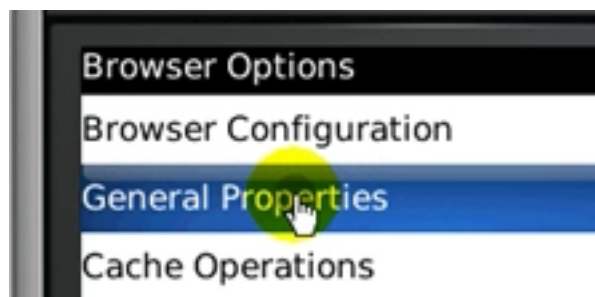

Make sure two options illustrated below are enabled

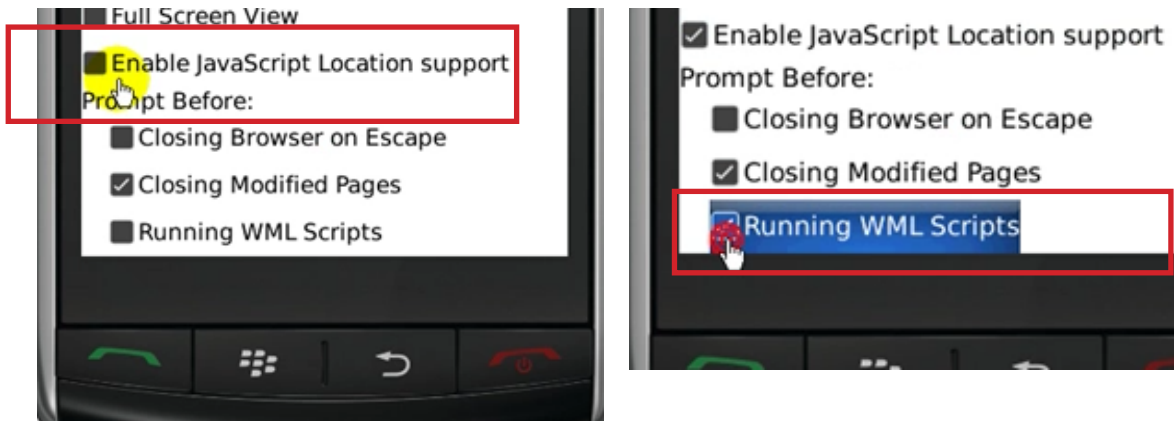

Press the menu button and click the "Save Options" to save settings



Press the button highlighted below to go back to the browser







Type in the IP address of the NVR in the address bar



You should be prompted to enter its username and password for access

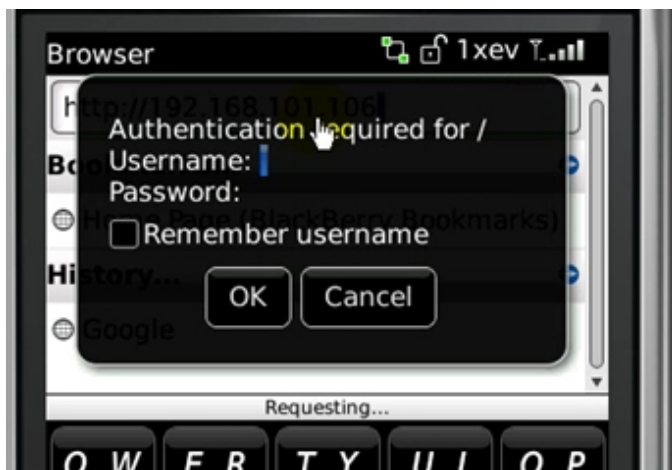

## 2. Playback

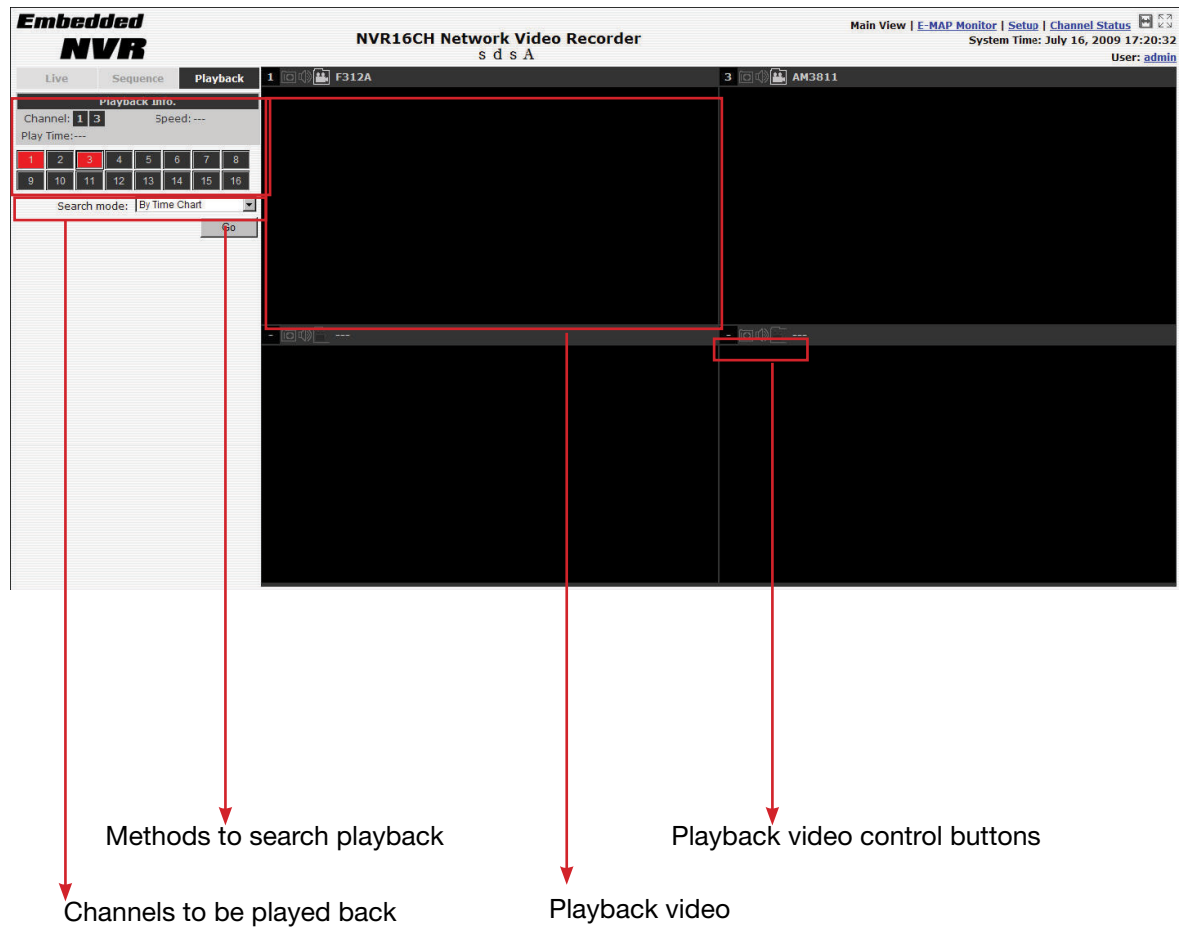

Playback is a function that allows you to play one or more videos that were previously recorded by a chosen recording method or due to an event trigger. The NVR offers synchronized playback from up to 4 channels and various types of search methods are provided to help you find the footage you need quickly.

You can turn on or off the audio of a recorded video at your choice if audio was also recorded during the recording of the video.

Playback video can be viewed in full screen and snapshots can be taken and saved during a video playback.


## 2.1 Methods to Search Playback Videos

The NVR offers three methods to quickly help users find videos that were previously recorded:


- Search by time: *Specify a time range and search videos recorded within that range*
- Search by event: *Find videos that were recorded due to event triggers*
- Play by start time: *Enter a specific time a video was recorded to start playing back the video*

### Search by time chart

- Start by selecting which channel(s) you would like to perform a search on:

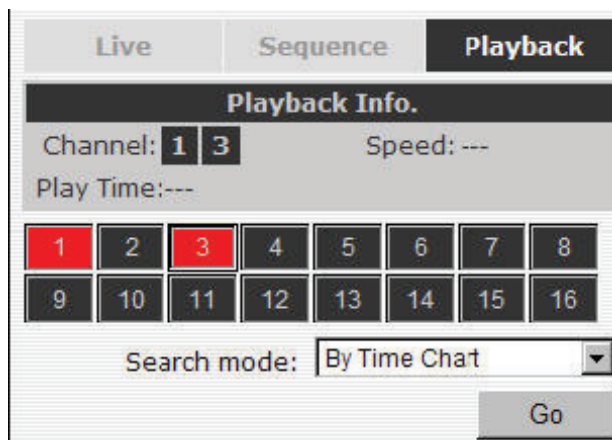

\* Selected channels will be marked in red

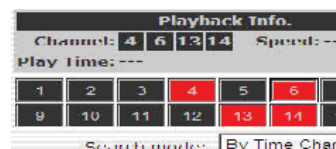

- Select “Search by time chart” from the “Search Method” drop-down list and click “Go” to start the search:



- Results will then be displayed in a “Date/Channel” table and boxes marked in blue represent videos found in those dates:

Date:


CH1	Ch2	CH3	CH4	
				1
				2
				3
				4
				5
				6
				7
				8
				9
				10
				11
				12
				13
				14
				15
				16
				17
				18
				19
				20
				21
				22
				23
				24
				25
				26
				27
				28
				29
				30
				31

- Click on any blue cell box should direct you to the hour/channel table if there were multiple videos recorded during that date:

CH1	Ch2	CH3	CH4	
				1
				2
				3
				4
				5
				6
				7
				8
				9
				10
				11
				12
				13
				14
				15
				16
				17
				18
				19
				20
				21
				22
				23
				24

*\* Videos from other cameras that are recorded on the same date will also be displayed*

- Click on the cell box again will start playing back the videos if you have reached the end of search results:

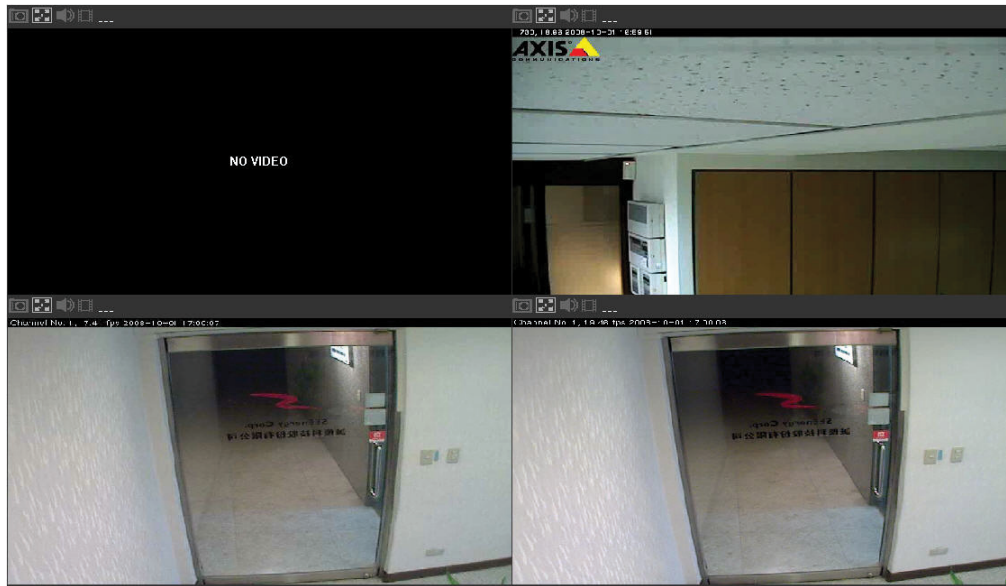

- Videos found from other cameras that were recorded at the same time will also be played.




## Search by event

- Start by selecting which channel(s) you would like to perform a search on:



\* Selected channels will be marked in red

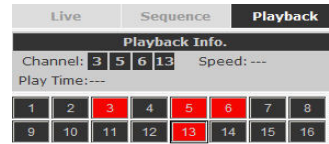

- Select "Search by event" from the "Search Method" drop-down list and click "Go" to start the search:
- Results will then be listed like what is shown below (displays the oldest record top down). Click on a particular result to start the playback:



\* You can click "Next Search" to display the next 15 results.

- You may also specify a new start time to search and display results from then on. You can restrict the number of results to be displayed at once (max. 30) and perform the search again




## Play by specific time

If you know when a recording was taken place, you may choose the “Play by start time” from the “Search Method” drop-down list




Then you will be prompted to enter a specific time and date for the recorded video.

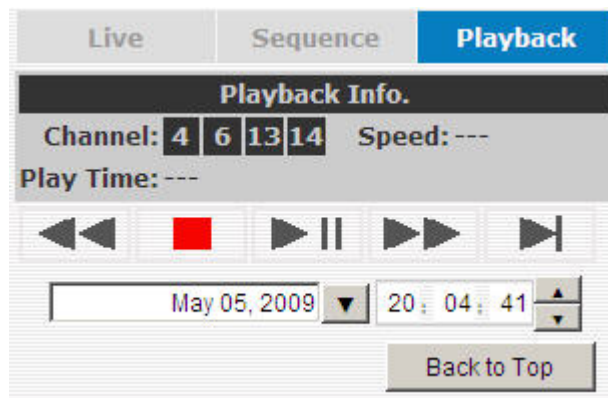

Use the  button to select month, date, and year

## Search by event (Most Recent)


This function quickly displays the most recent event recordings from the selected channels, displaying the most recent result top down. You may click “Update” to update the list to display the most recent result

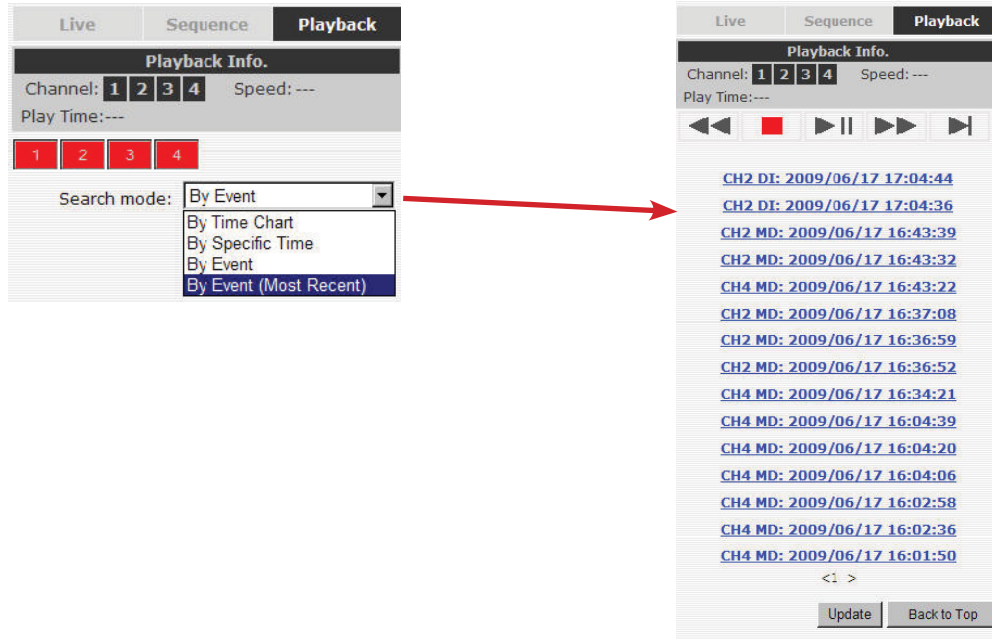


## 2.2 Export Playback Videos to AVI Files


User can export the recorded playback videos stored on NVST MP-16 to a local computer and save them in AVI file format. The files can then be played on the PC by a 3rd party media player such as VLC player or Windows Media player.


Once you locate the recorded videos with steps described in the previous section, hit the “Export AVI” button on a video window of the video you wish to export.

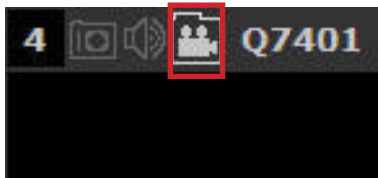


A new dialog will pop up and allows you to specify the time frame (or length) of the video you wish to export

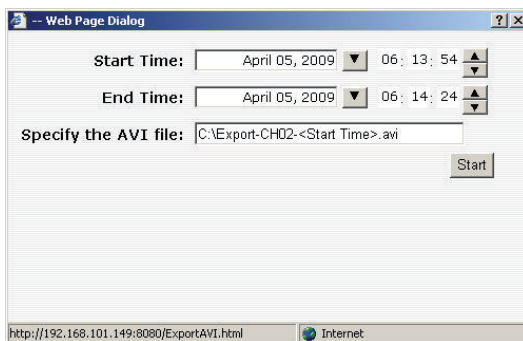


Click the  button to pull down the calendar to help you specify the month, date and the year

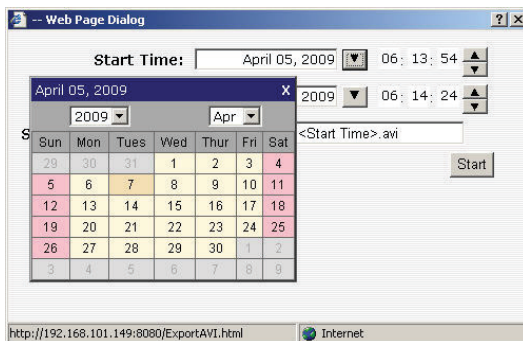


Specify the starting and ending hours of the video by entering numbers in the text boxes

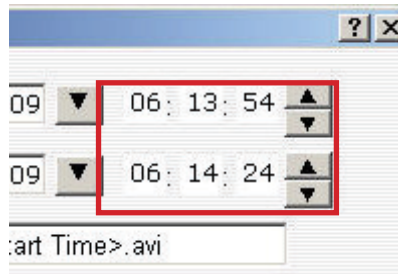


Hit the “Start” button to start exporting. The file will be automatically named and saved under the C:\ partition

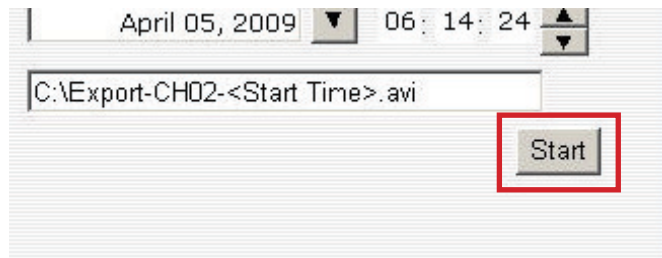

You will be notified once the process is completed successfully

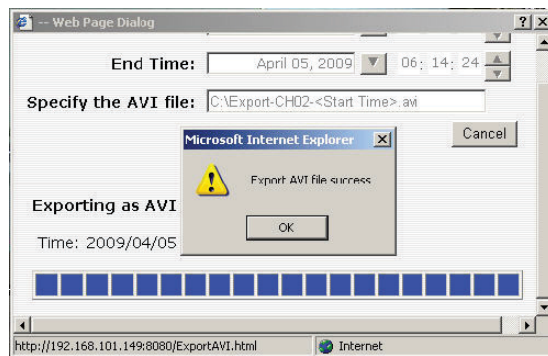

The exported AVI file will be saved under the C partition

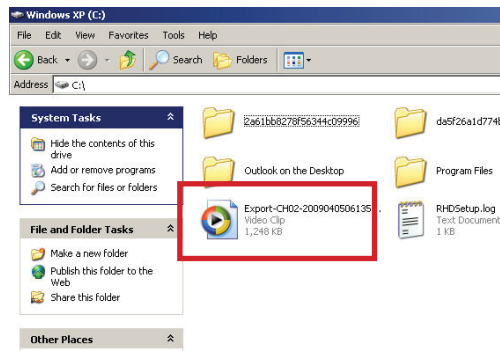


*\* ffdshow is required in order to play the exported AVI file with Windows Media Player. You can get it at “<http://sourceforge.net/projects/ffdshow-try-out/>” to download the “ffdshow\_beta6\_rev2527\_20081219.exe”*



## 2.3 Play Exported Playback Videos with NVR Media Player

You can also use the NVR Media Player to play the exported AVI files. This can save you the trouble of installing third-party media player or codecs when playing the exported AVI videos.


The NVR Media Player will be automatically installed after the CMS software is installed. You can launch the player under “Start” >> “All Programs” >> “IVS” >> “IVS Central Basic” >> “NVR Media Player”

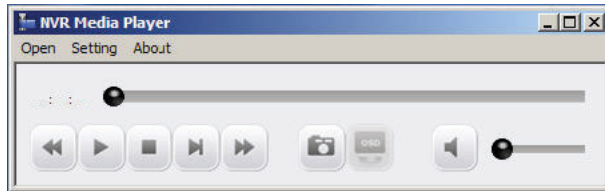

Click “Open” >> “AVI File”




Locate the exported AVI file, and click “open”. (normally under “C:\ExportFolder”)

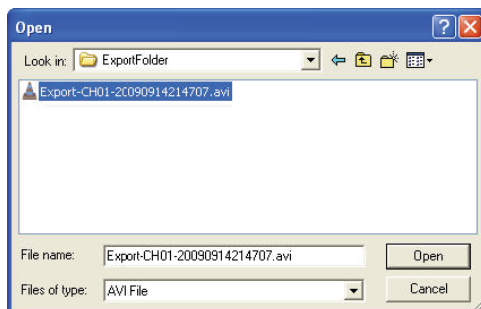

The video will then start playing




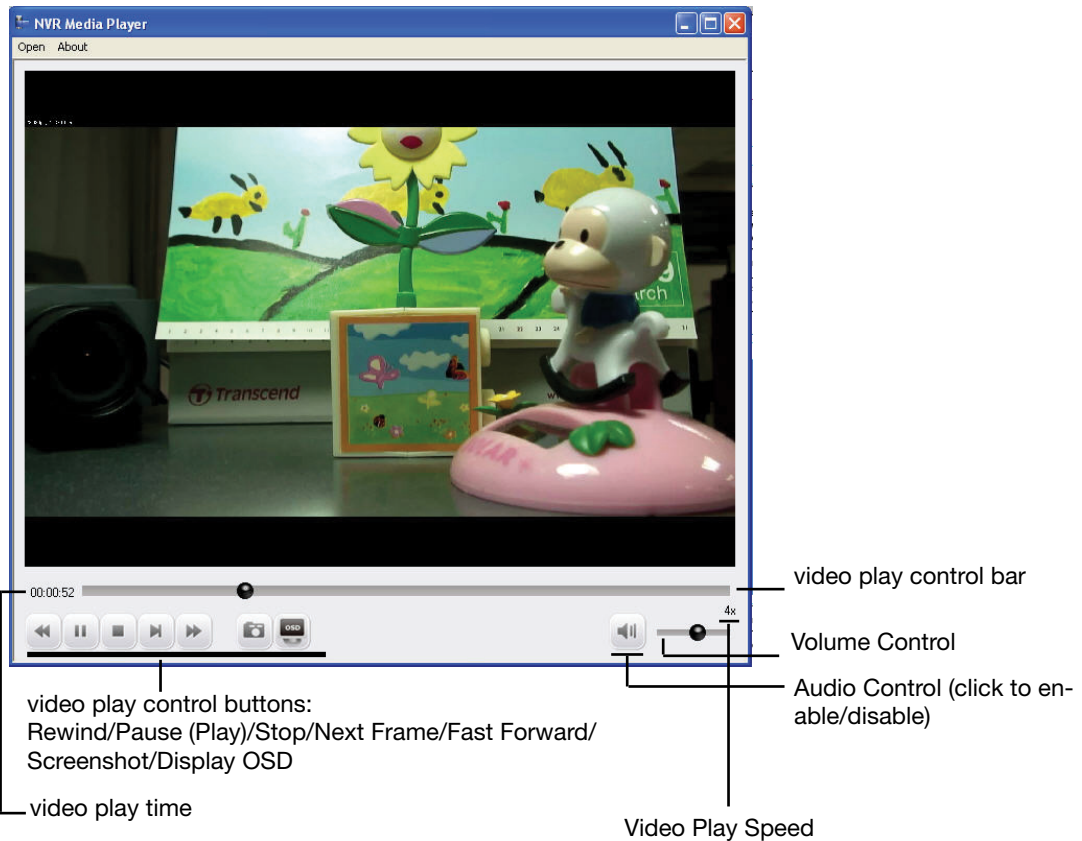

## 2.4 Open Event Snapshot images with NVR Media Player

The NVR sends snapshots that are taken when an event occurs to a destined FTP server or mail recipient. These type of snapshot images are saved in a proprietary image file format, h4i or p4i, and can only be opened by the NVR media player.

To do so, Select “Open” from the top menu then select “Image File”. A new dialog should be displayed which lets you locate the image file.

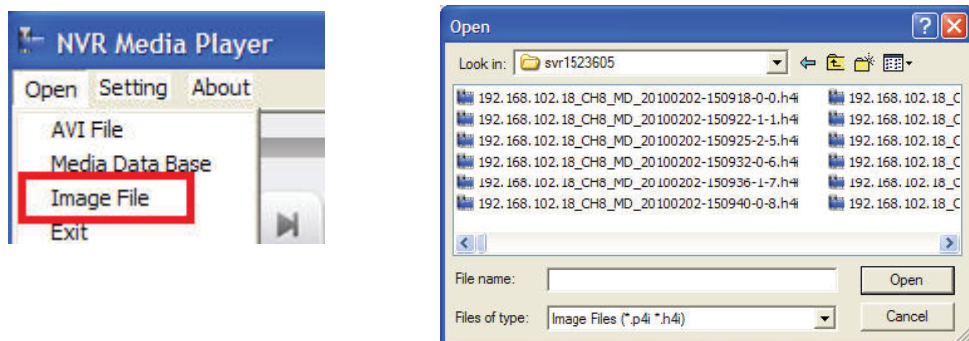

## 3. System Setup

### 3.1 System Configurations

The “System Configurations” page provides users options to setup the device quickly and properly. After properly configuring all settings in all the sub-pag-es, users should expect a fully working network video recorder that is ready to manage cameras on the network. We will start by configuring its network settings to make sure it works correctly in your network. Next, we will help you adjust the system time so videos will be recorder with correct timestamp. To better secure the system for unwanted disturbance, we will guide you on set-ting up user’s account and privileges to prevent settings gets altered by users other than the system administrator. Lastly, we will tell you what you should expect after installing a hard disk and how to prepare the hard disk for the video recording.

#### 3.1.1 Network Settings

**Embedded NVR**  
**NVR16CH Network Video Recorder**

**Setup**

- System Configuration
  - Network Setup
  - Time and Date
  - Users Account
  - Group Privilege
  - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

**Network Setting**

Connection Type:

IP Address: 192.168.102.49

Subnet Mask: 255.255.252.0

Gateway: 192.168.101.1

DNS 1: 192.168.11.11

DNS 2: 192.168.11.13

HTTP Port:

Streaming Port:

UPnP Port Forwarding:  External Port:


**Optional Setting**


Device Name:

You need to adjust settings in this page for the device to work properly in your network. It is critical that settings here are configured correctly based on your network configurations so that the recorder can be administered through the local area network and cameras can be connected from it.

By default, the recorder is set to obtain IP address from DHCP server, it should be sufficient in most network environments, and most likely you should not need to alter anything in this page. To locate the recorder, simply use the PRIME IP Utility with steps described in page 12.

If you wish to set the recorder to use a static IP address in your local area network,

1. Choose “Static IP” from the “Connection Type” drop-down menu
2. Enter the IP address, subnet mask, default gateway address and DNS server address for the recorder
3. Enable “DHCP Server” under “DHCP Server” if you wish to use the recorder as a DHCP server, or leave it disabled if there is already a DHCP server in the network 
4. Click Apply for the settings to take effect

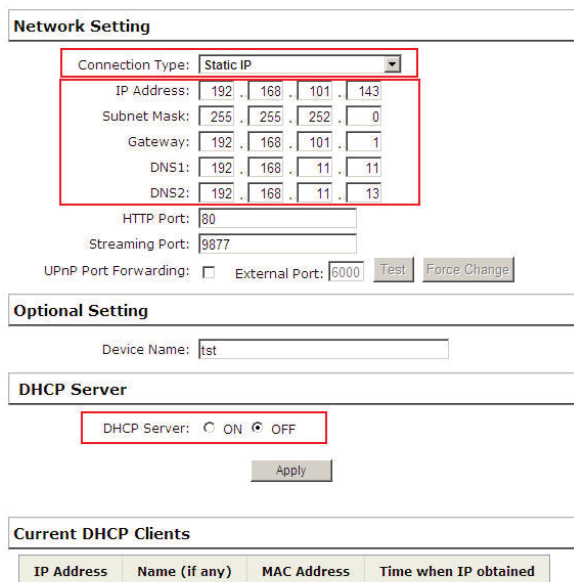

**Network Setting**

Connection Type: **Static IP**

IP Address: 192 . 168 . 101 . 143  
Subnet Mask: 255 . 255 . 252 . 0  
Gateway: 192 . 168 . 101 . 1  
DNS1: 192 . 168 . 11 . 11  
DNS2: 192 . 168 . 11 . 13

HTTP Port: 80  
Streaming Port: 9877

UPnP Port Forwarding:  External Port: 6000

**Optional Setting**


Device Name:

**DHCP Server**

DHCP Server:  ON  OFF

**Current DHCP Clients**

IP Address	Name (if any)	MAC Address	Time when IP obtained
------------	---------------	-------------	-----------------------

 The recorder can detect the presence of a DHCP server upon startup. It sets itself to use static IP address if there is no DHCP server currently presented in the network. Its DHCP server function is also turned on at the same time to assign IP addresses to cameras that are later connected to the network

o You can manually turn off the DHCP server function if you wish to use a separate DHCP server



Change the recorder’s IP address would require the recorder to restart. Restart the device under “system Options” >> “Maintenance” for the settings to take effect.

## 3.1.2 DDNS Service

DDNS, which stands for “Dynamic DNS”, is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system (in this case, the NVR) using the Internet Protocol Suite, to notify a domain name server to change, in real time, the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.

A popular application of dynamic DNS is to provide a residential user’s Internet gateway that has a variable, often changing, IP address with a well known hostname resolvable through standard DNS queries.

This is useful if the NVR is placed on the Internet with a dynamic public IP, which once the DDNS is properly setup, users can access the NVR remotely with the DDNS domain name without worrying if the IP has changed or not.

### NVR Setup

- [-] System Configuration
  - Network Setup
  - DDNS Service
  - Time and Date
  - Users Account
  - Group Privilege
  - Disk Setup
- [+] Channel Configuration
- [+] Event Configuration
- [+] Recording Configuration
- [+] System Options

### Dynamic DNS Service

Enable DDNS Service

Server Address:

Domain Name:

User ID:

Password:

Connection Status: Disconnected



The NVR currently only works with free DDNS service provided by “DynDNS”. For more information, please go to [www.dyndns.com](http://www.dyndns.com)




If the NVR is placed behind a router or Internet gateway, please make sure port forwarding for port 80 is configured on the router or the gateway in order for the DDNS function to properly register with the service. **It’s often suggested to use the DDNS function in the router/gateway for such case instead.**



Once you have the DDNS function successfully up and running, please DO NOT forget to configure port forwarding for the NVR web port (default 80) and the streaming port (default 9877) in the router/gateway for remote viewing. You can then type in <http://yourddnsdomain> in the browser to access the NVR remotely for live view.



In order to properly configure the DDNS service function, please register a free DDNS domain name and account from DynDNS first. Go to [www.dyndns.com](http://www.dyndns.com) from the browser to do so.

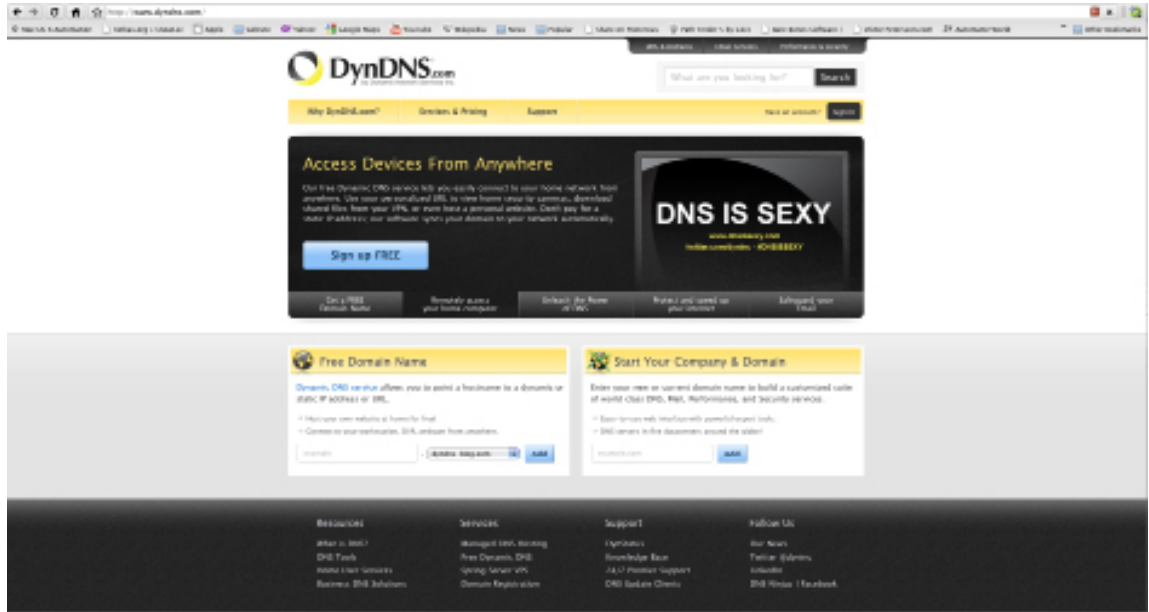


Click on the “Signup FREE” button to begin



Choose the FREE service on the left

Sign up now and get remote access to home computers and devices

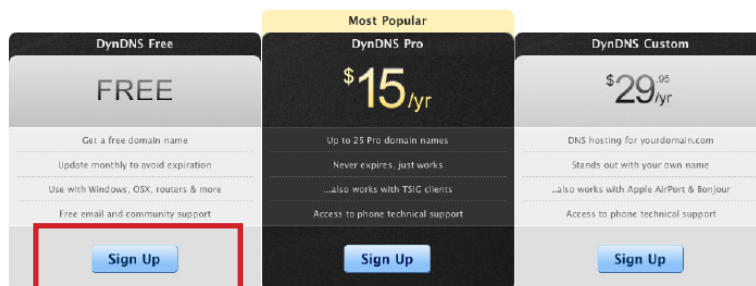

"Remote Desktop | DynDNS | Private static IP - Win!" @ivi-8722

Fill in the necessary fields as illustrated below:

The screenshot shows the 'Add New Hostname' form with the following fields and annotations:

- Hostname:** A text input field containing 'myddns' and a dropdown menu showing 'dyndns.org'. An arrow points to the dropdown with the text: "Enter a desired hostname here".
- Wildcard Status:** A text input field containing 'Disabled' and a link '[Want Wildcard support?]'. An arrow points to the dropdown with the text: "Select a desired sub-domain from the drop-down menu".
- Service Type:** Radio buttons for 'Host with IP address [?]', 'WebHop Redirect [?]', and 'Offline Hostname [?]'. The first option is selected.
- IP Address:** A text input field containing '60.250.139.170'. A link below it says 'Your current location's IP address is 60.250.139.170'. An arrow points to this link with the text: "Click here to automatically fill in the current public IP in the 'IP Address field'".
- TTL value:** A text input field containing '60 seconds' and a link 'Edit TTL'.
- Mail Routing:** A checkbox labeled 'Yes, let me configure Email routing. [?]'.
- What do you want to use this host for?** A section with the text 'Select services and devices you would like to use with this hostname.' and a list of buttons: 'vpn', 'remote file access', 'remote desktop', 'mail server', 'web server', 'chat server', 'ftp backup', 'ssh', 'database', 'voip'. An arrow points to this section with the text: "Pick one or more options here (any is fine)".
- Hosting and Design For Web Sites and Blogs:** A section with buttons: 'blog', 'gallery', 'wiki', 'portfolio', 'ecommerce', 'web page'.
- Remote Access For Devices:** A section with buttons: 'dvr', 'webcam', 'data storage', 'cctv', 'printer', 'alarm and security', 'thermostat', 'weather station', 'game server', 'home automation'.
- Add To Cart:** A button at the bottom right. An arrow points to it with the text: "Click to go to the next step".

The page will check whether the hostname you entered has been used by another user or not as soon as you click the "Add to Cart" button. If you see below message, simply enter a different and click "Add to Cart" again

The screenshot shows the 'Add New Hostname' form with the following error message:

Hostname: myddns · dyndns.org  
This hostname already exists. It may be in use by another customer.

Once you get to the next page, fill in the necessary fields as illustrated below

## Shopping Cart

Host [seenergy88.dyndns.org](#) added to cart. Finish **FREE** checkout to activate.

Your cart contains free services only. You will not be asked for credit card information.

### Upgrade Options

Free accounts allow only five Dynamic DNS hosts.

- To add more and enjoy [additional benefits](#) for only \$15.00 per year, [purchase Dynamic DNS Pro](#).
- To get Dynamic DNS for your own domain, use [Custom DNS](#).

### Dynamic DNS Hosts

<a href="#">seenergy88.dyndns.org</a>	-	<input type="button" value="remove"/>	\$0.00
---------------------------------------	---	---------------------------------------	--------

Have a coupon? [Log in](#).

Sub-Total: \$0.00  
Order Total: \$0.00

---

### Create account or log in to continue

*Create an username and a password here. This will be used in the NVR's configuration. Enter a valid email address as well.*

Username:

Password:

Confirm password:

Email:

Confirm email:

Subscribe to:

- DynDNS.com newsletter (1 or 2 per month)
- Dyn Inc. press releases
- Remove HTML formatting from email

Already Registered?

Username

Password

[Forgot your password?](#)

Security Image:

Enter the numbers from the above image:

I agree with the [acceptable use policy \(AUP\)](#) and [privacy policy](#).

*Enter the security code*

*Check to agree the license*

*Click to finish creating the account*

Go back to the NVR's DDNS service configuration page under "Setup" >> "System Configuration" >> "DDNS Service".

Fill in the domain name you picked during the registration in the "Domain Name" field and the username/password you created in the "User ID" and "Password" field and click "Apply" to finish

## NVR16CH Network Video Recorder

### Dynamic DNS Service

Enable DDNS Service

Server Address:

Domain Name:

User ID:

Password:

You can click the "Check DDNS Status" button to check the DynDNS service status. If you are getting a "Disconnected" message, it means that DDNS service server is down or the NVR is not connected to the Internet. If everything is ok normally, you should be prompted with a success message

## NVR16CH Network Video Recorder

### Dynamic DNS Service

Enable DDNS Service

Server Address:


Domain Name:

User ID:

Password:

Connection Status: Disconnected

### Message from webpage


 Connect DDNS successful

Notice the “Connection Status” displays the status of whether the NVR has been able to successfully update its current public IP address to the DynDNS server



The screenshot shows a web interface for configuring DDNS. It includes a 'User ID' field with the value 'shiangshiang13' and a 'Password' field with masked characters. Below these fields, the 'Connection Status' is displayed as 'Disconnected' and is highlighted with a red rectangular box. A 'Check DDNS Status' button is visible at the bottom of the form.

The NVR will automatically check with the DynDNS server once every hour and update its latest public IP to the server. The “Apply” button does the same thing which if you are see the “Disconnected” status, you can use it to manually check with the server without waiting for the NVR to update itself in the next hour. **However, it is advised not to do so too often as DynDNS disallow repetitive updates within a short period of time and the account will be banned if such action is detected.**

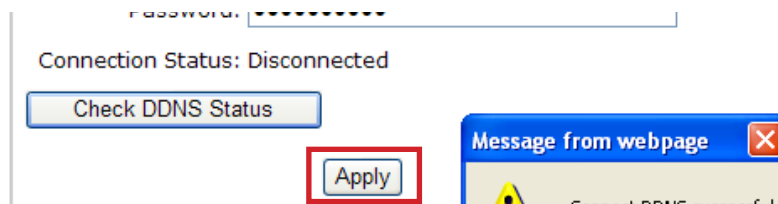

This screenshot shows the same DDNS configuration interface after the 'Apply' button has been clicked. The 'Connection Status' remains 'Disconnected'. The 'Check DDNS Status' button is highlighted with a red box. A 'Message from webpage' dialog box is open, displaying a yellow warning icon and the text 'Connect DDNS successful'.



## 3.1.3 Time and Date

The screenshot shows the 'Time and Date Setting' configuration page. On the left is a 'Setup' menu with categories: System Configuration (Network Setup, Time and Date, Users Account, Group Privilege, Disk Setup), Channel Configuration, Event Configuration, Recording Configuration, and System Options. The 'Time and Date Setting' panel includes a 'Time Zone' dropdown set to 'GMT+08 (Beijing, Hong Kong, Shanghai, Taipei)' and a 'Summer time' checkbox. Three radio buttons are present: 'Manual' (selected), 'Sync with NTP Server', and 'Sync with PC'. The 'Manual' section has dropdowns for Year (2009), Month (05), date (06), Hour (10), Minute (24), and Second (29). The 'Sync with NTP Server' section has an 'NTP Server' text field containing 'ntp.lcsd.edu' and an 'Update Interval' dropdown set to '24 hr'. The 'Sync with PC' section shows the current time 'May 06, 2009 10:24:29'. An 'Apply' button is at the bottom right.

Set the time and date by selecting the time zone according to your location. It is imperative that you set the recorder's time correctly to avoid the following errors:

- Incorrect display time for playback videos
- Inconsistent display time of event logs and when they actually occur

After selecting the time zone, choose an option below to set the recorder time

- **Manual** – Use the drop-down list and configure the time manually
- **Sync with NTP server** – enter the hostname or IP address of a valid NTP server and set how often the recorder should synchronize the time with it by using the “Update interval” drop-down menu
- **Sync with PC** – Check this option to synchronize the recorder time with the PC that you are currently using to access the recorder

## 3.1.4 User Account

The recorder can be accessed by multiple users simultaneously. You can add, remove, and edit users by using options provided in this page to keep user information organized. Each recorder comes with a built-in “admin” account with password “admin”. It’s highly recommended to change the password upon your initial login.

User Name	Group	Description
admin	admin	

**Add User**

User Name:  Only A-Z, a-z, 0-9 and \_@ are allowed

Password:

Confirm Password:

Company:  (Optional)

Department:  (Optional)

Telephone:  (Optional)

Mobile:  (Optional)

E-Mail:  (Optional)

Group:

Language:  English

Description:  (Optional)

### To change the password of the “admin” account:

1. Click and highlight the “admin” account in the account list and click “Edit”
2. Its information should be displayed in “User Account Information”
3. Enter a new password in the “Password” field and enter it again in “Confirm Password”

Username	Group	Description
admin	admin	This is the admin account

**User Account Information**

Username:  admin

Password:  \*\*\*\*\*

Confirm Password:

Company:  (optional)

Department:  (optional)

### To add a new user:

- Enter a username and password in “User Account Information”. All other fields are optional for your own reference.
- Select a group from the “Group” drop-down menu to assign the new user to a particular group
- Enter a short description for the account if you wish
- Click “Apply” to finish configuration

## 3.1.5 Group Privilege

Group Privilege is where you can create multiple customized access policies for situations if you need the recorder to be accessed by users other than the administrator. You can do so by creating a group, and then remove access privileges for certain configuration pages or cameras. Users that are created and assigned to this group will have limited access instead of full administration rights.

**Setup**

- System Configuration
  - Network Setup
  - Time and Date
  - Users Account
  - Group Privilege
  - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

### Group Privilege Setting

Group: Admin: admin

Account Type: Administrator

Live:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

Playback:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

Allow use of PTZ:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

System Configuration:

<input checked="" type="checkbox"/> System Configuration	<input checked="" type="checkbox"/> Channel Configuration	<input checked="" type="checkbox"/> Event Configuration
<input checked="" type="checkbox"/> Recording Configuration	<input checked="" type="checkbox"/> System Options	

The recorder comes with seven built-in groups and five built-in privilege profiles, except the “admin” and the “guest” accounts; the other five groups are fully customizable or you can simply assign a group with one of the default privilege profiles. You can, however, assign more than one users to the “admin” account if you wish to do so. The guest account comes with a “view-only” privilege in the “Live View” page, and users in this group do not have the power to make any changes in the “Live View” page or have access to pages other than the “Live View” page.

Group: Group 1

Privilege Type: Operator

You can change the group name by clicking the “Change Group Name” button

Group: Group 1

Privilege Type: Operator

Choose what type of privilege you would like this group to have from the “Privilege Type” drop-down menu

Group:    
Privilege Type:

Its access privilege will then be displayed. You can alter its settings by allowing or denying access to other cameras using the checkboxes instead of accepting the defaults

**Group Privilege Setting**

Group:    
Account Type:

Live:

<input type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input type="checkbox"/> CH16

Playback:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input type="checkbox"/> CH16

Allow use of PTZ:

<input type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input type="checkbox"/> CH16

System Configuration:

<input checked="" type="checkbox"/> System Configuration	<input checked="" type="checkbox"/> Channel Configuration	<input type="checkbox"/> Event Configuration
<input type="checkbox"/> ...	<input type="checkbox"/> ...	

## 3.1.6 Disk Setup

Once you install a hard disk to the recorder, you would need to initialize it so that it can be ready for recording. You can obtain basic information about the disk you installed in this page

To initialize it, simply click the “Format” button


**Setup**

- [-] **System Configuration**
  - Network Setup
  - Time and Date
  - Users Account
  - Group Privilege
  - Disk Setup
- [-] **Channel Configuration**
- [-] **Event Configuration**
- [-] **Recording Configuration**
- [-] **System Options**

**Hard Disk Setting**

Disk ID	Disk Type	Capacity	Disk Status	Format
1	Internal	445GB	Online	<input type="button" value="Format"/>
2	Internal	142GB	Online	<input type="button" value="Format"/>

You can also connect external USB thumb drive to the recorder for firmware upgrade.

 For instructions to install a hard disk to the recorder, refer to page 9

 To obtain detail information about the disk, go to “System Options” >> “Disk Status”



## 3.2 Channel Configurations

### 3.2.1 Add a Camera

The NVR provides two options for adding a new camera. Users have the option to let the recorder automatically find the cameras or it is possible to enter camera's information and add it manually.

Main View | E-MAP Monitor | Setup | Channel Status  
System Time: June 01, 2009 12:40:16  
User: admin

**Network Video Recorder**

**Setup**

- System Configuration
- Channel Configuration
  - Channel Setting
  - OSD Setting
  - PTZ Setting
  - E-MAP Monitor
- Event Configuration
- Recording Configuration
- System Options

**Channel Setting**

Channel	Channel Name	Group	IP Address	Format	Resolution
1	cam1	Group1	192.168.101.21	MJPEG	4CIF

Remove Edit

Click here to search camera: Search

\* You may skip this step and add a new camera manually by entering camera's setting in the "Camera Information" section

**Add New Channel:**

Channel ID: 2

Channel Name: cam2

Group: Group1 Change Group Name

IP Address:

User Name:

Password:

HTTP Port: 80

Detect Once you fill out above information, click "Detect" to retrieve camera setting


Add Cancel

#### Automatic Search:

1. Click the "Search" button to perform the camera search. You should be prompted to install Active Control component in order for the search to function properly. Go ahead and click "Install"




2. After that, the search should begin and its status should be displayed:

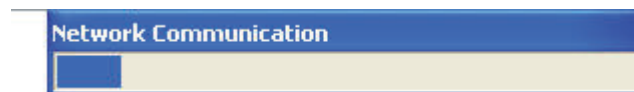


3. Found cameras should be listed and simply select a camera from the list and press “Configure”



4. Its corresponding information should be displayed in the “Camera Information” section. Enter its username and password and select the channel ID and name the camera.

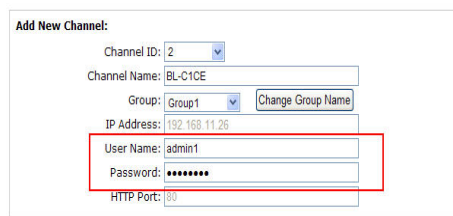

5. Click on “Detect” to establish connection between the recorder and the camera. If connection establishes successfully, camera’s detailed information should be polled and displayed as below

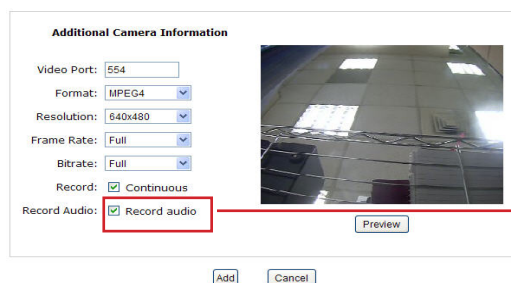

\* Audio from this channel will not be recorded if this option is unchecked

6. Adjust its video format, frame rate, resolution or bitrate...etc if you wish. You can also click on the “Preview” to preview the live video of the camera.

Click “Add” to finish adding the camera



If cameras are marked with "\*" in the search result, it means those cameras are already configured and connected to NVST MP-16.

:   
Add a new camera by manually entering camera's setting in the "Camera Information" section.

	IP Address	HTTP Port	Installed
	192.168.101.40	80	
	192.168.101.42	80	
	192.168.101.41	80	
	192.168.101.47	80	
	192.168.101.43	80	
	192.168.101.23	80	*
	192.168.101.46	80	

## Add a camera manually

Simply follow the instruction described above but instead of using the "Search" function, enter the camera's IP address and credential in the "Camera Information" manually, then follow step 5 ~6 described above.

**Add New Channel:**

2. Channel ID:

Channel Name:

Group:

IP Address:  1.

User Name:

Password:

HTTP Port:

Once you fill out above information, click "Detect" to retrieve camera setting

Enter manually

## 3.2.2 OSD Settings


The OSD (On Screen Display) allows users to add informational text message and embed it onto the video. By default, this function is turned off. To add texts to one or more videos,

1. Select a camera you would like to add text to and choose “Display OSD”




The screenshot shows the 'OSD Settings' panel. At the top, there is a header 'OSD Settings'. Below it, a dropdown menu labeled 'Camera:' is set to 'Camera 1'. Underneath, there are two radio button options: 'Do Not Display OSD' (which is unselected) and 'Display OSD' (which is selected and highlighted with a red box).

2. Choose one or more display options if you would also like the recorder to automatically embed the system time or the frame rate for you. Or simply choose to display a custom message of your own

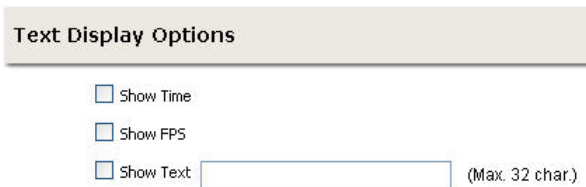

The screenshot shows the 'Text Display Options' panel. It contains three checkboxes: 'Show Time', 'Show FPS', and 'Show Text'. The 'Show Text' checkbox is selected. To the right of the 'Show Text' checkbox is an input field with the text '(Max. 32 char.)' next to it.

3. Next, define where the text will be displayed by either entering an X/Y coordinate or use the system pre-defined position from the drop-down menu

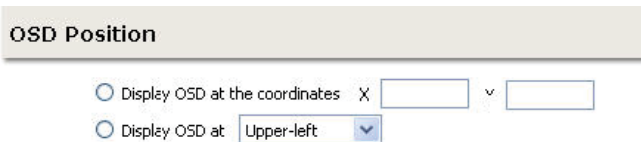


The screenshot shows the 'OSD Position' panel. It has two radio button options. The first is 'Display OSD at the coordinates' followed by 'X' and an input field, and 'Y' and another input field. The second option is 'Display OSD at' followed by a dropdown menu currently showing 'Upper-left'.

4. Click on the “Preview” button to see the preview of your setting and click “Apply” to save the configuration




- The texts can be further adjusted with changes to different size, color or font so they can be more visible on the video

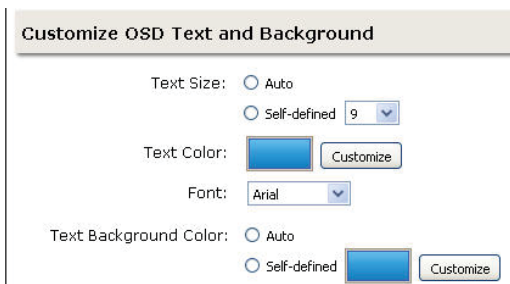


The screenshot shows the 'Customize OSD Text and Background' panel. It includes several settings: 'Text Size' with radio buttons for 'Auto' and 'Self-defined' (set to '9'), 'Text Color' with a blue color swatch and a 'Customize' button, 'Font' with a dropdown menu set to 'Arial', and 'Text Background Color' with radio buttons for 'Auto' and 'Self-defined' (set to a blue color swatch) and a 'Customize' button.

## 3.2.3 PTZ Preset Settings


The recorder supports PTZ cameras and can set multiple preset points or retrieve and manage preset points that are set in the camera. This is helpful if you need to monitor multiple spots in one area from a particular camera.

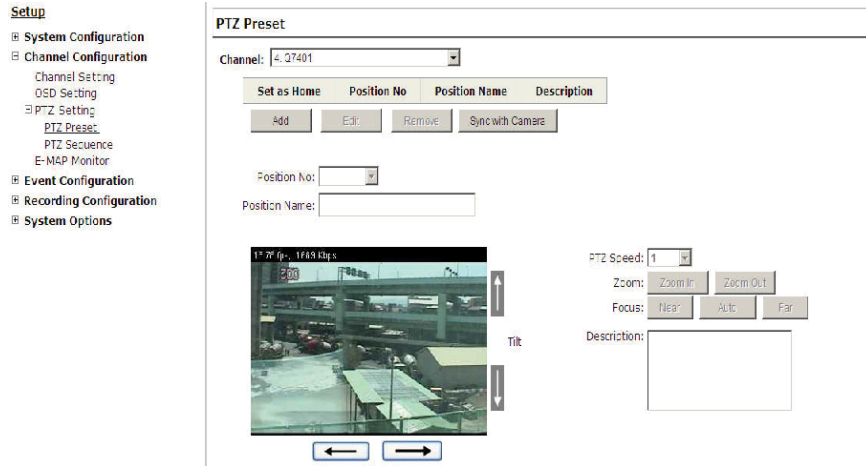

1. To set up PTZ preset points, select a camera from the “Camera” drop-down menu and click “Add”

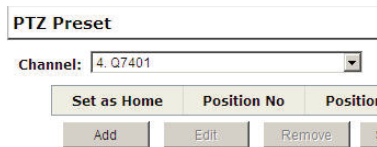

2. Select a position number for the preset point from the “Position Number” drop-down menu and fill in a name in the “Position Name” field for easier identification

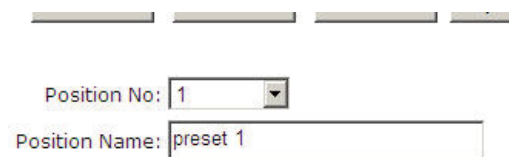


3. Use the PTZ control provided in the configuration page to set the preset point





Ultimately, you can choose to make this preset point a “Home” point among all other preset points, as well as making the camera to move to this particular point when an event is triggered.

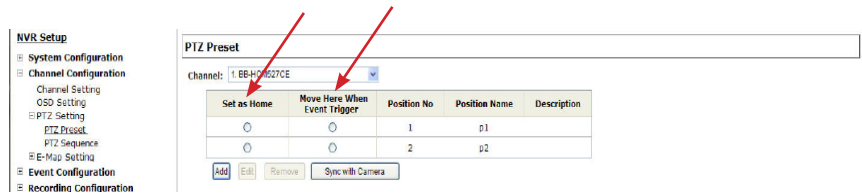

- “Move Here when Event Trigger”: In order for this function to work properly, please also complete configuration in “Event Configuration” >> “Event Trigger”

## 3.2.4 PTZ Preset Sequence

Once you have multiple preset points defined for a camera, it is convenient for monitoring to set up the sequencing viewing among those preset point and let the recorder automatically switch between them for you.

### Embedded NVR

#### NVR16CH Network Video Recorder

**Setup**

- System Configuration
- Channel Configuration
  - Channel Setting
  - OSD Setting
  - PTZ Setting
    - PTZ Preset
    - PTZ Sequence
    - E-Map Setting
- Event Configuration
- Recording Configuration
- System Options

**PTZ Sequence**

Channel: 15: BL-C30A

**Preset Positions:**

2:gfgg
5:fhffg
6:test

**Preset Sequence:**

3:hsdfhdfsh
1:dtjkmtdmkdf
8:5uet
4:LowerRight

Dwell Time: 5s

Apply Cancel

To configure preset sequence for a camera, select a channel from the “Channel” drop-down menu

The available preset points should be listed in “Camera Presets” section

Pick the ones you like for sequence viewing and press the “->” button to move them to the “Preset Sequence” section, then use the up and down buttons to adjust their sequencing positions.


Finally, select a dwell time from the drop-down menu and click “Apply” to save the configuration

- To start preset sequence viewing, check page 21 for instructions


## 3.2.5 E-Map Setting

### 3.2.5.1 Local Map Setting

E-Map monitor is a function that alerts users whenever there is an event triggered (e.g. motion detected) from a camera with a geographical perspective. With this function, users can quickly identify which camera has detected an unusual event and where this event is happening. This function works by incorporating the event detection function as well as the recording function, which, as a result, helps users take all the necessary actions when an unusual event occurs.

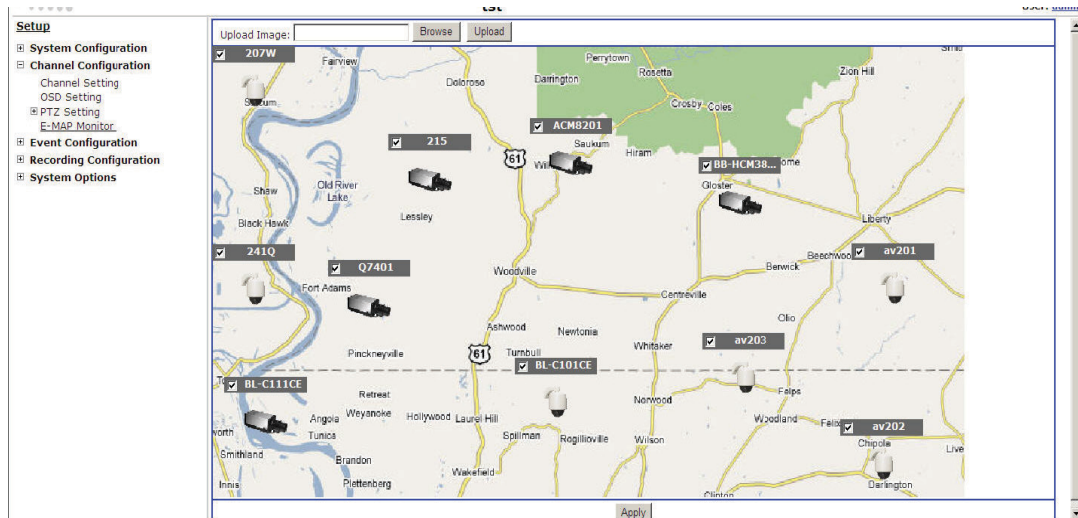


To replace the map, click “Browse” button to locate the new map image file from the local PC and then click “Upload”

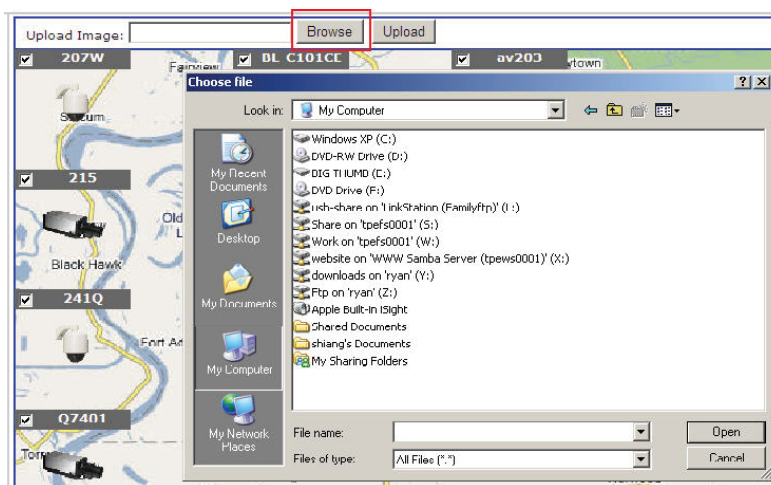

- Only JPG, PNG, and GIF file formats are supported with file size under 100KB

Then click and drag the camera icon to move the camera to define its location.

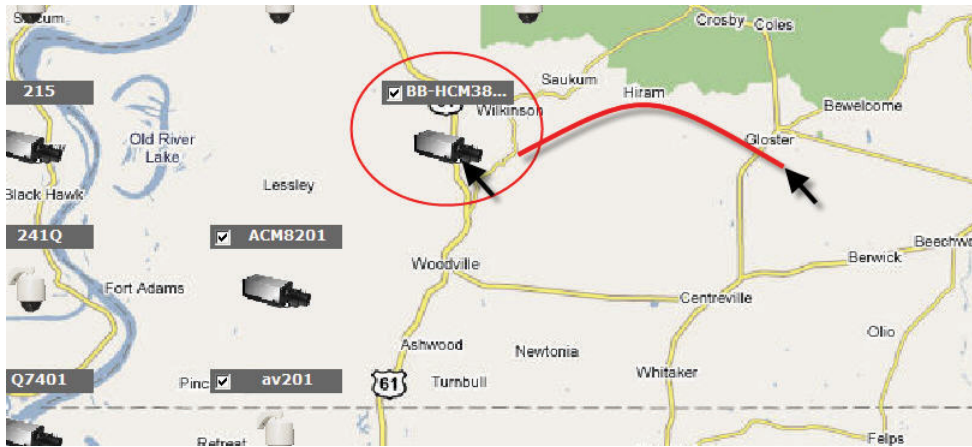

Access the E-Map Monitor page from the upper-right hand corner menu




When the NVR receives an event triggered from any of the cameras, their videos will be displayed on the E-Map and you can double-click on the video to enlarge it




## 3.2.5.2 Google Map Setting

The Google Map monitor is a similar function to the aforementioned E-Map monitor. It is useful if you are managing multiple cameras from different locations.

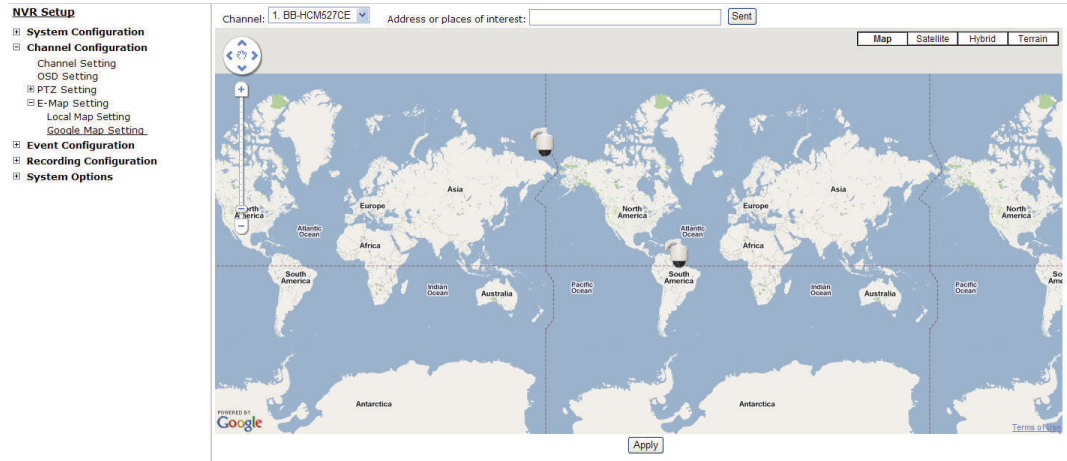


To configure locations of each camera, first determine the location you'd like to place the camera to on the map. You can do so by:

1. Zoom in to a smaller area by using the zoom control bar on the map
2. Zoom in to a smaller area by using the mouse scroll button

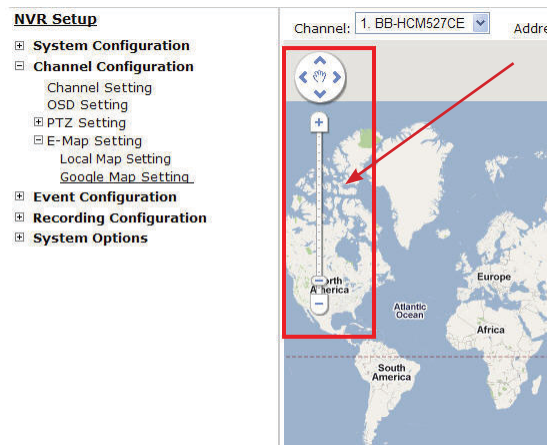

You can also go to a specific place on the map by entering its address or the name of the place in the “Address or places of interest” field:

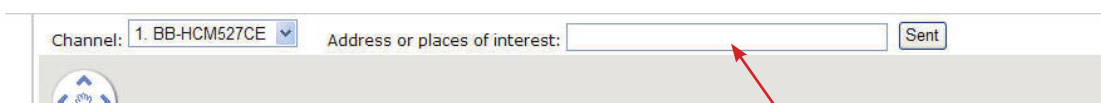




Once the location has been determined, click and drag the camera icon to move it to the desired location:



\* Click and drag the icon to re-arrange its location

- The Google Map Monitor requires active Internet connection and can not be used in conjunction with the regular E-Map monitor function.
- You can click anywhere on the map and hold down the mouse left button then drag to move the map itself

You can then access the Google Map Monitor from the top menu:

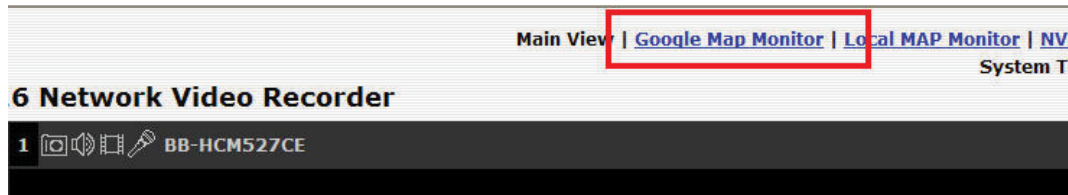

## 3.3 Event Configurations

The “Event Configurations” section allows users to define conditions that constitute an event, its corresponding trigger action and when it will be triggered. Such setting can reduce the management overhead and notify the administrator only when it’s necessary.

### 3.3.1 General Settings

The general settings section can help you quickly configure when an event is triggered, how often events are triggered and the corresponding actions when events are triggered.

**Setup**

- System Configuration
- Channel Configuration
- Event Configuration
  - General Setting
  - I/O Setting
  - Event Servers
    - [FTP Servers](#)
    - HTTP Servers
    - SMTP Servers
    - Event Trigger
- Recording Configuration
- System Options

**FTP Servers Setting**

Name	Network Address	Port	Passive Mode	Enabled
192.168.11.11	192.168.11.11	21	No	<input checked="" type="checkbox"/>
192.168.102.4	192.168.102.4	21	Yes	<input checked="" type="checkbox"/>

**FTP Server**

Name:

Network Address:  \*Enter host name or IP address

Port:

**Login Information**

User Name:

Password:

**Passive Mode**

Use Passive Mode

**Test**

\*Click "Test" to test the connection to the FTP server:

Start the event configuration by defining the general settings:

#### Define when an event will be triggered

- Choose “Always” or “Only during...” under “Event Trigger Duration”
- For the “Only during...” option, choose the days by using the checkbox and then define the time range in those days in the “Start Time” and “End Time” fields that you would like the event trigger function to be enabled.

#### How often an event is triggered

- Set a time interval under “Event Trigger Interval” to define how often events are triggered

71

PRO MEGA NETWORK VIDEO RECORDER

## Trigger action

Now that you have the event trigger duration and interval defined, choose what action to be taken during an event trigger:


- You can choose to have the recorder send out the first few frames of the video recorder upon an event is triggered
- You can also choose to have the recorder send out a warning message in e-mail or in txt file format and upload it to an destined FTP server


### 3.3.2 I/O Settings


This function allows users to manage camera's digital input and output ports right from the recorder. You can setup the recorder to receive triggers from a particular camera's input port and trigger a device, such as an alarm that is connected to the recorder or camera's output port. Cameras that do not have built-in digital input/output port can also be configured to pair with the recorder's DI/DO ports.


	Trigger event When				Trigger Output		
	Camera		SVR-116		SVR-116		
	Port	Condition	Port	Condition	Port	State	Duration
SVR-116	-----	-----	-----	-----	▼	▼	0 sec (0/unlimited or 5-86400 sec)
CH 1	▼	▼	▼	▼	▼	▼	0 sec (0/unlimited or 5-86400 sec)
CH 2	▼	▼	▼	▼	▼	▼	0 sec (0/unlimited or 5-86400 sec)
CH 3	▼	▼	▼	▼	▼	▼	0 sec (0/unlimited or 5-86400 sec)
CH 4	▼	▼	▼	▼	▼	▼	0 sec (0/unlimited or 5-86400 sec)
CH 5	▼	▼	▼	▼	▼	▼	0 sec (0/unlimited or 5-86400 sec)

1. For cameras that come with physical digital input ports, their ports will be listed in the far left drop-down menu.
2. Pick the desired channel for I/O mapping, and then select the camera's input port from the drop-down menu.
3. Select the trigger condition from the "Condition" drop-down menu.
4. Select the recorder's input port if you would also like to use the recorder's input port for event trigger. And then select the trigger condition as well.
5. Next, select the recorder's output port and define its trigger state
6. Finally, define the trigger duration.

 The recorder does not control camera's input or output ports in a way to let you pair recorder itself with a camera's input or output port for event receiving or triggering.

 The recorder only acts as a medium for pairing up input/output ports between cameras and the recorder.

 Only connected cameras will be displayed in the list.

 Some cameras only allow one trigger source be configured at a time, e.g.: if the camera has the motion detection function turned on, its digital input will be disabled and vice versa. Under such circumstance, if you set to use camera's digital input port as the event trigger source, you will not be able to select motion detection as the trigger source for this camera under "Event Configurations" >> "Event Trigger" setup page.

\* The image(s) that are uploaded to the destined FTP server or emailed to a destined mail recipient are in their own proprietary image file format (.h4i or .p4i), which can only be opened by the NVR media player. For details, please refer to page 40.

### 3.3.3 Event Servers

Event servers are to be used with event trigger actions. In case of unusual motion detected by the camera or a disk failure, the recorder can send notification with the acceptable format (image/txt) to a destined event server according to the configuration.

#### Configuring an FTP server

The screenshot shows the NVR Setup interface. On the left is a navigation tree with categories: System Configuration, Channel Configuration, Event Configuration (with sub-items: General Setting, DI/DO Setting, Event Servers, FTP Servers, HTTP Servers, SMTP Servers, Event Trigger), Recording Configuration, and System Options. The main area is titled 'FTP Servers Setting' and contains a table with columns: Name, Network Address, Port, Passive Mode, and Enabled. Below the table are 'Edit' and 'Remove' buttons. A section titled 'FTP Server' has input fields for Name, Network Address (with a note '\*Enter host name or IP address'), and Port (with '21' entered). A 'Login Information' section has fields for User Name and Password. A 'Passive Mode' section has a checkbox for 'Use Passive Mode'. A 'Test' section has a 'Test' button and a note '\*Click "Test" to test the connection to the FTP server:'. An 'Add' button is at the bottom.

To add an FTP server,

1. Start by giving a name to the server that you are adding to the recorder
2. Enter the hostname or the IP address of the FTP server
3. Enter the communication port of the FTP server (usually port 21)

#### FTP Server

This is a close-up of the 'FTP Server' configuration form. It features three input fields: 'Name', 'Network Address', and 'Port'. The 'Network Address' field is accompanied by the text '\* Enter host name or IP address'.



4. Enter the username and password of the FTP server if it's required
5. Check "Use Passive Mode" if it's required or leave it unchecked to use active mode

**Login Information**

Username:

Password:


**Passive Mode**

Use Passive Mode

6. Click "Test" to verify if all information is entered correctly and the connection to the FTP server can be established successfully
7. Click "Add" for the settings to take effect

**Test**

\*Click "Test" to test the connection to the FTP server:

 *If you wish to edit/remove/enable/disable an FTP server, click to highlight one from the profile list and choose the corresponding action button/checkbox*

Name	Network Address	Port	Passive Mode	Enabled
test	ftp.test.com	21	No	<input checked="" type="checkbox"/>

## Configuring an SMTP server

The screenshot shows a web-based configuration interface for SMTP servers. On the left is a navigation menu under the heading "Setup". The menu items are: System Configuration, Channel Configuration, Event Configuration (with sub-items: General Setting, I/O Setting, Event Servers, FTP Servers, HTTP Servers, SMTP Servers, and Event Trigger), Recording Configuration, and System Options. The "SMTP Servers" item is highlighted. The main content area is titled "SMTP Servers Setting" and contains two server configuration sections, "SMTP Server 1" and "SMTP Server 2". Each section has fields for Network Address (with a note to enter host name or IP address), Port, Sender's Name, and Sender's E-mail. SMTP Server 1 has the "Enable Authentication" checkbox checked, with fields for User Name and Password. Below the server settings is a "Test" section with a "Send Test Email To:" field and a "Sent" button. SMTP Server 2 has the "Enable Authentication" checkbox unchecked and also has fields for User Name and Password.

1. Enter the hostname or the IP address of the SMTP server
2. Enter the port of the SMTP server
3. Specify the sender's name in the "Sender's name" field
4. Enter the sender's e-mail address
5. Check "Enable Authentication" and enter the username and password of the SMTP server and as it requires authentication
6. Click "Apply" to save the configuration

## 3.3.4 Event Triggers

We have finished defining how an event will be triggered and which servers will be receiving notifications in the previous two sections, now we can finish up the event configuration by setting:

- which channels will have event trigger function enabled
- What is considered to be an event
- Where the warnings will be sent to and how they will be sent

**Setup**

- System Configuration
- Channel Configuration
- Event Configuration
  - General Setting
  - I/O Setting
  - Event Servers
    - FTP Servers
    - HTTP Servers
    - SMTP Servers
    - Event Trigger
- Recording Configuration
- System Options

**Event Handling Setting**

**When Channel is triggered by**

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Motion Detection	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

**When NVR is triggered by**

- Recycled  When NVR Shutdown
- Disk Full  When NVR System Configuration Changed
- Disk Fail  When Channel's Configuration Changed
- When NVR Start Up

**Trigger Actions**

E-Mail: E-Mail Addresses:  \*use "," to separate e-mails

FTP Upload Path:

HTTP

Trigger I/O Output

Buzzer

### Select Channels to Enable Event Trigger and which type of event should be triggered

- Use the checkbox to enable event trigger on the desired channels

**Event Handling Settings**

**When Cameras is Triggered by**

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Input	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		
Motion Detection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		

\* Once motion detection is enabled in this page, please configure the motion area and enable motion detection in the corresponding channels (cameras). The NVR only detects the first motion area set in the camera. The NVR recognizes the first motion area by its ID number set in the camera.

- Define which system events should trigger the recorder to send out notifications

**When is Triggered by**

<input type="checkbox"/> Recycle	<input type="checkbox"/> When Shuts down
<input type="checkbox"/> Disk Full	<input type="checkbox"/> When Configuration Changed
<input type="checkbox"/> Disk Fail	<input type="checkbox"/> Camera Configuration Changed
<input type="checkbox"/> When Starts up	

- Define how the notifications will be sent and where they will be sent to

**Trigger Actions**

<input type="checkbox"/> E-Mail:	E-Mail Addresses: <input type="text"/> "use "," to separate e-mails
<input type="checkbox"/> FTP	Upload Path: <input type="text"/>
<input type="checkbox"/> HTTP	
<input type="checkbox"/> Trigger Output	
<input type="checkbox"/> Buzzer	

*\* Event trigger may not work for cameras that are placed outside of your local network or on the Internet until the "UPnP Port Forwarding" is enabled in both the NVR and the router.*

## 3.4 Recording Configurations

The “recording configurations” gives users the overall control of how and when a recording is performed and the quality of different types of recordings performed on each channels. It can help the recorder to operate with sufficient system resource by performing recording only when it’s necessary with adjustable recording frame rate.

### 3.4.1 General Settings

You can define the following in “General Settings”:

- Pre-Alarm/Post-Alarm recording length
- Recording frame rate
- Define to always keep a number of days of previously recorded data
- Enable/disable different recording types on different cameras
- Enable/disable audio recording

[English](#)  
[Main View](#) | [Setup](#) | [Channel Status](#)  
 System Time: October 28, 2008 13:03:28  
 User: admin

**Setup**

- System Configurations
- Channel Configurations
- Event Configurations
- Recording Configurations
  - General Settings
  - Schedule Settings
- System Options

**Recording General Setting**

**Recording Buffer**

Pre-alarm Buffer:  sec

Post-alarm Buffer:  sec

**Recording Frame Rate**

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	1	I Only	1	I Only	1											
Schedule	5	I Only	5	I Only	5											
Event	Full	Full	Full	Full	Full											
Manual	Full	Full	Full	Full	Full											

**Recycling**

Enable Recycle

**Camera Recording Setting**

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
Schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
Event	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											



The “recording buffer” allows user to define “pre-alarm” and “post-alarm” time for event recordings. The “pre-alarm” time sets the NVR to record in advance when an event is triggered. The “post-alarm” time sets the NVR to continue recording for a period of time after an event trigger is finished.

### Recording Buffer

Pre-alarm Buffer:  sec

Post-alarm Buffer:  sec

\* The “Pre-alarm” function only works when the “Continuous” recording is also activated.

Recording frame rate allows you to set different frame rate for different types of recording instead of recording at one frame rate only. Use the drop-down menu and select one of the pre-defined frame rates for a particular recording type

### Recording Frame Rate

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	1	I Only	1	I Only	1											
Schedule	5	I Only	5	I Only	5											
Event	Full	Full	Full	Full	Full											
Manual	Full	Full	Full	Full	Full											

Users can also set to keep a previous number of days of recording data by enabling the option below. This is quite often used in application such as banking which certain countries requires to always keep a minimum previous number of days of recording data.

Keep the previous  days of recorded videos

\* If this option is enabled, once the hard drive is full, the recycle function will then start but it will ensure that the number of days of recording data defined here will stay in hard drive instead of wiping out 20GB of data at a time.

\* If the hard drive is not full, the NVR re-calculates twice a day (each at 2:30am and 2:30pm) to keep the defined number of days of recording data from these two particular point of time backward.

The “Camera Recording Setting” section allows you to turn on or off a particular recording type on any channels.

Camera Recording Setting																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
Schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											
Event	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>											

The section at the bottom of the page allows you to disable audio recording (record video only) of particular channels.

Record Audio																
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Record audio	<input type="checkbox"/>															

## 3.4.2 Schedule Recording

Here you can define the time range of the schedule recording for all channels.

### To configure a schedule recording:

1. Use the “Channel” drop-down menu and select a camera first

Camera:

2. You can use the schedule table to set the time range. Click the cell boxes then move horizontally lets you set what hours to perform recording during a day. Click and move vertically lets you set what days to perform recording at a specific time.

Schedule Table	
	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Sunday	
Monday	
Tuesday	
Wednesday	
Thursday	
Friday	
Saturday	

Clear

\* Each cell box represents 15 minutes of time. Click one or more boxes to omit consecutive recording

3. You can also use the “Quick Configuration” to define recording time range instead of clicking cell boxes one by one on the time table. Simply check what days you would like to perform recording and specify the recording duration by either choosing “All Day” or enter a start and end time for specific recording duration.

#### Quick Configuration

**Days**

Mon.  Tue.  Wed.  Thur.  Fri.  Sat.  Sun.

**Duration**

All day

During Start Time:  End Time:

4. Select the “Copy to” option if you would like to set the same recording schedule to another camera.

During Start Time:  :  End Time:

Copy Schedule To Channel:

## 3.5 System Options

System Options gives users a glance of the overall system status and allows users to perform maintenance tasks such as upgrading firmware, restore/backup device settings or reboot device ....etc.

### 3.5.1 Device Information

The “Device Information” provides the general information of the device such as firmware version and system time. It also provides information of the current network settings and status.

**Setup**

- ▣ System Configuration
- ▣ Channel Configuration
- ▣ Event Configuration
- ▣ Recording Configuration
- ▣ System Options
  - Device Information
  - System Logs
  - Maintenance
  - DO Status
  - Disk Status
  - UPS Configuration

---

General Information
Device Name:
Model Name:
Firmware Version: 1.2.0.30014714
Device Time: Up 0 days 16:56:55, since May 05 2009 18:56:23

---

Network Information
Network Type: DHCP
Device IP: 192.168.102.2
HTTP Port: 80
Streaming Port: 9877
MAC Address: 00:28:68:78:31:03
DHCP Server: Disabled
UPnP Port Forwarding: Disabled

---

Current DHCP Clients
----------------------



## 3.5.2 Logs and Reports

“Logs and Reports” keeps a record of what’s been happening to the device and provides basic information for troubleshooting

The screenshot shows the 'Logs and Reports' section of the device's web interface. On the left, a navigation menu includes 'Setup', 'System Configurations', 'Channel Configurations', 'Event Configurations', 'Recording Configurations', and 'System Options'. The 'Logs and Reports' section is selected. The main area displays a log of events from 2008/10/13 17:26:34.101 to 2008/10/13 17:26:34.488. The log entries include:

- 2008/10/13 17:26:34.101 - Mctl\_Init starting count=1
- 2008/10/13 17:26:34.102 - Init global variable success
- 2008/10/13 17:26:34.111 - Mctl\_Initialize success
- 2008/10/13 17:26:34.220 - MPM\_InitMemPoolMedia success
- 2008/10/13 17:26:34.221 - MvInitPara success
- 2008/10/13 17:26:34.222 - mctl\_init\_handle@NDevice begin->
- 2008/10/13 17:26:34.223 - success<-end mctl\_init\_handle@NDevice
- 2008/10/13 17:26:34.226 - StreammClient\_ModuleBegin success
- 2008/10/13 17:26:34.228 - MCB\_StartDB success
- 2008/10/13 17:26:34.228 - NVR set server port 8877
- 2008/10/13 17:26:34.301 - VTC\_Initial success
- 2008/10/13 17:26:34.303 - mctl\_EventServerActionThread name=mctlEventPackThread 0 begin->
- 2008/10/13 17:26:34.312 - mctl\_EventServerActionThread name=mctlEventPackThread 1 begin->
- 2008/10/13 17:26:34.320 - mctl\_EventServerActionThread name=mctlEventPackThread 2 begin->
- 2008/10/13 17:26:34.329 - mctl\_EventServerActionThread name=mctlEventPackThread 3 begin->
- 2008/10/13 17:26:34.339 - mctl\_EventServerActionThread name=mctlEventPackThread 4 begin->
- 2008/10/13 17:26:34.348 - mctl\_EventServerActionThread name=mctlEventPackThread 5 begin->
- 2008/10/13 17:26:34.357 - mctl\_EventServerActionThread name=mctlEventPackThread 6 begin->
- 2008/10/13 17:26:34.367 - mctl\_EventServerActionThread name=mctlEventPackThread 7 begin->
- 2008/10/13 17:26:34.375 - mctl\_EventServerActionThread name=mctlEventPackThread 8 begin->
- 2008/10/13 17:26:34.383 - mctl\_EventServerActionThread name=mctlEventPackThread 9 begin->
- 2008/10/13 17:26:34.392 - mctl\_EventServerActionThread name=mctlEventPackThread10 begin->
- 2008/10/13 17:26:34.402 - mctl\_EventServerActionThread name=mctlEventPackThread11 begin->
- 2008/10/13 17:26:34.411 - mctl\_EventServerActionThread name=mctlEventPackThread12 begin->
- 2008/10/13 17:26:34.418 - mctl\_EventServerActionThread name=mctlEventPackThread13 begin->
- 2008/10/13 17:26:34.428 - mctl\_EventServerActionThread name=mctlEventPackThread14 begin->
- 2008/10/13 17:26:34.436 - mctl\_EventServerActionThread name=mctlEventPackThread15 begin->
- 2008/10/13 17:26:34.444 - mctl\_EventServerActionThread name=mctlEventPackThread16 begin->
- 2008/10/13 17:26:34.452 - mctl\_EventServerActionThread name=mctlEventPackThread17 begin->
- 2008/10/13 17:26:34.460 - mctl\_EventServerActionThread name=mctlEventPackThread18 begin->
- 2008/10/13 17:26:34.469 - mctl\_EventServerActionThread name=mctlEventPackThread19 begin->
- 2008/10/13 17:26:34.484 - mctl\_On\_Req\_OSI\_ResetAllDeviceEvent begin->
- 2008/10/13 17:26:34.485 - [1] Clean all event condition and action
- 2008/10/13 17:26:34.486 - [2.1] separate basicevent parameter
- 2008/10/13 17:26:34.488 - [2.2.1] set camera event condition and action parameter
- 2008/10/13 17:26:34.488 - [2.2.2] set avr event condition and action parameter

## 3.5.3 Maintenance

“Maintenance” provides functions for users to:

- Reboot the NVR when necessary
- Reboot cameras directly from the NVR
- Perform Firmware Upgrade
- Backup the NVR’s settings to a local hard drive
- Restore the NVR’s settings from a previously saved configuration file
- Reset the NVR’s settings to their factory default values


The screenshot shows the 'Maintenance' section of the device's web interface. On the left, a navigation menu includes 'Setup', 'System Configuration', 'Channel Configuration', 'Event Configuration', 'Recording Configuration', and 'System Options'. The 'Maintenance' section is selected. The main area displays several maintenance functions:

- Restart NVR:** Click "Restart" button to restart NVR. Includes a "Restart" button.
- Restart Camera:** Select a camera below to perform a restart. Includes a dropdown menu and a "Restart" button.
- Upgrade NVR Firmware:** Locate the new firmware and perform the upgrade (Current Firmware Version: 1.3.0.30016162). Specify the firmware file:  Browse and click Upgrade. Includes a "Note" warning: "Please DO NOT power off the system during the firmware upgrade process. You will be notified once the upgrade process is complete".
- Backup NVR's Setting:** Backup the configuration to a local hard disk. Includes a "Backup" button.
- Restore NVR's Setting:** Restore configuration from a previously saved configuration file. Specify the configuration file:  Browse and click Restore. Includes a "Note" warning: "Please DO NOT power off the system during the restore process. You will be notified once the process completed".
- Reset NVR to Factory Default:** This will restore all configurations to their factory default values. Includes a "Restore Factory Default" button and a note: "When the DHCP server function is disabled, the default IP of the system is:192.168.101.50". Includes a "Note" warning: "Please DO NOT power off the system during the reset process. You will be notified once the process is complete".


## Reboot the NVR

Reboot the NVR after you upload a new firmware. You would need to manually reboot the system for the new firmware to take effect. Such process would prevent a recording from getting interrupted because the system would not automatically reboot itself after the new firmware is loaded onto the recorder.

Simply click “Restart” to begin the reboot process and confirm the action:

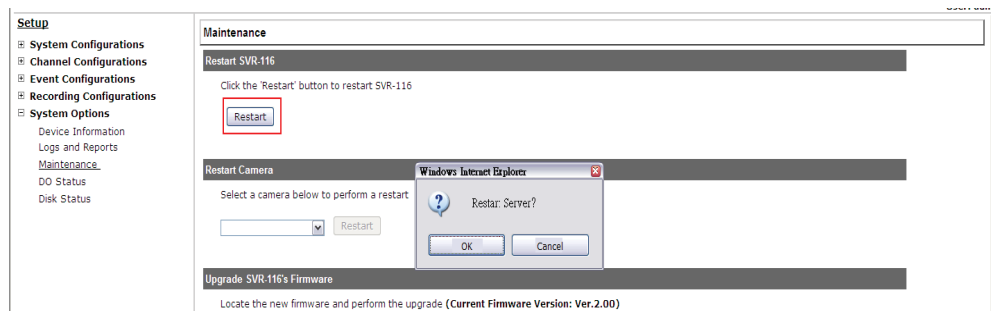

The restart process should be displayed and you should be prompted back to the “Maintenance” page after it is complete:

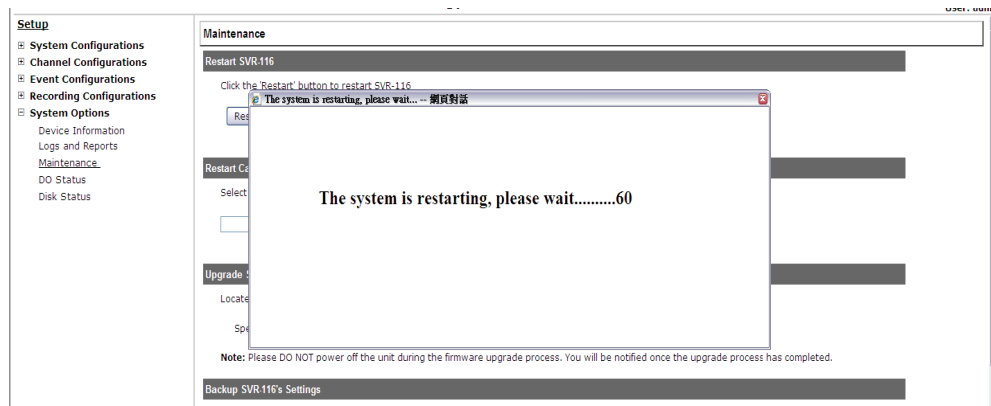


## Firmware Upgrade

The firmware can be upgraded through web UI or USB. Before upgrading firmware, please backup configuration in advance.


**\*\* the firmware file comes with a ".tar.gz" file extension, please use the file as is, DO NOT unzip it. It's normal that you may only see ".tar" as the file extension in Windows as the OS hide the known file extension by default.**

### A. Upgrade through Web UI


1. Login into NVR's web management UI. Go to "Setup" page and go to "System Options"->"Maintenance"

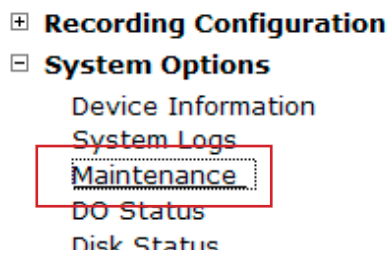

2. On "Upgrade NVR's Firmware" section, click "Browse" and select new firmware file

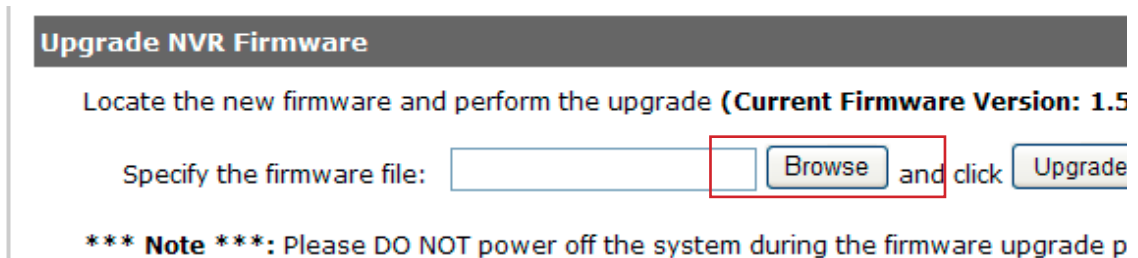

3. A new dialog should display and let you choose the location of the firmware file

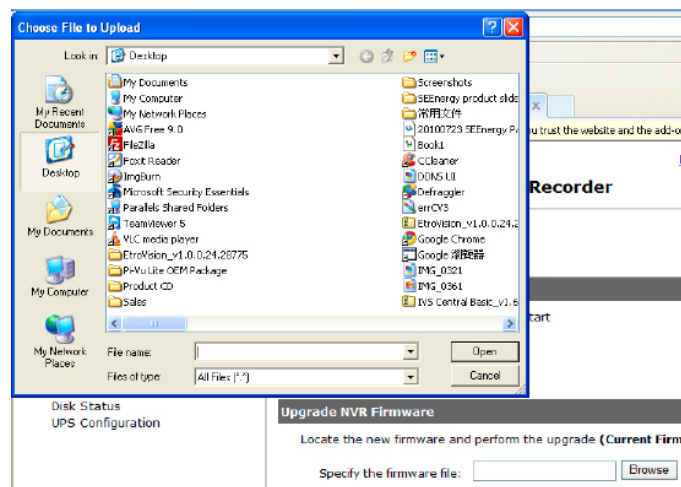

4. When done, click “Upgrade”




5. Follow the on screen instruction and wait for the process to finish (After upgrade, the system will reboot automatically, it's part of the process)

## B. Upgrade through USB


1. Prepare a USB flash disk and format with FAT or FAT32 format
2. Place the firmware in the USB flash disk and make sure it's placed at the top-level directory. Please do not place the file in a folder. **(make sure to change the firmware file name to “firmware” and leave its file extension “.tar.gz” as is before placing the file to the USB disk)**
3. Plug USB flash disk into USB port on the NVR
4. The Status LED on the NVR will start to flash in amber. This indicates firmware upgrade is in process
5. **\*\*\* Warning \*\*\*** Please wait until upgrade process finished, interrupt the upgrade process may cause system not work anymore
6. Wait until Status LED flashes in green. This indicates firmware upgrade is finished
7. Power off the NVR and remove the USB disk the power the unit back on again
8. Restore configuration file back if needed

## Reset the NVR to Factory Default

To reset the recorder back to its factory default, click “Default” button and begin the proces:

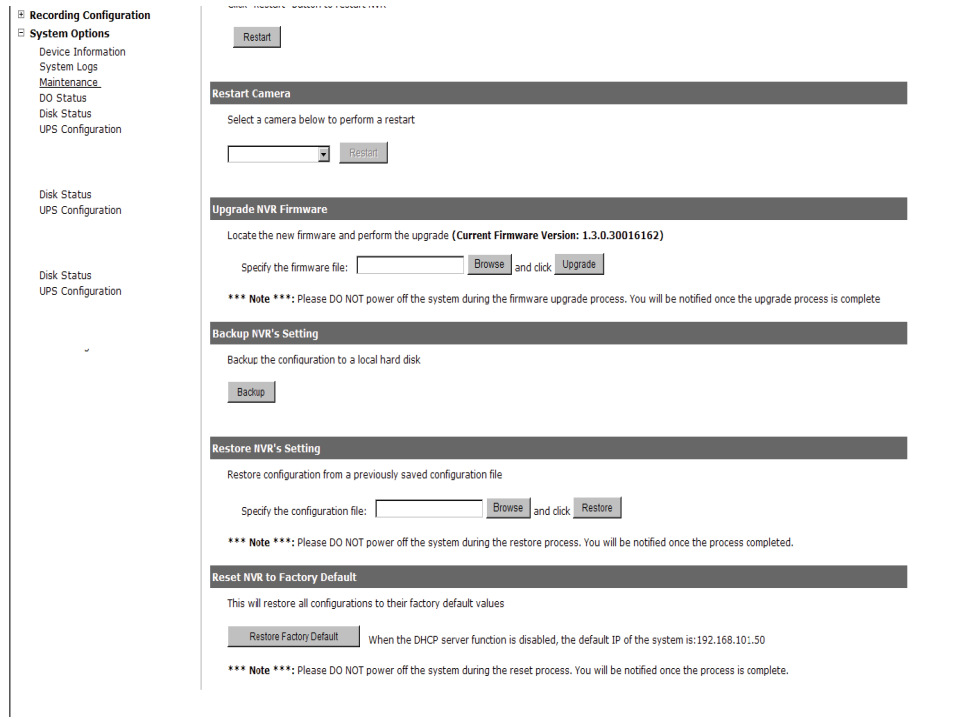

The process should be displayed and you should be prompted back to the “Live View” page after it is complete:

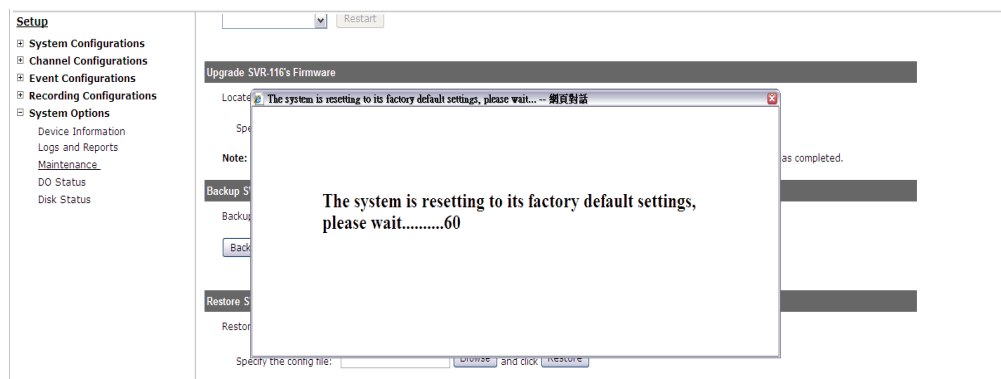

## 3.5.4 DO Status

This is where you can get the current status of the NVR's digital output ports. You can also change their status from this page.

**Embedded NVR**

**Setup**

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
  - Device Information
  - System Logs
  - Maintenance
  - DO Status
  - Disk Status
  - UPS Configuration

**NVR16CH Network Video Recorder**

---

**DO Status**

Port Number	Normal State (Click to change)	Current State (Click to change)
Output1	<input checked="" type="radio"/> Open <input checked="" type="radio"/> Ground	<input checked="" type="radio"/> Open <input checked="" type="radio"/> Ground
Output2	<input checked="" type="radio"/> Open <input type="radio"/> Ground	<input type="radio"/> Open <input checked="" type="radio"/> Ground
Output3	<input checked="" type="radio"/> Open <input type="radio"/> Ground	<input type="radio"/> Open <input checked="" type="radio"/> Ground
Output4	<input checked="" type="radio"/> Open <input type="radio"/> Ground	<input checked="" type="radio"/> Open <input type="radio"/> Ground

## 3.5.5 Disk Status

“Disk Status” gives you a more detailed information of the hard drive that is currently installed in the NVR.

**Setup**

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
  - Device Information
  - System Logs
  - Maintenance
  - DO Status
  - Disk Status**
  - UPS Configuration

**Disk Status**

Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	Recording Period	Lst. Remaining Time
1	Online	285GB	31GB	11%	Jul 13 2009 19:16:33	Jul 06 2009 21:55:13 - Jul 16 2009 17:57:50	1 days 5 hours



## 3.5.6 USB Backup

It's a function that allows users to backup the recording data in its database file format (not AVI) to the externally connected USB hard disk.

### NVR Setup

- ⊕ System Configuration
- ⊕ Channel Configuration
- ⊕ Event Configuration
- ⊕ Recording Configuration
- ⊕ System Options
  - Device Information
  - System Logs
  - Maintenance
  - DO Status
  - Disk Status
  - USB Backup
  - UPS Configuration

### USB Backup


USB HDD:  \* Please format the HDD to FAT32 on a v

LNZ4001       LNE3003       LNE1001  
 Channel 5       v1.0.0.5-2       Channel 7  
 Channel 9       Channel 10       Channel 11  
 Channel 13       Channel 14       Channel 15

Start Time:   :  :

End Time:   :  :

Insert a USB hard disk that has more than 100MB free space to the NVR

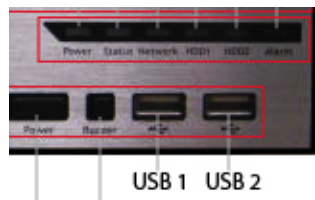

You can check the “Disk Status” page under “System Options” to see if the USB disk has been detected by the NVR

Disk Status						
Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	
HDD 1	Online	222GB	216GB	97%	Aug 12 2010 11:21:12	Ma Au
USB HDD 1	Online	1935MB	553MB	28%		

Once it's detected, go back to the "USB Backup" page and it should be available for further configuration

**USB Backup**

**USB HDD:** USB HDD 1, 553MB available ▾ \* Please format the HDL

**Channel:**

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2
<input type="checkbox"/> Channel 9	<input type="checkbox"/> Channel 10
<input type="checkbox"/> Channel 13	<input type="checkbox"/> Channel 14

**Start Time:** May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

**End Time:** May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

Backup

The USB hard disk(s) will be listed in the drop-down menu displaying the remaining disk space. Make your selection from the drop-down menu if you have more than one disks connected to the NVR

**USB Backup**

**USB HDD:** USB HDD 1, 553MB available ▾ \* Please format the HDL

**Channel:**

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2

Next, select channels which you would like to backup the recording data from. Maximum 4 channels can be selected at once.

**USB HDD:** USB HDD 1, 553MB available ▾ \* Please format the HDL

**Channel:**

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2
<input type="checkbox"/> Channel 9	<input type="checkbox"/> Channel 10
<input type="checkbox"/> Channel 13	<input type="checkbox"/> Channel 14

Configure the start and end time of the recording data you would like to backup and click the "Backup" button to begin

**Start Time:** May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

**End Time:** May 21, 2010 ▾ 16 : 52 : 02 ▲ ▾

Backup

## Things to pay attention to the USB Backup function:

### Limitation:


- It does not support USB Hub extend the number of HDD connected to the NVR
- Only one backup process can be performed at a time
- Maximum 4 channels can be selected for backup
- Only FAT32 USB hard disk is supported for backup
- The USB hard disk needs to have more than 100MB remaining space
- If multiple partitions are presented in one disk, only the first partition will be detected and used for backup

### Process:


- Progress will be displayed on the UI
- If the backup process gets interrupted, which the process stops at a point of time that is before the “END Time” user defined, such time will be displayed on the UI
- A folder will be automatically created in the USB hard disk with a name format like 0028687831\_20100610151515\_20100605110010\_2010060610010 (MAC\_backupbuttonclicktime\_starttime\_endtime)

## Play the backup file with the NVR Media Player


The backup files can be played with the NVR media player. To do, open the player and select “Open” >> “Media Database”

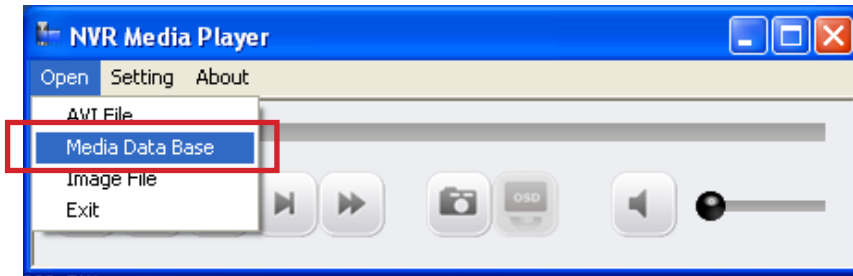


Click “Browse...” to select the file from the USB disk

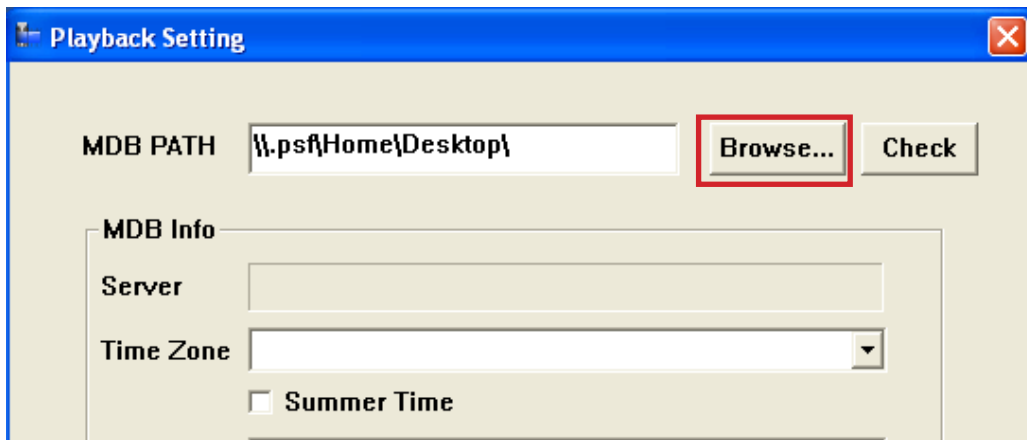


A new dialog should be prompted for you to select the file location

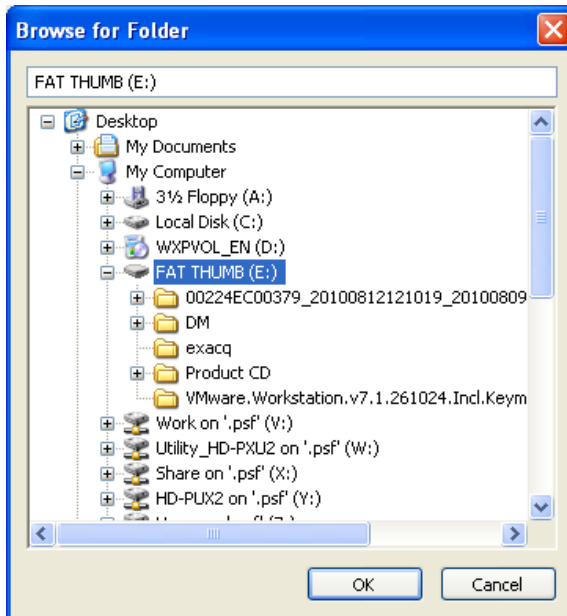

When done, click “Check” to validate the file

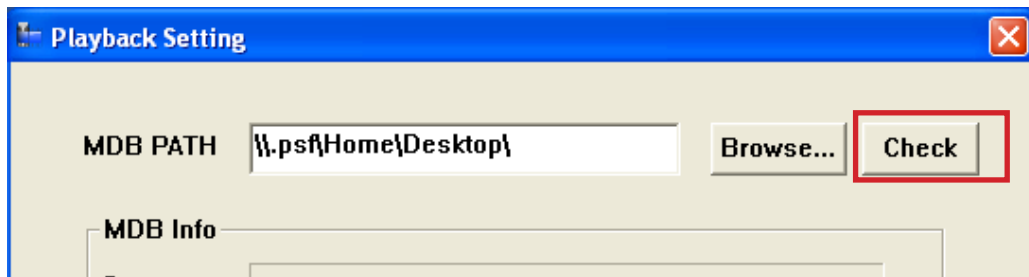

Once the file has been successfully verified, you should be prompted with the message shown below

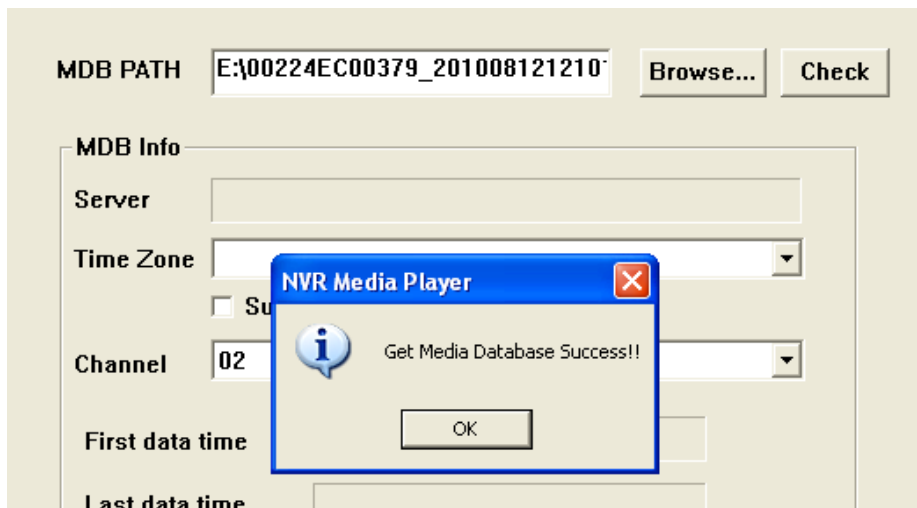


Select the time zone according to your current location



Finally, click “OK” to begin playing

The player should now play the backed up file

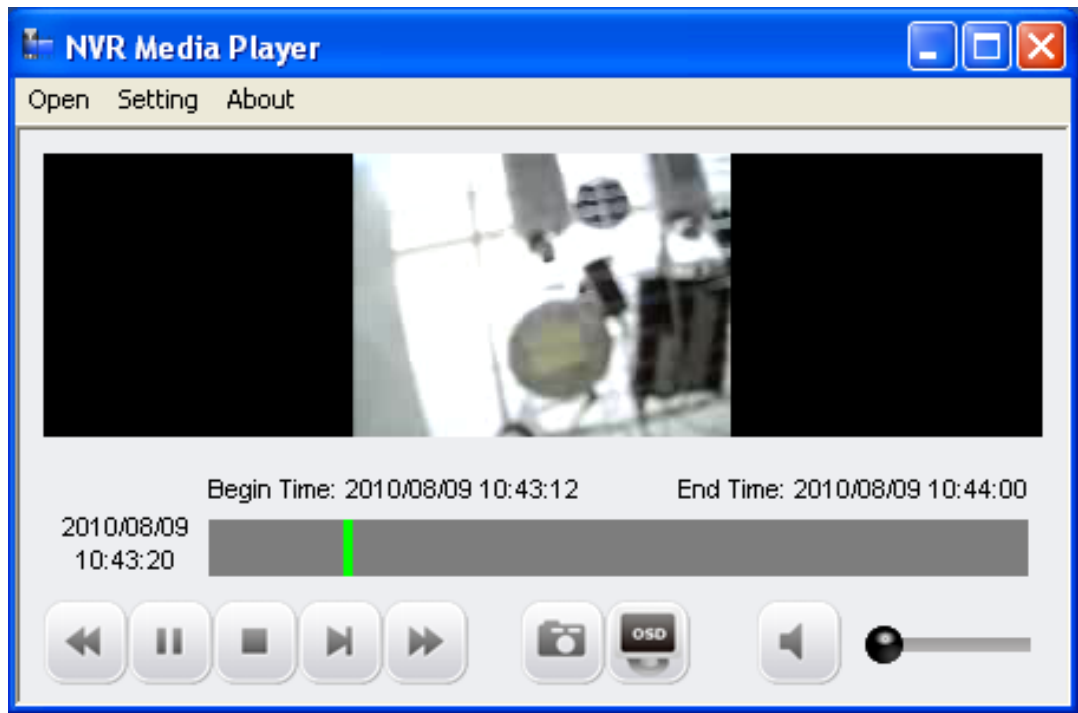



## 3.5.7 UPS Configuration

Connect the UPS to the NVR's DI/DO port for sending and receiving signals between the UPS and the NVR. Refer to the diagram below to connect the UPS with its RS-232 interface to the NVR's DI/DO port.

The NVR can receive signal from the UPS when there is a power failure and shut down itself automatically within a period of time.

**Embedded NVR**


**Setup**

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
  - Device Information
  - System Logs
  - Maintenance
  - DO Status
  - Disk Status
  - UPS Configuration

**NVR16CH Network Video Recorder**

DO Status		
Port Number	Normal State (Click to change)	Current State (Click to change)
Output1	<input checked="" type="radio"/> Open <input checked="" type="radio"/> Ground	<input checked="" type="radio"/> Open <input checked="" type="radio"/> Ground
Output2	<input checked="" type="radio"/> Open <input type="radio"/> Ground	<input type="radio"/> Open <input checked="" type="radio"/> Ground
Output3	<input checked="" type="radio"/> Open <input type="radio"/> Ground	<input type="radio"/> Open <input checked="" type="radio"/> Ground
Output4	<input checked="" type="radio"/> Open <input type="radio"/> Ground	<input checked="" type="radio"/> Open <input type="radio"/> Ground

**Connect UPS with its RS-232 interface to the NVR's IO port:**

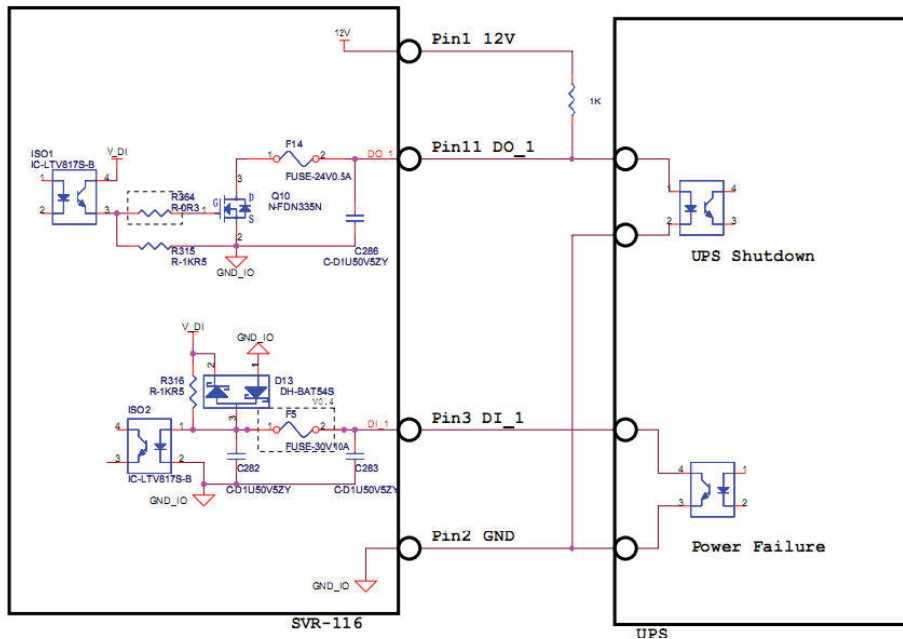

**\* The NVR uses DI\_1 to receive signal from UPS system and uses DO\_1 to shut it down.**

# PRIME

## PRO MEGA NETWORK VIDEO RECORDER

