

IP Fixed In/Outdoor Dome Camera


User's Manual

Safety Information



CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN.

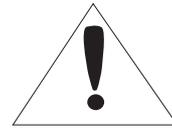

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



Warning

This symbol indicates that dangerous voltage consisting a risk of electric shock is present within this unit.



Precaution

This exclamation point symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

WARNING

2. Be sure to use only the standard adapter that is specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.
3. Incorrectly connecting the power supply or replacing battery may cause explosion, fire, electric shock, or damage to the product.
4. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause abnormal heat generation or fire.
5. Securely plug the power cord into the power receptacle. Insecure connection may cause fire.
6. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.
7. Do not place conductive objects (e.g. screw drivers, coins, metal things, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.
8. Do not install the unit in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.
9. If any unusual smells or smoke come from the unit, stop using the product. In such case, immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock.
10. If this product fails to operate normally, contact the nearest service center. Never disassemble or modify this product in any way.
11. When cleaning, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock.

Precautions

Operating

- Before using, make sure power supply and others are properly connected.
- While operating, if any abnormal condition or malfunction is observed, stop using the camera immediately and then
- contact your Special dealer.

Handling

- Do not disassemble or tamper with parts inside the camera.
- Do not drop or subject the camera to shock and vibration as this can damage camera.
- Care must be taken when you clean the clear dome cover. Especially, scratch and dust will ruin your quality of camera.

Installation and Storage

- Do not install the camera in areas of extreme temperature, which exceed the allowable range.
- Avoid installing in humid or dusty places.
- Avoid installing in places where radiation is present.
- Avoid installing in places where there are strong magnetic fields and electric signals.
- Avoid installing in places where the camera would be subject to strong vibrations.
- Never expose the camera to rain and water.

Important Safety Instructions

1. **Read these instructions.** - All these safety and operating instructions should be read before the product is operated.
2. **Keep these instructions.** - The safety, operating and use instructions should be retained for future reference.
3. **Heed all warnings.** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow all instructions.** - All operating and use instructions should be followed.
5. **Do not use this apparatus near water.** - For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement; near a swimming pool; etc.
6. **Clean only with dry cloth.** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.** - Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product, and to protect it from over-heating. The openings should never be blocked by placing the product on bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instructions have been adhered to.
8. **Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
13. **Unplug this apparatus during lightning storms or when unused for long periods of time.**
14. **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.





Disposal of Your Old Appliance

1. When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.


These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Contents

1. Introduction	6 Product & Accessories 7 Part Name & Functions
2. Installation	8 DIP Switch Setup 10 Installation 15 Cabling 17 Cabling the Audio Cable 18 Inserting/Removing an SD Memory Card
3. Network Setup	19 Quick Start of Network Connection 20 Initial Setup via a Crossover Cable 21 DDNS Registration 22 Guide to Network Environment 23 Setup Case A, B 24 Setup Case C, D 25 Port Forwarding 26 Starting IP Speed Dome
4. Web Viewer Screen	27 Basic Screen 28 PTZ Control & Aux Function Control 29 Backup Control & OSD Setup 30 Etc. Setup & Motion Detection Setup 31 Auto-map 32 Viewer Interface
5. Setup	33 Setup Screen 34 Video Setup 36 Audio Setup 37 Backup Setup 38 TCP/IP Setup 39 DDNS Setup 40 Status 41 Alarm Input 1 Setup 42 Alarm Input 2 ~ 8 Setup 43 Motion Detection Setup 44 Schedule Setup 45 Auto Tracking Setup 46 Transfer Setup 47 FTP Setup 48 SMTP Setup 49 SD CARD Setup 50 Users Setup 51 Date/Time Setup 52 Firmware Update 53 Default Set 54 Restart 55 Log
6. SD Card Search	56 Search
7. OSD	57 Check Points before Operation 58 Aux Functions 59 OSD Information 60 General Rules of Menu Operation 61 ROOT MENU & SYSTEM INFORMATION 62 DISPLAY SETUP 63 MOTION SETUP 64 FUNCTION SETUP > PRESET SETUP 66 FUNCTION SETUP > SCAN SETUP 67 FUNCTION SETUP > PATTERN SETUP 68 FUNCTION SETUP > GROUP SETUP 70 FUNCTION SETUP > SCHEDULE SETUP 72 CAMERA SETUP > WB SETUP 73 CAMERA SETUP > AE SETUP 74 SYSTEM SETUP 76 SYSTEM INITIALIZE
8. Appendix	77 A : Current TCP/IP Settings 78 B : Changing IP address and subnet mask 79 C : Port Forwarding
9. FAQ	81 FAQ
10. Specifications	82 Demension 83 Specification 84 Network Specification


1 Introduction - Product & Accessories

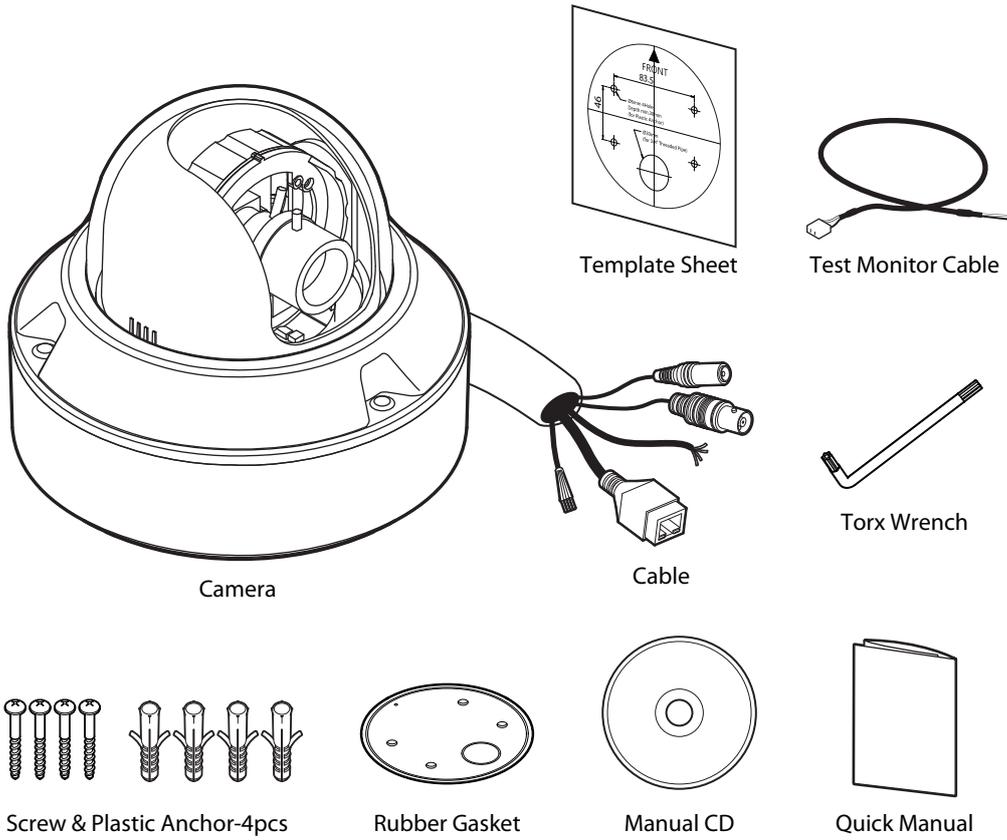

※ **NOTE:**

The 'Test Monitor Cable' is used to test the camera by connecting to a portable display.
If you really want to connect the camera to a monitoring display, use the BNC cable.

1 Introduction - Part Name & Functions

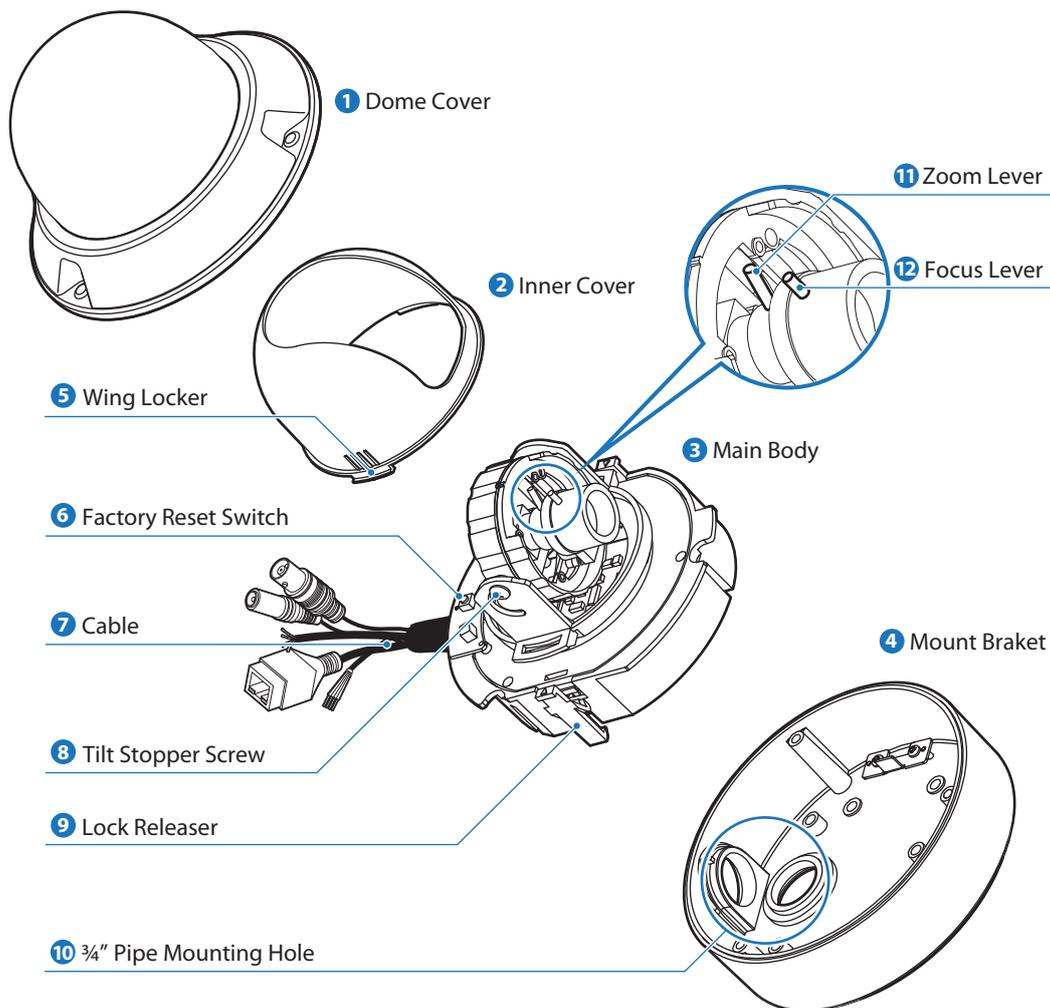


- 1 Dome Cover**
Covers the inner cover, lens, and main body to protect them.
- 2 Inner Cover**
Cover the main body to protect it.
- 3 Main Body**
Includes a lens, a switch board, a PCB board, screws and such.
- 4 Mount Bracket**
Used as a ceiling or wall fixture. It is fixed using three long tall screws provided in the package.
- 5 Wing Locker**
Push a long thin screw driver into its narrow spot and press it inward when you want to remove the inner cover.
- 6 Factory Reset Switch**
All the settings will be restored to the factory default. Power On the unit and push the switch for 5 seconds.
- 7 Cable**
Connect the Power, Video(BNC), Audio, Alarm, Network.
- 8 Tilt Stopper Screw**
Using this screw, the slope of the lens can be adjusted and fixed.
- 9 Lock Releaser**
Push it outward and rotate the main body in UNLOCK direction when you want to remove the Mount bracket from the Main body or to remove the installed camera from the Mount bracket.
- 10 3/4" Pipe Mounting Hole**
Pass the power cable and video cable from the camera unit through this hole.
- 11 Zoom Lever**
Using this lever, the lens zoom can be adjusted and fixed.
- 12 Focus Lever**
The lens focus can be adjusted by rotating it left or right. Rotate it clockwise for fixing.

⚠ WARNING
YOU WILL LOSE ALL DATA THAT HAD BEEN ENTERED PREVIOUSLY AND THE IP DOME CAMERA WILL BE SET TO ITS FACTORY RESETS.

2 Installation - Installation

Before installing your camera, you have to read the following cautions.

1. You have to check whether the location can bear five times of the weight of your camera.
2. Don't let the cable to be caught in improper place or the electric line cover to be damaged. Otherwise it may cause a breakdown or fire.
3. When installing your camera, don't allow any person to approach the installation site. If you have any valuable things under the place, move them away.

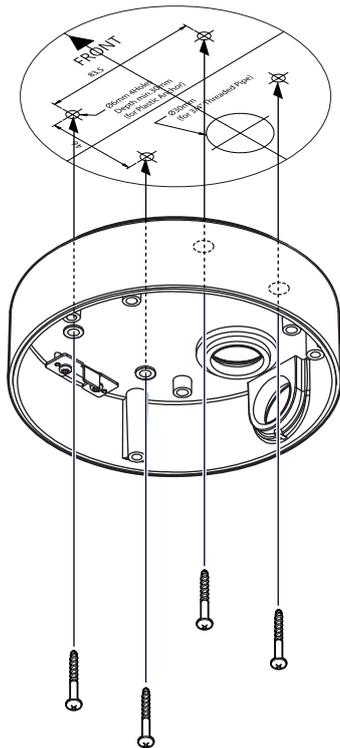


1 Making holes on the Ceiling Panel

Using provided template sheet, make holes on the ceiling panel in the desired location.

2 Attaching mount bracket

By tightening four screws provided, attach the mount bracket on the panel.

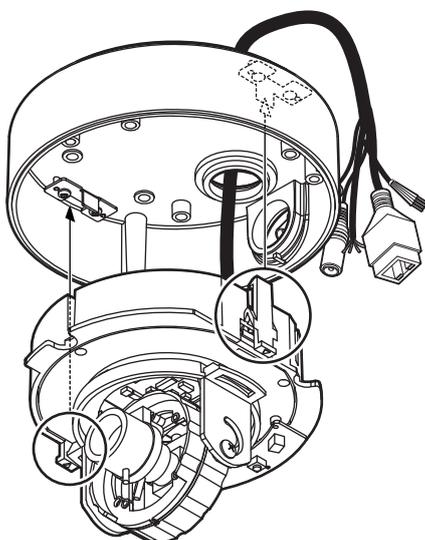

3 Mounting Camera mechanism


After passing the cables through the hole in the bottom of bracket, align the orientation of two side hooks in the camera mechanism to be assembled into the mount.

While pressing the side handles, locate the mechanism and release the handle.

4 Connecting Cables

Connect the power, video, audio, alarm and network cables respectively. See the section 'Installation - Cabling' for detail.

2 Installation - Installation

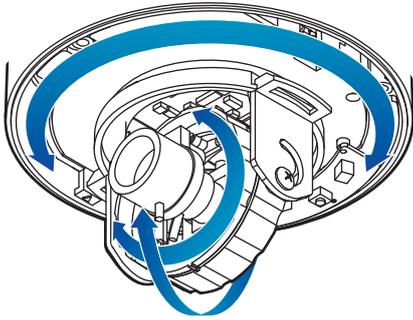


5 Adjusting Camera Angle

To achieve desired view direction and orientation, rotate 3-axis gimbal. To fix the setting, tighten the Tilt stopper screw.

6 Adjusting View angle and Focus

By turning screws of the lens, decide the view angle and adjust the focus of the video.

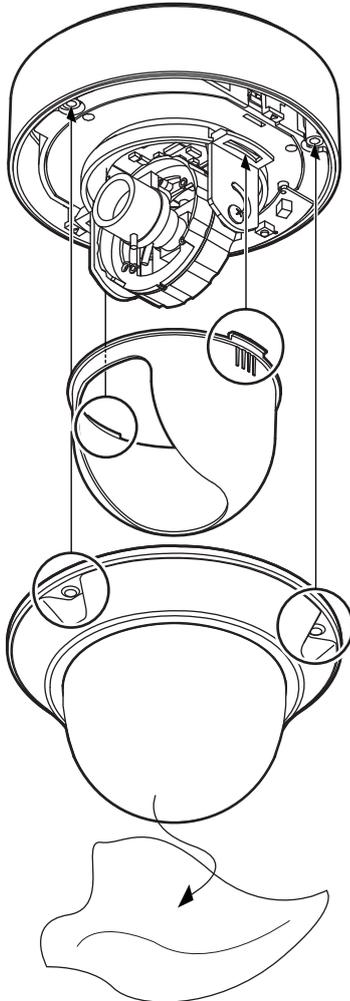

7 Attaching Shield Cover

After placing two hooks of the shield cover onto two slots in the camera mechanism, press shield cover upward to fix it to the mechanism.

8 Attaching the Dome cover


After placing dome cover on to the bracket properly, tighten three TORX Wrench.

Remove the protection vinyl sheet to finish the mounting.

9 Detach the Protection Film

Detach the protection film from the dome cover.

2 Installation - Cabling

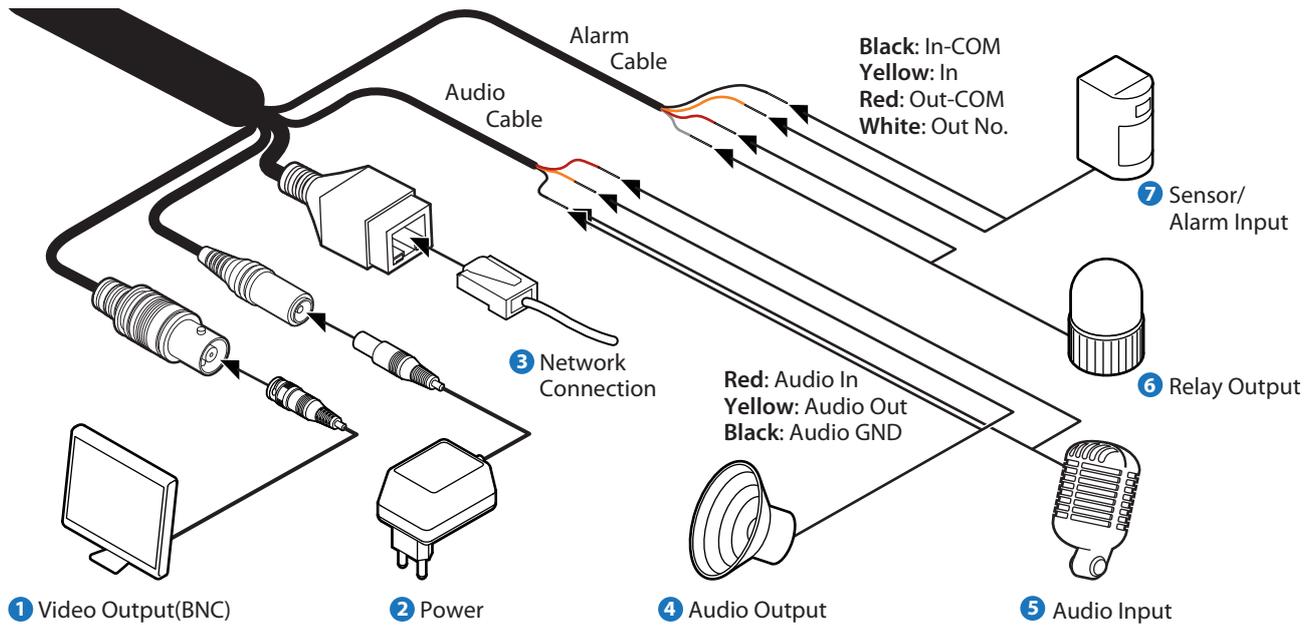

1 Video Output(BNC Cable)

The BNC cable is used to connect to a monitoring display.

※ If you want to check the screen during installation, use the 'Test Monitoring Cable'.

2 Power Connection

Please, check the voltage and current capacity of rated power carefully.

Rate Power	Current Consumption	PoE
DC 12V	5.5W	IEEE802.3af Class 0

3 Network Connection

Connect the crossover cable into the RS-45.

4 Audio Output

Cable of the audio output device should connect to black and yellow line of the Audio Cable.

Audio volume is controlled according to the web-viewer.


5 Audio Input

Cable of the audio input device should connect to black and red line of the Audio Cable and audio input device is activated according to the web-viewer.

6 Relay Output


It connects to the alarm lights, siren or lamps, and it is activated according to the OSD menu setting. (INTELLIGENCE > ALARM OUT)

Cable of the relay output device should connect to white and red line of the Alarm Cable.

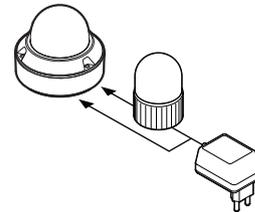


7 Sensor/Alarm Input

Cable of the sensor/alarm input device should connect to black and yellow line of the Alarm Cable.

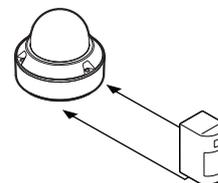

2 Installation - Inserting/Removing an SD Memory Card

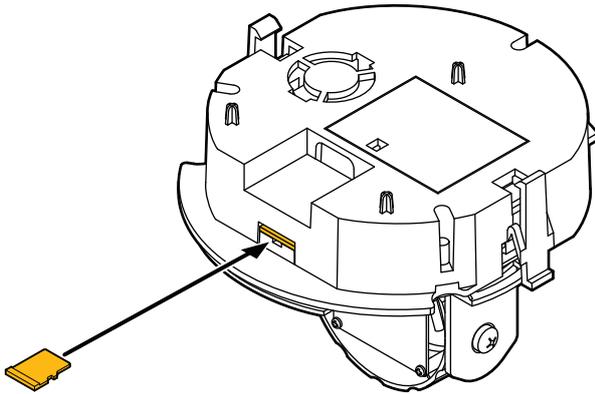

The memory card is an external data storage device that has been developed to offer an entirely new way to record and share video, audio, and text data using digital devices.




⊠ **Recommended SD Card Specification (Not Included)**

- Type: Micro SD (SDHC)
- Manufacturer: Transcend, Kingston, Toshiba, Sanddisk
- Capacity: 4~16G
- Class: over Class 6

1 Inserting an SD Memory Card

Insert the SD card in the arrow direction.

- ⊠ Don't insert the SD memory card while it's upside down by force. Otherwise, it may damage the SD memory card.

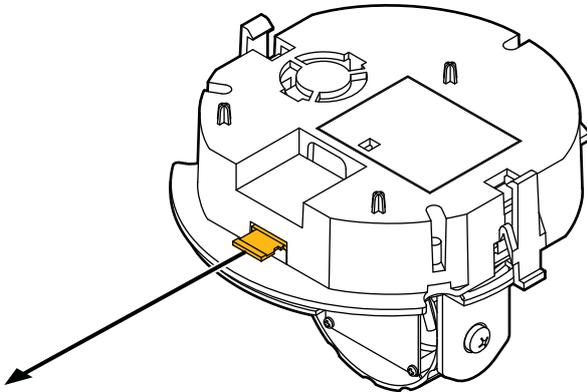

2 Removing an SD Memory Card

Removing an SD Memory Card Gently press down on the exposed end of the memory card as shown in the diagram to eject the memory card from the slot.

- ⊠ Pressing too hard on the SD memory card can cause the card to shoot out uncontrollably from the slot when released.
- ⊠ If you have saved data in the SD memory card, removing the SD memory card prior to setting record to OFF will cause damage to the data stored in the card.

3 Network Setup - Quick Start of Network Connection

Please follow the steps below to complete the initial setup of the network function.

- ❗ Please do not power on the IP Camera until instructed.
- ❗ Temporarily disable any proxy servers configured in internet Explorer.
- ❗ If connecting the IP Camera directly to a modem, power down and reset the modem. Leave the modem powered down until configurations are finalized with the IP Camera and the IP Camera has been correctly connected to the modem.

1. You will need to access a PC/laptop and should configure that PC in order to communicate with the IP Camera. Record the current TCP/IP properties of that PC. (IP address, subnet mask, gateway, DNS, etc.d)

Current TCP/IP Settings	
IP Address	
Subnet Mask	
Default Gateway	
Primary DNS Server	
Secondary DNS Server (Option)	

- ❗ If your PC obtains its IP address automatically, then there is no need to record any information.

- Change the IP address of that host PC to 192.168.1.11 and subnet mask to 255.255.255.0 (leave all other entries blank)
- Connect the IP Camera to your PC's Ethernet port via the supplied crossover cable. (It does not matter what end is used for the PC)
- Power on the IP Camera using the according to the power rated.
- After 1 minute of power, verify a flashing ACTIVE indicator, and a flashing or solid LINK indicator. After the corresponding indicator lights are properly displayed, open Internet Explorer.
- Type - <http://192.168.1.80> (the default IP of the IP Camera) into your address bar.
- Default ID/Password to access IP Camera are both the word: **admin**.
- Familiarize yourself with the Viewer Interface Screen.
- Locate the TCP/IP configuration under Setup. Supply the same ID and Password to enter Setup. (**admin : admin**)
- Under 'Network Type' select STATIC. You will only select Dynamic if you are connecting the IP Camera directly to your cable/DSL/Broadband modem and your Internet Service Provider is supplying you a dynamic address.

- ❗ If you have a network with other devices (such as PC/laptop, etc.) or a router, you will NEVER select Dynamic.

11. Configure the IP Camera's TCP/IP settings as you would any other PC on your network, providing a proper IP address, subnet mask, default gateway, and DNS server.

- ❗ If this is standalone unit with a direct connection to a cable/DSL/Broadband modem then input the addresses you have received from your ISP. If you received no IP address from your ISP, please select Dynamic and choose the proper settings.

12. The IP Camera utilizes five TCP ports - a Web Port for utilizing Internet Explorer, a Video Port, a Control Server Port, Audio ports. A Web Port is for utilizing Internet Explorer, a Video Server port is to support the streaming video, and a Control Control Port is to transmit to control command. Also Audio Port are to transmit and to receive Audio data. If this IP Camera will be directly attached to a cable/DSL/Broadband modem or has been assigned a static IP from your ISP, then leave the default port settings.

If you are installing the IP Camera on a network, you must define a Web Port other than 80. The other ports, a Video Port, a Control Port, Audio Ports can remain unchanged.

13. If the IP Camera is connected to a network which utilizes a router, you must have Port Forwarding configured on your personal router to forward all ports to the IP address you have assigned the IP Camera.

14. After configuring Port Forwarding on your router (if necessary), you may then access your IP Camera on your local network by opening Internet Explorer and specifying the IP address and Web Server Port that you have assigned to the IP Camera.

- ❗ Examples: <http://192.168.0.200:8888>

- ❗ If you left your Web Port set to 80, then you don't need to specify the port in the Address Bar when accessing your IP Camera.

15. Access your IP Camera via the Internet :

If you use a static IP address assigned by your ISP

- Open Internet Explorer.
- Type the IP of the IP Camera.
- If you use a router, type the routers' static IP and the web port number of the IP Camera.

If you have a dynamic address provided by your ISP

- Open Internet Explorer and visit the DDNS website.
- Register the IP Camera.
- Reboot the IP Camera.
- Give the DDNS server 10 minutes to locate your IP Camera's IP information.
- Click the refresh button in the Internet Explore.
- After your camera is connected, select your camera.

3 Network Setup - Initial Setup via a Crossover Cable

This section provides a guide on how to connect the IP Camera to your PC/Laptop for initial setup.

Please follow the instructions in the order they appear, without skipping steps. Do not supply power to the IP Camera, until instructed.

In order to access the IP Camera's firmware you will need to connect the Video Server directly to a PC or Laptop computer via the supplied crossover cable.

1. Before you begin, you must determine the current network/INTERNET (TCP/IP) settings on the PC or laptop you plan to setup the IP Camera. Write down your entries below for quick reference.

Current TCP/IP Settings	
IP Address	
Subnet Mask	
Default Gateway	
Primary DNS Server	
Secondary DNS Server (Option)	

- For information on how to determine your current settings, see Appendix A.
- If you are obtaining an IP Address automatically, then there is no need to write down this information.

2. In order for the IP Camera to communicate with your PC, you have to change your PC's IP address and subnet mask.

- We recommend that you change your IP address to 192.168.1.11 and change the subnet mask to 255.255.255.0. Leave all other entries (Default Gateway, DNS Servers, etc.) blank.
- For information on how to change your IP address and subnet mask, see Appendix B.


3. After you have made the changes to your IP address and subnet mask, you may then attach the IP Camera to your PC via the supplied crossover cable. Plug-in either end of the crossover cable into the PC's network card and the other end into your IP Camera.

4. After connecting the PC and IP Camera using the crossover cable, power on the IP Camera by plugging in the power supply shipped with the IP Camera.

5. No longer than 1 minute after powering on the IP Camera, verify that the ACTIVE indicator light is flashing, and the LINK indicator light is flickering or solid. If they are not, please read the FAQ.

6. Now you will be able to access the viewer software within the IP Camera.

- Open Internet Explorer and type the IP address of 192.168.1.80 (default IP of the IP Camera from the factory) into the Address Bar of the web browser (as seen below). Press Enter.

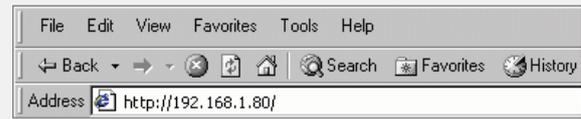

- If a message appears after pressing 'Enter' similar to the image depicted below, choose 'Try Again'. This message will vary depending on the operating system.



7. Now you will be able to see the login screen for the IP Camera.

- The 3 authorities are available : Administrator, Operator and Viewer. The authority setup is available in Setup.
 - Viewer : Only monitoring is allowed.
 - Operator : Most of the functions are allowed except 'Setup'.
 - Administrator : All functions are allowed.

8. The default ID and Password are both the word 'admin' (without the " ")

9. If at any time you are prompted to download ActiveX controls, you must click 'Yes', all contents are safe.

- You will have to click 'Yes' twice to two individual prompts. This allows your video to be displayed in Internet Explorer.

3 Network Setup - DDNS Registration

If you have DYNAMIC IP service from your Internet Service Provider (ISP), you can't tell what current IP address of IP Camera is. To solve this problem, you have to register to our DDNS service.

At first, we recommend, you have to check if you are using dynamic addressing. If so, please, register your IP Video Server on our DDNS website before you configure, setup, or install the IP Camera.

Even though your IP is not dynamic, you will get a benefit if you register to DDNS. In this case, you just remember 'alex.net4c.net/gate1' instead of complicated series of number like <http://201.23.4.76:8078>.

For more detail information, please contact our Support Center.

- ⊗ To register IP Camera to DDNS, you should know the 'Serial No.' of your IP Camera. The 'Serial No.' can be found in section 6 'Setup - DDNS' menu.
- ⊗ To use a public DDNS called 'dyndns' or 'no-ip', you can find detail information on how to use this service.
(Please, visit its web site : <http://www.dyndns.com> or <http://www.no-ip.com>)

3 Network Setup - Guide to Network Environment

Please configure the IP Camera at the location of its installation. You must determine your network scenario in order to configure the IP Camera with the proper TCP/IP settings. This tutorial will guide you through the process. Before actually configuring the IP Camera, determine what settings you will apply. Record those settings that you will use to configure your IP Camera for reference.

When configuring your IP Camera, treat the IP Camera as another PC on your network. You will assign it several addresses and other TCP/IP properties to match your current network.

This step-by-step tutorial will teach what IP addresses and network configurations you should assign your IP Camera based upon your network scenario.

1. Before you begin, you will need to locate any information and settings that you have received from your Internet Service Provider (ISP). You may need to refer to these IP addresses at a later time during the configuration.

Current TCP/IP Settings	
IP Address	
Subnet Mask	
Default Gateway	
Primary DNS Server	
Secondary DNS Server (Option)	

Static Dynamic

- i** If you were not given any IP addresses or the ISP was responsible for the setup and installation of your Internet connection on your PC or network, then please go to step 2.
- i** If you are not using a router on your network, your 'Current TCP/IP Settings' (from the previous section) and 'Assigned IP Addresses from My ISP' will be exactly the same.

2. You must determine whether the IP address that you were assigned from the ISP is STATIC or DYNAMIC. At this moment, you are only concerned about the ISP. Did they provide you with a STATIC or DYNAMIC address? If you are unsure, please contact your ISP.
3. Configure your IP Camera's TCP/IP settings for network connectivity by selecting Setup from the main interface and selecting TCP/IP located on the left of the Setup screen.
4. If prompted for an ID and Password, use 'admin' for both entries.


The default web port number is 80. If your ISP blocks port 80 you must use a value between 1025 ~ 60000. Please consult your ISP and determine if they block TCP port 80.

5. Depicted below are several basic network scenarios. Determine which scenario describes your network. If your network does not match one of the scenarios below and are unsure how to setup your IP Camera, please contact your network administrator, then call our Support Center.


i Dash line box signifies areas of your network that you can't control. Only the ISP has access to these devices.

3 Network Setup - Setup Case A, B

Case A: Dynamic IP + Personal Router [Most SOHO]

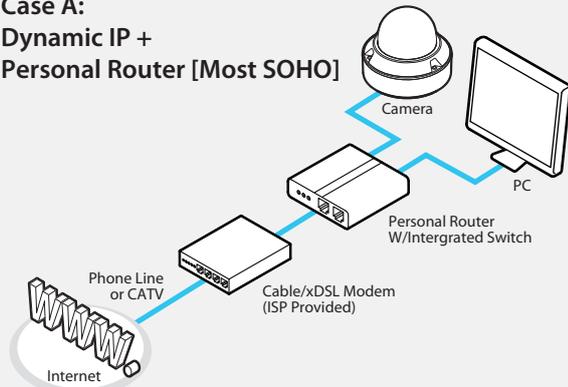

Case B: Static(Fixed) IP + Personal Router [Efficient]

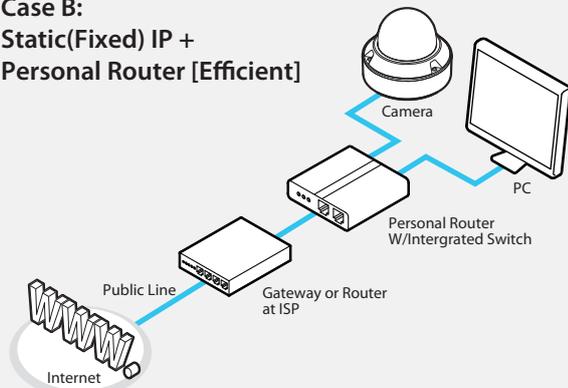

Configure your IP Camera's TCP/IP properties as follows :

1. Network Type : STATIC (even though you have Dynamic IP from your ISP, use STATIC on the IP Camera)

2. Internet Address : A private IP address such as 192.168.0.200 (Example)

i You need to assign the IP Camera an IP address, just as you would assign a PC.

i The IP address you assign must be unique to your network as well as match your network. For information how to choose a unique IP and match your network please read the FAQ.

i The IP address you assign the IP Camera must be a private IP. For information on how to choose a private IP please read the FAQ.

3. Subnet Mask : 255.255.255.0 (Example)

i You must use the same subnet mask as the one you noted under 'Current TCP/IP Settings'.

4. Default Gateway : 192.168.0.1 (Example)

i This IP address must be the IP address of your router. (private or LAN side)

i Use the same Default Gateway you noted under 'Current TCP/IP Settings'.

5. Preferred DNS Server : Use the 1st DNS Server from 'Assigned IP Address from My ISP'.

i If you did not receive any IP addresses from your ISP, please contact them and acquire the IP address of their DNS server.

6. DDNS Server : Use the DDNS server.

i This is the same site you will register with later to accommodate dynamic IP from your ISP.

7. Web Port : 8888

i Do NOT use the default port 80, you must change this number.

i You may select any number between 1025 ~ 60000.

8. Control Port : 7777

i You may select any number between 1025 ~ 60000.

9. Video Port : 7778

i You may select any number between 1025 ~ 60000.


10. Audio Transmit Port : 7779

i You may select any number between 1025 ~ 60000.

11. Audio Receive Port : 7780

i You may select any number between 1025 ~ 60000.

3 Network Setup - Setup Case C, D

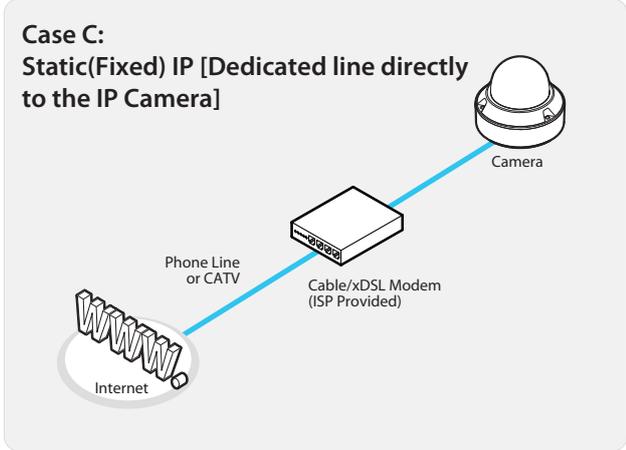

Configure your IP Camera's TCP/IP properties as follows :

1. **Network Type :** STATIC
2. **Internet Address :** A static IP address received from your ISP, such as 24.107.88.125 (Example)

i You need to assign the IP Camera an IP address, just as you would assign a PC.

3. **Subnet Mask :** Subnet mask assigned from your ISP, such as 255.255.255.240 (Example)

4. **Default Gateway :** 24.107.88.113 (Example)

i Use the assigned default gateway from your ISP

5. **Preferred DNS Server :** Use the 1st DNS Server from 'Assigned IP Address from My ISP'

i If you did not receive any IP addresses from your ISP, please contact them and acquire the IP address of their DNS server.

6. **DDNS Server :** Use the DDNS server

i This is the same site you will register with later to utilize our DDNS service.

7. **Web Port :** 80

i You may select any number between 1025 ~ 60000.

8. **Control Port :** 7777

i You may select any number between 1025 ~ 60000.

9. **Video Port :** 7778


i You may select any number between 1025 ~ 60000.

10. **Audio Transmit Port :** 7779

i You may select any number between 1025 ~ 60000.

11. **Audio Receive Port :** 7780

i You may select any number between 1025 ~ 60000.

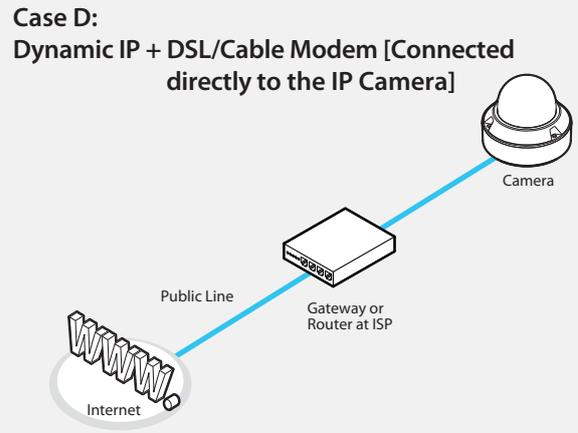

i When connecting the IP Camera directly to a modem, power down and reset the modem. Leave the modem powered down until configurations are finalized with the IP Camera and the IP Camera has been correctly connected to the modem. Then power on the modem, followed by the IP Camera.

Configure your IP Camera's TCP/IP properties as follows :

1. **Network Type :** DYNAMIC
2. **DDNS Server :** Use the DDNS server

i This is the same site you will register with later to accommodate dynamic IP from your ISP.

3. **Web Port :** 80

i You may select any number between 1025 ~ 60000.

4. **Control Port :** 7777

i You may select any number between 1025 ~ 60000.

5. **Video Port :** 7778

i You may select any number between 1025 ~ 60000.

6. **Audio Transmit Port :** 7779

i You may select any number between 1025 ~ 60000.

7. **Audio Receive Port :** 7780

i You may select any number between 1025 ~ 60000.

3 Network Setup - Port Forwarding

After entering the correct TCP/IP settings you will be ready for 'Port Forwarding' (Cases A, B).

1. Please record the TCP/IP settings of your IP Camera for future reference. You may need this information to access your IP Camera and to configure 'Port Forwarding'.

IP Camera TCP/IP Settings	
IP Address	
Subnet Mask	
Default Gateway	
Preferred DNS Server	
DDNS Server	
Web Port	
Control Port	
Video Port	
Audio Transmit Port	
Audio Receive Port	

2. After clicking 'Apply' the system will prompt for a reboot. Please allow the system 50 seconds to reboot and accept the changes. After 50 seconds, close the configuration screen. The view will display 'Trying to Reconnect'. If the ACTIVE light on the IP Camera has gone off and is now back on again flashing, then the IP Camera has rebooted. After the system reboots completely, remove the power supply from the unit and close Internet Explorer.
3. Return your PC/Laptop TCP/IP properties to their original settings.
4. Before installing the IP Camera, you must use 'Port Forwarding' on your personal router (Cases A, B).

You will need to forward 5 ports:

- Web Port you assigned to the IP Camera.
- Control Port you assigned to the IP Camera.
- VideoPort you assigned to the IP Camera.
- Audio Transmit Port you assigned to the IP Camera.
- Audio Receive Port you assigned to the IP Camera.

Both of these ports will be forwarded to the IP address you assigned to the IP Camera.

In the example above, you would forward:

- 8888 → 192.168.0.200
- 7777 → 192.168.0.200
- 7778 → 192.168.0.200
- 7779 → 192.168.0.200
- 7780 → 192.168.0.200

i For information on how to use 'Port Forwarding' please read Appendix C.

3 Network Setup - Starting IP Camera

After correctly forwarding the Web Port, Video Port, Control Port and two Audio Ports through your router (if applicable), you may then install the IP Camera in a proper location.

1. Locate the serial number located on the label attached to the bottom of the IP Camera, you will need this for DDNS registration.
2. Connect the IP Camera to your router or cable/DSL modem (per your network scenario) via a Cat5/5e UTP Ethernet network cable.
3. Supply power to the IP Camera.
4. After 1 minute, verify the IP Camera indicators:
 - ACTIVE : Flashing
 - LINK : Flickering/Solid
5. After configuring Port Forwarding on your router (if necessary), you may then access your IP Camera on your local network by opening Internet Explorer and specifying the IP address and Web Port that you have assigned to the IP Camera.

i Examples: <http://192.168.0.200:8888> or <http://24.106.88.123>
i If you left your Web Port set to 80, then you don't need to specify the port in the Address Bar when accessing the IP Camera.

6. Access your IP Camera via the Internet :

If you use Case B, C


- 1) Open Internet Explorer.
- 2) Type the IP of the IP Camera.

If you use Case A, D

- 1) Open Internet Explorer.
 - 2) Visit the DDNS website.
 - 3) Register the IP Camera.
 - 4) Give the DDNS server 10 minutes (MAX) to locate your IP Camera's IP information. You may reboot the server to send an immediate request to our DDNS server.
 - 5) After your camera is connected, select your camera.
-

i The difference between B and C, is that B needs to set the port forwarding.
i Since the type of DDNS differs to the kind of the service, please refer the related service site.

4 Web Viewer Screen - Basic Screen

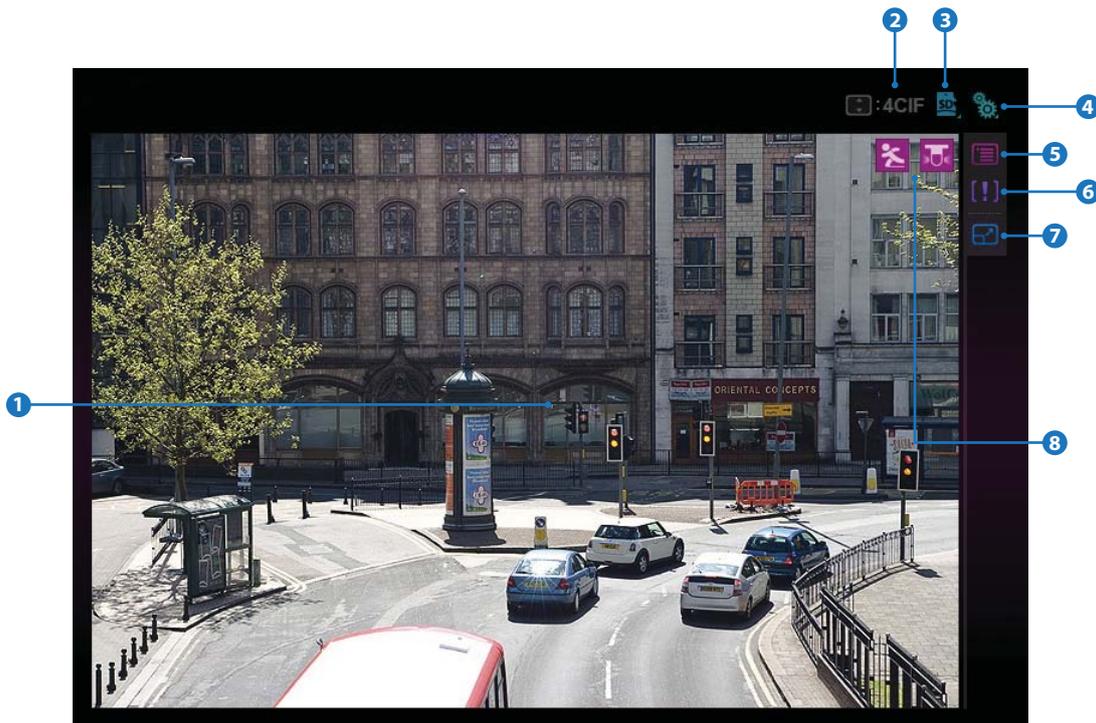


⌘ The web-viewer is optimized to Window XP and Explorer 6.0.

- 1 Live video display. This is the region for live video stream from the camera.
- 2 Resolution. The resolution of video that displays currently on the screen.
- 3 SD Card Search. Searching or Playing the Image which stored in the SD Card.
- 4 Setup popup button. Click it to open the Setup page to setup details of IP camera like Video, Network, Events, System and etc. See the section 4 'Setup'.

- 5 OSD setup tab button. Click it to extend the panel to setup camera using OSD menu and Video stream selection. See the next page 'Web Viewer Screen – OSD Setup'.
- 6 Etc setup tab button. Click it to extend the panel to setup 1) Alarm Input and Relay Output, 2) Backup, 3) Audio setup, 4) Motion Detection. See the section 4 'Web Viewer Screen – Etc. Setup'.
- 7 Full screen button. Click it to extend the live video to full screen. To return to normal mode, press 'Esc' or 'Enter' key.
- 8 Event alert icon. If Alarm in and Motion detection are detected, below icons will appear.



4 Web Viewer Screen - OSD Setup

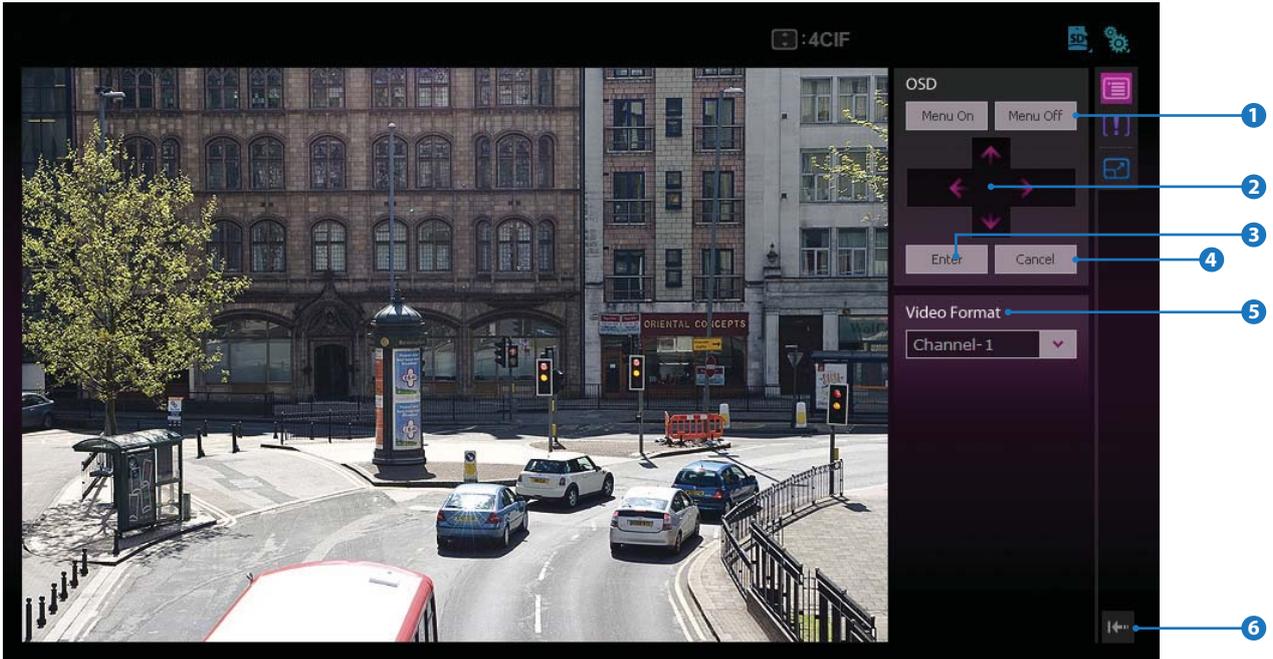

1 OSD menu button. If 'Menu On' button is clicked, Live screen shows OSD menu. To exit from the OSD setting, select the Exit Icon (☒) on MAIN MANU, then click the Enter button.

2 The 4 direction button. This button is used to move the cursor up, down, left, right as well as to change the value of a parameter selected.

3 Enter button. Use to confirm selected item.


4 Cancel button. Use to cancel selected item or exit to upper menu.

5 Video stream button. Select a stream produced from the camera between Stream 1 ~ 5 to display it in the live view screen.

☒ Refer the 'Setup > Basic > Video' to setup the Video Stream.

6 Hide Button. Hide all control panels extended.

4 Web Viewer Screen - Etc. Setup

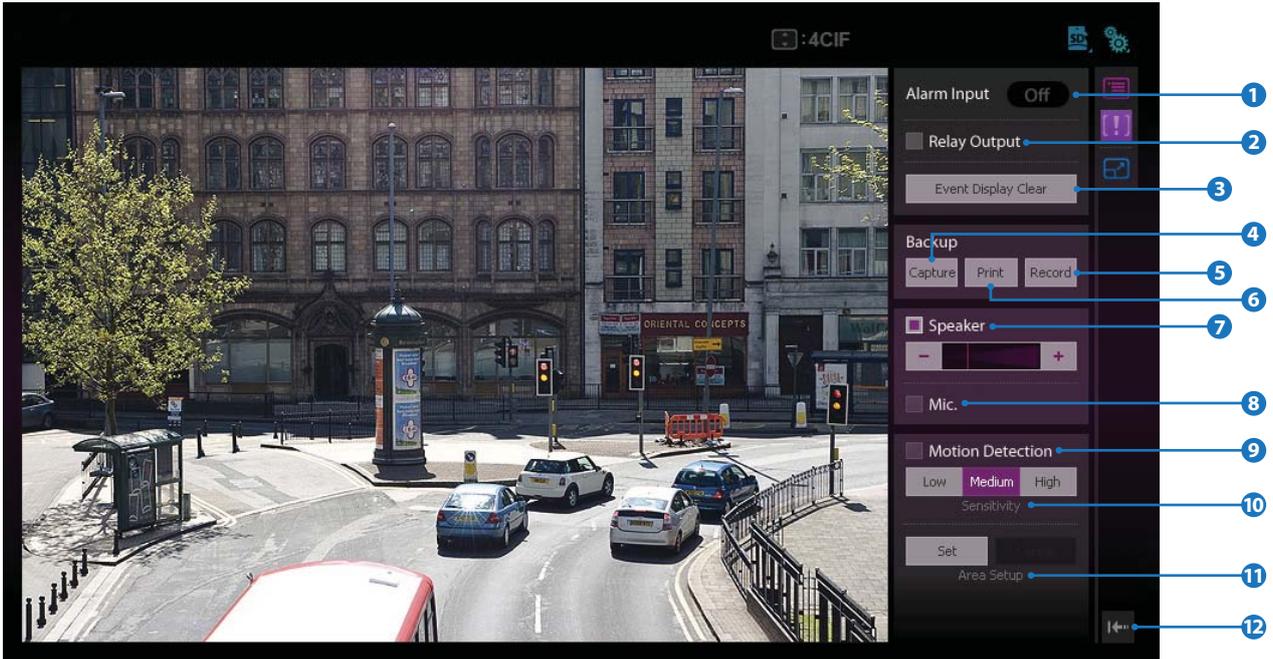

1 Alarm Input Status. It shows the Alarm Input status. If the status of alarm input becomes On state, the 'Off' button will be changed to 'On' button and event alert icon (🔴) is displayed on the 'Live video display'. If alarm is removed, the alarm input status is reset.

⚠ Regardless of alarm status, the Alert Icon will remain unless 'Event Display Clear' button is clicked.

2 Relay Out Button. Using this button, you can read status of alarm out and also set or reset it manually. If the status of alarm out becomes On state, the color of the button will be changed to bright purple.

3 Event Display Clear Button. Remove Event Alert Icons result from Alarm Input or Motion detection.

4 Capture button. Capture the live video in the form of BMP or JPG file. The location and file name of image can be decided after clicking this button. Refer the 'Setup > Basic > Backup' to setup the type of Image.

⚠ Captured files folder

Windows Vista & Windows 7	c:\user\(\username)\AppData\LocalLow\IP Network Camera\CAPTURE
Windows xp, 2000 & Windows me, 98	:\My Documents\IP Network Camera\CAPTURE\(\MAC Address)\Stream1(or 2, 3, 4, 5)\(Date)\IP_Date_Time_Filename.bmp(or jpg)'

5 Print Button. Print current live image to the printer connected to PC.

6 Record Button. If you click this button, the current live video will be stored as AVI format file in your PC. During the recording, you cannot change the Video Format. If you change the Video Format, the recording will be stopped automatically.

⚠ If remained disk space of the HDD drive where the video is recorded is less than 1GByte, a warning message box regarding the disk space will be shown and the recording will be stopped automatically.

⚠ To play the recorded video in the Windows Media Player, H.264 codec must be installed.


⚠ Recorded files folder

Windows Vista & Windows 7	c:\user\(\username)\AppData\LocalLow\IP Network Camera\RECORD
Windows xp, 2000 & Windows me, 98	:\My Documents\IP Network Camera\RECORD\(\MAC Address)\Stream1(or 2, 3, 4, 5)\(Date)\Date_Time_Filename.avi'

7 Speaker Control. Enable/Disable Audio stream received from the camera and Volume control of the speaker in the computer.

8 Mic Control. Enable/Disable the Audio stream to the camera.

4 Web Viewer Screen - Etc. Setup

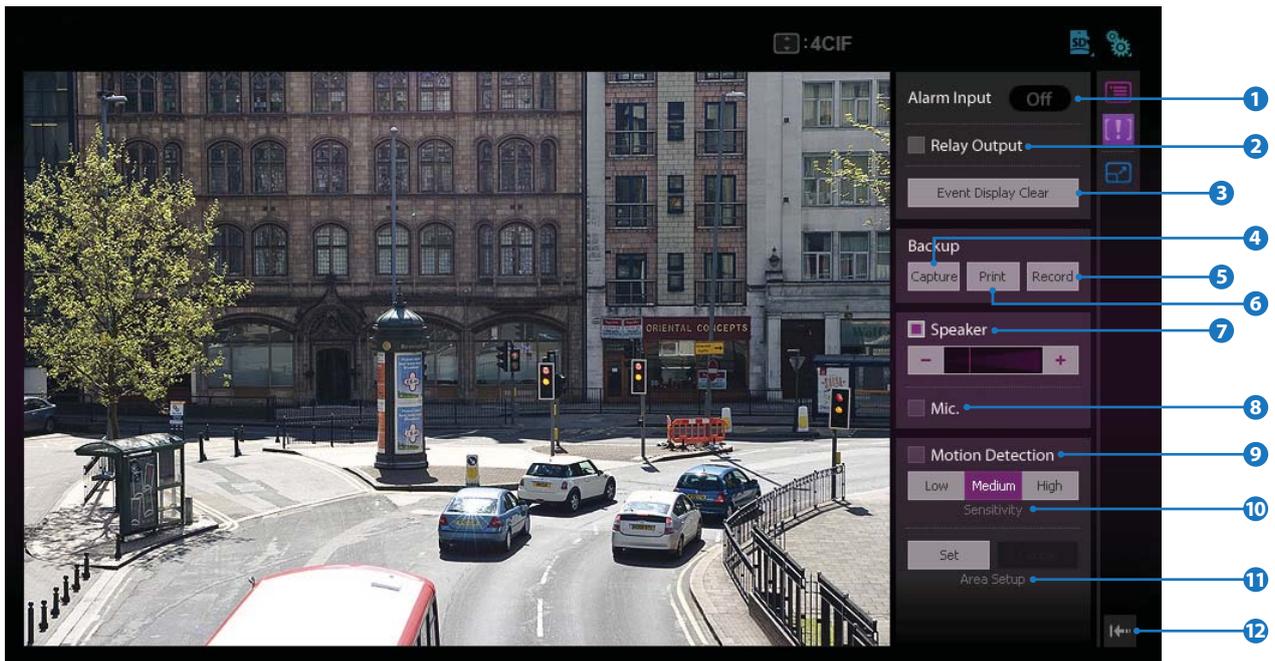

- 9 Motion Detection. Enable or Disable motion detection function. 'Area Setup' below must be done in advance. Event Alert Icon (🚨) appears on the screen if 'Motion Detection' is activated. Icon will remain unless 'Event Display Clear' button is clicked.

⚠ While the motion detection is activated, this function is de-activated momentarily if the OSD and OSD menu is shown on the screen. Then, it is re-activated when the OSD and OSD menu is disappeared.

- 10 Sensitivity. Define the sensitivity of motion detection. If High is selected, it will detect very small motion while it becomes relatively insensitive when Low is selected.

- 11 Area Setup. Setup the target area of motion detection.

<How To Setup>

- 1) If 'Set' button is clicked, Live screen shows grids to help area setup.
- 2) By clicking or dragging mouse on the grids, create or erase the masks on the main view.
- 3) Motion detection is effective in the masked Area.
- 4) Save setting by clicking 'Save' button.

⚠ Area Setup is possible only on the Ch No.1 in the 'Video Format'.



- 12 Hide Button. Hide all control panel extended.

5 Setup - Setup Screen

This section is provided to familiarize the user with the setup. Intuitive options are not explained in detail.

All the changes on Setup take the effect immediately. These settings will be global, affecting the view of all users currently logged on. However, OSD items changed are effective only after you refresh the viewer windows or restart the internet Explorer.

All settings are always saved in the video server even when you close the viewer program or you turn off the Power of the video server. If you lost your password, you must press the reset button to return all setting to its factory defaults.

The screenshot displays the 'SETUP' interface with a sidebar menu on the left and a main configuration area on the right. The sidebar menu includes sections for BASIC, NETWORK, EVENT, TRANSFER, and SYSTEM, with 'VIDEO' selected under the BASIC section. The main area is titled 'VIDEO CONFIGURATION' and features a table of channels and a set of configuration dropdowns.


Channel	Codec	Description
<input checked="" type="radio"/> 1	H.264	H264
<input type="radio"/> 2	MJPEG	MJPEG
<input type="radio"/> 3	H.264	NONE
<input type="radio"/> 4	MPEG4	NONE
<input type="radio"/> 5	MJPEG	NONE

Configuration options for the selected channel:

- Codec: H.264
- Description: H264
- Resolution: 4CIF
- Frame Rate: 30 fps
- Bitrate Mode: CBR
- Target Bitrate: 5Mbps
- Brightness: 1

An 'Apply' button is located at the bottom of the configuration area.

5 Setup - Video Setup

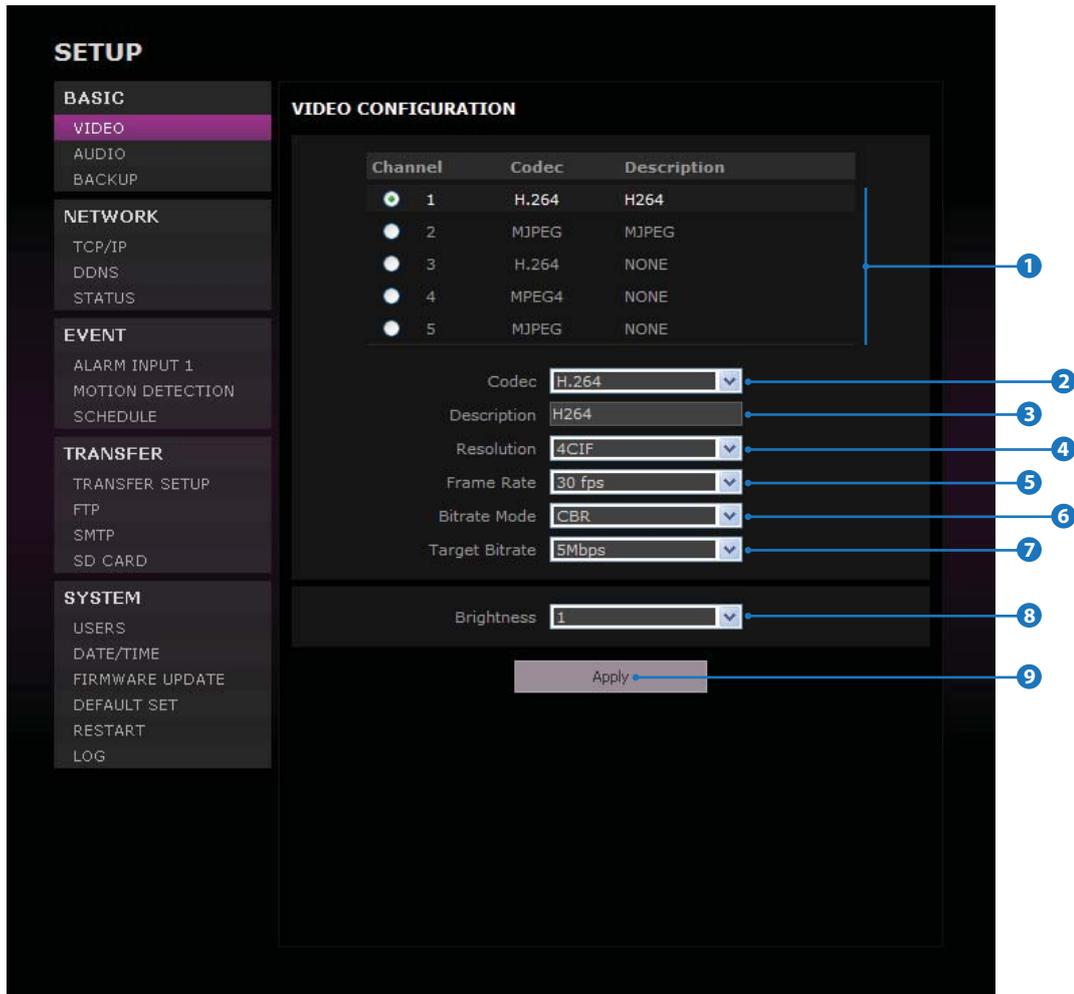

1 Live Video Channel Setup

Setup the multiple codec and Video according to the environment of installed camera. Using selected channel on the 'Web-Viewer > PTZ Control > Video Format'. CH No.1 and No.2 are the default CH, so they can't be changed. However, detailed category of default codec can be setup. CH No.3,4,5 are the user channel, and codec and detailed category of codec can be setup.

※ If CH No.1, 2 and some of channel are setup to High Performance (High Resolution and Frame Rate), remainder of channels can not be setup. Also, when the CH No.4,5 are already setup, there can be some restriction of setting up the resolution and fps when you try to setup the detailed category of remained channel.

2 Codec

Choose the video compression method preferred among H.264, MJPEG, MPEG4. According to the selected codec, the subcategories can be changed automatically.

3 Description

Input the additional description about the selected channel. Max. 15 alphabets are allowed(Including space). For the description, English Alphabets, numbers and special characters (/ ~ ! @ \$ ^ () _ - { } [] ; ,) can be used.

4 Resolution

Select the resolution between 4CIF, CIF, QCIF.

※ Available resolution can be depends on the codec setup between the channels.

	NTSC	PAL
4CIF	704 x 480	704 x 576
CIF	352 x 240	352 x 288
QCIF	176 x 144	176 x 220

<Resolution of Video Format>

H.264	4CIF, CIF
MPEG4	4CIF, CIF
MJPEG	4CIF, CIF, QCIF

<Support Resolution of Codec>


5 Frame Rate

Select the maximum Frame Rate.

※ Available Frame Rate can be different although same codecs were set up.

NTSC	PAL
30 / 25 / 20 / 15 / 10 / 5 / 1	25 / 20 / 15 / 10 / 5 / 1

5 Setup - Video Setup

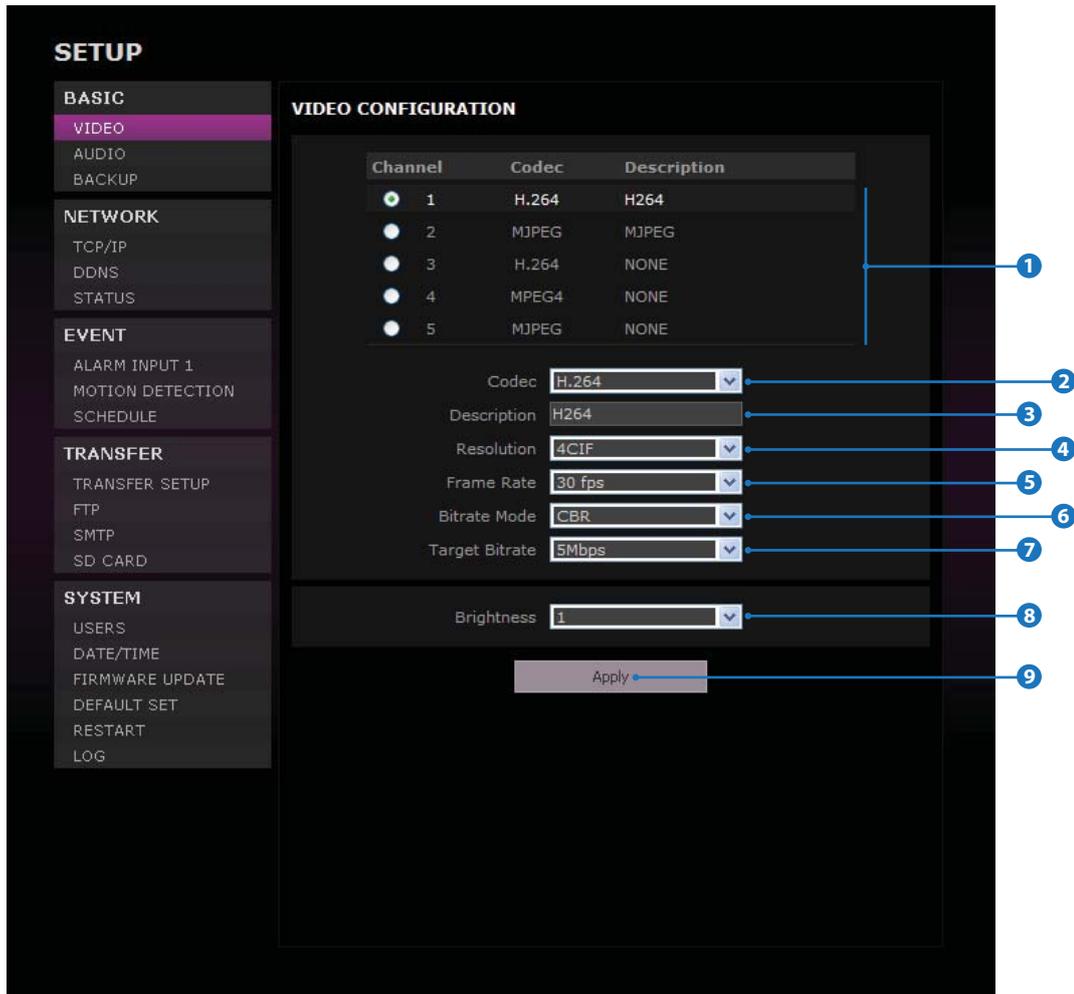

6 Bitrate Mode

Select the bit rate control scheme of video compression from CBR (Constant Bit Rate) or VBR (Variable Bit Rate).

CBR

To guarantee the designated constant bit rate, the quality of video and the frame rate are controlled in this mode. Therefore, the quality of video and the frame rate are likely to be varying when network traffic is changing.

VBR

To guarantee the designated quality, the bit rate of video stream is changed in this mode. Therefore, the frame rate of video is likely to be varying when network traffic is changing

⊠ This category won't be appear if you select the codec.

7 Target Bitrate

If Bitrate Control is set to be CBR, you can set the Target Bitrate by 5 steps from 1Mbps to 5Mbps.

7 Quality

For VBR control mode, The Target Quality of video can be setup from 1~5. Value 1 is the best quality while 5 is the normal quality.


8 Brightness

Adjust the brightness of image. The range of brightness is 1 ~ 100. The max. value of brightness is 100.

9 Click 'Apply' to make above setting effective.


⊠ Click this button when completed setup each channels.

5 Setup - Audio Setup

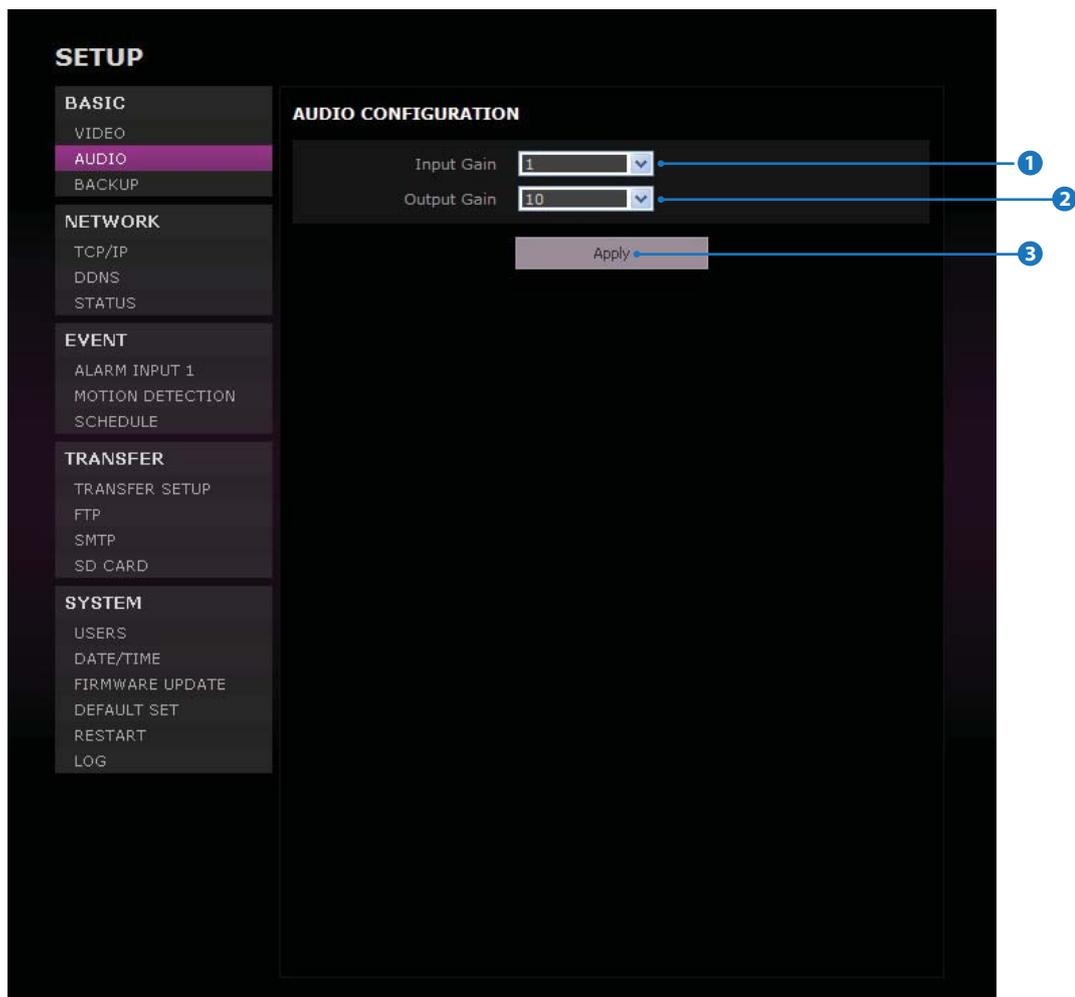


- 1 Input Gain**
Adjust the input gain of audio 1 ~ 4.
- 2 Output Gain**
Adjust the output gain of audio 0 ~ 10. Output gain 0 is mute.
- 3** Click 'Apply' to make above setting effective.

5 Setup - Backup Setup

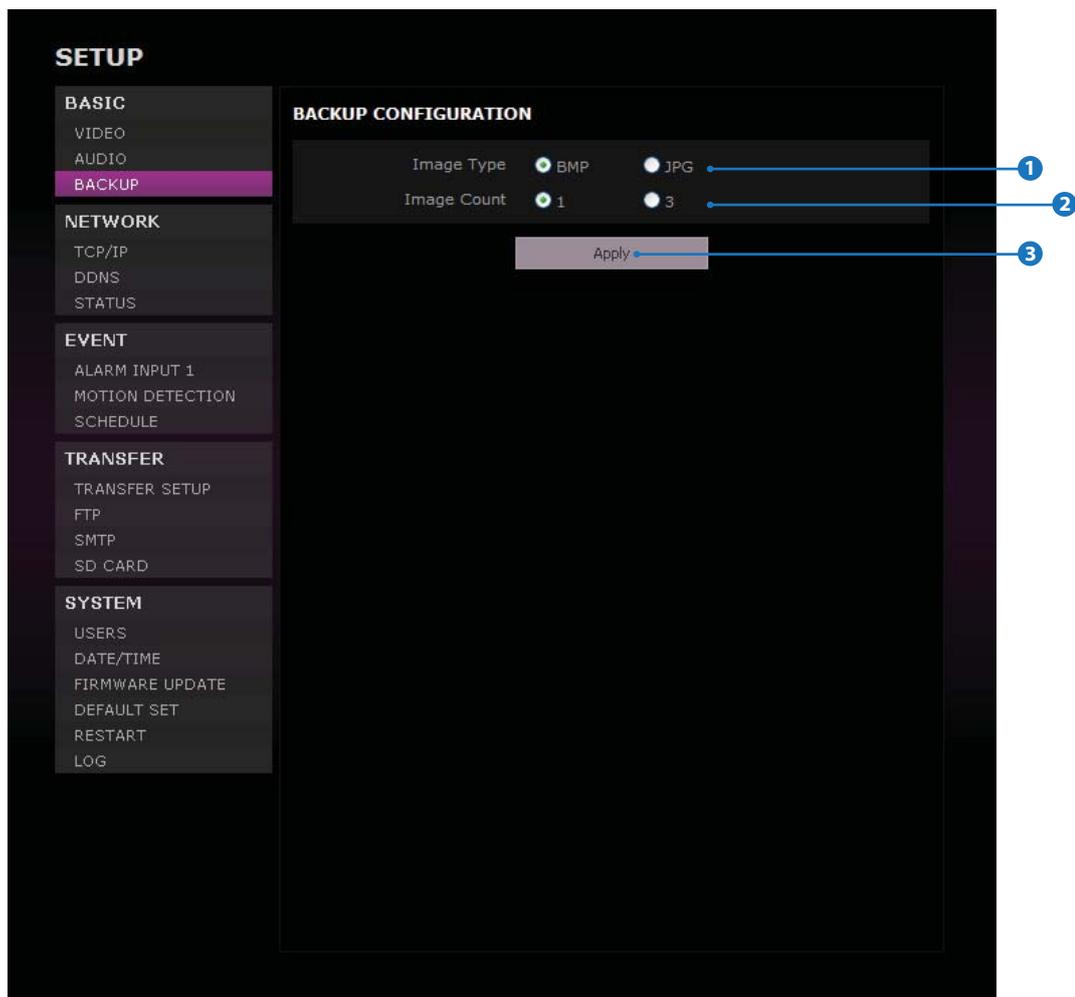

- 1 Image Type**
Select the type of Image after capturing the screen on the web-viewer.
- 2 Image Count**
Select the number of Images that you want to store when click 'Capture' button on the web-viewer.
- 3** Click 'Apply' to make above setting effective.

5 Setup - TCP/IP Setup

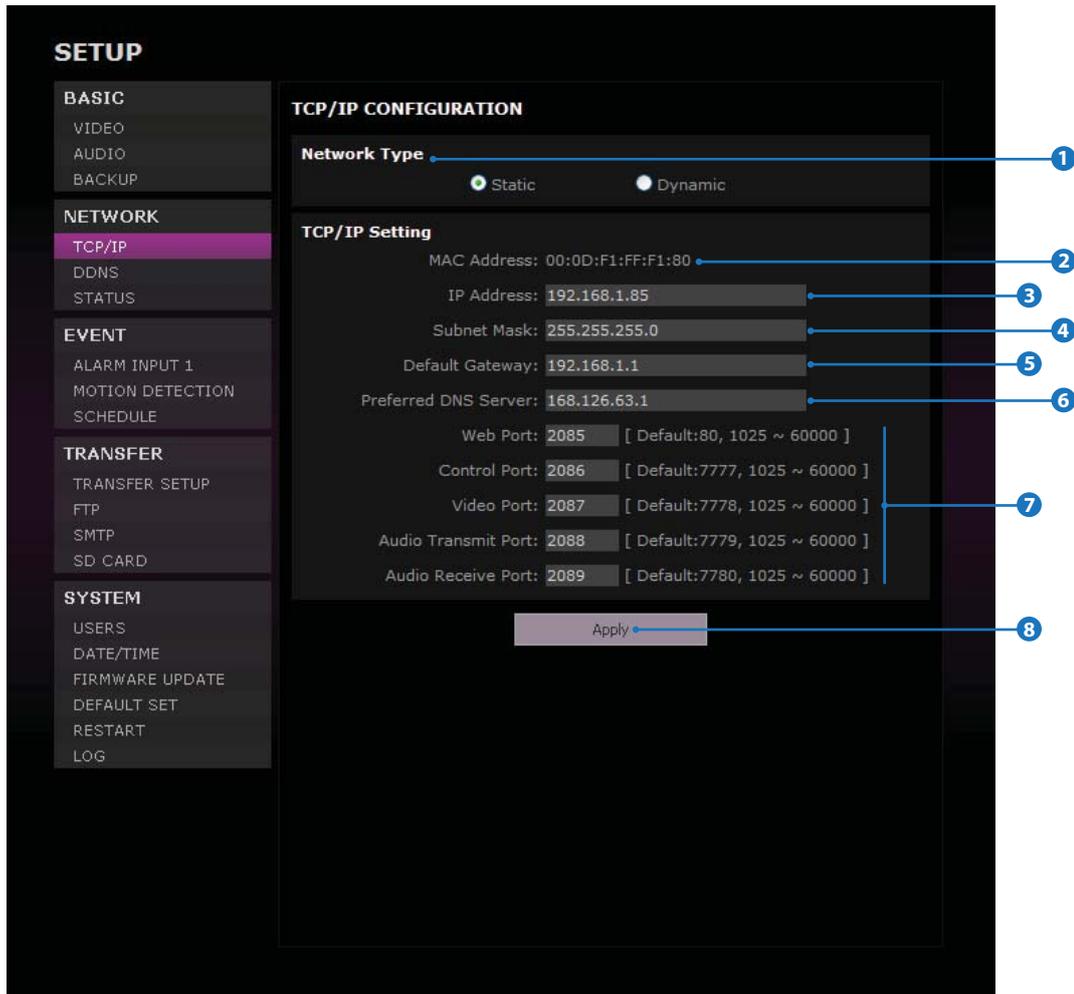

1 Network Type

Define network IP address type from the Static Mode for the fixed IP or the Dynamic Mode by the dynamic IP address. If you select the Static Mode, you must fill out IP Address, Subnet Mask, Gateway, DNS Server and all ports. If you select the Dynamic Mode, the IP address will be allocated automatically by DHCP equipment. If you click the Apply button to update changes, the system will be re-booted. In this case, you have to reconnect the camera using new IP address.

2 MAC Address

Display the MAC Address of Camera.

3 IP Address

Define the IP address. The address is consisted of four numbers separated by dots and the range of each number is from 0 to 255.

4 Subnet Mask

Define the Subnet Mask. Format is same as the IP address.

5 Default Gateway

Default the Gateway IP Address. Format is same as the IP address.

6 Preferred DNS Server

Define the DNS server IP address. Format is same as the IP address.

7 Port

There are five ports in the camera providing different services. To get those services separately, unique port number must be assigned to each servers.


Port Name	Description	Default	Range
Web Port	Define HTTP Web Server Port	80	1025 ~ 60000
Control Port	Define Control Server Port	7777	
Video Port	Define Video Server port	7778	
Audio Transmit Port	Define Audio Transmit Server port	7779	
Audio Receive Port	Define Audio Receive Server port	7780	

8 Click 'Apply' to make above setting effective.

⚠ If the network type is dynamic, the IP address is changed in below cases. Therefore, the IP address needs to be searched again, and the camera needs to be reconnected in these cases.

- When the camera power is on/off.
- After Firmware update, Default set and reboot.

5 Setup - DDNS Setup

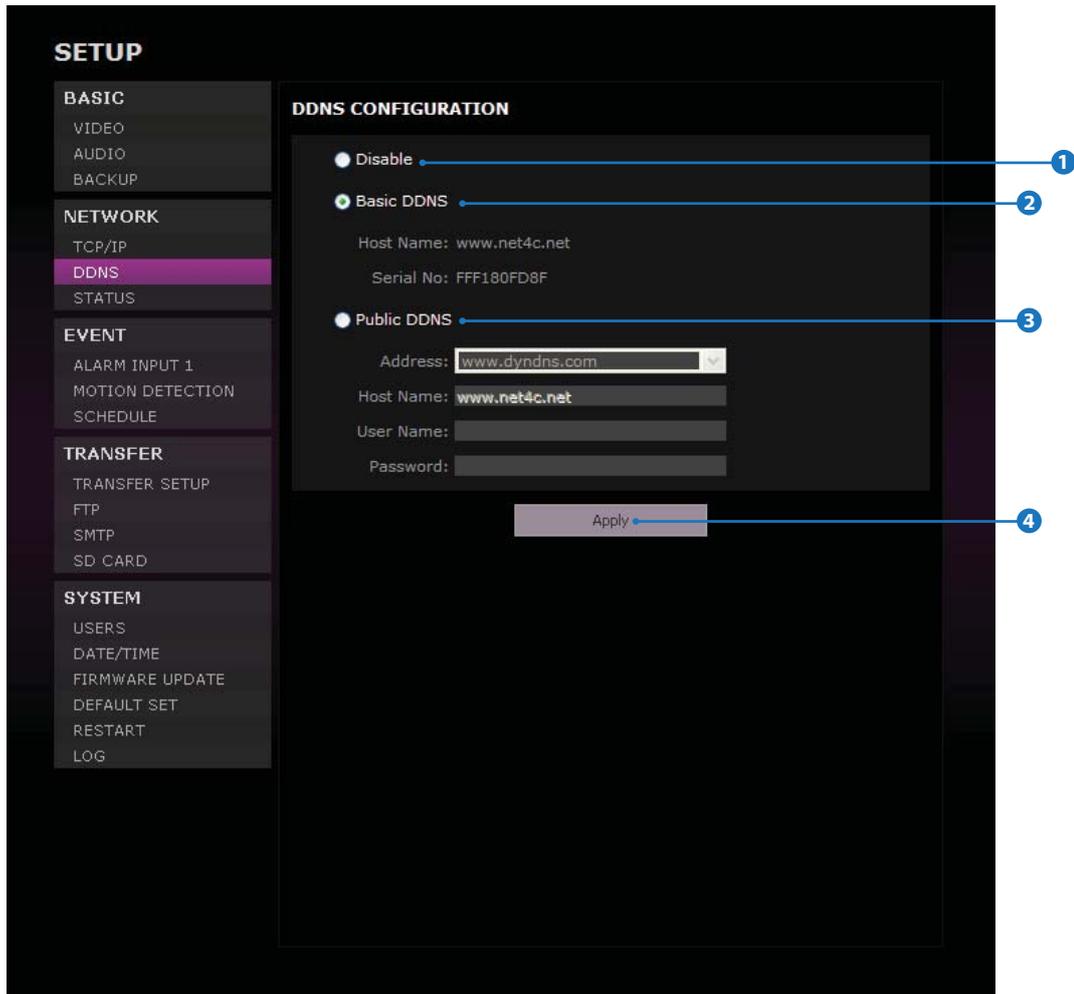

1 DDNS Disable

If it is selected, DDNS service does not work.

2 Basic DDNS

Please register the camera in net4c site so as to use net4c DDNS. Insert the serial number shown on the screen in the serial entry field.

3 Public DDNS

To use public DDNS service, select a site address listed in the list. After filling out the Host Name of the site, the setup is completed by entering User Name and Password registered in that DDNS site.


DDNS Provider	Site Address
DynDNS	www.dyndns.com
No-IP	www.no-ip.com

⊗ If you setup DDNS properly, the IP address of your camera will be updated automatically whenever IP address is changed or system is rebooted.

⊗ If IP updating to DDNS site is failed, camera will keep retrying in 1 min. interval. In this situation ACTIVE LED will be blinking. If DDNS is disabled, the ACTIVE LED will be lit always.


4 Click 'Apply' to make above setting effective.

5 Setup - Status

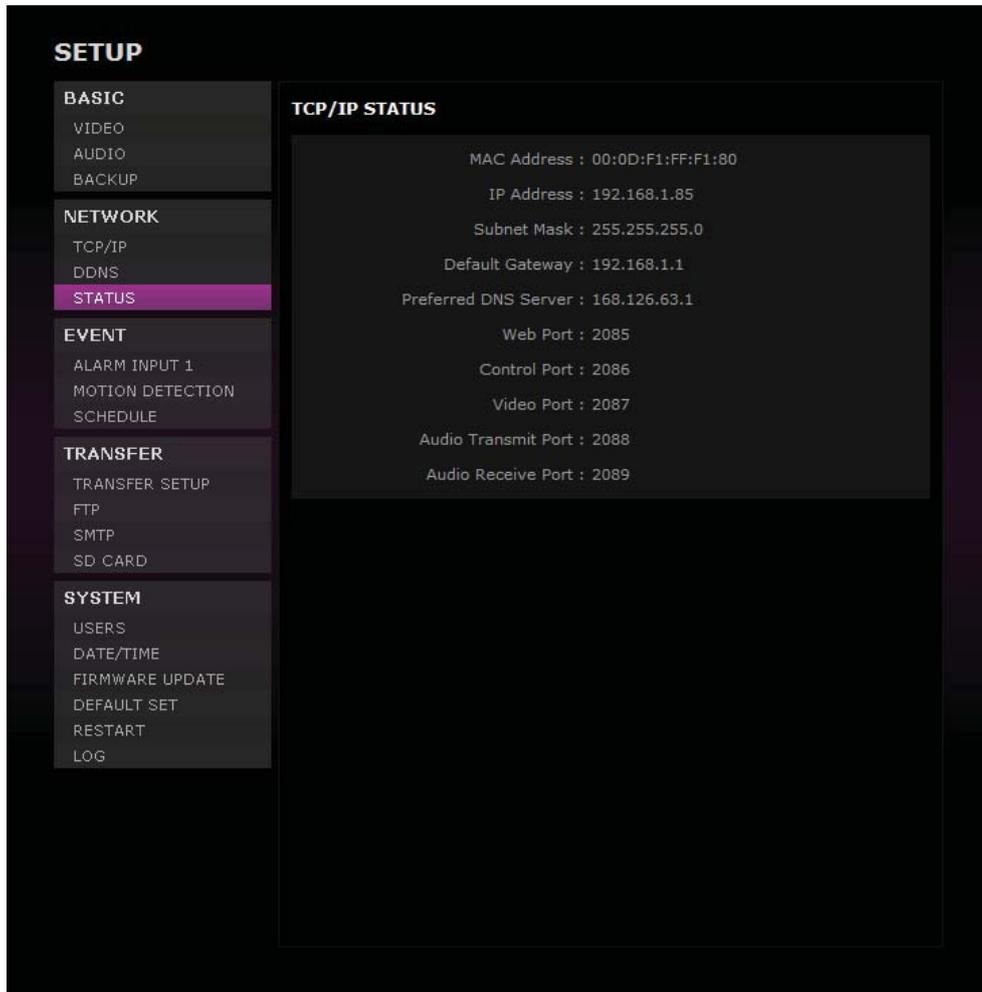

This menu will show you all the information of Network setting in the camera. However, you cannot change those here.

5 Setup - Alarm Input 1 Setup

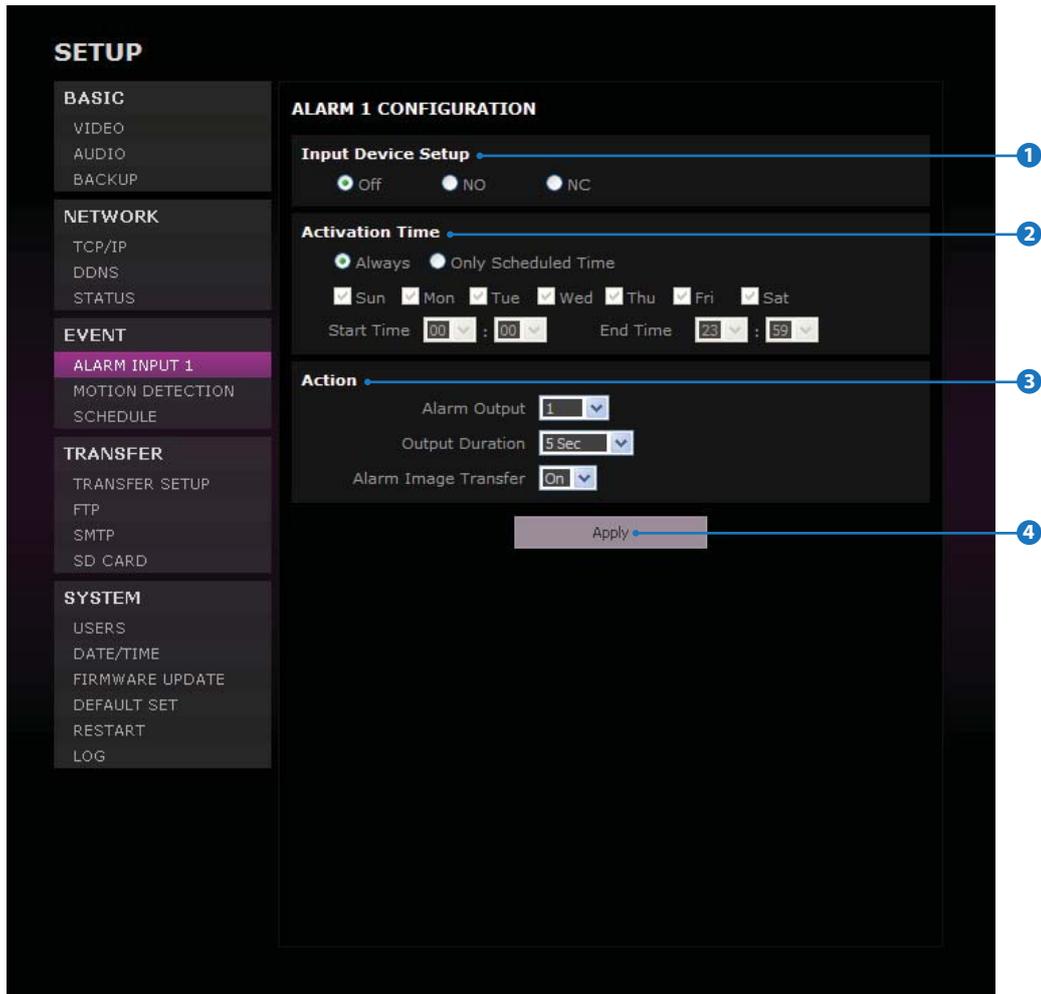

1 Input Device Setup

Select input device type from OFF / N.O. / N.C.

	Operation
Off	Ignore this Input sensor.
NO	The contact is normally open and closed when activated.
NC	The contact is normally closed and open when activated.

2 Activation Time

Select activation time from Always / Only Scheduled Time.

Always	An alarm event is activated whenever sensor Input is detected.
Only scheduled time	An alarm event is activated only when sensor input is detected during the scheduled time.

※ To setup the schedule, you need to define Start time and End time followed by selecting Days.

※ If End time is earlier than Start time, End time is regarded as next day.

Ex) Assume you select Tue. If you set Start time as 16:00 and End Time as 09:00, Alarm Input will work from 4:00pm Tue to 9:00am Wed.


3 Action

Define a counter action from Alarm Output / Alarm Image transfer / Camera Action when Alarm Input is detected.

Action	Description
Alarm Output	Activate alarm out (relay).
Output Duration	Select time duration to maintain output form 3 / 5 / 10 / 20 / 30 sec. or Continue
Alarm Image Transfer	Turn ON / OFF Image Transfer. Send image via E-mail or FTP server. (For more detail see Transfer Setup in this chapter)

4 Click 'Apply' to make above setting effective.

5 Setup - Motion Detection Setup

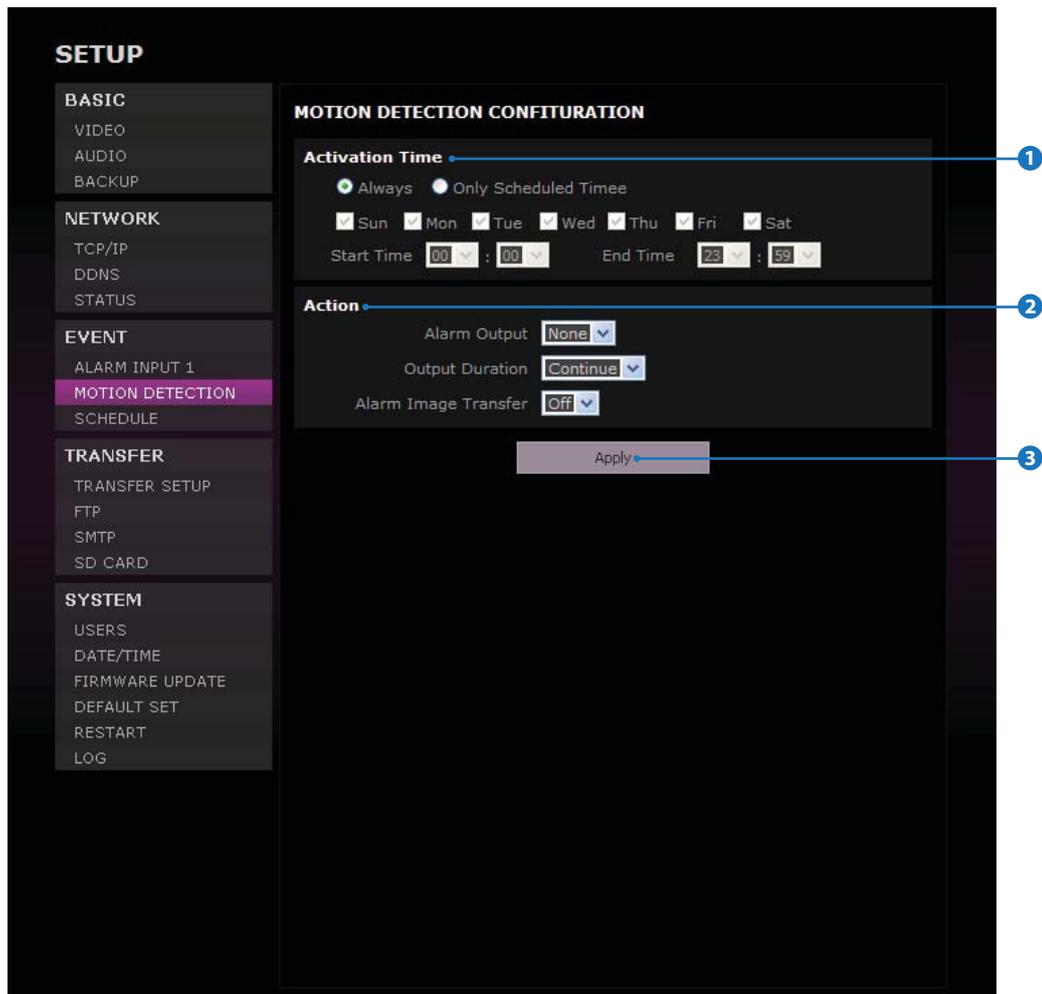

1 Activation Time

Select activation time from Always / Only Scheduled Time.

Always	An alarm is activated whenever motion is detected.
Only scheduled time	An alarm event is activated only when motion is detected during the scheduled time.

⊗ To setup schedule, you need to define Start time and End time followed by selecting Days.

⊗ If End time is earlier than Start time, End time is regarded as next day.
Ex) Assume you select Tue. If you set Start time as 16:00 and End Time as 09:00, Alarm Input will work from 4:00pm Tue to 9:00am Wed.


2 Action

Define a counter action from Alarm Output / Alarm Image transfer when motion is detected.

Action	Description
Alarm out	Activate alarm out (relay)
Output Duration	Select time duration to maintain output form 3 / 5 / 10 / 20 / 30 sec. or Continue.
Alarm Image Transfer	Send image to E-mail or FTP server Select from ON / OFF (see 'Transfer Setup' Menu)

3 Click 'Apply' to make above setting effective.

5 Setup - Schedule Setup

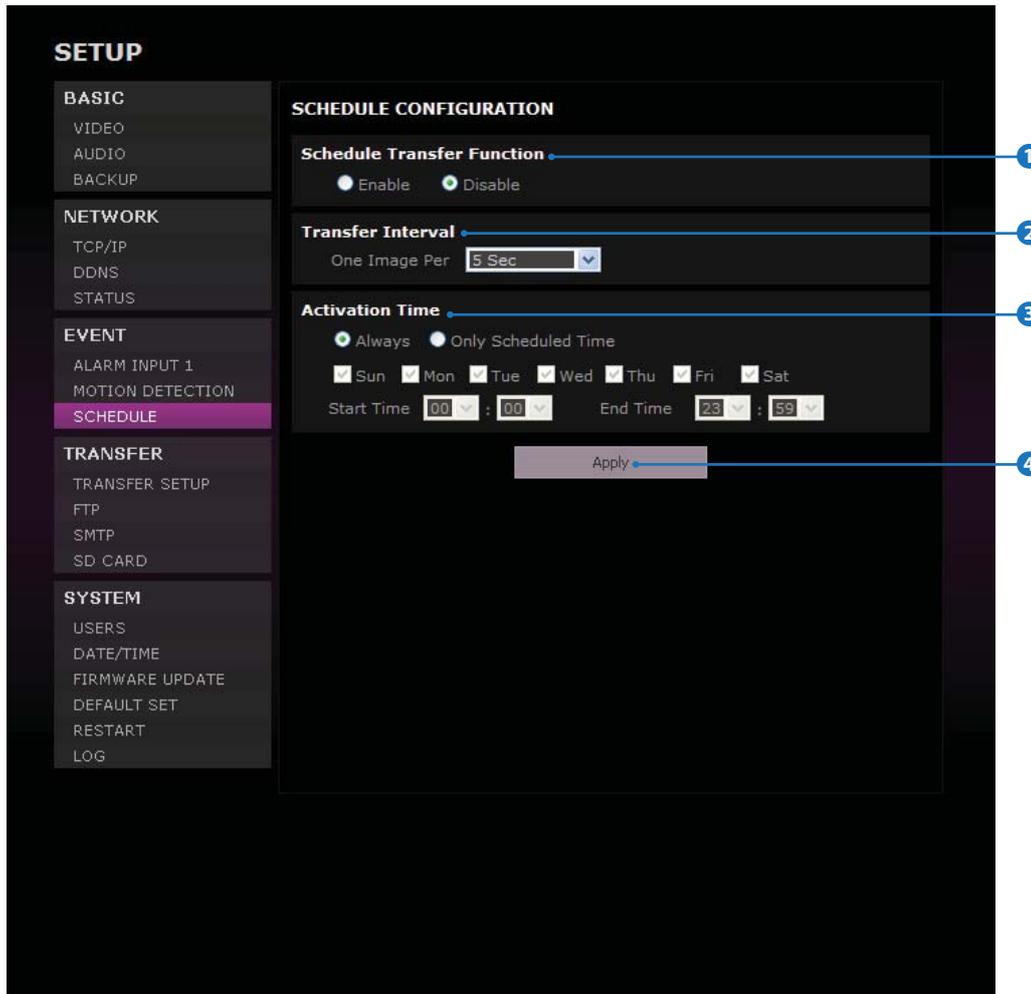

Schedule function enables to transfer series of still images in a time interval specified via E-mail or FTP. (For more detail, see 'Transfer Setup' in this chapter)

- 1 Enable / Disable**
Set Schedule function to be enabled or disabled. Schedule function enables to transfer series of still images in a time interval specified.
- 2 Transfer Interval**
Define time interval of image transfer from 5 / 15 / 30 / 45 / 60 sec. and 5 / 15 / 30 / 45 / 60 min.


- 3 Activation Time**
Select activation time from Always / Only Scheduled Time.

Always	Transfer image at all times.
Only Scheduled Time	Transfer image during the scheduled time.

- ⊠ To setup 'Only Scheduled Time', you need to define Start time and End time followed by selecting Days. The setup schedule is repeated every week.
- ⊠ If End time is earlier than Start time, End time is regarded as next day.
Ex) Assume you select Tue. If you set Start time as 16:00 and End Time as 09:00, Alarm Input will work from 4:00pm Tue to 9:00am Wed.

- 4** Click 'Apply' to make above setting effective.

5 Setup - Ttransfer Setup

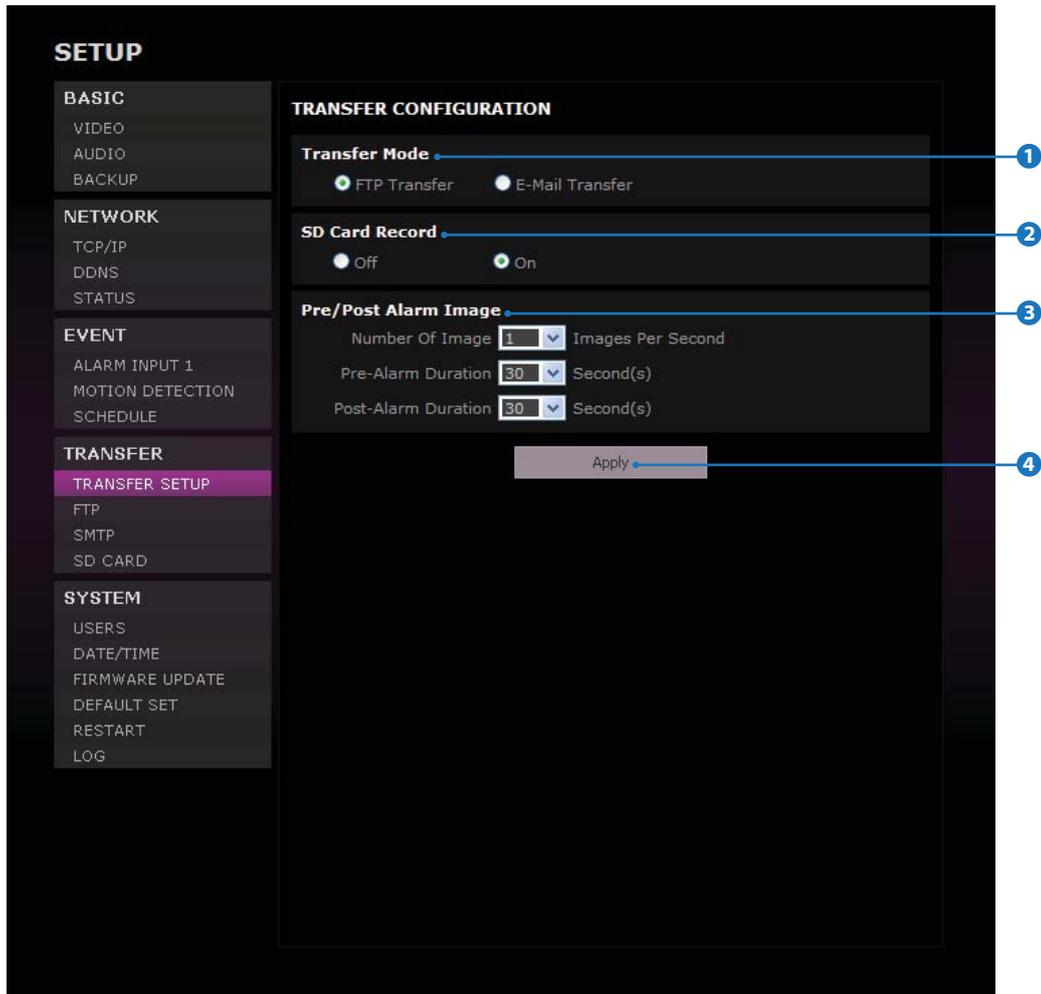

1 Transfer Mode

Image Transfer method is selected from FTP and E-Mail (SMTP).

※ To use image transfer, FTP and SMTP in the next sections must be configured properly.

2 SD Card Record

If it is set to On, the image is saved into the SD card as well.

※ It will setup OFF automatically when SD card doesn't applied. The SD card setting can be configured on the SD CARD section.

3

Pre/Post Alarm Image


Image Transfer due to event is configured by setting Image transfer rate and Pre/Post alarm duration.

	Descriptions	Range
Number of Image	Define Number of image transferred per second.	1 ~ 5
Pre-alarm Duration	Define duration of image transfer before an event.	1 / 10 / 15 / 30
Post-alarm Duration	Define duration of image transfer after an event.	1 / 10 / 15 / 30

※ Range of Pre/Post alarm duration can be changed according to Number of image setting.

4 Click 'Apply' to make above setting effective.

5 Setup - FTP Setup

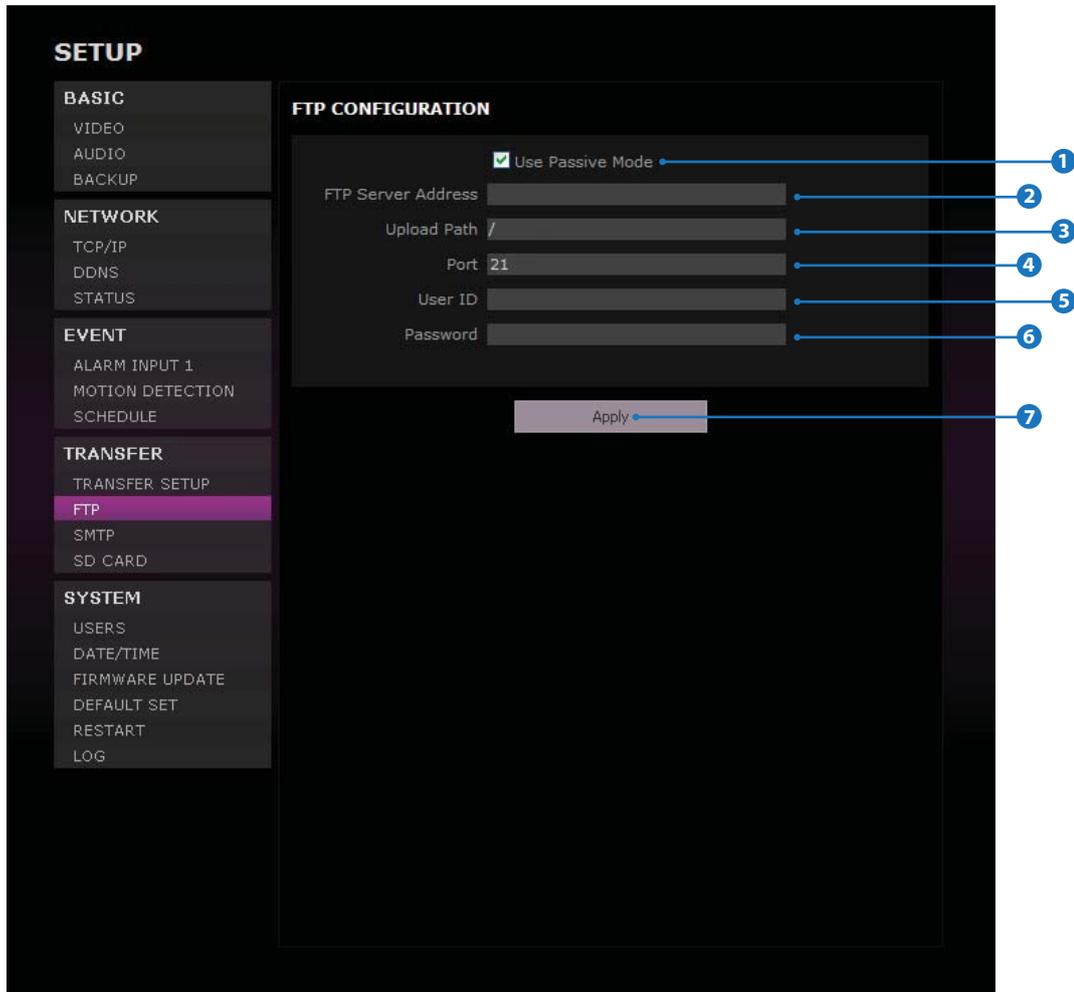

To transfer/save the image to the relevant sites through FTP, then FTP needs to be setup.

1 Use Passive Mode

Check it to use Passive mode for FTP transfer. If it is not checked, the transfer becomes Active Mode. However, if you select active mode, it is possible that there might be problems due to the firewall. Consult with your network manager.

⊗ In Active mode, the FTP transfer might not work due to the firewall. In this case, ask to the network administrator.

2 FTP Server Address

Define FTP Server IP Address. If IP Address form is incorrect, a Message box will be shown to try again.

3 Upload Path

Define a path in FTP server to store video. For the path name, English Alphabets, numbers and special characters (/ ~ ` ! @ \$ ^ () _ - { } [] ; ,) can be used.

4 Port

Define the FTP Server Port. If Port is not appropriate, it is impossible to access to FTP Server.

5 User ID

Define User ID to access to the FTP Server. Fill out the correct User ID registered in the FTP Server.


6 Password

Define Password to access to the FTP Server. Fill out the correct Password registered in the FTP Server.

7 Click 'Apply' to make above setting effective.

⊗ Refer the above screen image for the example.

5 Setup - SMTP Setup

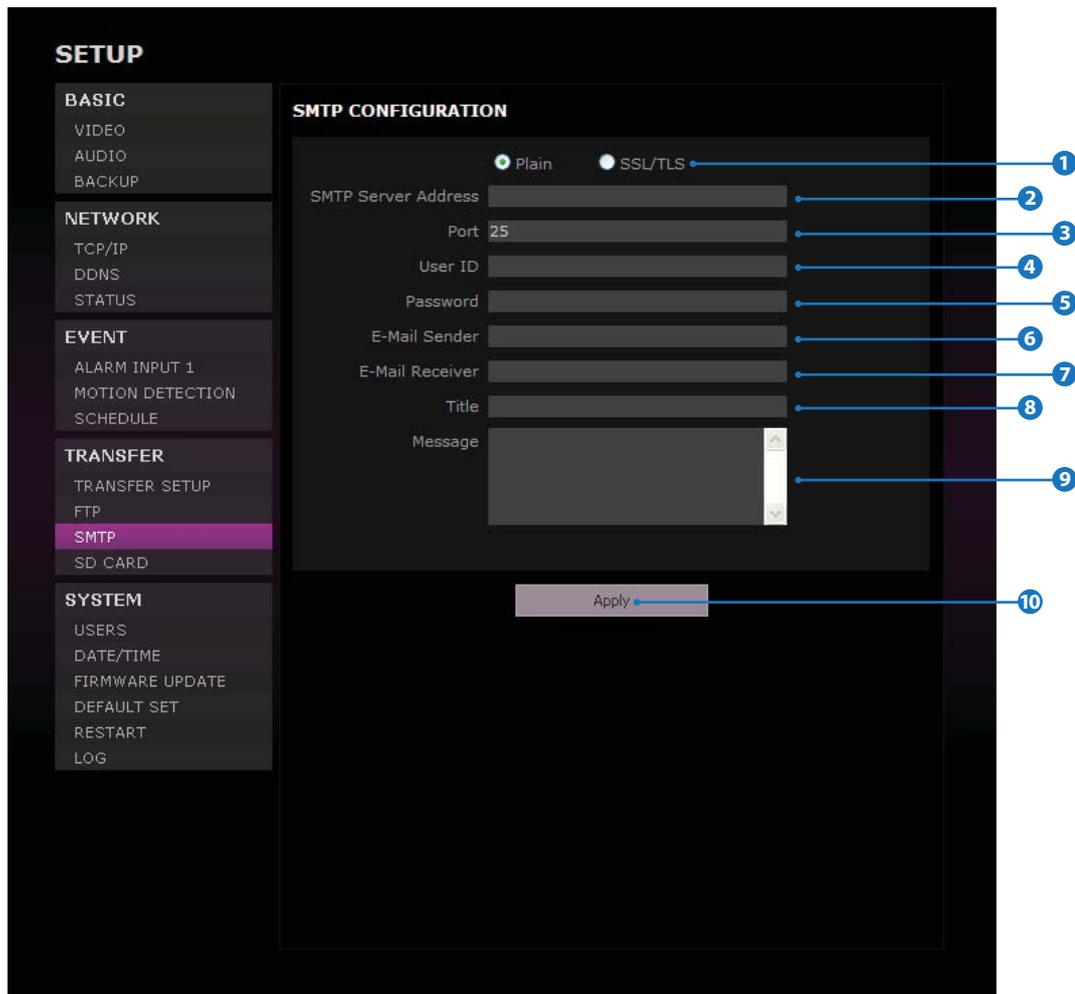

To send/save the image to the relevant sites by Email, SMTP needs to be setup.

- 1 Plain, SSL/TLS**

Select Security mode of SMTP from Plain or SSL/TLS. After checking account setup of your SMTP Server, you may select one.
- 2 SMTP Server Address**

Define the SMTP Server Address. If the IP Address form is incorrect, a Message box will be shown to try again.
- 3 Port**

Define the Port used in the Plain or SSL/TLS security mode in the above.
- 4 User ID**

Define the User ID to access to SMTP Server. Fill out the correct User ID registered in the SMTP Server.
- 5 Password**

Define the Password to access to SMTP Server. Fill out the correct Password registered in the SMTP Server.
- 6 E-Mail Sender**

Define the e-mail address of E-Mail Sender. It will be displayed as the sender when the camera sends an E-mail.
- 7 E-Mail Receiver**

Define the e-mail address of E-Mail Receiver. It will be displayed as the Receiver when the camera sends an E-mail.
- 8 Title**


Define the title of the E-Mail when the camera sends an E-mail.

 - ✘ The title of the Email is limited to 40 characters including the spaces.
- 9 Message**

Define the contents of E-Mail when camera sends an E-mail.

 - ✘ The message of the Email is limited to 40 characters including the spaces.
- 10** Click 'Apply' to make above setting effective.

5 Setup - SD CARD Setup

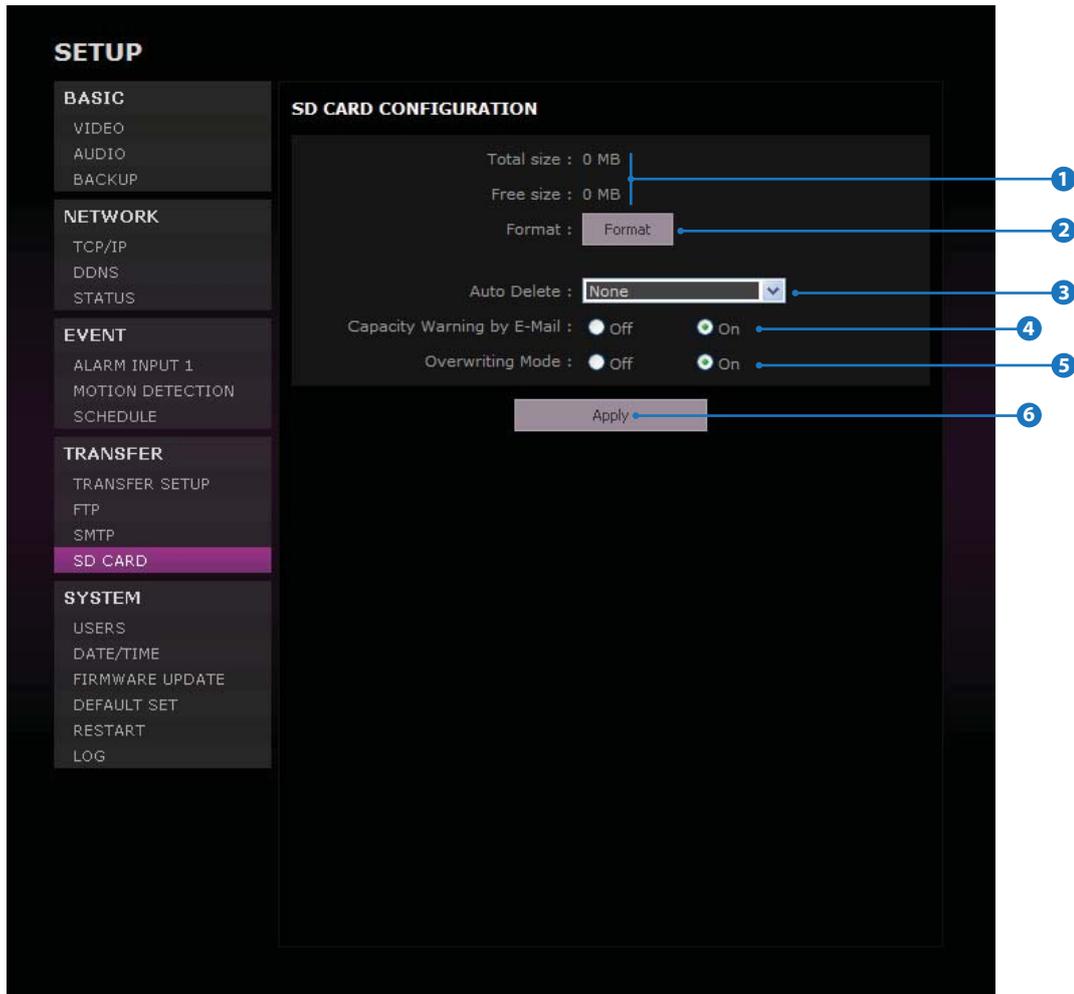

1 Total size / Free size

Total capacity of SD card and the remainder of it are displayed.

2 Format

Delete the all contents that stored in SD card.

⊠ If the SD card doesn't applied, 'Format' button will be deactivated.

3 Auto Delete

Select the period for Auto delete. The image data stored before period will be deleted automatically.

NONE	Do not use 'Auto Delete'.
1 Week	Delete all stored image older than 1 week from 00:00 today.
1 Month	Delete all stored image older than 1 Month from 00:00 today.
1 Year	Delete all stored image older than 1 Year from 00:00 today.

⊠ It is noted that this function will be executed everyday to delete data before designated period.

4 Capacity Warning E-mail


If it is set ON and remained space of SD card reach to less than 8MB, a warning e-mail will be sent to the e-mail account set in SMTP menu.

5 Overwriting Mode

If it is set ON and remained space of SD card reach to less than 8MB, new data will start to be overwritten on the oldest data. However, if it is set OFF and remained space of SD card reach to less than 8MB, image recording will be stopped.

6 Click 'Apply' to make above setting effective.

5 Setup - Users Setup

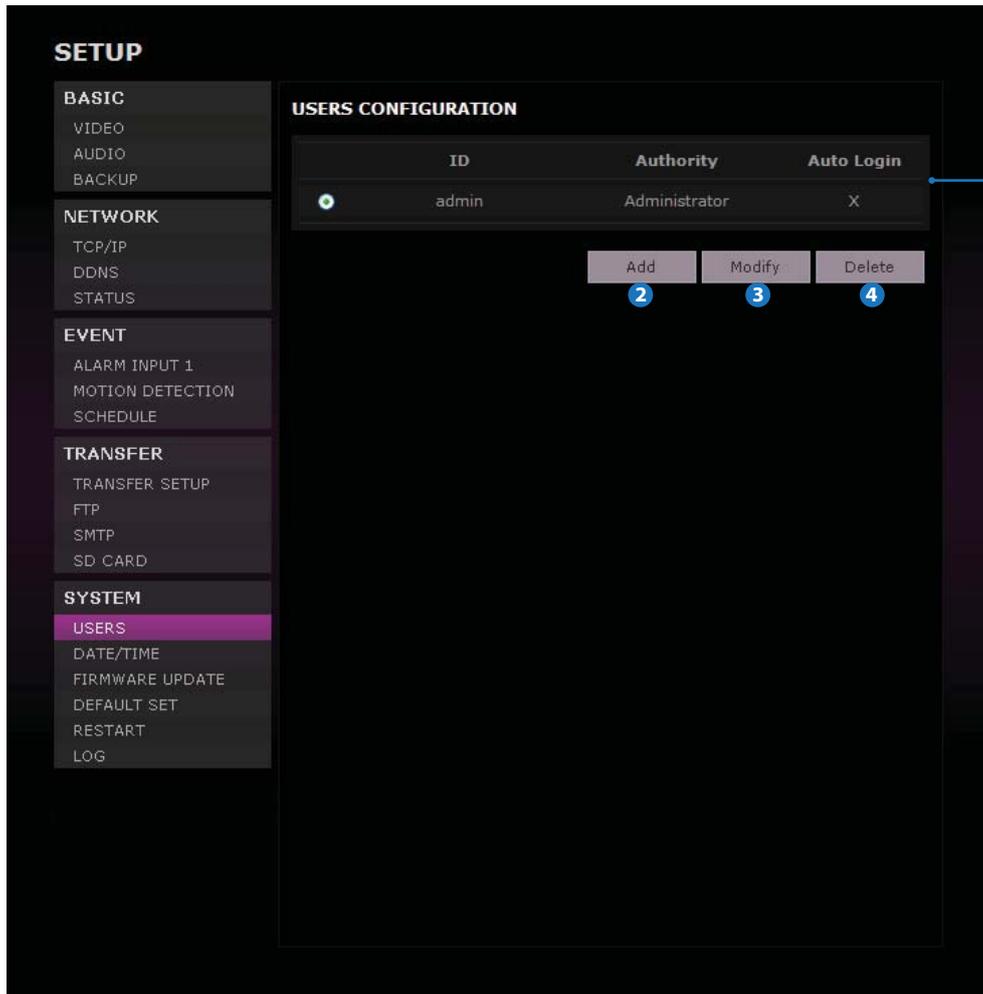

1 Users

List all the user accounts for authentication.

2 Add

Register a new user

ID	Enter a new user ID except Admin since it exists.
Password	Enter the user Password.
Verify	Enter the user Password again for verification.
User Level	Select Operator or Viewer. <ul style="list-style-type: none"> • Viewer : Only monitoring is allowed. • Operator : Most of the functions are allowed except 'Setup'. • Administrator: All functions are allowed.
Auto Login	If you check the auto login for an account, this account becomes the public account. From the next login, everybody can access the camera using this account without authentication. Only one account can have the Auto Login.

⊗ The ID and Password are limited to 10 characters.


3 Modify

Modify the information of the user accounts registered. For admin account, only Password and Auto Login function can be modified.

4 Delete

Delete the selected user account. Admin account cannot be deleted.

5 Setup - Date/Time Setup

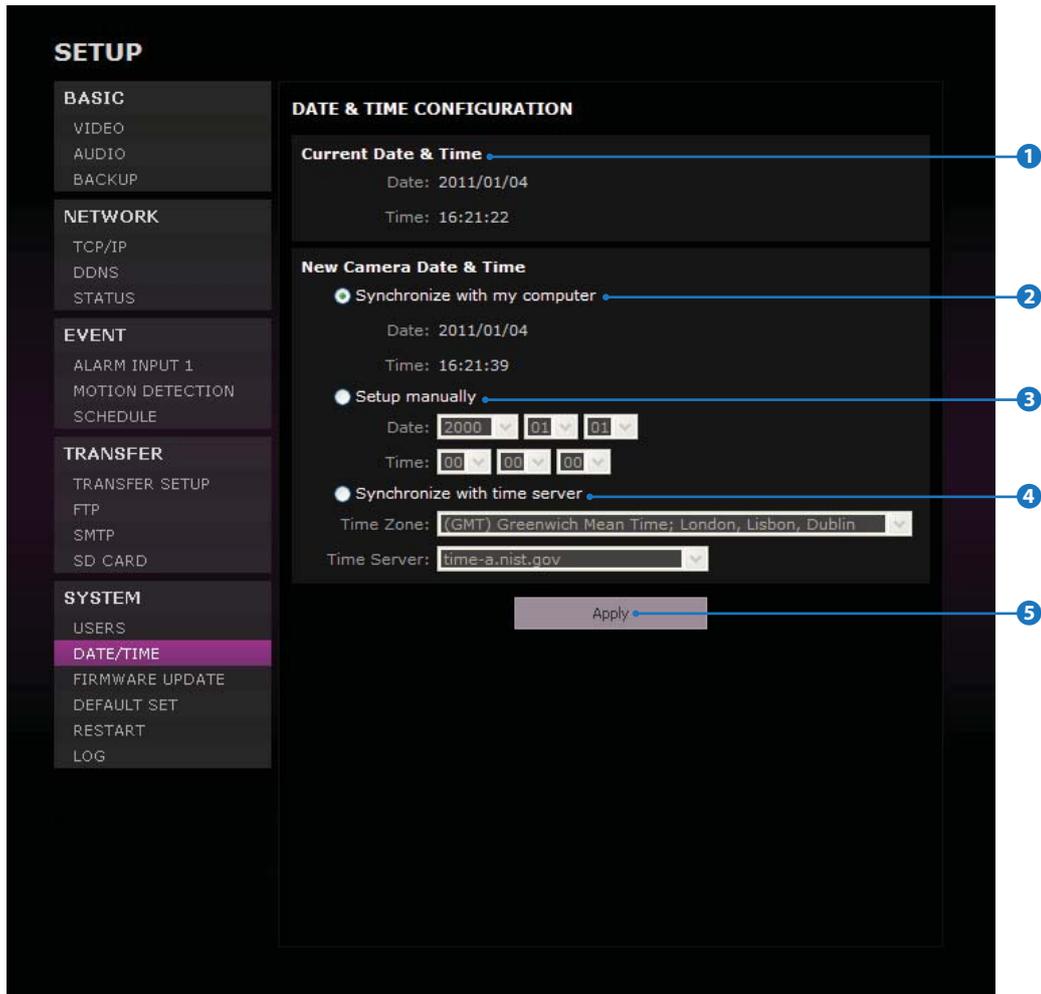

1 Current Date & Time

Shows the current date and time setting in the Camera.

2 Synchronize with my computer

Set the date/time using those of PC currently connected.

3 Setup manually


Set the date/time by typing manually.

4 Synchronize with the time server

In this mode, date/time is automatically updated using the Time Server selected. After selecting the Time Zone properly, Time Server must be selected. However, if you want to assign a time server not in the list, select Manual. Once synchronization is configured successfully, the time and date will be updated every 1 hour automatically.

5 Click 'Apply' to make above setting effective.

5 Setup - Firmware Update

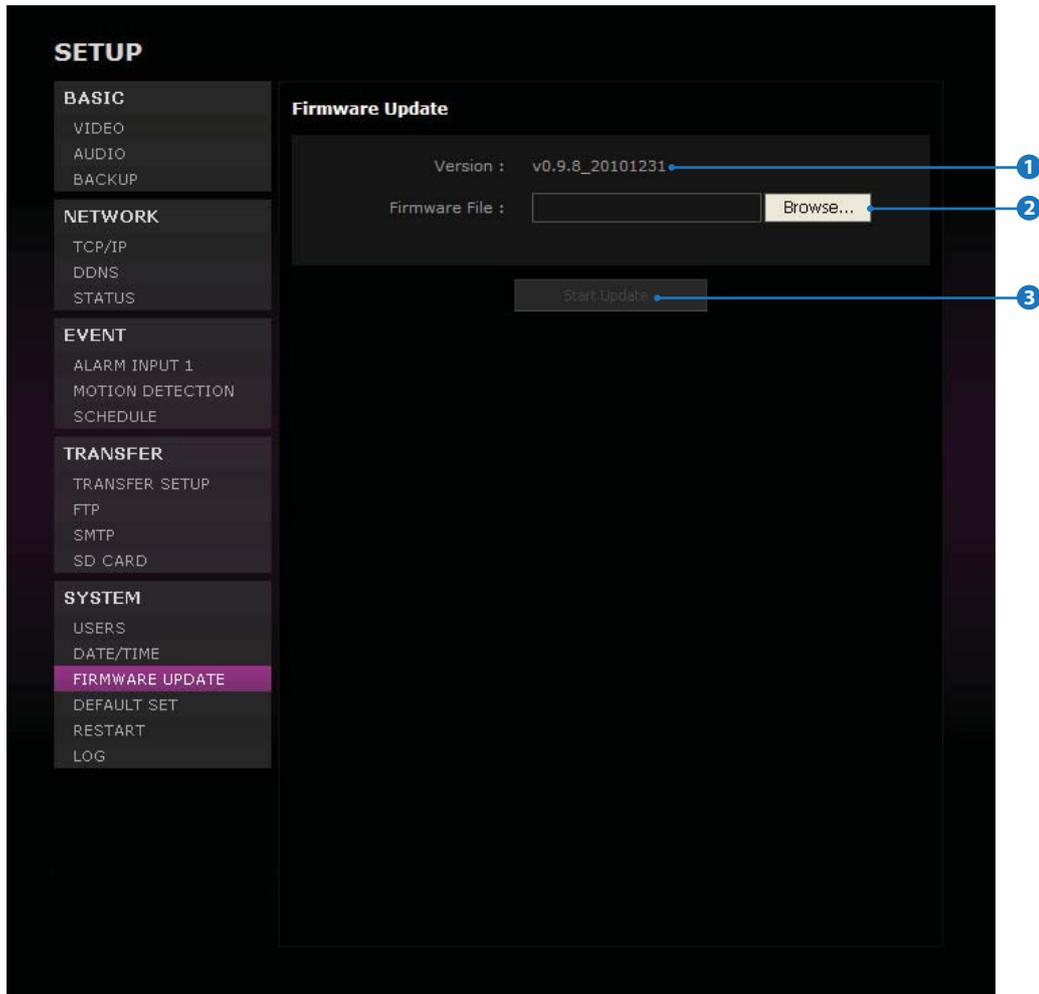

1 Firmware Version

It shows the current Firmware Version in the system.

2 Firmware Filename

Designate the Firmware file name in your computer by clicking [Browse...] button.


3 Start Update

Click this button to start update. Progress of uploading will be displayed using Progress Bar. If you assign the wrong file name, an error message will be shown.

⚠ Warning:

Do not turn off the power of camera during the Firmware update. Otherwise, the system can be stuck to be unstable. If updating is finished, the system will be rebooted automatically.

5 Setup - Default Set

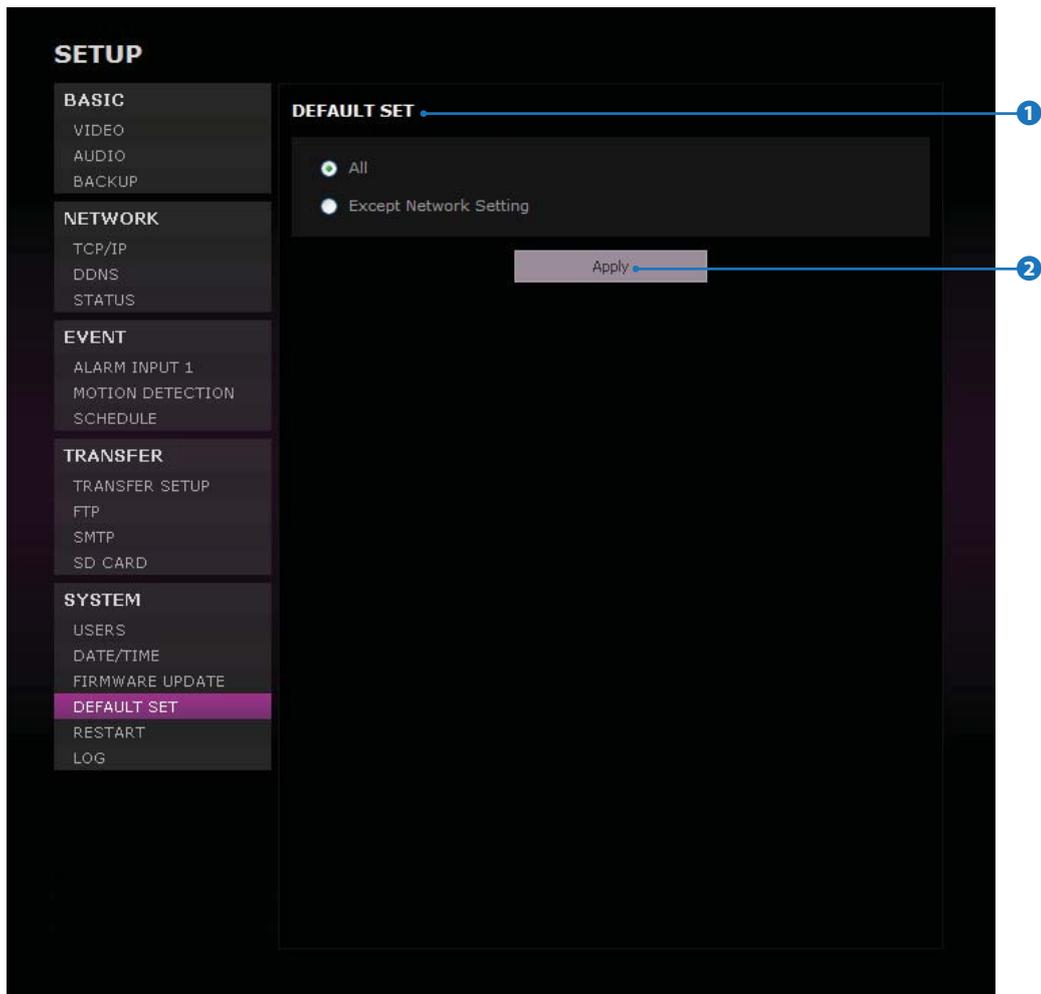

1 Reset to the Factory Defaults

Return the setup to the Factory Default.

All	Reset all Settings to the Factory Defaults.
Except Network Settings	Except Network related settings, reset all others to the Factory Defaults.


⚠ Warning:

If you click 'Apply', you will lose all setting data. If needed, please, make a note for further installation.

2 Click 'Apply' to make above setting effective.


⚠ It takes approximated 4 minutes after clicking 'Apply' for the Default Set.

5 Setup - Restart

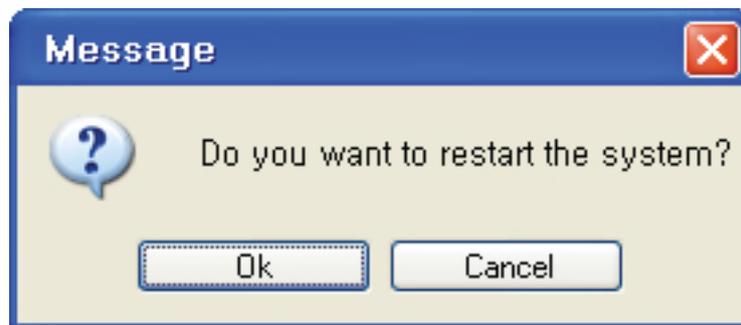

If you click the 'RESTART' menu, a message box will be shown to confirm. Click the 'Ok' button to restart.


5 Setup - Log

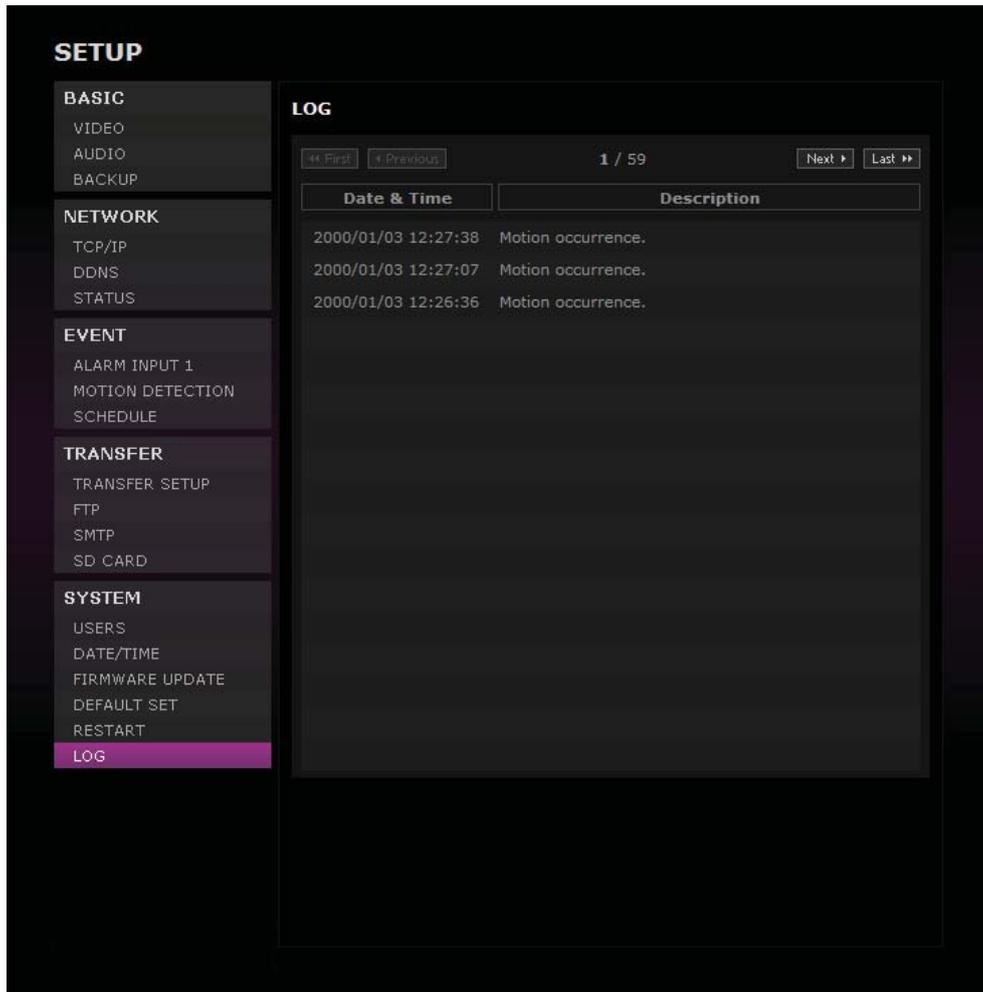

System Start, Network Connection Status(Including IP Address), Changing System Time, Changing Video Setup, Network Setup and Event(Alarm / Motion) Alert will be recorded.

1000 PCS of Log can be stored and the recorded data won't be deleted.

6 SD Card Search - Search

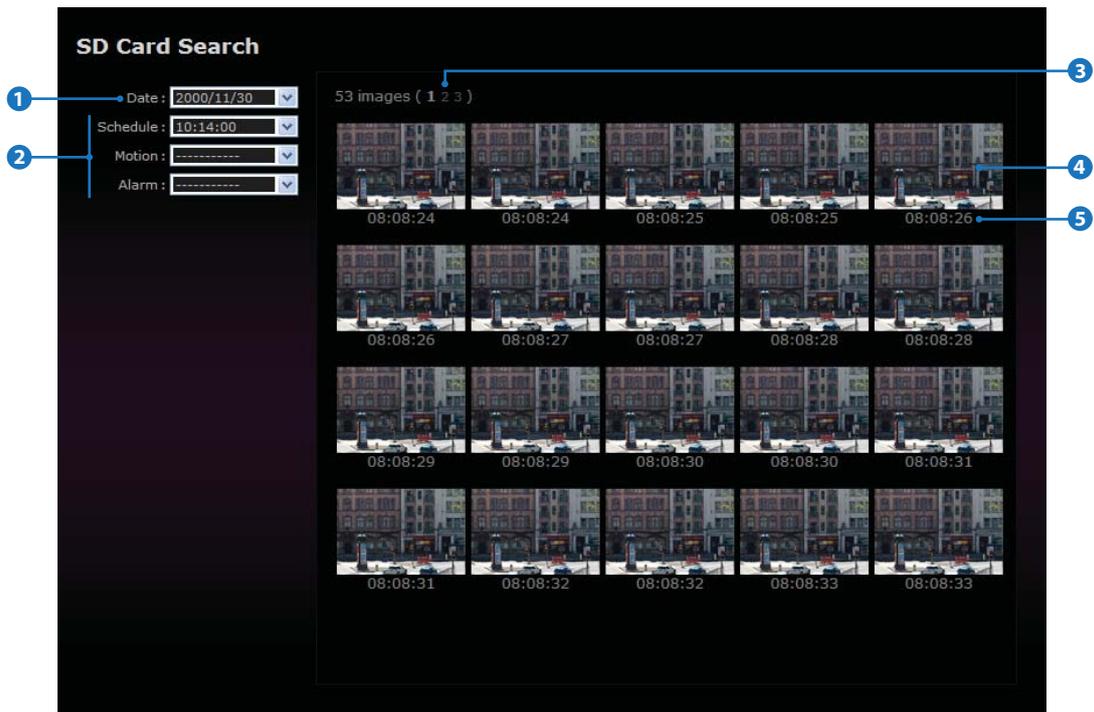

- 1 Date of stored image**
Choosing the date to find the stored events.
- 2 Stored Events(Schedule / Motion / Alarm)**
The interval of stored time and number of stored images in the Event Setup can be different.
- 3 Page No. of searched Images**
The latest page will be loaded at the head.
- 4 Stored Images**
Image will be stored by value at CH No. 2 in 'Setup>Video configuration'. By clicking the image, see the image on the larger screen.
- 5 Stored Time of Images**
The interval of stored image can be setup depending on the each Events.

7 OSD - MAIN MENU & Icons



Use the button to select a menu item.

This page explains how to operate the OSD menu using Web-viewer control.

When controlling the camera using a keyboard controller, please refer the manual of the keyboard controller.

CAMERA SET

Configure Camera related functions and data.

INTELLIGENCE

You can configure the settings of motion detection, tracking and more.

PRIVACY ZONE

You can configure the privacy related settings.

OTHER SET

You can configure for Factory Defaults, and more.

COMMUNICATION

Configures the settings regarding the UART communication.

SYSTEM INFO.

Displays the system information including the camera version and communication settings.


LANGUAGE

Select a preferred one from the supported languages.

Icons in the Menu

Icon	Name	Explanation
	Exit	Exits the menu setting. Before you exits the menu setting, select SAVE to save your settings, or select QUIT to cancel.
	Return	Returns to the previous menu.
	Home	Returns to the main menu.
	Save	Used to save your settings of MASK AREA, PRIVACY ZONE and more. Once you save your settings, they will remain even if you select QUIT in the menu.
	Delete	Used to delete your settings of MASK AREA, PRIVACY ZONE and more. Once you delete your settings, they will not be restored even if you select QUIT in the menu.


7 OSD - CAMERA SET > CAMERA ID

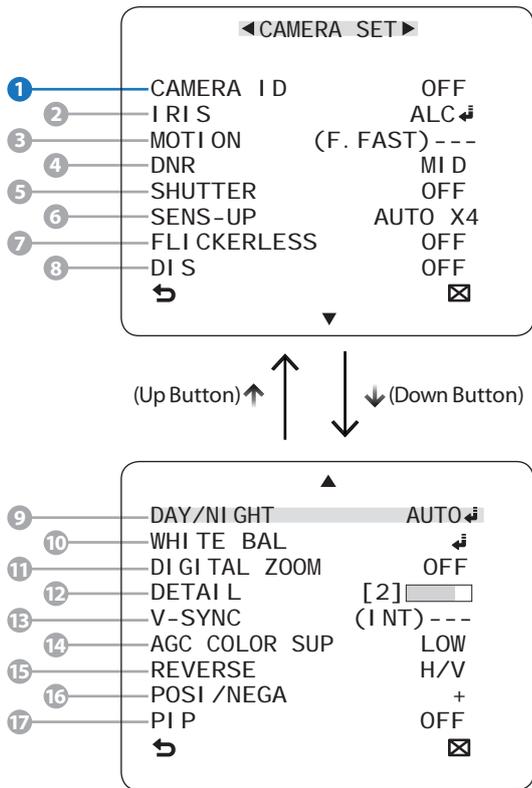

1 CAMERA ID


Value: OFF, ON

The CAMERA ID menu is used for you to assign a unique name to a camera. If you click the Enter button with the CAMERA ID menu selected, you will see the appropriate screen.

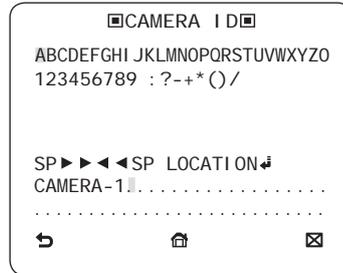

You can enter up to 54 alphanumeric or special characters for the CAMERA ID. Select LOCATION and click the Enter button to move the display position of the CAMERA ID.

7 OSD - CAMERA SET > IRIS

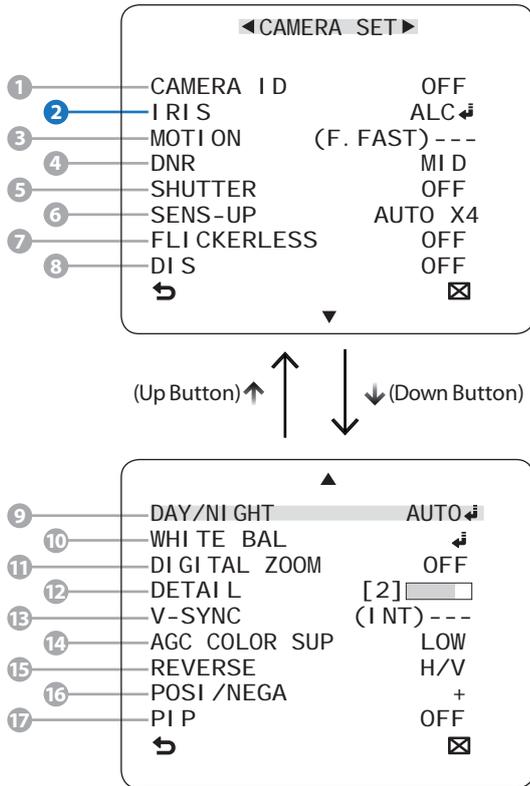


2 IRIS

Value: ALC, ELC

The IRIS menu is used if you want to adjust the intensity of radiation incoming to the camera.

1. ALC (Automatic Light Control)


- ① If you click the Enter button with an ALC based sub menu, the sub menu selected, you will see the appropriate screen.

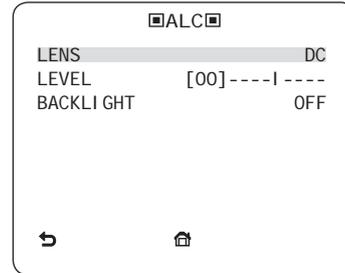

The LENS menu is used if you select a type of the AI lens. For normal operation, you must select DC for a DC-type lens, and select VIDEO for a VIDEO type lens.

The LEVEL menu is used to adjust the overall brightness, where '+' will increase the brightness and '-' will decrease it.

- ② If you set the BACKLIGHT option to BLC(Back Light Compensation), you will see a menu where you can set the BLC area. You can set the desired BLC zone by defining the size and the location.

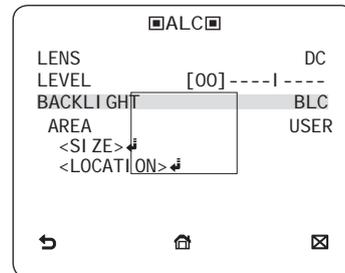


If you use an ordinary camera in a scene with an intensive backlight, the object will be displayed dark on the monitor affected by the backlight. To solve this problem, you can use the BLC function to improve the sharpness of the image in such a high contrast scene.

2. ELC (Electronic Light Control)

- ① If you click the Enter button when the ELC sub menu is selected, the corresponding screen appears. You can make the ELC (Electronic Light Control) function active or not.
- ② In similar to ALC setting, you can specify the BLC area.

7 OSD - CAMERA SET > MOTION, AGC

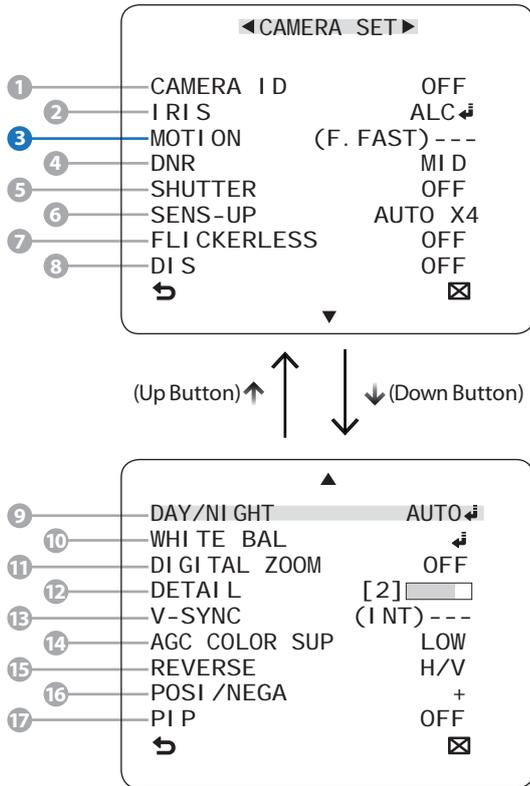

※ If Sens-Up menu is set as to OFF, menu 3 becomes 'AGC'. If Sens-Up menu is set as to ON, menu 3 becomes 'MOTION'.

3 MOTION

Value: S.SLOW, SLOW, NORM, FAST, F.FAST

※ This is available only if the SENS-UP menu is set to AUTO.

The MOTION menu is used to adjust the strength of the AGC level for a control of the camera motion. This is available only if the SENS-UP menu is set to AUTO.

You can select one from S.SLOW, SLOW, NORM, FAST and F.FAST for the AGC level.

If you monitor a fast moving object in a low contrast scene, select F.FAST while select S.SLOW for a hardly moving object in the same lighting condition.

※ **NOTE:**

If the DAY/NIGHT menu of the CAMERA SET is set to AUTO, the MOTION menu will be deactivated.


3 AGC (Auto Gain Control)

Value: OFF, VERY LOW, LOW, MID, HIGH, VERY HIGH, USER, FIX

※ If OFF or FIX mode is selected in the SENS-UP menu, you can specify the AGC level.


The AGC (Auto Gain Control) menu is used to set the AGC level of the camera. When the AGC is active, the camera automatically increases the sensitivity by amplifying the Video signal when the strength of the signal falls below the normal value.

If you click the Enter button with a USER sub menu selected, you will see the appropriate screen.

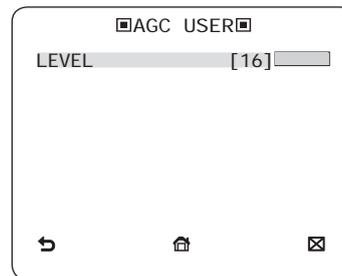

In USER mode, you can break down the level in 16 steps from VERY LOW to VERY HIGH according to your preference.

If you click the Enter button with a FIX sub menu selected, you will see the appropriate screen.

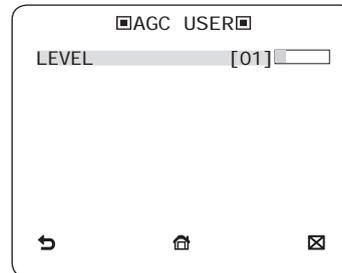

If a fixed value of the AGC gain is used in FIX mode, you can select one of the 16 detailed levels from VERY LOW to VERY HIGH before fixing it.


FIX mode is not available if you set the BACKLIGHT option to BLC.

※ **NOTE:**

- If the DAY/NIGHT menu of the CAMERA SET is set to AUTO, the AGC menu will be deactivated.

- If FLICKERLESS is set to ON, the AGC FIX mode will be disabled.

7 OSD - CAMERA SET > DNR, SHUTTER

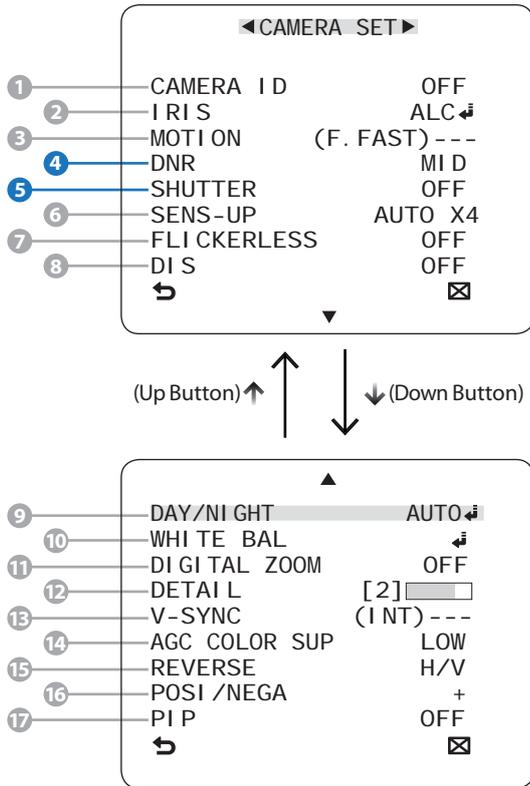

4 DNR (Digital Noise Reduction)

Value: OFF, LOW, MID, HIGH, USER(1~16)

You can configure the DNR related settings.

Reduces the noise on the screen. This is especially useful for a severely distorted screen.

You can set the level if you set DNR to USER.

5 SHUTTER

Value: OFF, AUTO 1/100(PAL:1/120), AUTO 1/250, AUTO 1/500, AUTO 1/1000, AUTO 1/2000, AUTO 1/4000, AUTO 1/10K, 1/100(PAL:1/120), 1/250, 1/500, 1/1000, 1/2000, 1/4000, 1/10K

The SHUTTER menu is used to set the fixed high-speed electronic shutter, auto high speed electronic shutter and external high speed electronic shutter(EXT).

You can select one of 7 options from 1/100(PAL:1/120) to 1/10K for the fixed high speed electronic shutter, which is mostly used for imaging a fast moving object.


The auto high speed electronic shutter operates as the fixed high speed shutter in a high contrast scene but automatically focuses the target if the iris opens fully in a low contrast scene like in ELC mode. When it gets brighter back, the mode will switch to the fixed high speed electronic shutter mode.

However, the auto high speed shutter operates properly only in a camera featuring a DC or VIDEO lens.

※ NOTE:

- If IRIS mode is set to ELC, the SHUTTER menu will be deactivated as you adjust the brightness using the electronic shutter.
- If the SENS-UP function is set to AUTO, only items of OFF and AUTO are available in the SHUTTER menu.
- If the SENS-UP mode is set to FIX, the SHUTTER menu will be deactivated.
- If the FLICKERLESS function is set to ON, the SHUTTER menu will be deactivated.

7 OSD - CAMERA SET > SENS-UP, FLICKERLESS, DIS

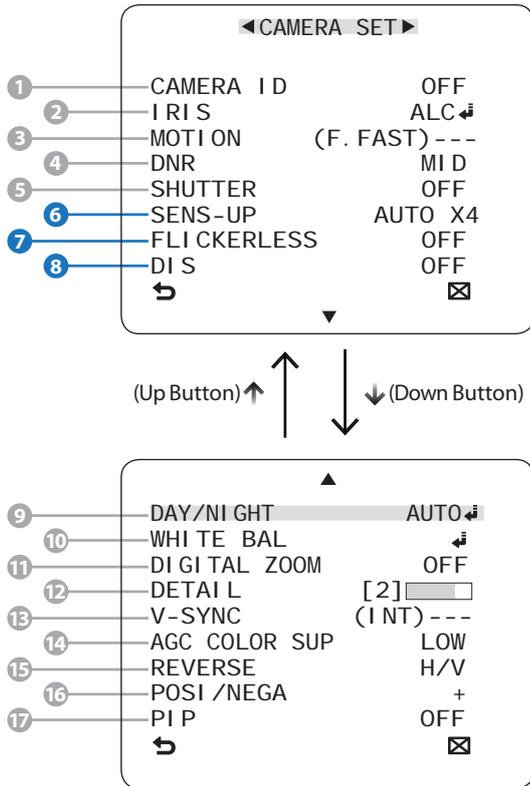

6 SENS-UP

Value: OFF, AUTO x2, AUTO x4, AUTO x6, AUTO x8, AUTO x12, AUTO x16, AUTO x24, AUTO x32, AUTO x48, AUTO x64, AUTO x96, AUTO x128, AUTO x256, FIX x2, FIX x4, FIX x6, FIX x8, FIX x12, FIX x16, FIX x24, FIX x32, FIX x48, FIX x64, FIX x96, FIX x128, FIX x256

Automatically detects the ambient level of darkness in the dark or low contrast scene to extend the accumulated time, keeping the image bright and sharp; it can be also used as FIX mode.

※ NOTE:

- If the SHUTTER option is set to fixed electronic shutter or EXT mode, the SENS-UP menu will be deactivated.
- If FLICKERLESS is set to ON, the FIX mode of the SENS-UP menu will be disabled.
- If the IRIS menu is set to ELC, the electronic shutter will control the brightness so the SENS-UP function can not be set to FIX mode, but to OFF or AUTO mode.
- If the SHUTTER menu is set to AUTO, the SENS-UP menu can be set to either OFF or AUTO mode.

7 FLICKERLESS

Value: OFF, ON

If set to ON, the shutter speed will be fixed to 1/100(PAL:1/120) second. This will prevent possible screen distortion due to a mismatch between the vertical sync frequency and the blinking frequency of the lighting.

※ NOTE:

- If the IRIS function is set to ELC, the Flickerless menu will be deactivated. If the SHUTTER menu is set to AUTO, FIX or EXT mode, the Flickerless menu will be deactivated.
- If the SENS-UP function is set to FIX mode, the Flickerless menu will be deactivated.
- If AGC is set to FIX mode, the FLICKERLESS function will be disabled.

8 DIS (Digital Image Stabilization)


Value: OFF, ON

Digital Image Stabilization will set the anti-shake compensation.


※ NOTE:

- If you set DIS to ON, the compensation area will be enlarged as set in the digital zoom factor.
- If you set the digital zoom factor to greater than the enlarged zoom factor for the compensation, the DIS function will be deactivated.

7 OSD - CAMERA SET > DAY/NIGHT

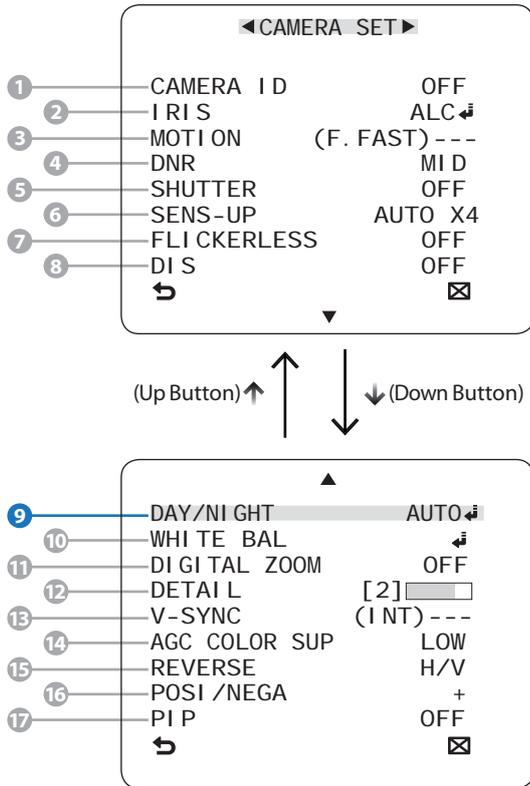

If you click the Enter button with an AUTO based sub menu selected, you will see the appropriate screen.

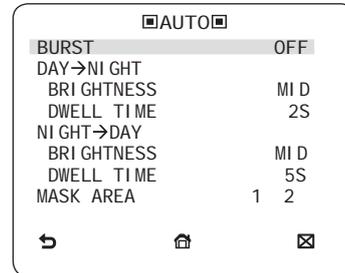

You can set the BURST option to OFF/ON, or select to output the Burst signal in NIGHT mode.

You can select from LOW, MID and HIGH for the brightness of DAY → NIGHT, which is a brightness level in switching from the color filter to Black-and-White. Closing to LOW from HIGH will switch the filter in a low contrast scene.


The DWELL TIME of DAY → NIGHT is a time required to determine the need for switching the filter.

You can select from LOW, MID and HIGH for the brightness of NIGHT → DAY, which is a brightness level in switching from the Black-and-White filter to color. Closing to LOW from HIGH will switch the filter in a low contrast scene.

The DWELL TIME of NIGHT → DAY is a time required to determine the need for switching the filter.

The MASK menu is used to prevent a filter switch error or inability of determining the switch in existence of a high spot light source at night.

If you click the Enter button in item 1 or 2 of the MASK menu, you will see a menu where you can specify an area to mask.

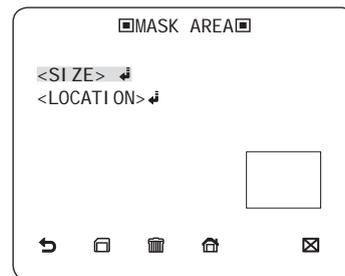

You can specify Mask 1 and 2 simultaneously. The mask is used only for determining the filter switch and any excessive bright area at night will be masked.

※ NOTE:

If BACKLIGHT is set to BLC, the MASK AREA function will be deactivated.

9 DAY/NIGHT

Value: DAY, NIGHT, AUTO, EXT

1. DAY

If set to DAY, it will be fixed to DAY mode regardless of the ambient conditions.

2. NIGHT

If set to NIGHT, it will be fixed to Black-and-White mode regardless of the ambient conditions. If you click the Enter button with a NIGHT sub menu selected, you will see a menu where you can set Burst to OFF/ON.

If BURST is set to ON, the Burst signal will output together with the black-and-white composite video signal. If BURST is set to OFF, the Burst signal does not output.

You can set the BURST option to OFF/ON, or select to output the Burst signal in NIGHT mode.


3. AUTO

The camera will automatically switch between DAY and NIGHT mode, according to the lighting condition.

4. EXT

This enables an auto switch between DAY and NIGHT mode using the interface with the external sensor.

7 OSD - CAMERA SET > WHITE BAL

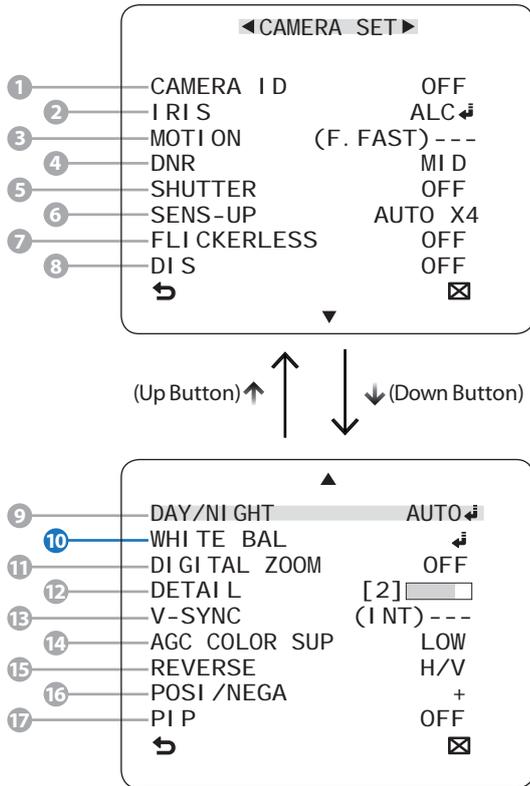


2. NIGHT

Use the NIGHT mode if you want to set the white balance differently according to the ambient luminance.

If the NIGHT mode is set to OFF, the white balance will always operate as set in DAY mode; if not to OFF, the camera will switch to as set in DAY/NIGHT mode according to the brightness.

In NIGHT mode, you can set the values of RED, BLUE and BRIGHTNESS. The screen will be displayed in colors according to your settings.

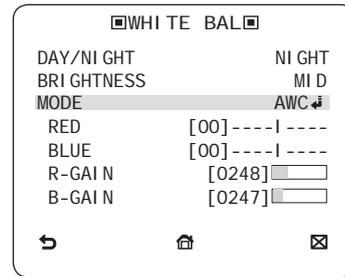

NOTE:

- You can set the values of R-GAIN and B-GAIN only in AWC mode.
- If AGC is set to OFF or FIX, you can not access the NIGHT menu.


10 WHITE BAL

Value: DAY, NIGHT

If you want to adjust the color scheme, use the WHITE BALANCE function.

1. DAY

In DAY mode, you can set the color values of RED and BLUE. The screen will be displayed in colors according to your settings.

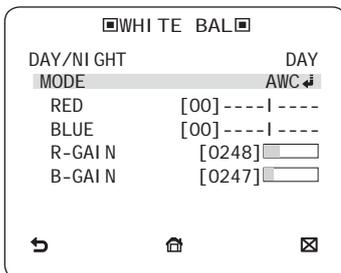

NOTE:

You can set the values of R-GAIN and B-GAIN only in AWC mode.

For adjusting the white balance, the following 5 modes are provided:

- **ATW1 (Auto Tracing White Balance mode1):**
The camera can automatically adjust the color temperature in real time, according to the ambient conditions. The color temperature ranges from approx. 2500K to 9300K.
- **ATW2:**
The color temperature ranges from approx. 2,000K to 10,000K.
- **AWC (Auto White Balance Control):**
If you click the Enter button in the appropriate item position, Auto White Balance will perform once.
- **3200K:** Set color temperature to 3200K
- **5600K:** Set color temperature to 5600K


RED: Adjusts the strength of the red color.

BLUE: Adjusts the strength of the blue color.

R-GAIN/B-GAIN: Enables you to set the current color temperature manually.

BRIGHTNESS: Select a brightness level in switching from setting in DAY mode to setting in NIGHT mode.

7 OSD - CAMERA SET > WHITE BAL

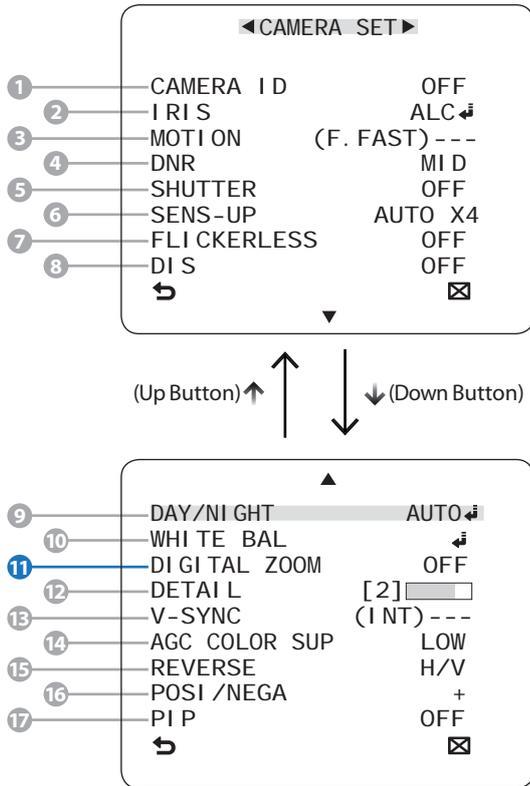


11 DIGITAL ZOOM

Value: OFF, ON

You can set the digital zoom factor and position. If you click the Enter button with the DIGITAL ZOOM function set to ON, you will see the appropriate screen.

When the zoom factor and position are defined, the digital zoom function will operate.

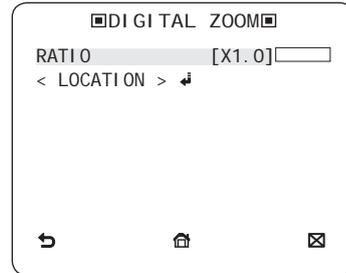


LOCATION:

If you click the Enter button in the condition where the image is enlarged as much as the ratio setting, you can watch an invisible area of the effective screen as well using the ↑ ↓ ← → button.

NOTE:

The DIGITAL ZOOM function enlarges the pixel itself, which can cause deterioration of the quality.

7 OSD - CAMERA SET > DETAIL, ... , PIP

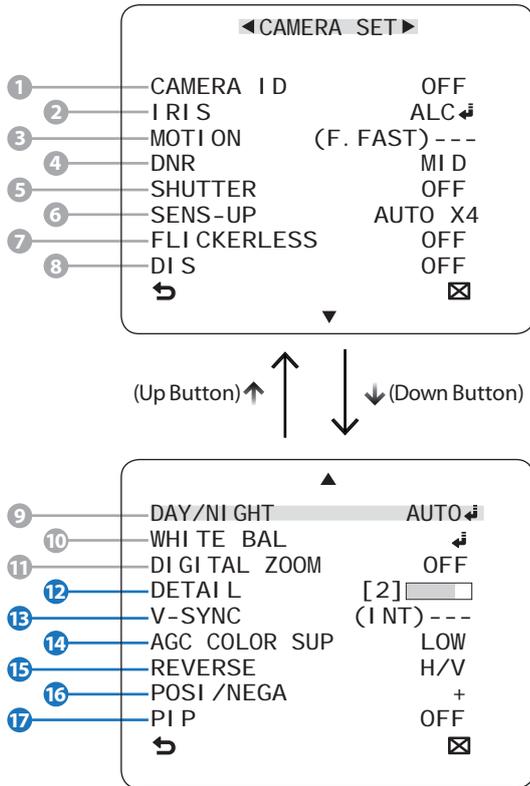

12 DETAIL

Value: 0 ~ 3

Controls the horizontal or vertical distinction.

13 V-SYNC

Value: INT, LINE

Select the vertical sync mode for INT or LINE. If you select INT, the camera will use the internal synchronization.

If selecting LINE, the camera will use the external power source frequency for the synchronization.

You can adjust the LL-PHASE.

NOTE:

Use of DC 12V will fix V-SYNC to INT, which can not be changed.

14 AGC COLOR SUP

Value: LOW, MID, HIGH

Adjust the color scheme according to the AGC value.

15 REVERSE

Value: OFF, H, V, H/V

Mirrors video signals horizontally, vertically, or both.

16 POSI/NEGA

Value: +, -

Output as it is or mirror the video brightness signal.

17 PIP


Value: OFF, ON

Displays a sub image together with the main image on the same screen using the Picture In Picture function

NOTE:

If more than one privacy zone is set and the PRIVACY SET is set to ON, the PIP function will be deactivated.

7 OSD - INTELLIGENCE

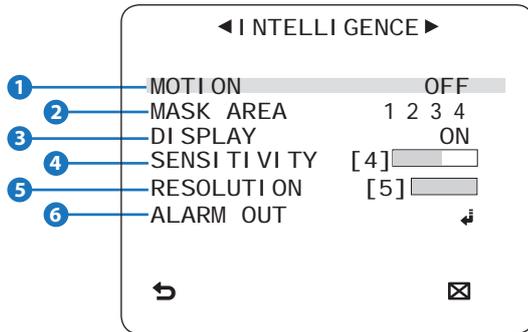

1 MOTION


Value: OFF, TRACKING, DETECTION

- 1. **TRACKING:** Detects and tracks a moving object.
- 2. **DETECTION:** Detects a moving object.

2 MASK AREA

Value: 1 ~ 4

Specify a detection exception area to mask. Select a mask number and specify the size and position.

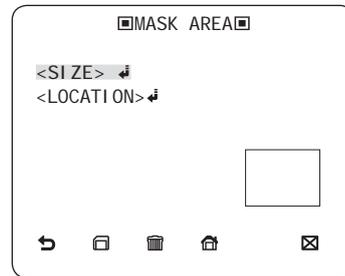

3 DISPLAY

Value: OFF, ON

With the DISPLAY option set to ON, a motion function will be displayed on the screen, if detected.

4 SENSITIVITY

Value: 1 ~ 7

Set the sensitivity of the motion detection.


5 RESOLUTION

Value: 1 ~ 5

If setting it to high, the camera can detect even a trivial movement of the target.

6 ALARM OUT



If you set a desired menu item to ON, the camera will sound an alert if it detect the appropriate motion.

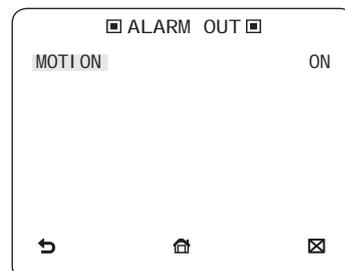

7 OSD - PRIVACY ZONE

The PRIVACY function will protect your privacy by screening the privacy area that you have specified during monitoring. You can specify up to 8 privacy zones.

If you set the PRIVACY SET to ON, your PRIVACY ZONE settings will be applied.

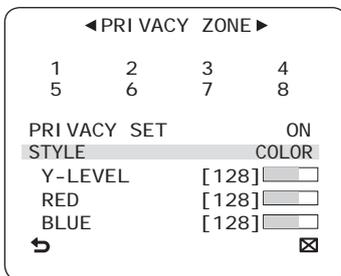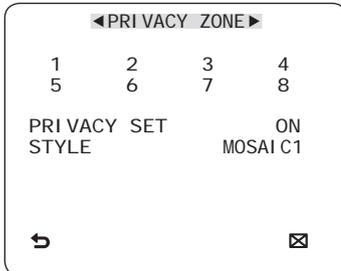

You can change the style to adjust the mosaic size and color of the PRIVACY ZONE.

Use the **↑ ↓ ← →** button to select one from PRIVACY 1 through 8.

Select one from PRIVACY 1~8 and click the Enter button to confirm your setting. You can specify a pixel that moves as you change the PIXEL LEVEL to set the position.

1. You can set each position of the 4 points.

- ① If you click the Enter button in <POINT>, you will see the points available in the PRIVACY ZONE. Each time you click the Enter button, the points available will move.
- ② Use the **↑ ↓ ← →** button to set the position of each point. Set each position of the four points and click the Enter button to complete the positioning.



2. You can move the position of the overall area.

- ① By clicking the Enter button in <POSITION>, you can move the overall position of the privacy zone.
- ② Use the **↑ ↓ ← →** button to move the position and click the Enter button to confirm it.

※ NOTE:

- If more than one PRIVACY ZONE is specified and the PRIVACY SET is set to ON, the PIP function will be deactivated.
- If the 8th PRIVACY ZONE is specified, the LINE function of FENCE will be deactivated.

7 OSD - OTHER SET & COMMUNICATION

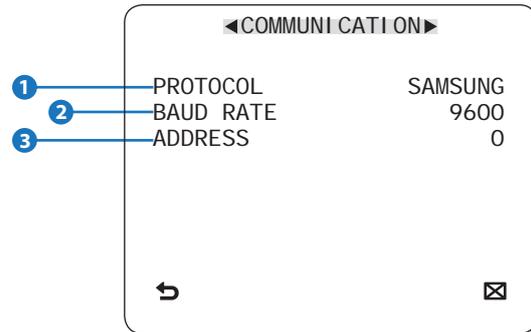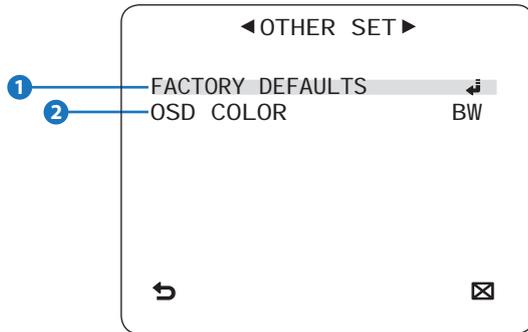

1 FACTORY DEFAULTS

All the settings will be restored to the factory default. However, the settings of PROTOCOL, BAUD RATE, ADDRESS and LANGUAGE will not be restored to the default.

2 OSD COLOR

Value: BW, R/G/B

You can set the OSD(On-screen Display) color to COLOR or B/W.

The COMMUNICATION menu is used to configure the settings regarding UART communications.

Use the connector of the camera to connect to UART.

※ Refer to Hardware Spec.

1 PROTOCOL

Select a communication protocol.

2 BAUD RATE

Select a baud rate.

※ NOTE:


The baud rate differs, depending on the specified protocol.

3 ADDRESS

Value: 0 ~ 255

Select an address number.

7 OSD - SYSTEM INFORMATION & LANGUAGE

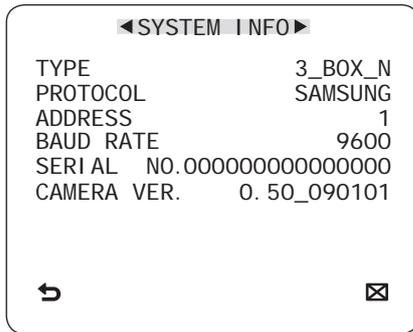

You can view the system information including the protocol, address, baud rate, serial number, camera version.



The camera supports 5 different languages. Select a preferred language.


7 OSD - Initial Configuration

Functions	Status
CAMERA ID	OFF
IRIS	ALC
AGC	VERY HIGH
MOTION	(F.FAST)
DNR	MID
SHUTTER	OFF
SENS-UP	AUTO x4
FLICKERLESS	(OFF)
DIS	OFF
DAY/NIGHT	AUTO
DIGITAL ZOOM	OFF
DETAIL	[2]
AGC COLOR SUP	MID
REVERSE	OFF
POSI/NEGA	+
PIP	OFF
V-SYNC	INT

8 Appendix A : Current TCP/IP Settings


i If your IP settings are obtained automatically, you could use the MS-DOS prompt (or Command Prompt) to determine your IP address. For information on how to do this, please read the FAQ.

1. Windows 98 / ME Users

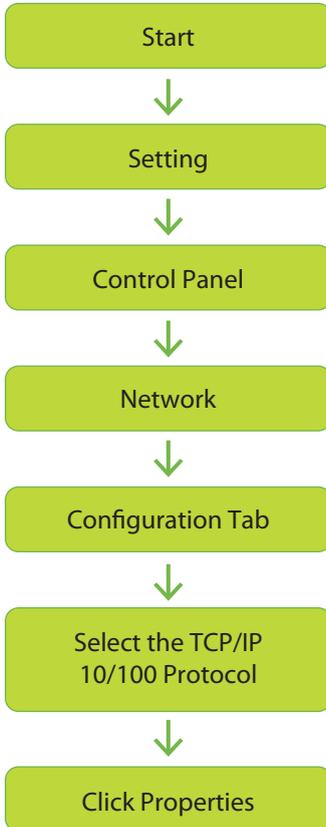


Note the settings under the IP Address, DNS Configuration, and Gateway tabs

2. Windows 2000 or XP Users

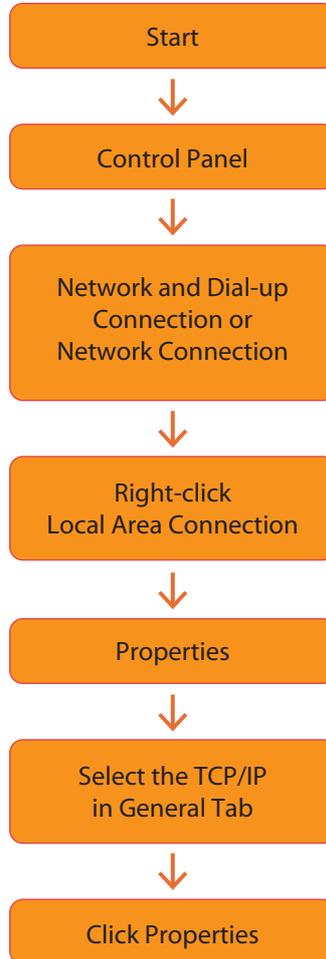

Under the 'General' tab of the TCP/IP Properties you will see your IP address information.


3. Windows Vista or 7 Users

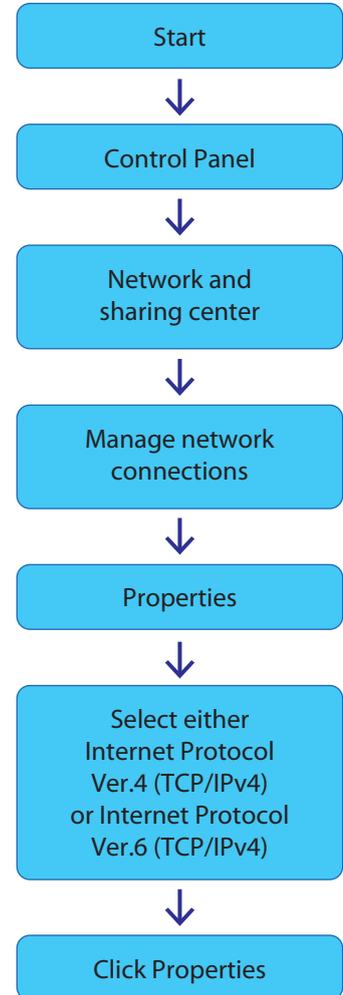

Under the 'General' tab of the TCP/IP Properties you will see your IP address information.


8 Appendix - 8 B : Changing IP address and subnet mask

1. Windows 98 / ME Users

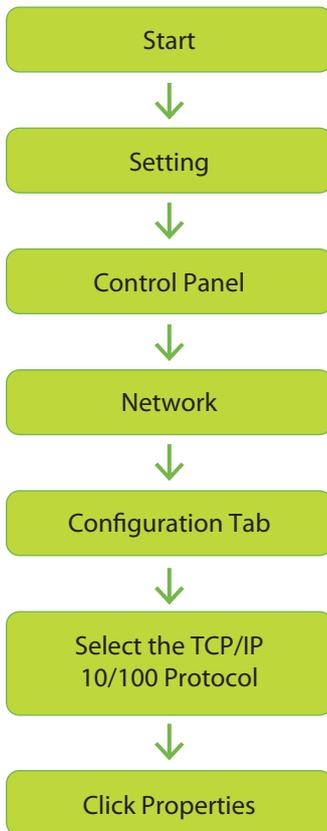


Select 'Use the following IP address' and change the IP address and Subnet Mask.

2. Windows 2000 or XP Users

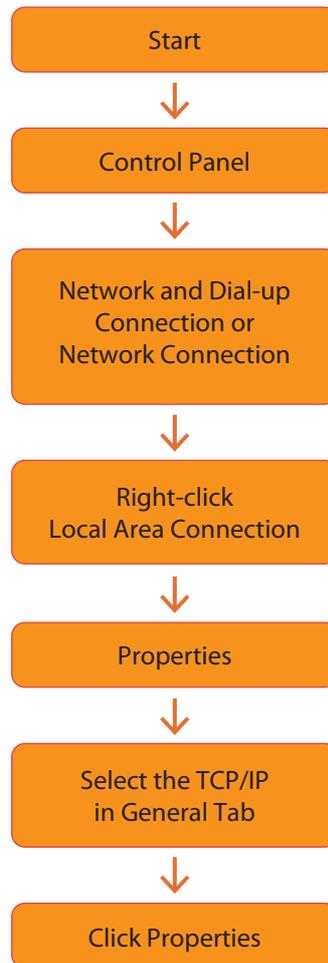

Select 'Use the following IP address'

3. Windows Vista or 7 Users

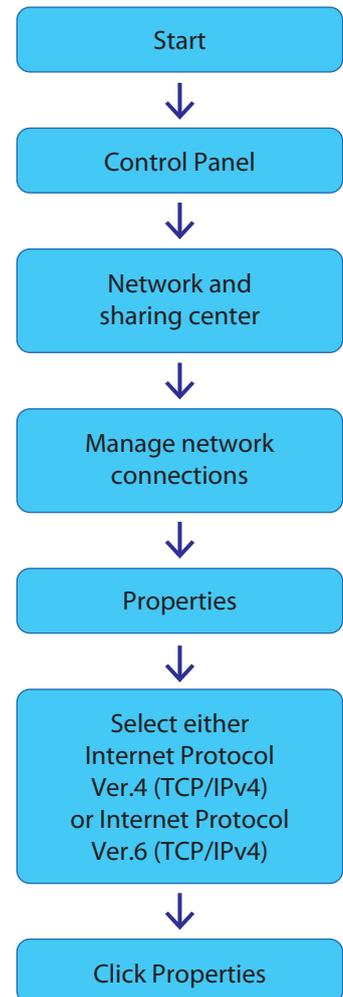

Select 'Use the following IP address'

8 Appendix - C : Port Forwarding


After assigning the IP Camera a web server port and video server port you must use Port Forwarding. (for cases A, B)

Please consult your router's user guide on how to correctly configure Port Forwarding.


For your convenience, we have provided two example configurations.

1. For D-Link DI-604 broadband routers:

- 1) Open a web browser and type http://192.168.0.1 into your Address bar. (the default IP address to access the router)
- 2) You will have to supply your User Name and Password to log onto the router. Default from factory. (User Name: admin Password: [leave blank])
- 3) Select the "1 Advanced" tab and click "2 Virtual Server" menu.

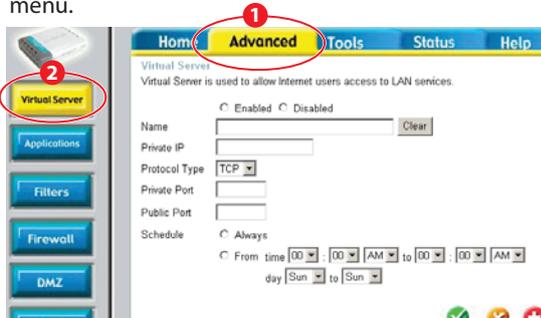

- 4) Click "3 Apply" button after inputting proper values. The example is as below

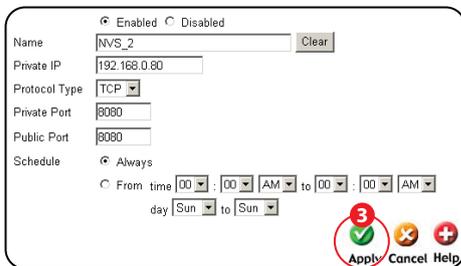


Enabled / Disabled	Select "Enabled".
Name	Input IVS name.
Private IP	Input IVS address.
Protocol Type	Select "TCP".
Private Port / Public Port	Input IVS Web Server Port.
Schedule	Select "Always"

- 5) If 'Setting Saved' shows, click [Continue] button.
- 6) With the same method as above, add Video Server Port.
- 7) The Web Server Port, Video Server Port and 2 Audio Ports shows in "Virtual Server List" as below.


Virtual Servers List				
Name	Private IP	Protocol	Schedule	
<input checked="" type="checkbox"/> NVS_2	192.168.0.80	TCP 8080/8080	always	
<input checked="" type="checkbox"/> NVS_2	192.168.0.80	TCP 7777/7777	always	
<input checked="" type="checkbox"/> NVS_2	192.168.0.80	TCP 7778/7778	always	
<input checked="" type="checkbox"/> NVS_2	192.168.0.80	TCP 7779/7779	always	
<input checked="" type="checkbox"/> NVS_2	192.168.0.80	TCP 7780/7780	always	

2. For Linksys BEFSR41 Cable/DSL routers:

- 1) Open a web browser and type http://192.168.1.1 into you Address bar. (the default IP address to access the router)
- 2) You will have to supply your User Name and Password to log onto the router. Default from factory (User Name:[leave blank] Password: admin)
- 3) Select "4 Applications & Gaming" from the menu bar.

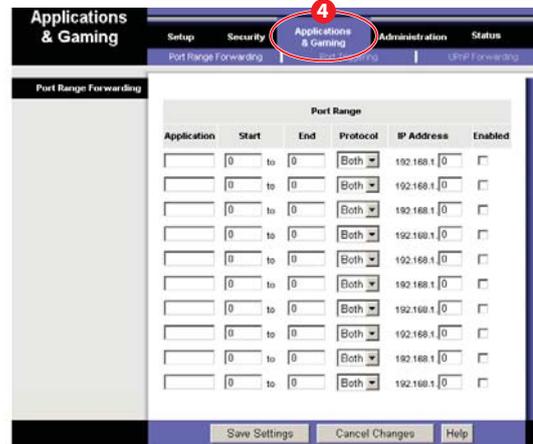

- 4) Input port numbers in "5 Port Range" as below and click "6 Save Setting" button. Both of Web Server Port and Video Server Port should be added. The example is as below.

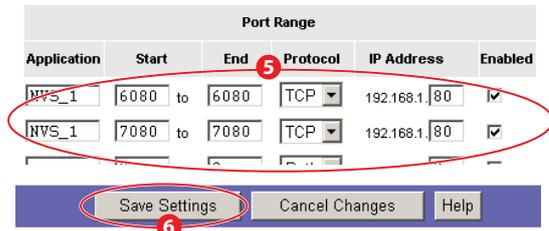

Enabled / Disabled	Input IP Camera name.
Start / End	Input IP Camera Web Server Port and Video Server Port. Start should be same as End. Both of Web Server Port and Video Server Port should be added.
Protocol	Select "TCP" in Protocol option.
IP Address	Input IP Camera IP Address.
Enabled	Check the square.

8 Appendix - C : Port Forwarding

3. For Netgear RP614 routers:

- 1) Input http://192.168.0.1 in address bar of web browser.
http://192.168.0.1 is the default IP address.
- 2) If it asks ID and password, input admin as ID and password as password.
- 3) Click "Port Forwarding" in "Advanced".
- 4) Click "➊ Add Custom Service" button in Port Forwarding page.

Port Forwarding

Service Name: SERVICES | Server IP Address: 192.168.0. | Add

#	Enabled	Service Name	Start Port	End Port	Server IP Address

Buttons: Add Custom Service, Edit Service, Delete Service

Buttons: Apply, Cancel

- 5) Input proper values in "Ports - Custom Services" page as below.

Ports - Custom Services

Enable

Service Name: []

Starting Port: [] (1~65535)

Ending Port: [] (1~65535)

Server IP Address: 192.168.0. | Add | Cancel

Enable	Check it.
Service Name	Input IP Camera name.
Starting/ Ending Port	Input IP Camera Web Server port. Starting Port should be same as Ending Port.
Server IP Address	Input IP Camera IP Address.

- 6) Click "➋ Add" button.
- 7) With the same method as above, add Video Server Port.
- 8) Click "Apply" button to finish Port Forwarding.

1. My POWER light is not on?

Power is not being supplied to the unit. Please use the power supply shipped with the unit and verify that a power source is active from the attached power outlet used to connect the adapter. You can test this by plugging in any other electrical device and verify its operation. After using the power supply shipped with the product, checking the power source, and reinserting the power connector into the IP Camera, please call our Support Center. The power supply may be defective.

2. My ACTIVE light is not flashing?

Verify the power supply to the unit. Power off the unit and back on again, wait 1 minute, if the ACTIVE light still does not begin to flash, you will have to set the unit to its factory default (THIS WILL DELETE ANY CONFIGURATION AND SET THE UNIT TO THE FACTORY DEFAULTS). Power on the unit and insert the end of a paper clip into the small recessed opening on the back of the unit. Use the clip to press the button located within that opening.

3. My LINK light is not flashing or solid?

Verify the cable connection. 99% of the time the cable's connection to the unit is causing this problem. Try using a different network cable or crossover cable (for PC connection only). Try reinserting the cable, if this still doesn't solve the problem call our Support Center.

4. I can access the video server on my LAN, but not from the Internet.

Verify that your router (if applicable) has port forwarding properly configured. If accessing from our DDNS service, verify correct serial number. Firewall issues may prevent user access.

5. How do I open an MS-DOS or Command Prompt?

- Windows 98 / ME Users :
Start > Programs > Accessories > MS-DOS prompt
- Windows 2000 / XP Users :
Start > (All) Programs > Accessories > Command Prompt

6. How do I find out my IP address information if my settings were automatically detected?

Windows 98 / ME Users

- 1) Open an MS-DOS Prompt
- 2) At the prompt type: "winipcfg" (without the quotation marks)
- 3) Use the drop down list to select your 10/100 Ethernet Adapter (not a PPP adapter)
- 4) Now you will see your IP Address, Subnet Mask, and Default Gateway information
- 5) For DNS information contact your Internet Service Provider

Windows 2000 / XP Users

- 1) Open a Command Prompt
 - 2) At the prompt type - "ipconfig /all" (without the quotes)
 - 3) Near the end of the information supplied, should be your current IP address, subnet mask, default gateway and DNS servers
-

7. I can't connect!!

In the case of a connection failure.

Modem Reboot > Modem Reboot Finished > Router Reboot > Router Reboot Finished > IP Camera Reboot > IP Camera Reboot Finish > Verify DDNS and IP Camera connection, if applicable.

8. How do I "PING" an IP address?

- 1) Open an MS-DOS (or Command) prompt
- 2) At the prompt type - "ping xxx.xxx.xxx.xxx" (without the quotes and replace the "x"s with an IP address)
- 3) Press Enter

9. I'm accessing my video server remotely over the Internet and the video stream is choppy, is this normal?

Yes. The frames per second received remotely are determined by your bandwidth capabilities both at your site where the IP Camera is installed and your remote location. The lower of the two sites will determine how fast your video stream is received. It is recommended to have at least a 256Kb/sec upstream connection from the site where the IP Camera is installed. Lower speeds will operate properly, but provide poor remote performance. The Faster the Internet connection at both ends, the faster the video stream.

10. How do I enable or check ActiveX on my browser





Open Internet Explorer > Tools on the menu bar > Internet Options > Security Tab > Custom Level > Scroll down and verify that you are prompted or have enabled ActiveX controls and plug-ins to be downloaded and executed. > click OK > restart browser.

11. How do I reset the unit to factory defaults?

On the underside of the unit you will find a recessed opening located near the top-left side of the label. Power ON the unit and use a paper clip to push the reset button within that opening. You should then see the ACTIVE light turn off and after a few seconds the ACTIVE light will begin to flash, signifying a successful reboot. If the ACTIVE light does not turn off after depressing the reset button, please try holding the button in for a few seconds and releasing. YOU WILL LOSE ALL DATA THAT HAD BEEN ENTERED PREVIOUSLY AND THE IP CAMERA WILL BE SET TO ITS FACTORY RESETS.

9 Specifications - Dimension

Unit: mm

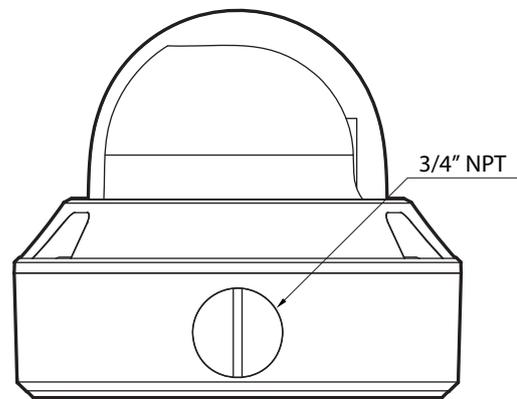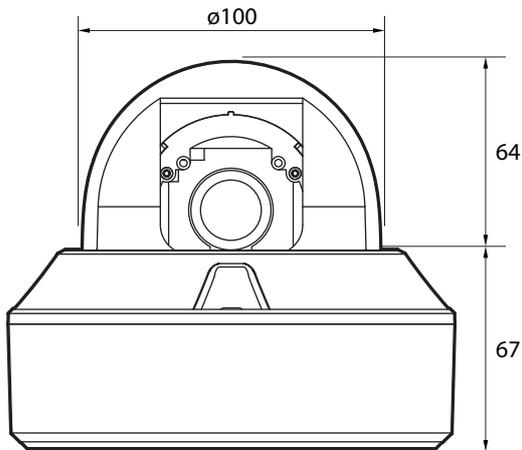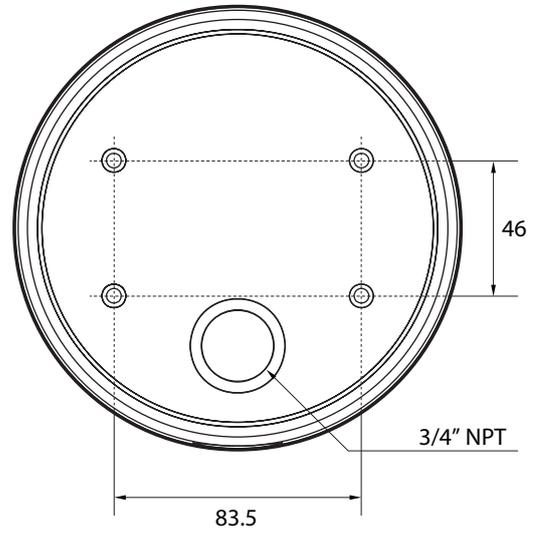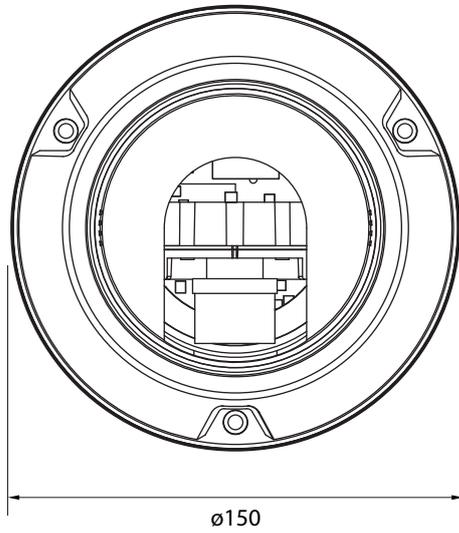

9 Specifications - Specification

Camera

Image Device	1/3" Sony Super-HAD II CCD
Total Pixel	NTSC : 811 (H) × 508 (V) 410K Pixels • PAL : 795 (H) × 596 (V) 470K Pixels
Effective Pixel	NTSC : 768 (H) × 494 (V) 380K Pixels • PAL : 752 (H) × 582 (V) 440K Pixels
H. Resolution	Color: 560 TV Lines • B/W: 600 TV Lines
S/N Ratio	52 dB (AGC Off)
Focal Length	DC Vari-focal f = 2.8 (W) ~ 12 (T) mm, F1.2 (W) ~ 3.1 (T)
Angle of View	H: 99.6° (W) ~ 24.9° (T) • V: 73.2° (W) ~ 18.8° (T)
Min. Illuminance	Color: 0.2 Lux (Sens up Off), 0.0007 Lux (Sens up x256) @ 50 IRE, F1.2 B/W: 0.02 Lux (Sens up Off), 0.00007 Lux (Sens up x256) @ 50 IRE, F1.2
Shutter Speed	NTSC : x256 ~ x2, 1/60 ~ 1/120,000 sec. • PAL : x256 ~ x2, 1/50 ~ 1/120,000 sec.
Day & Night	Auto / Day / Night / EXT
DIS	On / Off
White Balance	ATW1 / ATW2 / AWC / Manual
AGC	On / Off (Max. Level Setting)
DNR	Low / Middle / High / Off / User (Adaptive 3D+2D)
BLC	On / Off (Area Setting)
Other Functions	D-Zoom(x10), Privacy Zone(8 zone, Polygonal Method 4zone), PIP

General

Video Out	CVBS: 1.0 V p-p / 75Ω
Sensor In/Out	Built-in 1 Input / 1 Relay Output
Power	DC 12 V, 5.5 W PoE IEEE 802.3af Class 0
Approvals	FCC, CE, IP66, RoHS
Outdoor Housing	Weather Proof, Vandal Proof Structure, White Pearl Color
Material	Body: Aluminum Die-casting • Clear Bubble: Polycarbonate
Weight	1 Kg
Operating Temp.	AC: -45° ~ 50° C (-49° ~ 122° F) PoE: -10° ~ 50° C (14° ~ 122° F)
(IR Model Only)	18 pcs IR-LED

Network

OS	Embedded Linux
Video Compression	H.264 / MPEG4 / MJPEG
Video Streaming	VBR / CBR (Controllable Frame Rate and Bandwidth)
Resolution	NTSC : 4CIF (704 × 480) / CIF (352 × 240) / QCIF (176 × 144) PAL : 4CIF (704 × 576) / CIF (352 × 288) / QCIF (176 × 220)
Frame Rate	NTSC : Max. 30 fps for all Resolutions. 30, 25, 20, 15, 10, 5, 1 Selectable PAL : Max. 25 fps for all Resolutions. 25, 20, 15, 10, 5, 1 Selectable
Image Settings	Quality, Brightness, Sharpness
Motion Detection	Notification: FTP, E-mail, Alarm out, JPEG Recording on SD
Alarm	Pre-Post Alarm
Number of Clients	Max. 5
IPv4 Protocol	TCP/IP, UDP/IP, RTP(UDP), RTSP, NTP, HTTP,HTTPS, SSL, DNS, DDNS, DHCP, FTP, SMTP, ICMP, SNMPv1/v2c/v3(MIB-2)
Security Protocol	Digest Authentication (ID/PW)
OS Supported	Windows 7, Vista, XP, 2000