

x33 PTZ Outdoor Wall(Ceiling) Mount Camera

User's Manual

Safety Information



CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN.



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



Warning

This symbol indicates that dangerous voltage consisting a risk of electric shock is present within this unit.



Precaution

This exclamation point symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

WARNING

2. Be sure to use only the standard adapter that is specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.
3. Incorrectly connecting the power supply or replacing battery may cause explosion, fire, electric shock, or damage to the product.
4. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause abnormal heat generation or fire.
5. Securely plug the power cord into the power receptacle. Insecure connection may cause fire.
6. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.
7. Do not place conductive objects (e.g. screw drivers, coins, metal things, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.
8. Do not install the unit in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.
9. If any unusual smells or smoke come from the unit, stop using the product. In such case, immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock.
10. If this product fails to operate normally, contact the nearest service center. Never disassemble or modify this product in any way.
11. When cleaning, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock.

Precautions

Operating

- Before using, make sure power supply and others are properly connected.
- While operating, if any abnormal condition or malfunction is observed, stop using the camera immediately and then
- contact your Special dealer.

Handling

- Do not disassemble or tamper with parts inside the camera.
- Do not drop or subject the camera to shock and vibration as this can damage camera.
- Care must be taken when you clean the clear dome cover. Especially, scratch and dust will ruin your quality of camera.

Installation and Storage

- Do not install the camera in areas of extreme temperature, which exceed the allowable range.
- Avoid installing in humid or dusty places.
- Avoid installing in places where radiation is present.
- Avoid installing in places where there are strong magnetic fields and electric signals.
- Avoid installing in places where the camera would be subject to strong vibrations.
- Never expose the camera to rain and water.

Important Safety Instructions

1. **Read these instructions.** - All these safety and operating instructions should be read before the product is operated.
2. **Keep these instructions.** - The safety, operating and use instructions should be retained for future reference.
3. **Heed all warnings.** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow all instructions.** - All operating and use instructions should be followed.
5. **Do not use this apparatus near water.** - For example: near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement; near a swimming pool; etc.
6. **Clean only with dry cloth.** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.** - Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product, and to protect it from over-heating. The openings should never be blocked by placing the product on bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's unstructions have been adhere to.
8. **Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
13. **Unplug this apparatus during lightning storms or when unused for long periods of time.**
14. **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.





Disposal of Your Old Appliance

1. When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.


This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Contents


1. Introduction	6 Product & Accessories 7 Part Name & Functions
2. Installation	8 DIP Switch Setup 10 Installation Using Wall Mount Bracket 15 Cabling
3. OSD	17 Check Points before Operation 18 Aux Functions 19 OSD Information 20 General Rules of Menu Operation 21 ROOT MENU & SYSTEM INFORMATION 22 DISPLAY SETUP 23 MOTION SETUP 25 FUNCTION SETUP > PRESET SETUP 27 FUNCTION SETUP > SCAN SETUP 28 FUNCTION SETUP > PATTERN SETUP 29 FUNCTION SETUP > GROUP SETUP 31 FUNCTION SETUP > SCHEDULE SETUP 33 CAMERA SETUP > WB SETUP 34 CAMERA SETUP > AE SETUP 35 SYSTEM SETUP 37 SYSTEM INITIALIZE
4. Specifications	38 Dimension 39 Specification

1 Introduction - Product & Accessories

Product

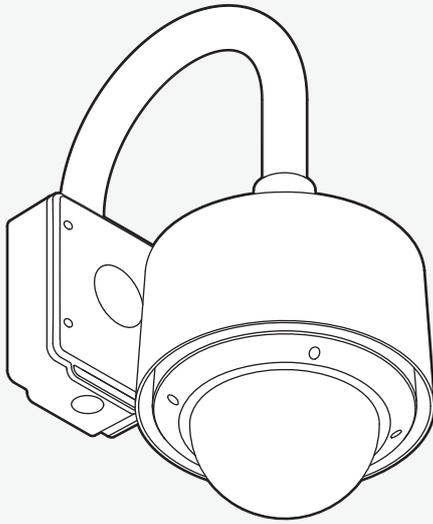


Wall Mount Type

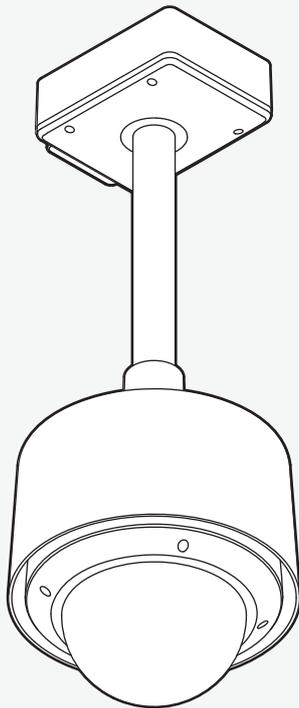


Ceiling Mount Type

Accessories

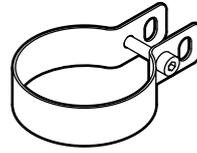


Housing Safety Cable Hanger

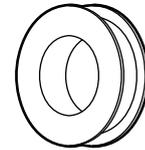

Water Proof Tape




Hexagonal Wrench

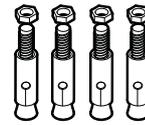

Anchor Bolt(4pcs)



Hole Template

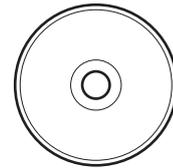

Manual CD



Safety Wire






Quick Manual


1 Introduction - Part Name & Functions

1 Wall/Ceiling Mount Bracket

These are used to install the camera on the wall or ceiling and have junction box. The junction box of the bracket accommodate inner box.

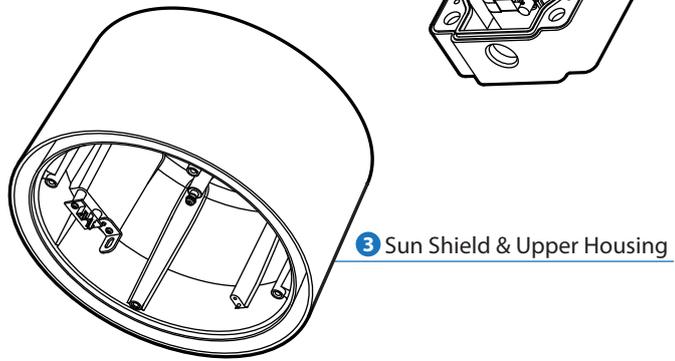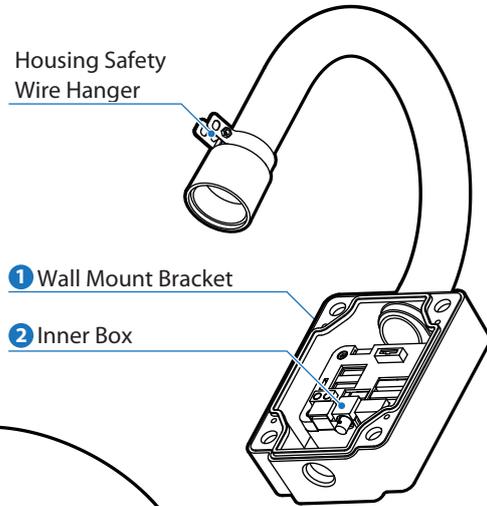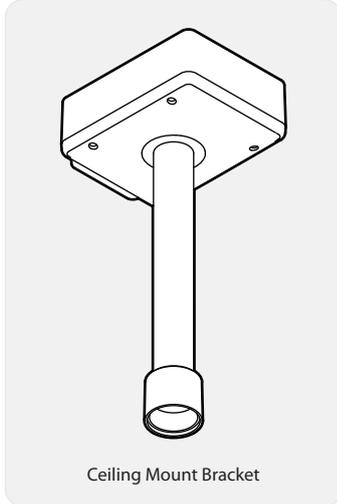

4 PTZ Mechanism

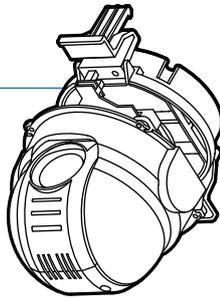

2 Inner Box

The inner has many important roles of connection box between camera and outside. Top of the box, there are dip switches and terminal locks for power supply, video, communication, alarm input/output.

3 Sunshield & Upper Housing

Sunshield protect bubble dome cover from the sun rays and rain fall. In the sunshield, there is the upper housing which will contain accommodate PTZ mechanism. In the upper housing, there are fan and heater to remove moisture on the bubble dome. Also, the upper housing will be connected to both mounting brackets and dome cover.

4 PTZ Mechanism


Control the PTZ operations of the camera.

5 Dome Safety Wire

Prevents the dome cover from falling.


6 Dome Cover

Do not detach protection film from dome cover before finishing all installation process to protect dome cover from scratches or dust.

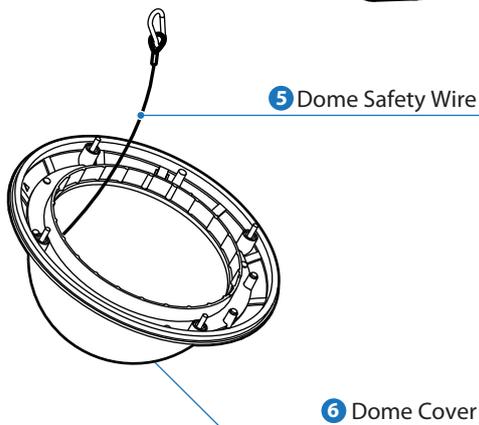


2 Installation - DIP Switch Setup


⚠ Before installing the camera, you should set the DIP switch to configure the camera ID, communication protocol.

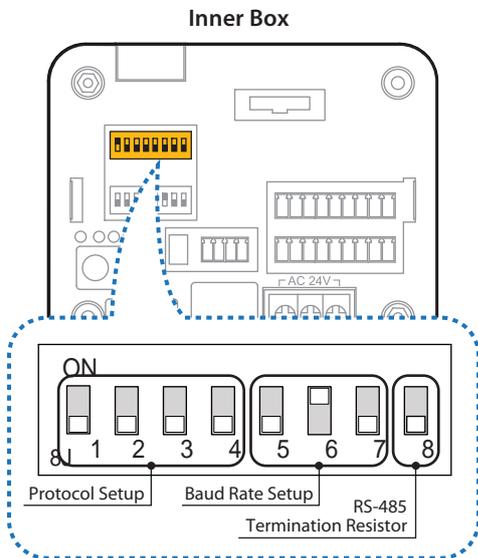


5 Panasonic

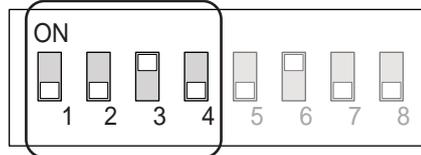

6 GE(Kalatel)

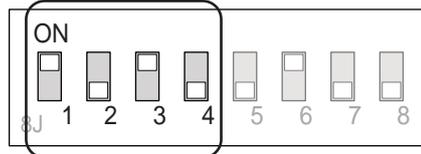


7 AD(American Dynamics)

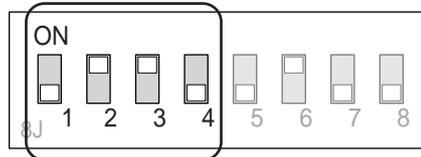


1. Communication Protocol Setup

Select the appropriate protocol with DIP switch combination.


1 Auto - Factory Default

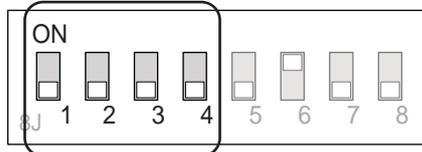


2 PELCO-D

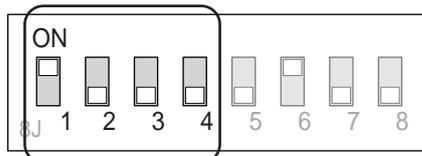

3 PELCO-P

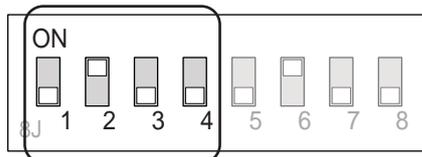

4 SAMSUNG

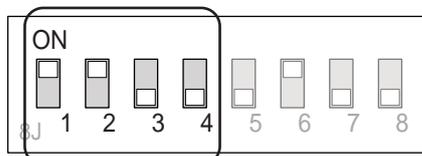


- If you set the protocol as 'Auto' protocol, camera will automatically recognize PELCO-D, PELCO-P or SAMSUNG protocol.
- If you want to control using DVR or system keyboard, their protocol must be identical to camera. Otherwise, you can not control the camera.
- If you change camera protocol by changing DIP switch, the change will be effective after you reboot the camera.

2 Installation - DIP Switch Setup


2. Communication Baud Rate Setup

Select the appropriate baud rate with DIP switch combination.


1 2400 BPS - Factory Default

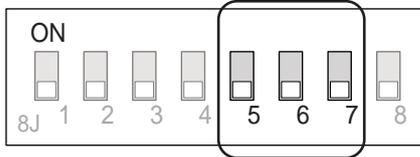


2 4800 BPS

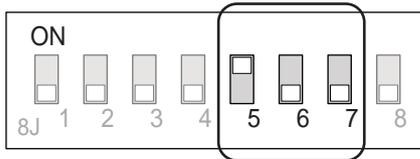


3 9600 BPS

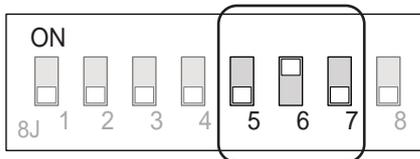


4 19200 BPS

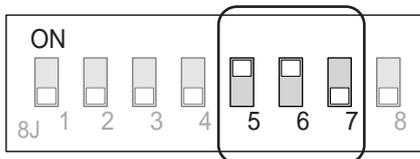

5 38400 BPS

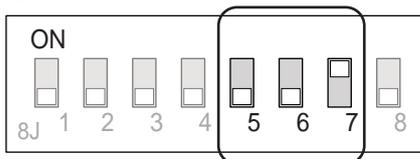


3. RS-485 Termination Resistor

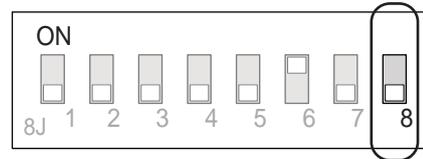

- Pin 8 is used for on/off of RS-485 termination.
- Normally, it must be off state.
- Especially, when you have trouble with long daisy chain style connection, turn on this termination switch of the last camera.

4. Camera ID Setup

Inner Box

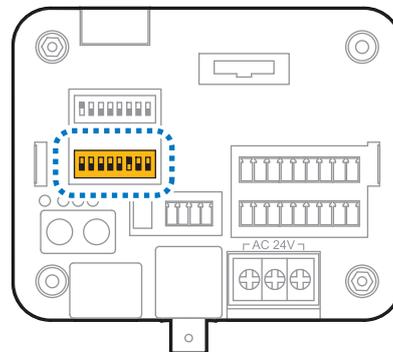


ID number of camera is set using binary number. The example is shown below.


Pin	1	2	3	4	5	6	7	8
ID Value	1	2	4	8	16	32	64	128
ex) ID=5	on	off	on	off	off	off	off	off
ex) ID=10	off	on	off	on	off	off	off	off

- If you want to control a certain camera, you must match the camera ID with 'CAM ID', setting of DVR or keyboard controller.
- ID number of the camera is set using binary number.
- The range of ID is 0~255.
- Factory default of camera ID is 1.
- Camera ID will be effective without rebooting the camera.

2 Installation - Installation Using Wall Mount Bracket

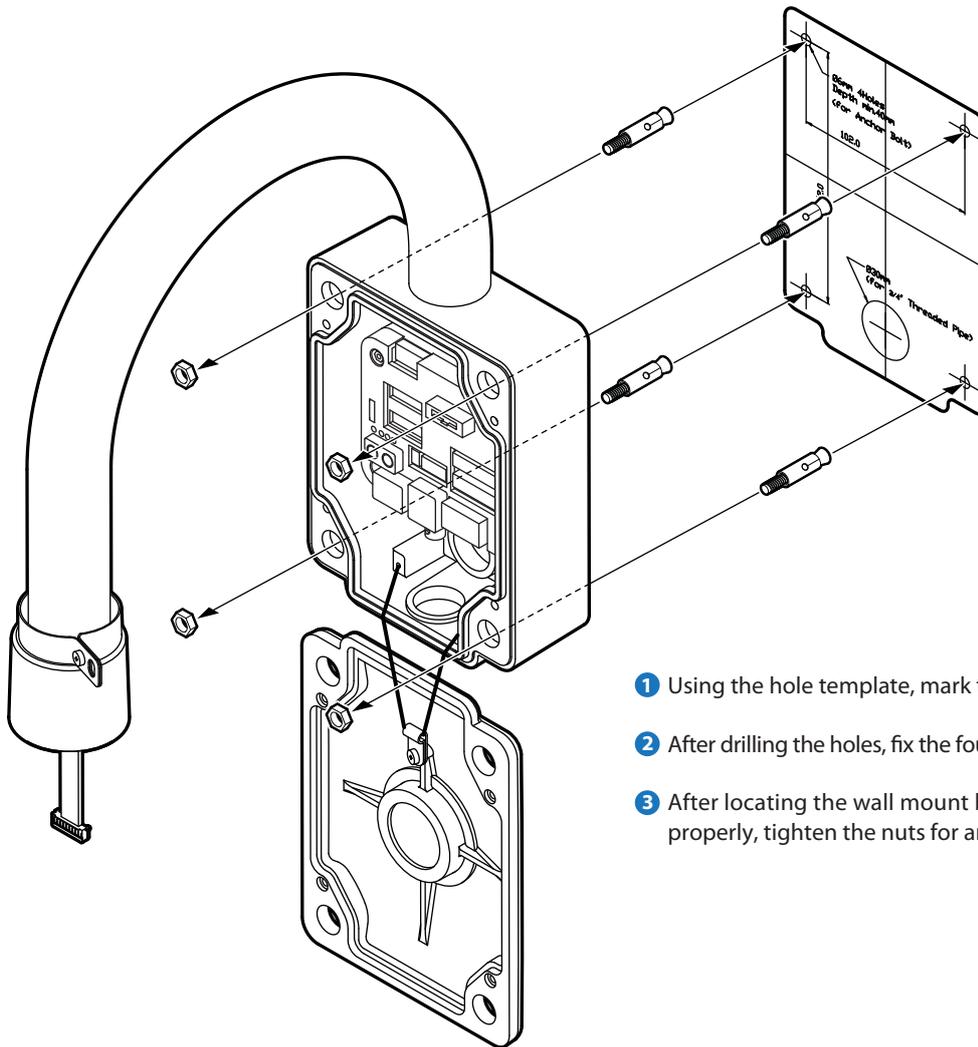


- 1 Using the hole template, mark the holes on the wall.
- 2 After drilling the holes, fix the four anchor bolts into the holes.
- 3 After locating the wall mount bracket on the anchor bolts properly, tighten the nuts for anchor bolts.

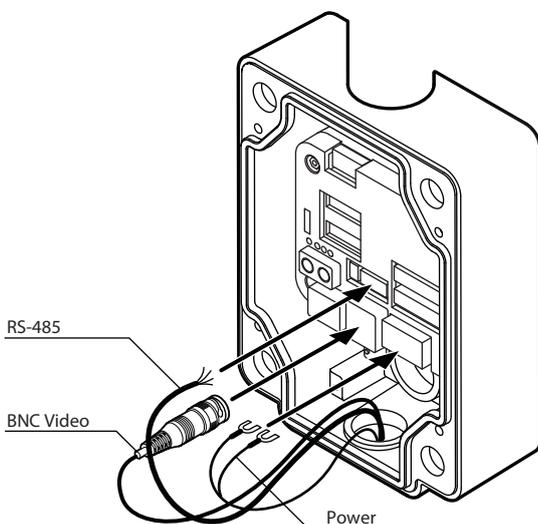


- 4 Connect cables to terminal blocks and BNC in the inner box of junction box.

⚡ See the cabling in the next section.


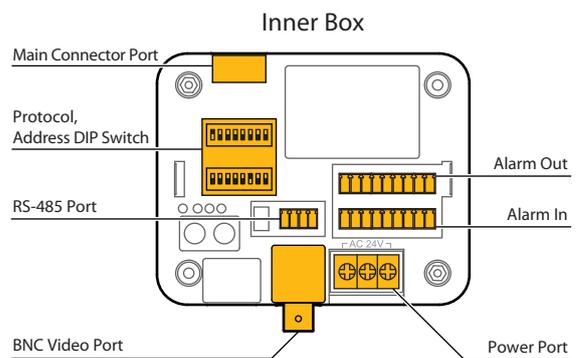


2 Installation - Installation Using Wall Mount Bracket


- 5 You have to detach the PTZ mechanism from the upper housing to plug the connector of cable. When detach PTZ mechanism, pressing down and holding up the black handles in both sides of PTZ mechanism.

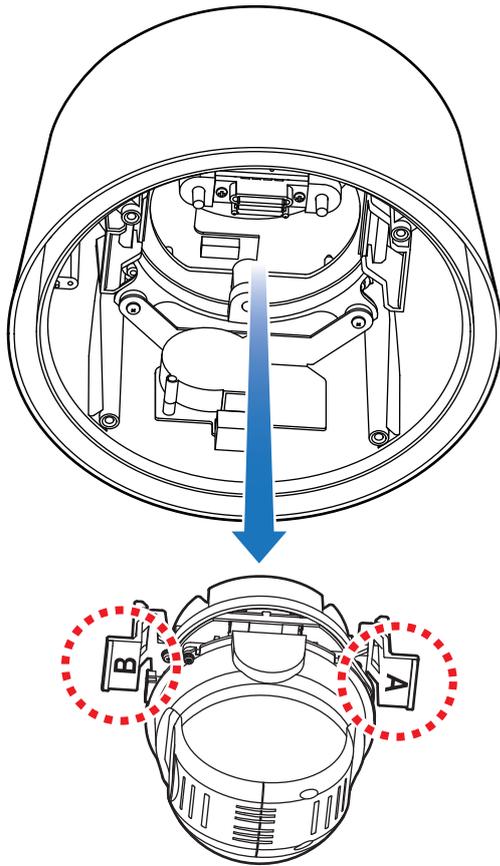


- 6 [1] Wind the water proof tape on the pipe of upper housing.
[2] Hooking the safety wire on the hole of pipe.
[3] Attach the upper housing to wall mount bracket by turning it at least seven turns.
- ※ To fix the upper body orientation, turn the handle of double nuts to clockwise tightly.

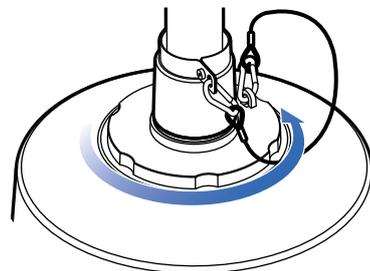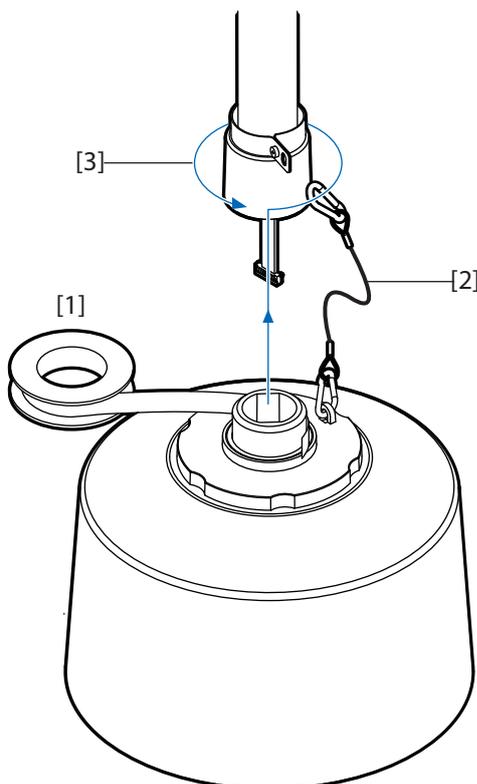

2 Installation - Installation Using Wall Mount Bracket

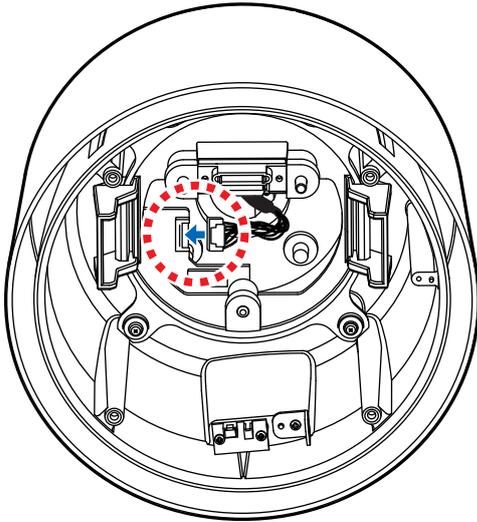


- 7 Plug the main cable into the main connector in the upper housing and press the main cable till it sounds snap to lock.

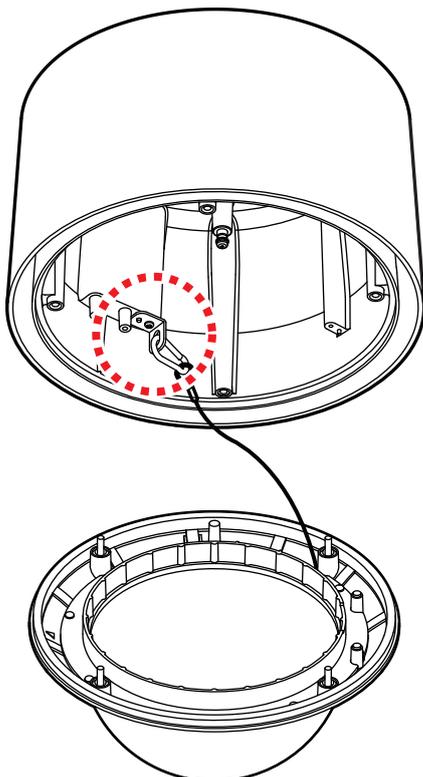


- 8 Connect the dome safety wire into the connectors in the upper housing.

2 Installation - Installation Using Wall Mount Bracket


- 7 Plug the connector of cable from junction box into properly. After checking the orientation of one touch connector in the upper housing, press the PTZ mechanism into hook in the upper housing.

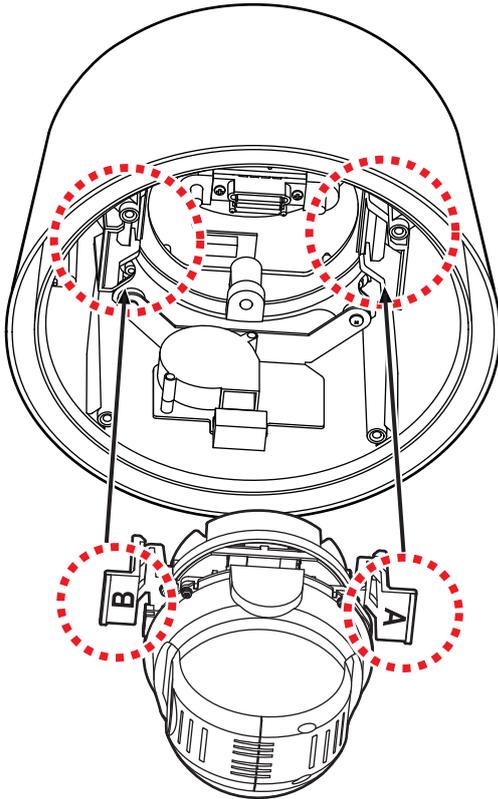



- 8 To lock the PTZ mechanism to the upper housing, press the two black handles till it sounds snap.

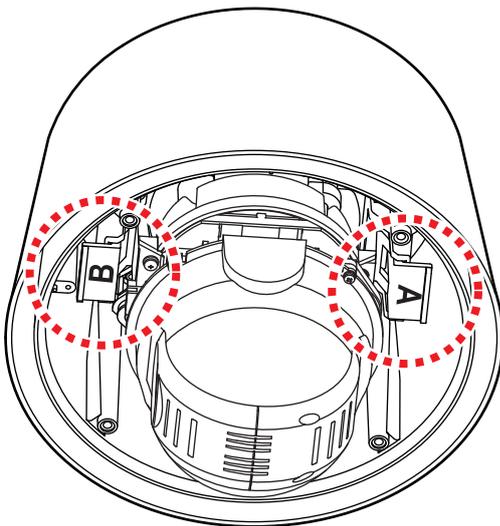

2 Installation - Installation Using Wall Mount Bracket

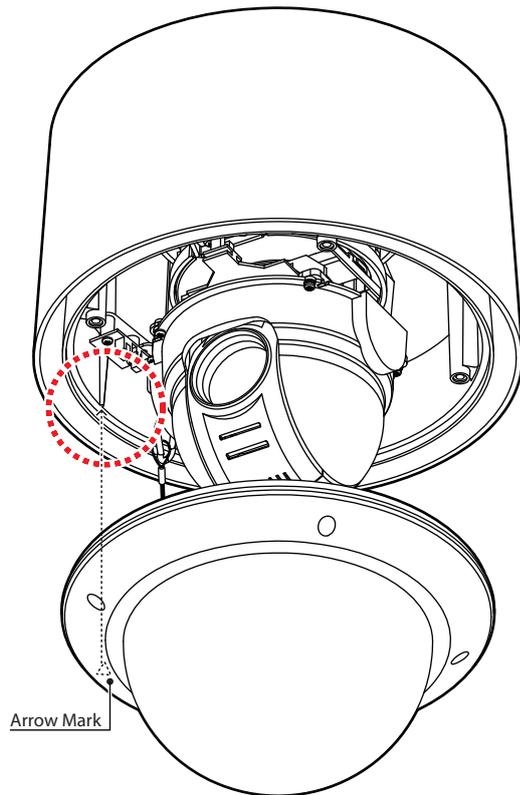


- 9 Close the dome cover. Care must be taken to locate dome cover by matching the 'Arrow Mark'.

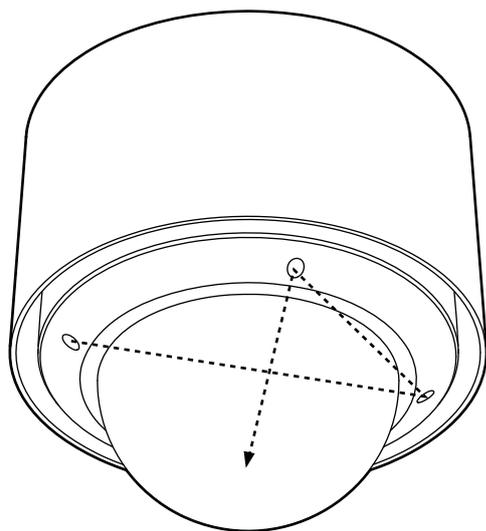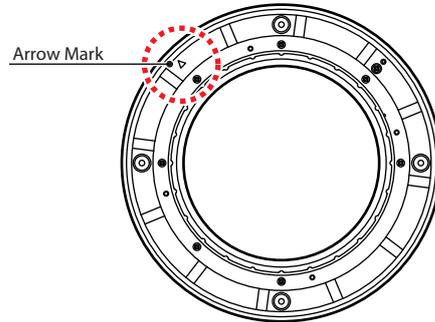


- 10 Tighten four screws on the dome cover in sequence as shown in the picture.
- ※ To maintain the best sealing, the torque of each screw must be in the range between 0.5 ~ 1.0 N·m (0.3 ~ 0.73 lbf·ft).

2 Installation - Cabling

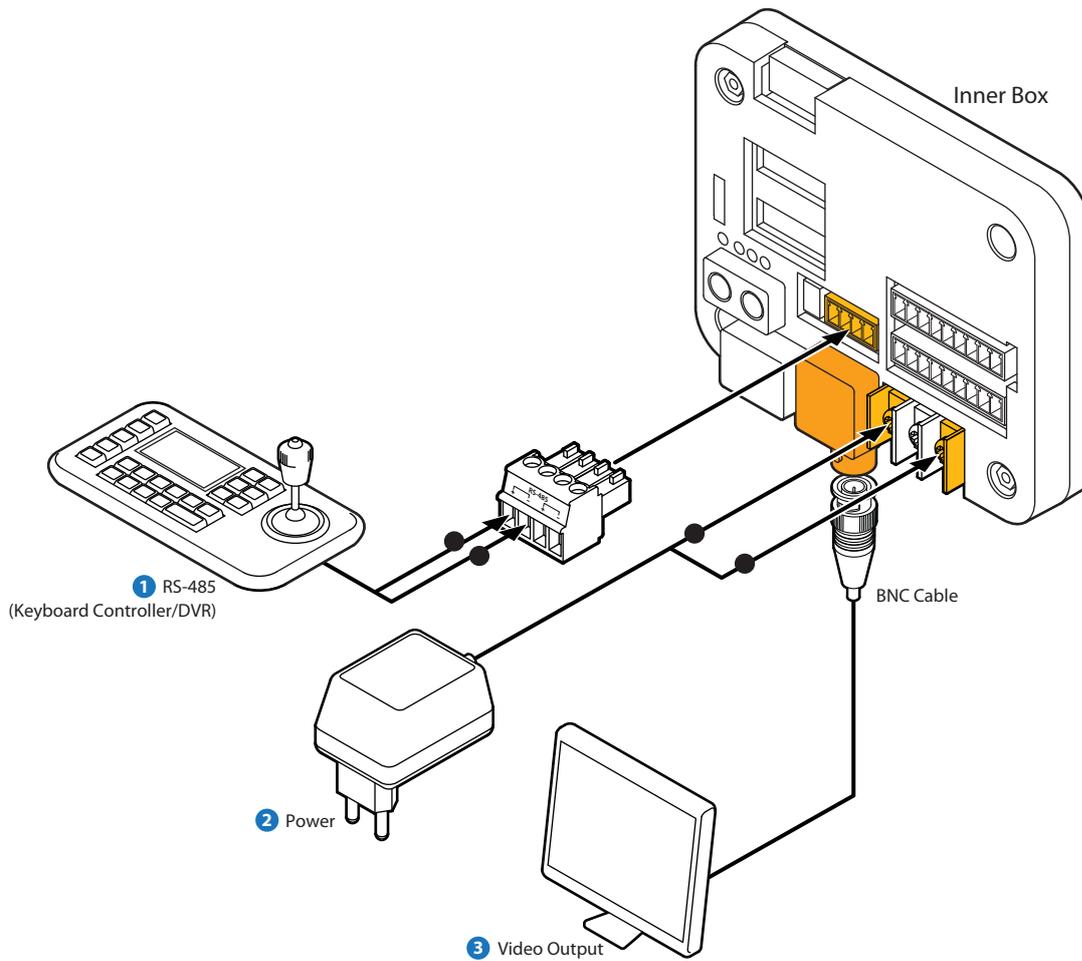

1 RS-485 Communication (DVR/Keyboard)

For PTZ control, connect this line to keyboard and DVR. To control multiple cameras at the same time, RS-485 communication lines of them are connected in parallel as shown below.

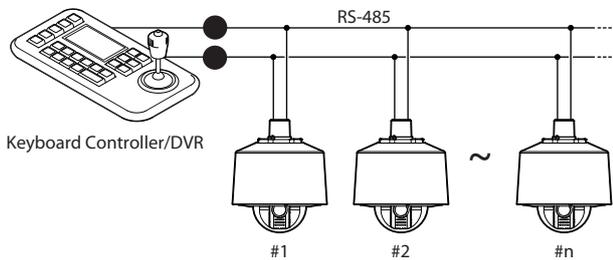

2 Power Connection


Please, check the voltage and current capacity of rated power carefully.

Rate Power	Current Consumption
AC 24V	Heater Off: 24W • Heater On: 55W

3 Video Output


Connect with BNC coaxial cable.

2 Installation - Cabling

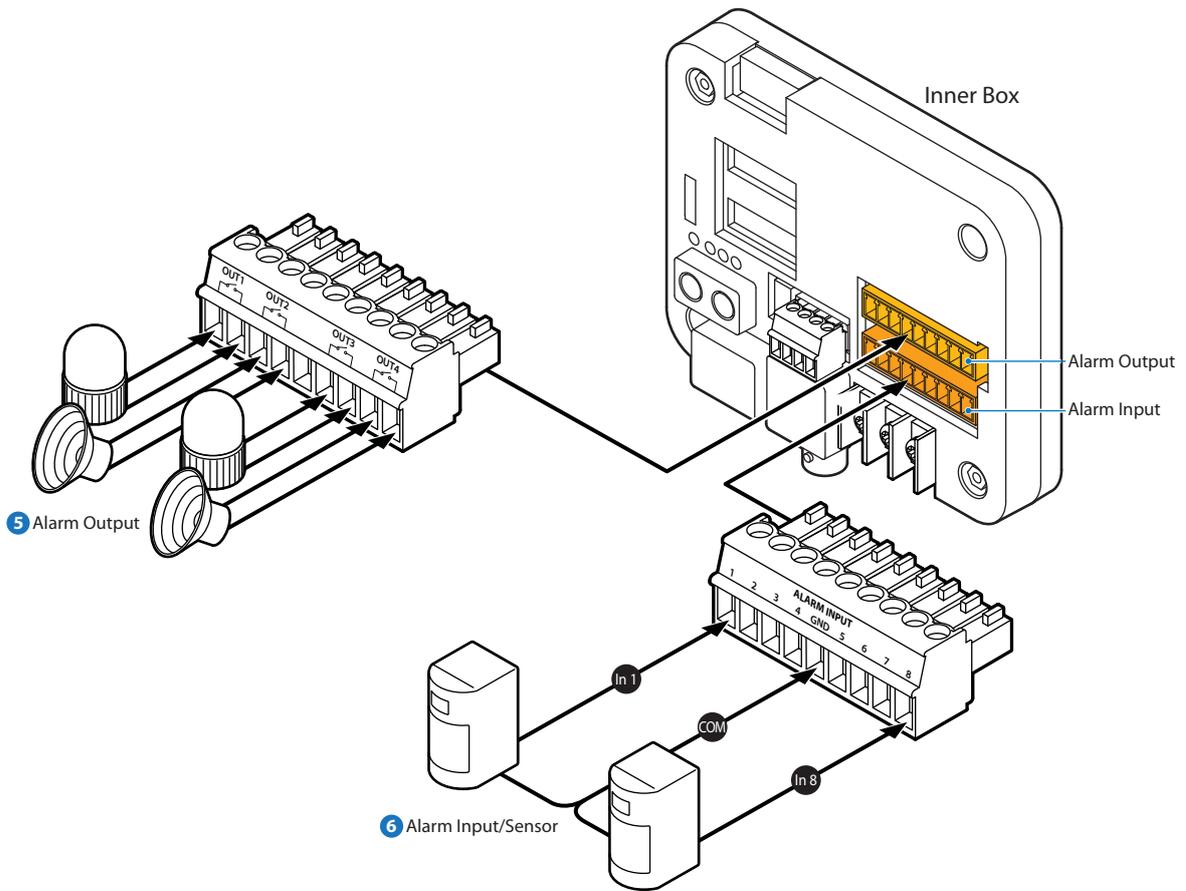


5 Alarm Output

There are 4 alarm outputs and all of them are relay contact type. Therefore, you do not have to care about polarity, AC/DC, and isolations between channels. Care must be taken for the power capacity of relay contact written above.

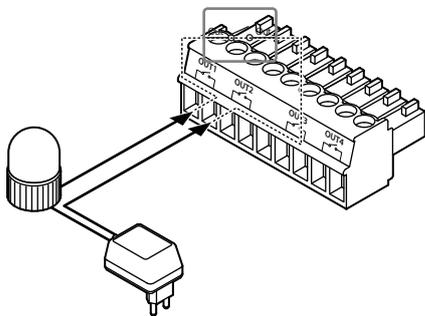

6 Sensor Input

If you want to use alarm input, the types of sensor must be selected in OSD menu. The sensor types are 'Normal Open' and 'Normal Close'. If sensor type is not selected properly, the alarm can be activated reversely.

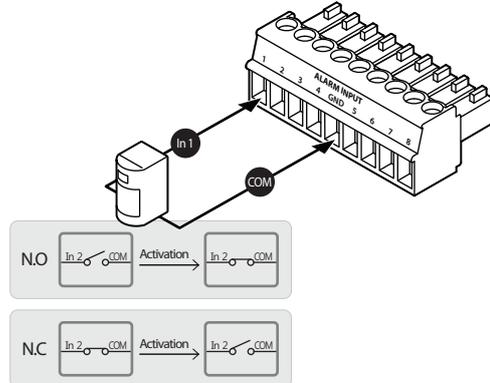

⚠ It is noted that short circuit between GND and Input pin means alarm activation.

3 OSD - Check Points before Operation

Check Points before Operation

1. Before power is applied, please check the cables carefully.
2. The camera ID of the controller must be identical to that of the camera to be controlled. The camera ID can be checked in the system information of OSD menu.
3. If your controller supports multi-protocols, the protocol must be changed to match that of the camera.
4. If you changed camera protocol by changing DIP switch, the change will be effective after you reboot the camera.
5. Since the operation method can be different for each controller available, refer to the manual for your controller if camera cannot be controlled properly.

1 Preset and Pattern Function Pre-check

Check how to operate preset, pattern, scan and group function with keyboard controller/DVR in advance to operate camera function using them. (Refer to your system keyboard manual)

If keyboard controller/DVR has no pattern key or function, use shortcut keys with preset numbers. For more information, refer to 'Reserved Preset' below.

2 Reserved Preset

Some preset numbers are reserved for special functions.

-
- Preset key + 95: Enters into OSD menu
 - Preset key + 131~134: Runs pattern function 1 ~ 4
 - Preset key + 141~148: Runs scan function 1 ~ 8
 - Preset key + 151~158: Runs group function 1 ~ 8
 - Preset key + 161~164: Sets relay 1~4 output to OFF
 - Set key + 161~164: Sets relay 1~4 output to ON
 - Preset key + 165: Sets auto calibration to ON
 - Preset key + 166: Sets auto calibration to OFF
 - Preset key + 167: Zoom proportional jog ON
 - Set key + 167: Zoom proportional jog OFF
 - Preset key + 170: Sets camera BLC mode to OFF
 - Preset key + 171: Sets camera BLC mode to HIGH
 - Preset key + 174: Sets camera focus mode to AUTO
 - Preset key + 175: Sets camera focus mode to MANUAL
 - Preset key + 176: Sets camera focus mode to SEMI-AUTO
 - Preset key + 177: Sets day & night mode to AUTO1
 - Preset key + 178: Sets day & night mode to NIGHT
 - Preset key + 179: Sets day & night mode to DAY
 - Preset key + 190: Sets OSD display mode to AUTO
(Except privacy mask)
 - Preset key + 191: Sets OSD display mode to OFF
(Except privacy mask)
 - Preset key + 192: Sets OSD display mode to ON
(Except privacy mask)
 - Preset key + 193: Sets all privacy mask display to OFF
 - Preset key + 194: Sets all privacy mask display to ON
 - Preset key + 200: Sets digital zoom to ON
 - Preset key + 201: Sets digital zoom to OFF
-

3 Auto Calibration

If the camera is continuously subjected to very high temperature (over 50°C or 122°F) environment for a long time, it is possible for the camera to lose focus.

As a result, you will get blurry image. In this case, it is recommended to turn on 'AUTO CALIBRATION' by running preset 165.

If you execute 'AUTO CALIBRATION', camera will calibrate its focus and PTZ at every 24 hours. To turn off this function, please, run preset 166.

4 Start OSD Menu

Using the OSD menu, preset, pattern, scan, group and alarm input function can be configured for each application. Enter 'Preset key + 95'.

3 OSD - Aux Functions

1 Preset

Max. 127 positions can be stored as preset positions.
The preset number can be assigned from 1 to 128, but 95 is reserved for starting OSD menu.

See the section 'ROOT MENU>FUNCTION SETUP>PRESET SETUP'.

1. Set Preset

Method 1) Use keyboard controller:
※ Refer to your system keyboard manual.
Method 2) Use OSD menu.

2. Run Preset

Method 1) Use keyboard controller:
Preset key + Number key(1~128)

3. Delete Preset

To delete preset, use OSD menu.

2 Scan

By using scan function, you can make camera move between 2 preset positions repeatedly.

See the section 'ROOT MENU>FUNCTION SETUP>SCAN SETUP' for more detailed information.

1. Set Scan

To set scan, use OSD menu.

2. Run Scan

Method 1) Scan key + Scan no.(1~8) + Enter key
Ex) Run scan 2 = Scan key + [2] + Enter key
Method 2) Preset key + [Scan no.(1~8) + 140]
Ex) Run scan 2 = Preset key + [142]

3. Delete Scan

To delete scan, use OSD menu.

3 Pattern

Pattern function is that a camera memorizes the path (mostly curve path) by joystick of controller for assigned time and revives the path exactly as it memorized.

See the section 'ROOT MENU>FUNCTION SETUP>PATTERN SETUP'.

1. Set Pattern

To set pattern, use OSD menu.

2. Run Pattern

Method 1) Pattern key + Patter no.(1~4) + Enter key
Ex) Run pattern 2 = Pattern key + [2] + Enter key
Method 2) Preset key + [Pattern no.(1~4) + 130]
Ex) Run pattern 2 = Preset key + [132]

3. Delete Pattern

To delete pattern, use OSD menu.

※ When the pattern is saved/executed, the pan/tilt is operated with 'AUTO FLIP-OFF'.

4 Group

The group function allows running sequence of presets, pattern and/or scans.

See the section 'ROOT MENU>FUNCTION SETUP>GROUP SETUP'.

1. Set Group

To set group, use OSD menu.

2. Run Group

Method 1) Group key + Group no.(1~8) + Enter key
Ex) Run group 2 = Group key + [2] + Enter key
Method 2) Preset key + [Group no.(1~8) + 150]
Ex) Run group 2 = Preset key + [152]

3. Delete Group


To delete group, use OSD menu.

5 Schedule

The schedule function allows running an appropriate function like preset, scan, group, pattern, home move at the designated day and time.

See the section 'ROOT MENU>FUNCTION SETUP>SCHEDULE SETUP' for more detailed information.

3 OSD - OSD Information

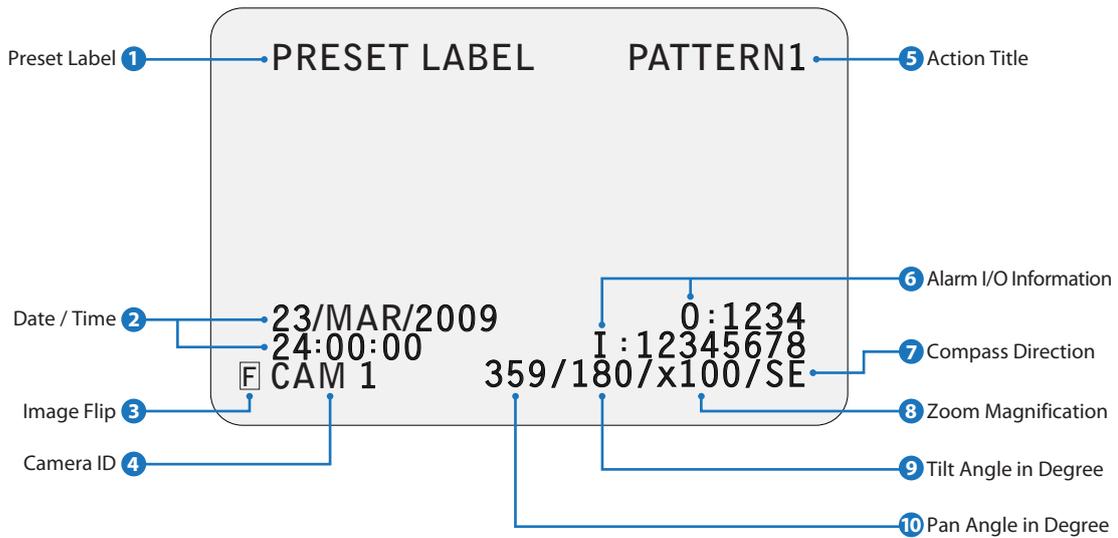

1 Preset Label

- The label stored for specific preset.
- See the section 'ROOT MENU>FUNCTION SETUP>PRESET SETUP>LABEL'.

2 Date / Time

- Shows the current date/time.
- See the section 'ROOT MENU>SYSTEM SETUP>DATE/TIME SETUP'.

3 Image Flip

- Shows that images are currently reversed by auto flip function.
- See the section 'ROOM MENU>CAMERA SETUP>IMAGE FLIP'.

4 Camera ID

- The current camera ID(Address).
- See the section 'ROOT MENU>SYSTEM INFORMATION'.


5 Action Title

Followings are possible action titles and their meaning.

Action Title	Means
SET PRESET 123	Means to store preset 123.
PRESET 123	Means it reached preset 123.
PATTERN 1	Means the camera is running pattern 1.
SCN 1/PRESET 123	Means the camera is running scan 1.
RANGE OVER	Means the action received is not within the range supported.
UNDEFINED	Means the action received is not defined.

6 Alarm I/O Information

- This information shows current state of alarm input and output.
- The 'I' means input and 'O' means output.
- If an input is on state it will show the number of input. If an input is off state, '-' will be displayed. In the same way 'O:1 ---' means output 1 is on and other output is off.
- Ex) When point 2 of inputs are on, and output 1 is on, OSD will show as below.



7 Compass Direction

- Shows the current compass direction of the camera.
- The direction is shown as N(North), S(South), E(East), W(West), NE(Northeast), NW(Northwest), SE(Southeast), SW(Southwest).
- See the section 'ROOT MENU>SYSTEM SETUP>SET NORTH DIRECTION'.

8 Zoom Magnification

Shows the current zoom magnification.


9 Tilt Angle in Degree

Shows the current tilt(0 ~ 180) angle.

10 Pan Angle in Degree

Shows the current pan(0 ~ 359) angle.

3 OSD - General Rules of Menu Operation

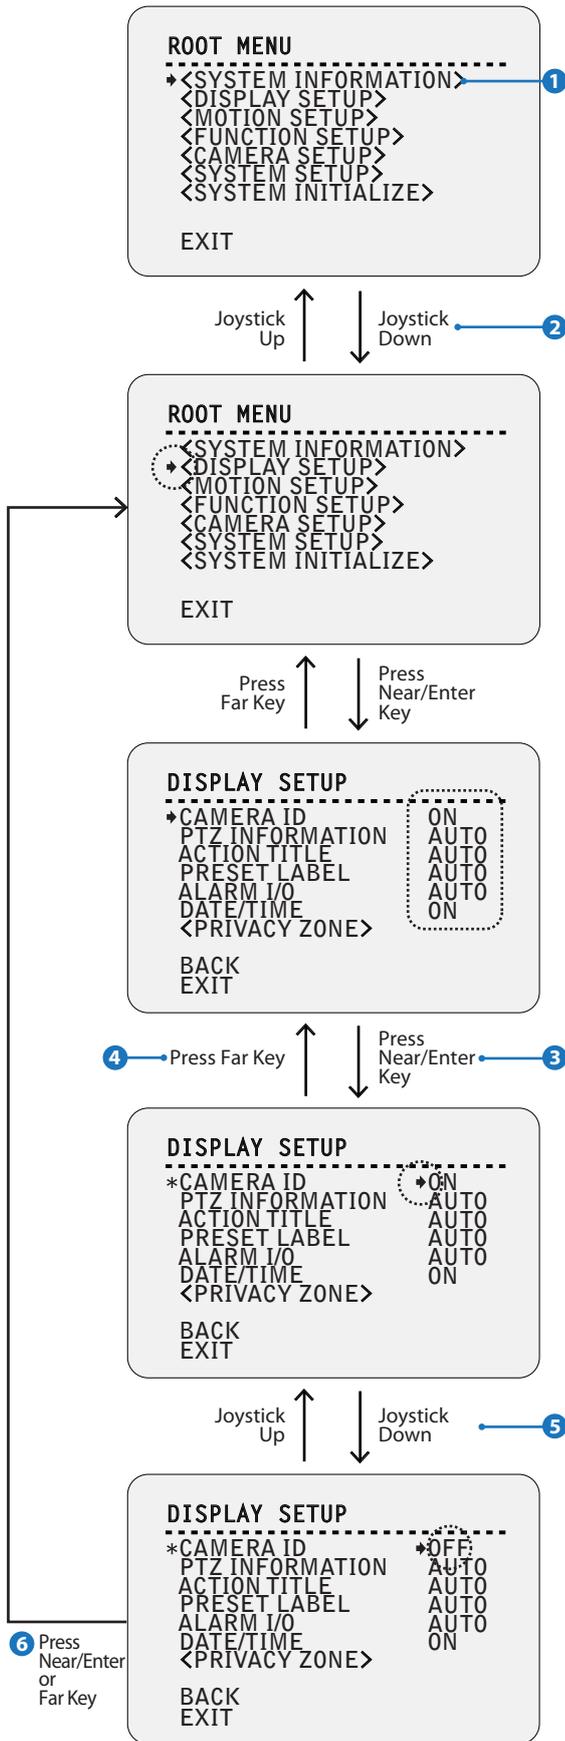

- 1 The menu items surrounded with < > always has its sub menu.
- 2 To move from items to item in the menu, use joystick in the up/down or left/right.
- 3 For all menu level, to go into sub menu, press near or enter key.
- 4 To go to up-one-level menu, press far key.
- 5 To change a value of an item, use up/down of the joystick in the controller.
- 6 Press near or enter key to save values and press far key to cancel values.

3 OSD - ROOT MENU & SYSTEM INFORMATION

1

```
ROOT MENU
-----
-><SYSTEM INFORMATION>
<DISPLAY SETUP>
<MOTION SETUP>
<FUNCTION SETUP>
<CAMERA SETUP>
<SYSTEM SETUP>
<SYSTEM INITIALIZE>

EXIT
```

1 ROOT MENU

<SYSTEM INFORMATION>

Shows information and current configuration.

<DISPLAY SETUP>

Enable/Disable of OSD display on main screen.

<MOTION SETUP>

Setup for motion related settings.

<FUNCTION SETUP>

Setup for various functions such as preset, scan, pattern, group and schedule.

<CAMERA SETUP>

Configure camera related functions and data.

<SYSTEM SETUP>

Configure for basic system setup.

<SYSTEM INITIALIZE>

Initializes system configuration and sets all data to factory default configuration.

EXIT

To escape from the OSD setting, go to exit.

1

```
SYSTEM INFORMATION
-----
FIRMWARE VER  2.00-33
              2011-01-01[21]
COLOR SYSTEM  NTSC
PROTOCOL      AUTO
BAUD RATE     2400
ADDRESS       1

BACK
EXIT
```

1 SYSTEM INFORMATION

FIRMWARE VER

Shows the current firmware version.

COLOR SYSTEM

Shows the current analog video system.

PROTOCOL

Shows the current PTZ control protocol.


BAUD RATE

Shows the current baud rate of the PTZ control.

ADDRESS

Shows the current camera ID of the PTZ control.

3 OSD - DISPLAY SETUP

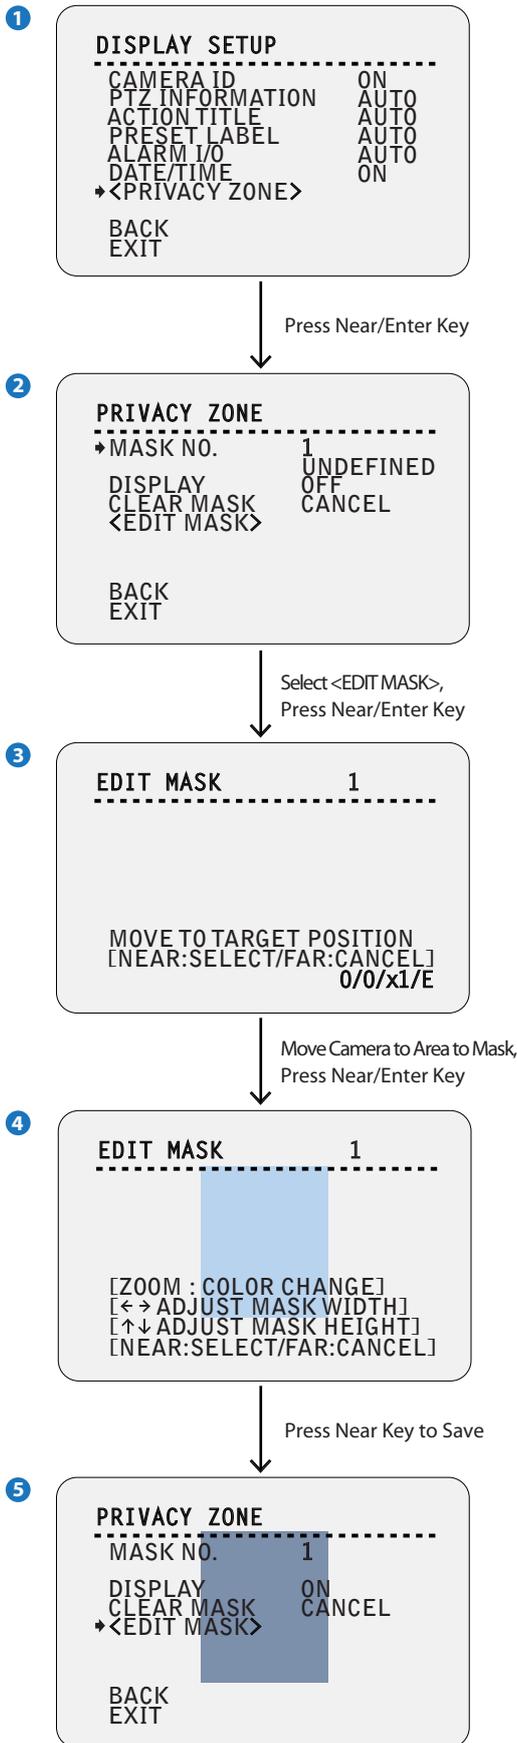

1 DISPLAY SETUP

This menu defines enable/disable of OSD display on main screen. If an item is set to be 'AUTO', the item is displayed only when the value of it is changed.

CAMERA ID ON / OFF

PTZ INFORMATION ON / OFF / AUTO

ACTION TITLE ON / OFF / AUTO

PRESET LABEL ON / OFF / AUTO

ALARM I/O ON / OFF / AUTO

DATE/TIME ON / OFF

<PRIVACY ZONE>

Start Privacy Zone Mask setup Menu.

2 PRIVACY ZONE

- Selects area in image to mask.

MASK NO. 1 ~ 8

Select mask number. If the selected mask has data already, camera moves as it was set. Otherwise, 'UNDEFINED' will be displayed under 'MASK NO.'.

DISPLAY ON / OFF

Sets if the camera makes mask shows or not on images.

CLEAR MASK CANCEL / OK

Deletes data in the selected mask no.

<EDIT MASK>

Moves to setup the mask no.

3 EDIT MASK - Move to Target Position

Move camera to area to mask. Then the menu to adjust mask size will be displayed.

⊗ If the tilt angle is located in the range between 90° to 90°, you can not set up privacy zone mask.

⊗ If tilt angle over 90° (image flipped region) is designated, camera will automatically move to identical position by changing tilt angle less than 90° and moving pan angle 180° relatively.

4 EDIT MASK - Color Change & Adjust Mask Size

Adjust mask size. Use joystick or arrow buttons to adjust mask size.

- Zoom In/Out: Change Color of Mask.


- Move Joystick Left/Right(◀▶): Adjust Mask Width.

- Move Joystick Up/Down(▲▼): Adjust Mask Height.

⊗ To hide a certain zone completely regardless of high speed pan/tilt motions, it is recommended that the size of mask must be 20% bigger than original target size.

⊗ It is noted that during pan/tilt control like jog action, the object behind the privacy mask can be disclosed in a short period of time.

3 OSD - MOTION SETUP

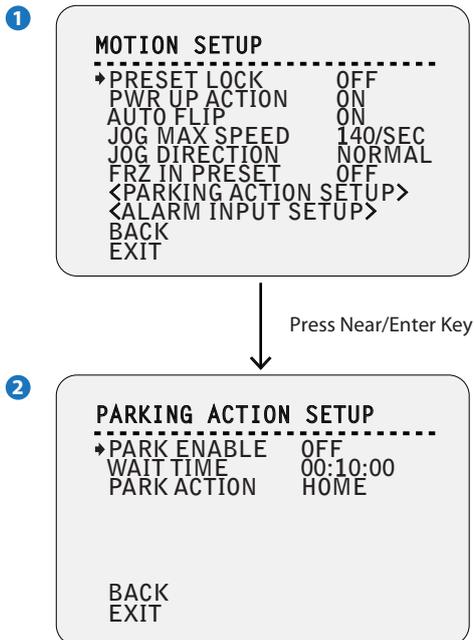

1 MOTION SETUP

Setup the general functions of pan/tilt motions.

PRESET LOCK ON / OFF

If motion lock is set to on, it is impossible to set up and delete preset, scan, pattern and group. It is possible only to run those functions. To set up and delete those functions, enter into OSD menu.

PWR UP ACTION ON / OFF

This function enables to resume the last action executed before power down. Most of actions such as preset, pattern, scan and group are available for this function but jog actions are not available to resume.

AUTO FLIP ON / OFF

In case that tilt angle arrives at the top of tilt orbit (90°), zoom module camera keep moving to opposite tilt direction (180°) to keep tracing targets. As soon as zoom module camera passes through the top of tilt direction(90°), images should be reversed automatically and [F] appears in screen. If this function is set to 'OFF', tilt movement range is 0° ~ 90°.

JOG MAX SPEED 2/SEC ~ 200/SEC

Sets maximum jog speed. Jog speed is inversely proportional to zoom magnification. As zoom magnification goes up, pan/tilt speed goes down.

JOG DIRECTION INVERSE / NORMAL

If you set this to 'NORMAL', the view in the screen is moving same direction with jog tilting. If 'INVERSE' is selected, the view in the screen is moving reversely.

FRZ IN PRESET ON / OFF

At start point of preset movement, camera starts freezing the image of start point. Camera keeps displaying the image of start point during preset movement and does not display the images which camera gets during preset movement. As soon as camera stops at preset end point, camera starts displaying live images which it gets at preset end point. This function availability should be different by models.

<PARKING ACTION SETUP>

Moves to 'PARKING ACTION SETUP' screen.

<ALARM INPUT SETUP>

Moves to 'ALARM INPUT ACTION' screen.

2 PARKING ACTION SETUP

If 'PARK ENABLE' is set to 'ON', camera runs assigned function automatically if there is no PTZ command during assigned 'WAIT TIME'.

PARK ENABLE ON / OFF

WAIT TIME 00:00:05 ~ 04:00:00

The time is displayed with "hh:mm:ss" format and you can change this by 1 sec. unit.

1. To place the cursor on the time marked as below, press near key.

00:10:00

2. Move joystick Left/Right to adjust hours, minutes and seconds.

3. Move joystick Up/Down to select the digit.

4. By pressing near key, save current setting.

PARKING ACTION HOME / PRESET 1~128 / SCAN 1~8 / PATTERN 1~4 / GROUP 1~8

Ex) If 'HOME' is selected for park action, camera will move to home position when there is no PTZ command during the assigned 'WAIT TIME.'

3 OSD - MOTION SETUP

1

```

MOTION SETUP
-----
PRESET LOCK      OFF
PWR UP ACTION   ON
AUTO FLIP       ON
JOG MAX SPEED   140/SEC
JOG DIRECTION   NORMAL
FRZ IN PRESET   OFF
<PARKING ACTION SETUP>
* <ALARM INPUT SETUP>
BACK
EXIT
    
```

Press
Near/Enter
Key

2

```

ALARM INPUT SETUP
-----
*ALARM 1 N.O NOT USED
ALARM 2 N.O NOT USED
ALARM 3 N.O NOT USED
ALARM 4 N.O NOT USED
ALARM 5 N.O NOT USED
ALARM 6 N.O NOT USED
ALARM 7 N.O NOT USED
ALARM 8 N.O NOT USED
BACK
EXIT
    
```

Press
Near/Enter
Key

3

```

ALARM INPUT SETUP
-----
*ALARM 1 N.O NOT USED
ALARM 2 N.O NOT USED
ALARM 3 N.O NOT USED
ALARM 4 N.O NOT USED
ALARM 5 N.O NOT USED
ALARM 6 N.O NOT USED
ALARM 7 N.O NOT USED
ALARM 8 N.O NOT USED
BACK
EXIT
    
```

Joystick
Right

4

```

ALARM INPUT SETUP
-----
*ALARM 1 N.O NOT USED
ALARM 2 N.O NOT USED
ALARM 3 N.O NOT USED
ALARM 4 N.O NOT USED
ALARM 5 N.O NOT USED
ALARM 6 N.O NOT USED
ALARM 7 N.O NOT USED
ALARM 8 N.O NOT USED
BACK
EXIT
    
```

Joystick
Down

5

```

ALARM INPUT SETUP
-----
*ALARM 1 N.O PRESET 1
ALARM 2 N.O NOT USED
ALARM 3 N.O NOT USED
ALARM 4 N.O NOT USED
ALARM 5 N.O NOT USED
ALARM 6 N.O NOT USED
ALARM 7 N.O NOT USED
ALARM 8 N.O NOT USED
BACK
EXIT
    
```

2 ALARM INPUT SETUP


If an external sensor is activated, camera will move to the corresponding action.

Alarm Type: N.O(Normal Open) / N.C(Normal Close)
Sets the sensor input type.

Alarm Action NOT USED / HOME / PRESET 1~128 / SCAN 1~8 / PATTERN 1~4 / GROUP 1~8

For each alarm input, you can assign the counteraction functions (Preset, Scan, Pattern, Group).

3 OSD - FUNCTION SETUP > PRESET SETUP

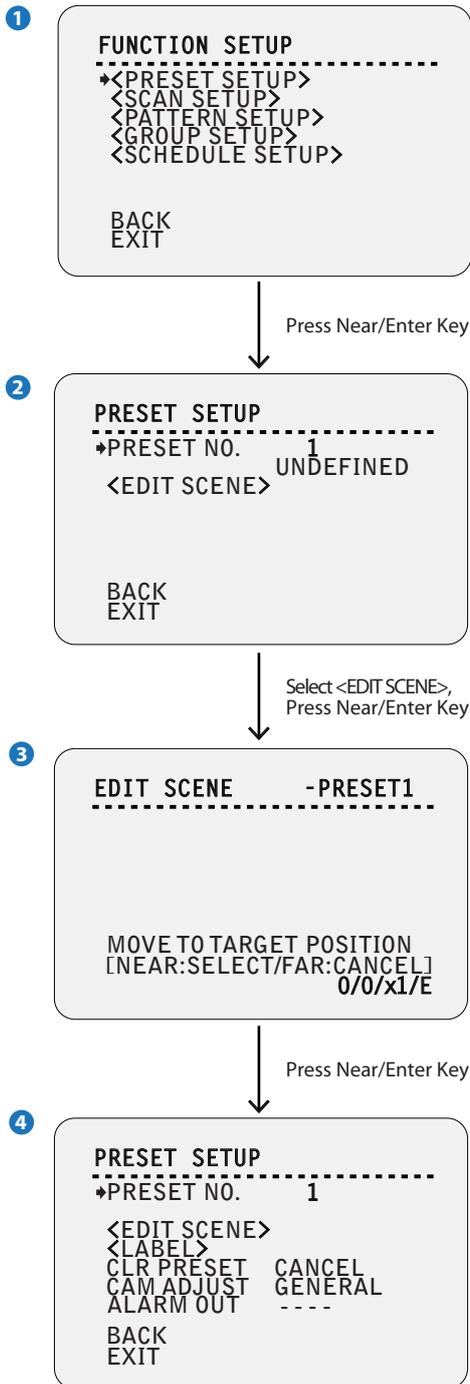

1 FUNCTION SETUP

Configure 5 special functions with this menu.

2 PRESET SETUP - Undefined

127 presets from the number 1 to 128 can be assigned excluding preset 95 reserved for menu.

PRESET NO. 1 ~ 128 (Excluding 95)

If a selected preset is already defined, camera moves to pre-defined position and preset characteristics such as label and relay outputs show on monitor. (Refer screen 4) If a selected preset is not defined, 'UNDEFINED' shows on monitor.

<EDIT SCENE>

Redefine the current preset scene position(i.e. PTZ).

3 EDIT SCENE

1. Using joystick, move camera to the desired position.
2. By pressing near key, save the current PTZ data.
3. Press far key to cancel.

4 PRESET SETUP

If the preset is defined, the information will be shown on the OSD menu with the setting, and the alarm device (if defined) will be activated.

PRESET NO. 1 ~ 128 (Excluding 95)

<EDIT SCENE>

<LABEL>

Edits Label to show on monitor when preset runs. Max. 10 alphabets are allowed.

CAM ADJUST GENERAL / SPECIAL

- WB(White Balance) and AE(Auto Exposure) can be set up independently for each preset.

- **GENERAL:** WB or AE can be set up totally and simultaneously for all presets in 'ROOT MENU>CAMERA SETUP' menu.

- **SPECIAL:** WB or AE can be set up independently or separately for each preset in each preset setup menu.

- Each special WB/AE value should be activated correspondingly when camera arrives at each preset location. During jog operation, general WB/AE value should be applied.

- All special WB/AE value should not be changed although general WB/AE value is changed. If 'SPECIAL' is selected, the menu to set WB/AE is shown on monitor.

ALARM OUT ---- ~ 1 2 3 4

State of four alarm outputs can be freely controlled in conjunction with preset run. The character '-' means off state and the number representing each bit means on.

Ex) If it is set to be '- 2 3 -', output relay 2, 3 will be on and 1, 4 will be off, when you run this preset.

3 OSD - FUNCTION SETUP > PRESET SETUP

1

```

PRESET SETUP
-----
PRESET NO.    1
<EDIT SCENE>
*<LABEL>
CLR PRESET   CANCEL
CAM ADJUST   GENERAL
ALARM OUT    -----
BACK
EXIT
    
```

Press Near/Enter Key

2

```

LABEL          PRESET1
-----
[ ]
1 2 3 4 5 6 7 8 9 0 OK CANCEL
A B C D E F G H I J
K L M N O P Q R S T
U V W X Y Z a b c d
e f g h i j k l m n
o p q r s t u v w x
y z < > - / : . <
    
```

Press Near/Enter Key

3

```

LABEL          PRESET1
-----
[SKY]
1 2 3 4 5 6 7 8 9 0 *OK CANCEL
A B C D E F G H I J
K L M N O P Q R S T
U V W X Y Z a b c d
e f g h i j k l m n
o p q r s t u v w x
y z < > - / : . <
    
```

- 2 LABEL**
- Edits label to show on monitor when camera arrives at preset.

```

LABEL          PRESET1
-----
[ ]
1 2 3 4 5 6 7 8 9 0 OK CANCEL
A B C D E F G H I J
K L M N O P Q R S T
U V W X Y Z a b c d
e f g h i j k l m n
o p q r s t u v w x
y z < > - / : . <
    
```

- a Current Cursor Position:** In edit label menu, a reverse rectangular is cursor. As soon as finishing selecting alphabet, cursor moves to the next digit.
- b Selecting Alphabet:** Using left/right/up/down of joystick, move to an appropriate character from the character set. To choose the character, press the near or enter key.
- c Space:** If you want to use blank, choose space character (' ').
- d Back-Space:** If you want to delete a character in front, use back space character ('←').

- 3 LABEL – Complete Editing**
If you complete the label editing, move cursor to 'OK' and press near key to save completed label. To abort current change, move cursor to 'CANCEL' and press near key.

1

```

PRESET SETUP
-----
PRESET NO.    1
<EDIT SCENE>
<LABEL>
CLR PRESET   CANCEL
*<CAM ADJUST> *<SPECIAL>
ALARM OUT    -----
BACK
EXIT
    
```

Press Near/Enter Key

2

```


CAM ADJUST     -PRESET1
-----
*<WHITE BALANCE SETUP>
<AUTO EXPOSURE SETUP>
BACK
EXIT
    
```

- 2 CAM ADJUST**
Edits label to show on monitor when the camera arrives at presets.


<WHITE BALANCE SETUP>
See the section 'ROOT MENU>CAMERA SETUP>WB SETUP'.

<AUTO EXPOSURE SETUP>
See the section 'ROOT MENU>CAMERA SETUP>AE SETUP'.

3 OSD - FUNCTION SETUP > SCAN SETUP

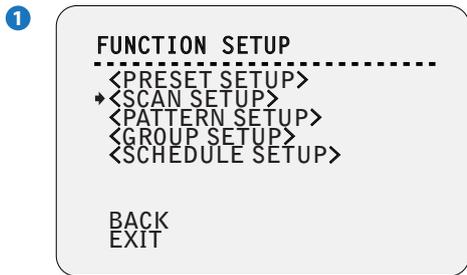

Press Near/Enter Key

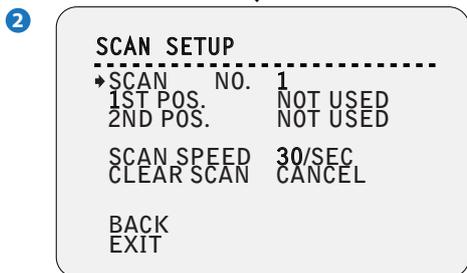


2 SCAN SETUP

By using the scan function, you can make the camera to move between 2 preset positions repeatedly.

When the scan function runs, the camera moves from the preset assigned as the 1st point to the preset assigned as the 2nd point in CW(Clockwise) direction. Then the camera moves from the preset assigned as the 2nd point to the preset assigned as the 1st point in CCW(Counterclockwise) direction.

In case that the preset assigned as the 1st point is same as the preset assigned as the 2nd point, the camera turns on its axis by 360° in CW direction and then it turns on its axis by 360° in CCW direction.

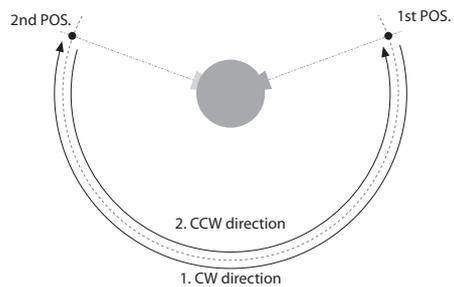


SCAN NO. 1 ~ 8

Selects the scan number to edit. If a selected scan has not defined, 'NOT USED' is displayed in 1st position and 2nd position.

1ST POS. / 2ND POS. PRESET 1 ~ 128 / NOT USED

Set up the 2 position for scan function. If a selected preset is not defined, 'UNDEFINED' will be displayed as shown below.

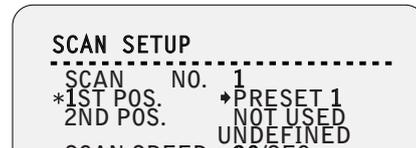

SCAN SPEED 1/SEC ~ 180/SEC

Sets the scan speed.

CLEAR SCAN CANCEL / OK

Deletes the current scan data.

3 OSD - FUNCTION SETUP > GROUP SETUP

1

```

FUNCTION SETUP
-----
<PRESET SETUP>
<SCAN SETUP>
<PATTERN SETUP>
* <GROUP SETUP>
<SCHEDULE SETUP>

BACK
EXIT
    
```

Press Near/Enter Key

2

```

GROUP SETUP
-----
* GROUP NO.      1
CLEAR GROUP    UNDEFINED
<EDIT GROUP>   CANCEL

BACK
EXIT
    
```

Select <EDIT GROUP>, Press Near/Enter Key

3

```

EDIT GROUP      1
-----
* NO. ACTION NO. DWELL OPT
  1 NONE
  2 NONE
  3 NONE
  4 NONE
  5 NONE
-----
SAVE
CANCEL [NEAR:EDIT]
    
```

Press Near/Enter Key

4

```

EDIT GROUP      1
-----
NO. ACTION NO. DWELL OPT
-----
* 1 NONE
  2 NONE
  3 NONE
  4 NONE
  5 NONE
-----
SAVE [NEAR:EDIT ACT]
CANCEL [FAR :EDIT END]
    
```

Press Near/Enter Key

5


```

EDIT GROUP      1
-----
NO. ACTION NO. DWELL OPT
-----
* 1 NONE
  2 NONE
  3 NONE
  4 NONE
  5 NONE
-----
SAVE [←→:MOVE CURSOR]
CANCEL [↑↓:CHANGE VAL.]
    
```

2 GROUP SETUP SCREEN

The group function allows running sequence of presets, pattern and/or scans. Max. 8 group can be stored. Each group can have max. 20 action entities which can be preset, pattern or scan.

Preset speed can be set up and the repeat number of pattern & scan can be set up in group setup. Dwell time between actions can be set up also.

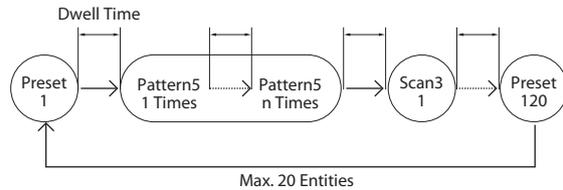

GROUP NO. 1 ~ 8

Selects group number to edit. If a selected group number is not defined, 'UNDEFINED' will be displayed under the selected group number.

CLEAR GROUP CANCEL / OK

Deletes data in the current group.

<EDIT GROUP>

Starts editing group.

3 EDIT GROUP - Initial Screen

Press near or enter key in 'NO' list to start group setup.

ACTION NO. NONE / PRESET 1~128(Excluding 95) / PATTERN 1~4 / SCAN 1~4

DWELL TIME 00:03 ~ 04:00 (min:sec)

Sets dwell time between function by moving joystick up/down.

OPT PRESET: 1~360 / PATTERN & SCAN: 1~255

It represents preset speed (1~360) when preset is selected. It should be the number of repetition (1~255) when pattern or scan is selected for 'ACTION'.

4 EDIT GROUP - Select Function Sequence

Note that max. 20 functions are allowed in a group.

Move cursor up/down and press near or enter key to set up.

5 6 EDIT GROUP - Assign Function

Set up 'ACTION', 'DWELL' and 'OPT'. Note that selected item is displayed in reverse. Move cursor left/right to select items and move cursor up/down to change each value.

3 OSD - FUNCTION SETUP > GROUP SETUP

6

```

EDIT GROUP                               1
-----
NO. ACTION NO. DWELL OPT
→ 1 PATTERN 1 00:03 1
   2 NONE
   3 NONE
   4 NONE
   5 NONE
-----
SAVE [←→:MOVE CURSOR]
CANCEL [↑↓:CHANGE VAL.]
    
```

↓
Press Near/Enter Key

7

```

EDIT GROUP                               1
-----
NO. ACTION NO. DWELL OPT
→ 1 PATTERN 1 00:03 1
   2 NONE
   3 NONE
   4 NONE
   5 NONE
-----
SAVE [NEAR:EDIT ACT]
CANCEL [FAR :EDIT END]
    
```

↓
Press Far Key

8

```

EDIT GROUP                               1
-----
NO. ACTION NO. DWELL OPT
  1 PATTERN 1 00:03 1
  2 NONE
  3 NONE
  4 NONE
  5 NONE
-----
→SAVE
CANCEL
    
```

7

EDIT GROUP - Selects Function Sequence

After finishing setting up an 'ACTION', press near or enter key to one-upper-level menu. Move cursor up/down to select 'ACTION NO.' and repeat to step 4 ~ step 6 to edit the selected group.

8

EDIT GROUP - Saves the Setting

After finishing setting up all actions, press far key to exit. Then cursor should be moved to 'SAVE'. Press near or enter key to save the data.

3 OSD - FUNCTION SETUP > SCHEDULE SETUP

1

```

FUNCTION SETUP
-----
<PRESET SETUP>
<SCAN SETUP>
<PATTERN SETUP>
<GROUP SETUP>
<SCHEDULE SETUP>

BACK
EXIT
    
```

Press Near/Enter Key

2

```

SCHEDULE SETUP
-----
-> MASTER ENABLE      OFF
  DAY TIME  ACT NO  ON
1  UNDEFINED
2  UNDEFINED
3  UNDEFINED
4  UNDEFINED
5  UNDEFINED
6  UNDEFINED
7  UNDEFINED
BACK
    
```

Joystick Down,
Press Near Key

3

```

SCHEDULE SETUP
-----
MASTER ENABLE      OFF
  DAY TIME  ACT NO  ON
1  UNDEFINED
2  UNDEFINED
3  UNDEFINED
4  UNDEFINED
5  UNDEFINED
6  UNDEFINED
7  UNDEFINED
BACK
    
```

Joystick Down

4

```

SCHEDULE SETUP
-----
MASTER ENABLE      OFF
  DAY TIME  ACT NO  ON
1  ALL 00:00  HOM   OFF
2  UNDEFINED
3  UNDEFINED
4  UNDEFINED
5  UNDEFINED
6  UNDEFINED
7  UNDEFINED
BACK
    
```

Assign Value

5

```

SCHEDULE SETUP
-----
MASTER ENABLE      OFF
  DAY TIME  ACT NO  ON
1  ALL 12:00  PRS 128 ON
2  UNDEFINED
3  UNDEFINED
4  UNDEFINED
5  UNDEFINED
6  UNDEFINED
7  UNDEFINED
BACK
    
```

2 SCHEDULE SETUP SCREEN

The schedule function allows running an appropriate function like preset, scan, pattern, group, home move at designated day and time.

EX) If you setup a rule 'Tuesday at 9:00AM' and 'Preset 1(say main gate)', the camera will move to main gate every Tuesday at 9:00 AM. If you choose weekday, camera will move to main gate everyday except weekend.

It is noted that due to the real time clock(ROOT MENU> SYSTEM SETUP>DATA/TIME SETUP), the time data will be kept regardless of blackout. The initial time and day setup is essential to proper schedule function.

MASTER ENABLE	ON / OFF
---------------	----------

Decide whether schedule function is active or not.

DAY	UNDEFINED / ALL / WKD / SUN ~ MON
-----	-----------------------------------

Set the day for scheduling.

- **Undefined:** Inactivate

- **All:** Applies to every day

- **WKD:** Applies to every day except Saturday and Sunday

- **SUN-MON:** Applies to designated day only

TIME	00:00 ~ 23:59 (hour:min)
------	--------------------------

Set the time.

ACT NO	HOM(HOME) / PRS(Preset) 1~255(Excluding 95) / SCN(Scan) 1~8 / PTN(Pattern) 1~4 / GRO(Group) 1~8
--------	---

Set the function and no.

ON	ON / OFF
----	----------

Decide to make this rule effective or not.

4 5 SCHEDULE SETUP - Assign Value

Each field (DAY, TIME, ACT, NO., ON) can be selected by Left/Right keys and the values in the field are changed using Up/Down keys.

3 OSD - FUNCTION SETUP > SCHEDULE SETUP

6

SCHEDULE SETUP

```
-----
MASTER ENABLE          ON
DAY TIME      ACT NO  ON
1  MON 01:20  HOM   0  ON
2  WED 07:00  PRS  12  ON
3  THU 11:40  SCN   3  ON
4  ALL 12:00  SCN   1  ON
5  UNDEFINED
6  UNDEFINED
7  UNDEFINED
BACK
```

EX)

The second rule means camera will move to preset 12 position at 7:00 on every wednesday.

- ⊗ If there are rules conflicts to each other, the higher number is the higher priority has.
- ⊗ If you assign undefined function, there will be no action.
- ⊗ Using reserved preset, you can make various schedules.
For example, PRS179 and PRS178 are 'DAY' and 'NIGHT' mode respectively.
(Refer to Reserved Preset(page 18) list in this manual.)

3 OSD - CAMERA SETUP > WB SETUP

1

```

ZOOM CAMERA SETUP
-----
FOCUS MODE      SEMIAUTO
DIGITAL ZOOM    OFF
IMAGE FLIP      OFF
FLICKERLESS     OFF
* <WHITE BALANCE SETUP>
<AUTO EXPOSURE SETUP>

BACK
EXIT
    
```

Press Near/Enter Key

2

```

WB SETUP
-----
*WB MODE        AUTO
- RED ADJUST    ---
- BLUE ADJUST   ---

BACK
EXIT
    
```

Press Near Key,
Joystick Down

3

```

WB SETUP
-----
*WB MODE        *MANUAL
- RED ADJUST    3 0
- BLUE ADJUST   4 0

BACK
EXIT
    
```

Press Near/Enter Key

4

```

WB SETUP
-----
*WB MODE        MANUAL
- RED ADJUST    3 0
- BLUE ADJUST   4 0

BACK
EXIT
    
```

Joystick Down

5

```

WB SETUP
-----
WB MODE        MANUAL
* - RED ADJUST  3 0
- BLUE ADJUST   4 0

BACK
EXIT
    
```

1 ZOOM CAMERA SETUP

Setup the general functions of zoom camera module.

FOCUS MODE AUTO / MANUAL / SEMIAUTO

Sets the camera focus mode.

- **SEMIAUTO:** This mode exchanges the focus mode automatically between manual focus mode and auto focus mode. Manual focus mode activates in preset operation and auto focus mode activates when jog operation starts.

- **MANUAL:** With manual mode at presets, focus data is memorized in each preset in advance and camera calls focus data in correspondence with presets as soon as camera arrives at a preset.

DIGITAL ZOOM ON / OFF

Sets digital zoom function to 'ON' or 'OFF'. If this is set to 'OFF', optical zoom function runs but zoom function stops at the end of optical zoom magnification.

IMAGE FLIP ON / OFF

Sets if the image should be reversed or not.

FLICKERLESS ON / OFF

Turns on or off the flickerless function. In this function, AE mode becomes shutter priority mode and shutter speed value will be fixed to 1/100 sec.

<WHITE BALANCE SETUP>

Starts 'WHITE BALANCE SETUP' setup screen.

<AUTO EXPOSURE SETUP>

Starts 'AUTO EXPOSURE SETUP' setup screen.

2 WB SETUP

WB MODE AUTO / MANUAL

In manual mode, red and blue level can be set up manually.

RED ADJUST 0 ~ 255

BLUE ADJUST 0 ~ 255

3 OSD - CAMERA SETUP > AE SETUP

1

```
ZOOM CAMERA SETUP
-----
FOCUS MODE      SEMIAUTO
DIGITAL ZOOM    ON
IMAGE FLIP      OFF
FLICKERLESS     OFF
<WHITE BALANCE SETUP>
* <AUTO EXPOSURE SETUP>
BACK
EXIT
```

Press Near/Enter Key

2

```
AE SETUP
-----
* BACKLIGHT      OFF
DAY/NIGHT        AUTO
BRIGHTNESS       25
IRIS              AUTO
SHUTTER          ESC
AGC              OFF
SSNR             OFF
SENS-UP          OFF
BACK
EXIT
```

3

```
MANUAL IRIS
-----
* IRIS LEVEL     F 1.6
BACK
EXIT
```

4

```
MANUAL SHUTTER
-----
* SHUTTER SPD    x2
BACK
EXIT
```

5

```
MANUAL SENS-UP
-----
* SENS-UP LIMIT  x2
BACK
EXIT
```

2 AE SETUP

BACKLIGHT OFF / BLC ON / HLC
Sets the backlight compensation.

DAY/NIGHT AUTO / DAY / NIGHT
'AUTO' exchanges day/night.

BRIGHTNESS 0~100 (101 steps)
Adjusts brightness of images. Iris, shutter speed and gain are adjusted automatically in correspondence with this value.

IRIS AUTO / MANUAL
- **AUTO**: Iris should have highest priority in adjusting AE and shutter speed should be fixed.
- **MANUAL**: Iris should be fixed and iris has lower priority in adjusting AE, in comparison with others.

SHUTTER ESC / A.FLICKER / MANUAL
- If iris is set to 'MANUAL' and shutter speed is set to 'ESC', shutter speed should have highest priority.
- Shutter speed is set to 'A. FLICKER', to remove flicker, shutter speed should be set to 1/100 for NTSC and 1/120 for PAL.

AGC OFF / LOW / MIDDLE / HIGH
Enhances the image brightness automatically in case that luminance level of image signal is too low.

SSNR OFF / LOW / MIDDLE / HIGH
Enhances the images by deducting noises when gain level of images is too high.

SENS-UP OFF / AUTO
Activates the slow shutter function when luminance of image(signal) is too dark. It is possible to set up the maximum number of frames piled up one on another by Slow Shutter function.

3 MANUAL IRIS SCREEN

IRIS LEVEL 0 ~ 100

4 MANUAL SHUTTER SCREEN


SHUTTER SPD x256 / x128 / x64 / x32 / x24 / x16 / x14 / x12 / x10 / x8 / x6 / x4 / x2 / 1/60 / 1/120 / 1/250 / 1/500 / 1/700 / 1/1000 / 1/1600 / 1/2500 / 1/5000 / 1/7000 / 1/10000 / 1/30000 / 1/60000 / 1/120000 (27 steps)

5 AUTO SENS-UP SCREEN


SENS-UP LIMIT x2 / x4 / x6 / x8 / x10 / x12 / x14 / x16 / x24 / x32 / x64 / x128 / x256 (13 steps)

3 OSD - SYSTEM SETUP

5

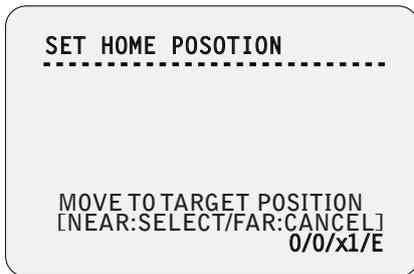

6

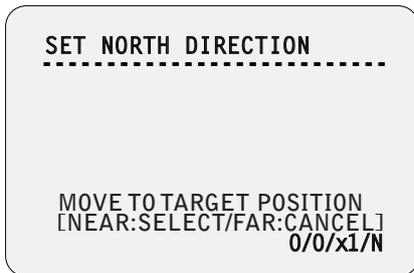

5 SET HOME POSITION

Home position means the origin of pan angle calculation. The value of pan angle displayed on the screen is based on this home position.

By using joystick, move the camera to the desired position and press near key.

Home is not effective to tilt angle.

If you change the location of the home position, all horizontal location of functions such as preset, scan, pattern, group and privacy zone mask will be shifted based on the changed home position.

If there are no setup for those functions like preset, pattern, scan, group camera will automatically move to home position after rebooting.

If power up action is set to be on, camera will continue the function which is executed lastly after rebooting.

☒ Set Home Position?

When you replace the camera block or the orientation of camera is changed due to maintenance operations, it is very difficult to maintain the same pan orientation. Therefore, all function data maintain on pan orientation such as preset, scan, pattern, group and privacy zone mask are not useful any more accordingly.

However, even in this case, you can reuse the data if you redefine set home position on the previous home position.

6 SET NORTH DIRECTION

By using joystick, move the camera to the desired north position and press enter (near/save).


The direction will be displayed in the screen



Direction will be displayed from:

N(North) / S(South) / E(East) / W(West) / NE(Northeast) / NW(Northwest) / SE(Southeast) / SW(Southwest).

3 OSD - SYSTEM INITIALIZE

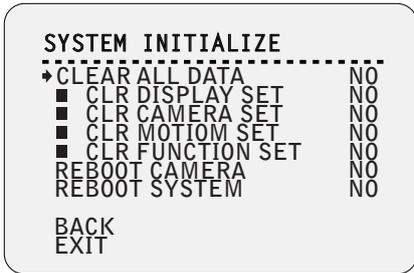

SYSTEM INITIALIZE


CLEAR ALL DATA	YES / NO	
Deletes all configuration data such as display, camera, motion setup and so on.		
CLR DISPLAY SET	YES / NO	
Initializes display configuration.		
CLR CAMERA SET	YES / NO	
Initializes camera configuration.		
CLR MOTION SET	YES / NO	
Initializes motion configuration.		
CLR FUNCTION SET	YES / NO	
Deletes preset data, scan data, pattern data, group data and schedule data.		
REBOOT CAMERA	YES / NO	
Reboots zoom camera module.		
REBOOT SYSTEM	YES / NO	
Reboots speed dome camera.		

※ Initial Configuration Table


Camera ID	ON	
PTZ Information	AUTO	
Action Title	AUTO	
Preset Label	AUTO	Display
Alarm I/O	AUTO	
Date/Time	ON	
Privacy Zone	Undefined	
Preset Lock	OFF	
Power Up Action	ON	
Auto Flip	ON	
Jog Max Speed	140°/sec	Motion
Jog Direction	NORMAL	
Freeze In Preset	OFF	
Park Action	OFF	
Alarm I/O Action	OFF	
Preset 1~128	Undefined	
Auto Pan 1~8	Undefined	
Pattern 1~4	Undefined	Function
Scan 1~8	Undefined	
Schedule 1~7	Undefined	
Focus Mode	SEMIAUTO	
Digital Zoom	ON	
Image Flip	OFF	
DIS Mode	OFF	
WB Mode	AUTO	
Backlight	OFF	
Day/Night	AUTO	Camera
Brightness	25	
Iris	AUTO	
Shutter	ESC	
AGC	MIDDLE	
SSNR	MIDDLE	
Sens-up	OFF	
Protocol	AUTO	Communication
Baud Rate	2400	

4 Specifications - Dimension

Unit: mm

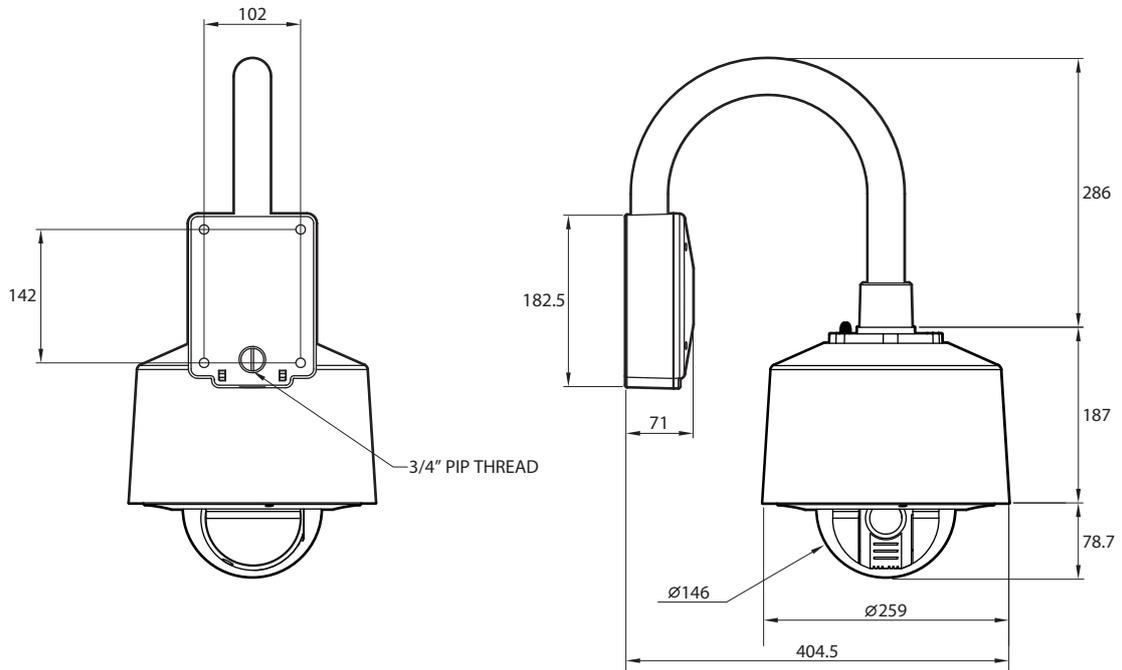

Wall Mount Bracket

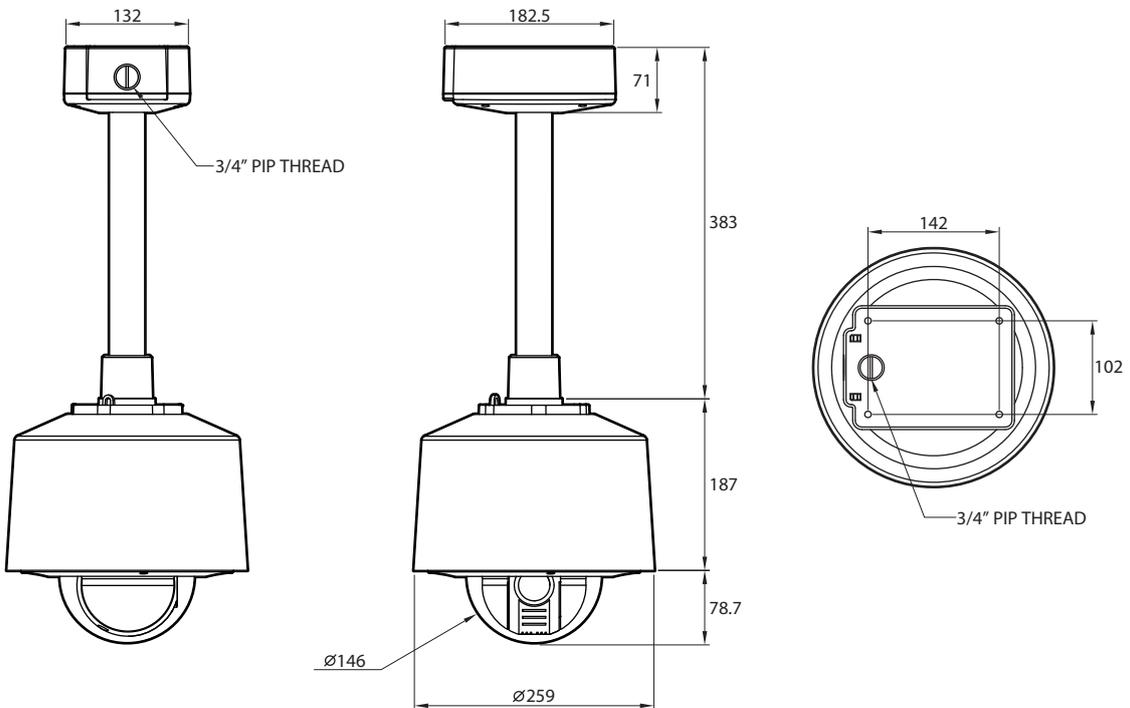

Ceiling Mount Bracket

4 Specifications - Specification

Camera

Image Device	1/4" Double Density Interline Transfer CCD
Total Pixel	NTSC : 811 (H) × 508 (V) 410K Pixels • PAL : 795 (H) × 596 (V) 470K Pixels
Effective Pixel	NTSC : 768 (H) × 494 (V) 380K Pixels • PAL : 752 (H) × 582 (V) 440K Pixels
H. Resolution	Color: 550 TV Lines • B/W: 680 TV Lines
S/N Ratio	50 dB (AGC Off)
Zoom	x33 Optical Zoom & x12 Digital Zoom (Total x396)
Focal Length	f = 3.5 (W) ~ 115.5 (T) mm, F1.6 (W) ~ 3.6 (T)
Angle of View	H: 55.5° (W) ~ 1.77° (T) • V: 42.5° (W) ~ 1.33° (T)
Min. Illuminance	Color: 0.4 Lux @ 50 IRE, F1.6 B/W: 0.02 Lux @ 50 IRE, F1.6
Shutter Speed	NTSC : x256, 1/60 ~ 1/120,000 sec. • PAL : x256, 1/50 ~ 1/120,000 sec.
Day & Night	Auto / Day / Night (IR Cut Filter)
Focus	Auto / Manual / Semi-Auto
Iris	Auto / Manual
White Balance	Auto / Manual (Red & BlueGain adjustable)
AGC	Low / Middle / High / Manual / Off
DNR	Low / Middle / High / Off
DIS	On / Off
WDR/BLC	WDR / BLC / All Off
Other Functions	Frame Freeze Function, System Image Flip by Installation Type

Pan/Tilt

Pan Range	360° (Endless)
Tilt Range	0° ~ 180° (Auto-Flip On) • 0° ~ 90° (Auto-Flip Off)
Pan/Tilt Speed	Preset: 360° Scan: 1° ~ 180°/sec. Manual: 0.05° ~ 200°/sec. (Zoom Proportional)
Preset	127 Presets with Labels / Independent Camera Setup
Pattern	4 Patterns
Scan	8 Scans
Group	8 Groups (Max. 20 Entities per Group)
Schedule	7 Rules (Condition: Day, Time → Action: Preset, Scan, Group, Pattern)
Other Functions	Image Auto Flip, Auto Parking, Power-up Action & etc.

General

Video Out	CVBS: 1.0 V p-p / 75Ω
Communication	RS-485
Protocol	Auto, Pelco-D/P, Samsung, Panasonic, GE(Kalatel), AD Selectable
Privacy Zone	8 Zones
Sensor In/Out	Built-in 8 Input / 4 Relay Output
OSD	Menu, PTZ Information, etc., Support 7 Languages: ENGLISH / ESPAÑOL / FRANÇAIS / DEUTSCH / ITALIANO / РУССКИЙ / PORTUGUÊS
Power	AC 24 V, 24 W (Heater Off) / 55 W (Heater On)
Approvals	FCC, CE, IP66, RoHS
Outdoor Housing	Weather Proof, Vandal Proof Structure, White Pearl Color
Material	Body: Aluminum Die-casting • Clear Bubble: Polycarbonate
Weight	Net: 6 Kg • Package: 11 Kg
Operating Temp.	-45° ~ 50° C (-49° ~ 122° F)